



SERVICE & PARTS MANUAL

16mm SOUND MOTION PICTURE PROJECTORS

MODELS
40-A, 40-B, 40-BX, 55,
56, 60-B, 60-2, 60-4,
60-10, 60-25,
AND
G (BRITISH GREYLINE VICTOR)

PREPARED BY
VICTOR ANIMATOGRAPH CORPORATION
DAVENPORT, IOWA, U. S. A.



SERVICE SECTION

16mm SOUND MOTION PICTURE PROJECTORS

MODELS

**40-A, 40-B, 40-BX, 55,
56, 60-B, 60-2, 60-4,
60-10, 60-25,**

AND

G (BRITISH GREYLINE VICTOR)

PREPARED BY

**VICTOR ANIMATOGRAPH CORPORATION
DAVENPORT, IOWA, U. S. A.**

INDEX

TITLE	PAGE No.	TITLE	PAGE No.
A			
Amplifiers		Speaker	
Model 60-25	89 & 91	Speaker Case Assembly, J3A	127
Model 60-10	95	Speaker Case Assembly, J4B	129
Model 60-4	95	Speaker Case Assembly, J5	129
Model 60-2	89 & 91	Speaker Case, Wood — Model 60-25 ..	129
Model 60-B	89 & 91	Speaker Case — Model 40-B	131
Model 55	97	Speaker Case Assembly —	
Model 56	97	Model 40-B	131
Model 40-B	89 & 93	Speaker Case — Model 40-A	131
Model 40-A	89 & 93	Speaker Case Assembly —	
Automatic Trip Assembly	21	Model 40-A	131
B			
Baffle Assembly	45	Speaker Case, Body & Cord Assembly	127
Base Support Bar Assembly	73	Speaker Case, Complete, Less Cord &	
Belts			
Motor Drive	73	Speaker	127
Take-Up	77	Clutch Assembly, Take-Up	71
Rewind	77	E	
C			
Cam Pulley Assembly	37	Exciter Socket Assembly	63
Cam Shaft	23	F	
Cases			
Projector		Film Channel	17
Model 60-25	113 & 115	Film Guard	17
Wood — Model 60-25	113	Film Shoe, Lower	15
Model 60-10	113	Film Shoe, Upper	15
Model 60-4	113	Filter Gear Assembly	61
Model 60-B	113 & 119	G	
Model 60-2	115	Gear Box for Model 40-BX	73
Model 40-B	121	Gear, Oscillating Assembly	35
Model 40-A	121	General Inspection	viii-x
Case and Liftop — Model 60-10	117	General Overhaul	x-xiv
H			
Hand Operating Shaft Assembly	75		

TITLE	PAGE No.	TITLE	PAGE No.
I			
Inspection, General	viii-x	Oscillating Gear Assembly	35
L			
Lamp, Exciter	13	P. E. Cell	13
Lamp House Assembly	11	P. E. Cell Cord Assembly, All Models	67
Lamp House & Base Assemblies		P. E. Cell Covers	17
Model 60-25	41	Projector, Model 60-25	
Model 60-10	41	Back View	49
Model 60-4	41	Operator's View	3
Model 60-2	43	Rear View	25
Model 60-B	43	Projector, Model 60-10	
Model 55	43	Back View	51
Model 40-B	43	Operator's View	5
Model 40-A	43	Rear View	25
Lamp, Pilot	13	Projector, Model 60-4	
Lamp, Pilot Cap & Spring	23	Back View	51
Lamp, Projection	13	Operator's View	5
Lamp Socket Assembly	45	Rear View	25
Lens Mount Assembly	21	Projector, Model 60-2	
Lens Mount Lock Plate	23	Back View	49
Light Shutter Assembly	37	Operator's View	3
Loop Tension Arm Assembly	19	Rear View	25
M			
Motor Assembly & Parts		Projector, Model 60-B	
Model 60-25	79	Back View	49
Model 60-10	79	Operator's View	7
Model 60-4	79	Rear View	29
Model 60-2	79 & 81	Projector, Model 56	
Model 60-B	83	Back View	53
Model 56	79 & 81	Operator's View	5
Model 55	79 & 81	Rear View	27
Model 40-B	83	Projector, Model 55	
Model 40-A	85 & 87	Back View	51
Motor Parts, Miscellaneous	87	Operator's View	5
O			
Oiler	23	Rear View	25
Projector, Model 40-B			
Back View	55 & 57		

TITLE	PAGE No.	TITLE	PAGE No.																																																																																																												
Operator's View	9	Terminal Strip Color Code	xiv																																																																																																												
Rear View	29	Tilt Assembly for All Metal Projector Cases	123																																																																																																												
Projector, Model 40-A		Tilt — Model 40-B	125																																																																																																												
Back View	59	Tilt — Model 40-A	125																																																																																																												
Operator's View	9	Tolerances	xiv																																																																																																												
Rear View	31	Trip Assembly	21																																																																																																												
Projector Body Parts	73	Troubles and Remedies, Amplifier	xv-xvi																																																																																																												
Projector Body Side Plate, All Models	75	Troubles and Remedies, Projector	xiv-xv																																																																																																												
R																																																																																																															
Reel Arm Holder	17	W																																																																																																													
Reel Arm Sockets	13	Reel Arms, Front & Rear, All Models	77	Wiring Color Code, Motor	xiv	Rewind Assembly, All Models Except 40-A & 40-B	47	Rewind Pulley — Model 40-A	85	Wiring Diagram		Rewind Pulley — Model 40-B	87	Model 60-25	98	S				Model 60-25M	98	Safety Shutter Assembly	33	Model 60-10	99	Shutter Support Plate Assembly	35	Model 60-4	100	Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69
Reel Arms, Front & Rear, All Models	77	Wiring Color Code, Motor	xiv																																																																																																												
Rewind Assembly, All Models Except 40-A & 40-B	47	Rewind Pulley — Model 40-A	85	Wiring Diagram		Rewind Pulley — Model 40-B	87	Model 60-25	98	S				Model 60-25M	98	Safety Shutter Assembly	33	Model 60-10	99	Shutter Support Plate Assembly	35	Model 60-4	100	Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69						
Rewind Pulley — Model 40-A	85	Wiring Diagram																																																																																																													
Rewind Pulley — Model 40-B	87	Model 60-25	98	S				Model 60-25M	98	Safety Shutter Assembly	33	Model 60-10	99	Shutter Support Plate Assembly	35	Model 60-4	100	Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69												
Model 60-25	98																																																																																																														
S				Model 60-25M	98	Safety Shutter Assembly	33	Model 60-10	99	Shutter Support Plate Assembly	35	Model 60-4	100	Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																
Model 60-25M	98																																																																																																														
Safety Shutter Assembly	33	Model 60-10	99	Shutter Support Plate Assembly	35	Model 60-4	100	Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																						
Model 60-10	99																																																																																																														
Shutter Support Plate Assembly	35	Model 60-4	100	Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																										
Model 60-4	100																																																																																																														
Shuttle Assemblies	39	Model 60-2	101	Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																														
Model 60-2	101																																																																																																														
Sound Core Assembly	17	Model 60-2M	101	Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																		
Model 60-2M	101																																																																																																														
Sound Sprocket Drive Gear Assembly	61	Model 60	102	Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																						
Model 60	102																																																																																																														
Sound Sprocket Tension Arm	19	Model 55	103	Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																										
Model 55	103																																																																																																														
Sound Unit Castings	23	Model 56-C-2	104	Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																														
Model 56-C-2	104																																																																																																														
Speaker Assembly, All Models	133	Model 55-2	105	Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																		
Model 55-2	105																																																																																																														
Spiral Intermediate Pinion & Shaft Assembly	61	Model 55-C-2	106	Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																						
Model 55-C-2	106																																																																																																														
Starting Lever Plate Assembly	33	Model 56-C-3	107	Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																										
Model 56-C-3	107																																																																																																														
Still Picture Assembly	45	Model 56-4	108	Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																														
Model 56-4	108																																																																																																														
Support Roll	23	Model 40-B	109	T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																		
Model 40-B	109																																																																																																														
T				Model 40-BX	110	Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																						
Model 40-BX	110																																																																																																														
Take-Up Assembly	61	Model 40-A	111	Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																												
Model 40-A	111																																																																																																														
Take-up Clutch Assembly	71	Wiring Harness, Motor		Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																																
Wiring Harness, Motor																																																																																																															
Take-up Lever Assembly	75	Model 60-25	65	Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																																				
Model 60-25	65																																																																																																														
Tension Arm Springs	23	Model 60-10	65	Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																																								
Model 60-10	65																																																																																																														
Tension Clip & Spring	17	Model 60-4	65	Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																																												
Model 60-4	65																																																																																																														
Terminal Assembly	73	Model 60-2	69	Model 60-B	69	Model 55	69	Model 56	69	Model 40-BX	69	Model 40-B	69	Model 40-A	69																																																																																																
Model 60-2	69																																																																																																														
Model 60-B	69																																																																																																														
Model 55	69																																																																																																														
Model 56	69																																																																																																														
Model 40-BX	69																																																																																																														
Model 40-B	69																																																																																																														
Model 40-A	69																																																																																																														

FOREWORD

This Service and Parts Manual has been prepared for your information and guidance. It is given to you as confidential matter. (Additional copies of Manual \$3.00.)

It contains all data, photographs, and wiring diagrams for the servicing of Victor 16mm Sound Motion Picture Projectors from the Model 40 through 60 series. The Manual is organized so that data appears on left hand pages with corresponding photographs on right hand pages, opposite.

On pages that show general assemblies, a column will be found directly to the right of nomenclature giving page number of assembly breakdown.

At the right side of the nomenclature list appears a chart showing interchangeability of parts. The "G" in this chart denotes the British Greyline Victor Projector.

You will note that various parts are NOT numbered. These are factory operations and have been purposely excluded for reasons of simplification.

Parts that are complete assemblies have their photograph key number encircled.

Read and observe the following so there will be no misunderstanding in regard to the Victor Service Policy:

- A. All parts orders and correspondence pertaining to service should be sent directly to our Service Manager, and not included in correspondence for other departments.
- B. When ordering, the number of each part and its description should be given, as well as the model and serial number of equipment, if available.
- C. The Victor Warranty does not cover lamps or tubes, or the replacement of parts which become inoperative because of misuse, accident or negligence, nor if the part or parts have been repaired or altered in any way which, in our judgment, affects their condition or operation. Also, our Warranty does not cover labor charges unless the equipment is shipped prepaid to the factory at Davenport, Iowa, U. S. A., or to the Chicago or New York branches.
- D. All parts taken from equipment in guarantee must be returned to the factory for inspection before "No Charge" replacements can be made. Full information must be given as to serial number, model and date of sale of said equipment.
- E. Authorization must be received from the factory before any parts or equipment may be returned for credit. A ten percent (10%) handling charge will be deducted from all credits issued for parts that have been overstocked.

VICTOR ANIMATOGRAPH CORPORATION
Davenport, Iowa, U. S. A.

GENERAL INSPECTION

A general inspection will be adequate in most cases especially where the projector has been checked periodically and its general performance known in advance. In any case the preliminary check will soon indicate if there is any need to disassemble the projector for a more elaborate overhaul.

PROCEDURE

A. INSPECTING THE PROJECTOR

Set-up. Set the machine up as for a show and check all cords and plugs in the process.

Belts & Pulleys. Replace belts if stretched or kinked. Check pulleys for excessive wear.

Sprockets. Make sure the sprocket guards have the proper clearance and see that the sprocket teeth are not worn. Worn teeth can be extremely damaging to film.

Rollers. Make sure all rollers are clean and revolve freely. If there is any question make a special check to see if the rollers have any flat surfaces anywhere. If so, replace.

Gate. Clean the gate, pressure plate, aperture and sound drum. An orangewood manicure stick is very good for removing encrusted emulsion and "fuzz" from corners of the aperture. Check carefully for wear of guides or "rails" on which the film rides.

Shuttle. Check for wear on shuttle teeth. Lower shuttle tooth should receive special attention.

Lens. Clean lens carefully. Use lens cleaning tissue in preference to a handkerchief although this is all right if laundered soft and the glass not pressed hard. (Remember that optical glass is much softer than ordinary glass.)

Lamphouse. Release the lamphouse locking screw and remove the lamphouse. Clean the condenser and reflector with tissue.

Lamp. Check the lamp for excessive blackening adjacent to the condenser, and wipe it clean. If the glass is blistered or if the filaments seem to sag, replace the lamp.

Motor.

- Check the motor brush accessible from the front. If worn, remove the projector from case and check the rear brush. Re-

place them if necessary.

- Make sure that the bearing surface of the brush is smooth and shiny. If rough and oily the commutator needs cleaning.
- The commutator can be cleaned moderately well if not in bad condition by using a small piece of cheesecloth or extra fine abrasive.

Speeds. Turn the motor on, listen to its sound and see that it operates at 16 and 24 speeds, forward and reverse. (Count 80 and 120 revolutions of the 12 tooth feed sprocket per minute for the 16 and 24 speeds respectively.) The operation of the switches can be determined at this time.

For sound film the projector MUST run at exactly 24 frames per second. Use the neon lamp stroboscope and check the teeth of the sound sprocket. Shade the teeth from outside light. By the neon lamp they will appear to stand still when the projector is running at the proper speed.

Clutch and Trip. These should operate freely.

Takeups. The operation of these is best checked with film threaded on the projector. Inadequate pull or jerkiness may mean new belts or adjustment of the clutch pulleys.

Governor. If projector is not running at proper speed, the governor should be adjusted.


- First, clean the contact points and check the speed with the neon lamp again. Contacts controlling the sound speed (24 frames per second) are at the bottom. They can be recognized by the heavier spring and also by the fact that the silent speed (16 frames per second) contacts are held down by a straight lug while the other lugs are curved.
- If the speeds are still inaccurate, adjust the contacts until correct.
- Clean the commutator ring at the back of the governor and make sure the brushes are not worn and that they are making good contact.

Illumination. Turn on the lamp and make sure the light on the screen is constant all the way across. (A photocell type exposure meter will be found useful for this, although visual inspection will usually be satisfactory.) If necessary

adjust the lamp sideways in the lamphouse until illumination is properly centered.

Still Picture. This rarely needs attention, but check it for operation.

Film Scratches. Make a loop of about 18" of new (light struck) film which is very soft and run it through the projector a dozen times or so. This will quickly indicate any scratching at the gate. If any abrasion marks appear, the front and back gate plates and other parts such as sprocket guards must be cleaned and checked very carefully.

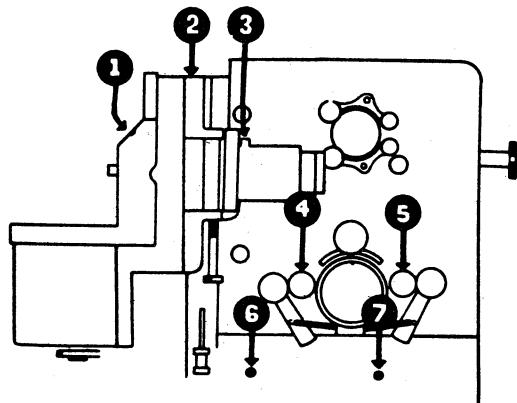

OILING

More service problems result from over-oiling than under-oiling. Excess oil clogs the light slit of the sound lens, gums the brushes of motor and governor commutators and destroys wire insulation. This results in loss of sound quality, irregular speed and short circuiting of electrical components.

For this reason the oiling schedule as follows is recommended:

OILING POINTS	AMOUNT & FREQUENCY
1, 2 and 3.....	Four drops every four hours of running time.
4 and 5.....	Two drops every fifteen hours of running time.
6 and 7.....	Two drops every four hours of operation.

Oiling points 6 and 7 will not be found on any projector having a ball bearing motor.

All oiling points should likewise be oiled as above when the equipment is installed and after prolonged periods of idleness.

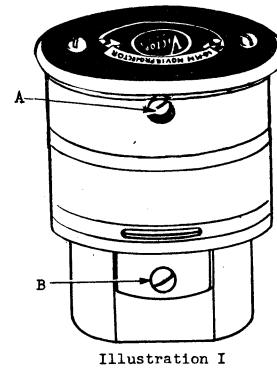


Illustration I

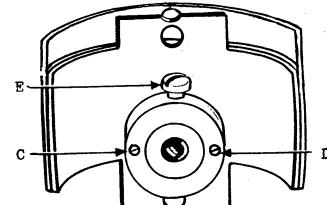


Illustration II

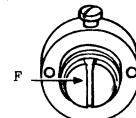


Illustration III

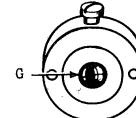


Illustration IV

CLEANING SOUND LENS

FIVE-HOUR CLEANING:

Remove sound drum by pulling directly out after loosening set screw. Use pipe cleaner to clean the film channel slot and the groove in the top of the sound lens. Also clean lower side of sound lens inside the sound drum. Be sure no lint remains on lens or slot. Also be sure sound drum is fully seated with slot in top position.

FIFTY-HOUR CLEANING:

Remove sound drum as above. Remove screws 'A' and 'B' (Illustration I). Thereafter lift out sound channel and sound lens assembly and place in inverted position. Next remove screws 'C' and 'D' (Illustration II) and lift out sound lens unit. (WARNING — *Do not tamper with or loosen screw 'E'. To do so will necessitate return of entire assembly to the factory or nearest Victor Service Center for resetting of lens.*) With a clean lintless cloth polish sound slot 'F' (Illustration III) by placing cloth over thumb nail. Also polish condenser lens 'G' (Illustration IV). Thereafter, re-assemble sound drum being careful to have sound slot nearest screw 'B'. (Illustration I), as shown.

B. INSPECTING THE SOUND REPRODUCTION SYSTEM.

Exciter Lamp. Remove and check for excessive blackening and for sagging filament. Wipe clean and replace. Make sure the lamp is aligned with the slit. This can be seen easily when photoelectric cell is removed and a piece of paper held in its place. Be certain solder contact base is clean.

Photocell. Remove cap, wipe clean. Correct functioning of the photocell can be determined by noting the hiss when the amplifier is turned on and without film, and with the photocell voltage adjusting screw set properly. (Not on all units.) Sometimes photocell breakdown will be checked best by listening to a test film with another photocell in the projector.

Sound Drum and Slit. Clean these very carefully. An ordinary pipe cleaner is effective. Lens tissue or even cheesecloth, with or without an orange-wood stick is satisfactory. Make sure the guides or "rails" are not worn. (See Page ix.)

Tubes. While the operating of the tubes can be gauged by listening to a test reel, it is preferable to remove and check in a standard tube tester. A good tester will show when a tube is near the end of its useful life and will avoid subsequent trouble.

Fuse. Some users replace the regular fuse with other fuses up to 10 amp. capacity. The fuse is for protection and 3 amp. is the maximum size to be used for all 110 V., A.C. or D.C. Models.

Test Film. Use a sound subject, preferably the S.M.P.T.E. test reel or some other good subject with which you are thoroughly familiar. Then you can quickly recognize any variation from standard and investigate further.

Sound Quality.

- a. **WOWS.** Slow speed oscillations are usually caused by improper operation of the impedance roll assembly. Make sure that the flywheel is working smoothly and that the pressure roller runs free.
- b. **FLUTTER.** Relatively high speed oscillations are usually caused by improper functioning of the sound sprocket filter mechanism. Check the clearance and smoothness of the sound sprocket and its roller. (See Page xi.)

(Note: Wows are sometimes described as "mushy sound" and flutter as "sour sound." While inexact, they are quite descriptive and may have some definitive value.)

Sound Controls. Check the operation of switches, volume and tone controls. Listening to the sound while operating the latter will indicate whether the amplifier needs further attention.

GENERAL OVERHAUL

A periodical overhauling is indicated when the equipment has been in frequent use even though the General Inspection shows that it is functioning satisfactorily. Such an overhaul may be likened to the 10,000 and 20,000 mile checkups on your car.

The following overhaul procedure is indicated also where there is any question about the proper performance of the projector, irrespective of the amount of use it has had.

The General Overhaul involves dismantling the projector in four main operations as below:

1. REMOVE PROJECTOR FROM CASE:

The projector is held in the case by four screws at the bottom of the case. After removing the screws, tilt the projector forward carefully to gain access to the plugs connecting projector to the amplifier. Disconnect these plugs and remove projector.

2. REMOVE LAMPHOUSE:

Loosen the thumbscrew holding the lamphouse and remove same. Then remove the five screws holding the remaining part of the lamphouse unit to the main casting of the projector. This exposes the shutter and intermittent mechanism, etc.

3. REMOVE SIDE PLATE:

This plate is held by four screws and covers the takeups, clutch pulleys, flywheels, etc.

4. REMOVE THE MOTOR:

This is necessary only when the commutator or bearings need attention.

The Motor Armature, No. 26841 or 20261, should be checked when giving the projector a complete overhaul. The commutators, if rough, can be turned on a lathe. If the undercut taken on the commutator is too deep,

the armature will not operate satisfactorily and should be replaced.

Under the following headings are given the steps most often necessary for properly checking the projector mechanism. Owing to the extreme accessibility of the mechanism, replacements even of vital parts are easy and positive.

5. SHUTTLE:

This part, #20219-A, is the heart of the entire mechanism and must be checked carefully.

- a. Check for wear or looseness of the sides of the shuttle against the heart shaped cam. Replace if loose. Do not attempt to "bend" to fit. (It is possible to "stone" the shuttle to smooth out minor "grooves," but this is not recommended except with *extreme* caution.)
- b. Make sure the shuttle teeth are not badly worn or rough. Minor rough spots on the shuttle teeth can be "stoned" smooth provided care is used. (Caution is urged if this is attempted.)
- c. When replacing the Shuttle Bearings, #20222, make certain they are seated properly so that the shuttle will not strike them in its up and down motion. Also be certain that the shuttle retaining clamps are securely in place and the screw is tight.
- d. When it is found necessary to replace the shuttle, Shuttle Bearings, #20222, should be thoroughly checked. If they are beginning to show wear, they should be replaced.
- e. When installing a new Shuttle, #20219-A, the Oscillating Gear Assembly, #19479-A, should be adjusted to the proper position as this assembly controls the shuttle action. The shuttle teeth should not extend through the film channel more than 1/16 of an inch. This adjustment on the oscillating assembly can be made by using Tool #9159.

In the event of any question of the best functioning of this vital part, replace the entire shuttle to circumvent subsequent complaints.

6. MAIN DRIVE BELT:

- a. The Motor Drive Belt #19128, should be checked, and if it shows signs of wear, it should be replaced.
- b. Remove motor fan and upper safety shutter guide. Also remove shutter support plate.

7. STARTING LEVER UNIT:

If the roller is loose on the shaft, replace the entire assembly.

8. SAFETY SHUTTER:

It may be necessary to adjust the eccentric washer. This adjustment raises or lowers the safety shutter with relation to the main aperture. The alignment of the two can be readily seen.

Make certain that the shutter slides quite freely between the guide screws #19457 and #19471 so it will drop of its own weight.

If a dark shadow appears either at the top or bottom of the screen, undoubtedly the Safety Shutter, #19460-A, is out of adjustment. This can be corrected with the eccentric washer on this assembly.

9. FLYWHEEL UNITS:

The necessary end play for flywheel shafts is .004". Occasionally this tolerance will need adjusting. Use the feeler gauge to check this. Do NOT tighten them up too close to the bushing or too much drag will occur. This is worse than if they were a bit loose.

- a. The Filter Flywheel Assembly, #19270-A, should be checked to make certain that the filter springs are not touching the gear. This would result in an uneven action and poor sound reproduction. One of the filter springs is straight, while the other one has a small bend or angle.

10. TAKEUP PULLEYS:

Uneven action of these pulleys causes a jumpy action of the takeup and may result in the film "spilling over." This uneven action, in turn, may be caused by wear or oil and grease in the assembly.

The assembly should be checked for worn parts and cleaned.

The Takeup Clutch Assembly, #26836-A, should be checked to see if it is working correctly and is clean. This assembly must be removed from the projector to disassemble. Extreme caution should be exercised in taking this assembly apart so that the small clutch balls will not become lost. This should be assembled dry. Carbon tetrachloride may be used to clean it.

11. GOVERNOR:

Occasionally the brushes need replacement. (The governor itself rarely needs replacement.)

To remove the governor, first remove the end plate and speed switch from the motor housing. Then loosen the locking screw on the governor hub and slide off the motor shaft. In replacing, allow proper ($\frac{1}{8}$ ") clearance for the brushes.

- a. The Motor Governor, #19533 or #26708-A, should be checked to make certain that the points are smooth. If the points are found to be rough, a regular point file may be used.
- b. The governor rings can be polished if mounted on an Arbor either in a lathe or drill press.
- c. When replacing the governor, be sure that there is at least $\frac{1}{8}$ " clearance between the governor brush holders and the governor.

12. FILM SHOES — UPPER AND LOWER:

Rollers should roll freely and show no wear. Film shoes should be properly seated on drive sprocket. Tolerance should be approximately two thicknesses of film.

13. FEED SPROCKET:

The Feed Sprocket, #21184-A, should be checked after excessive use for grooves in the sprocket teeth which will result in film noise. If this should occur, the sprocket should be replaced making certain the proper end play (.004) is set.

14. SOUND SPROCKET:

The teeth of the Sound Sprocket, #30368-A, will also become grooved after extensive use which will result in flutter in sound reproduction. This should also be replaced when sprocket is worn.

15. HAND CONTROL SHAFT:

The Hand Control Shaft, #20739-AR, requires very little grease or oil. However, this shaft should be checked when the projector is given a complete overhaul.

16. FILM CHANNEL CLIPS:

Film Channel Clips, #19316, should be cleaned thoroughly and checked for wear to make certain they are functioning properly. If it is found necessary to replace the clips, the simplest way to do this is to loosen the four screws on the film channel enough to slip out the old clips and slip in the new ones. The Film Channel Retaining Screws should then be tightened into place.

17. FILM CHANNEL:

The Film Channel, #19315, should be checked for worn rails. If these show wear, the channel should be replaced.

18. APERTURE PLATE:

The tension of the Aperture Plate, #30151-A, should be four ounces and not more than six ounces. If too much tension is applied to the aperture plate, it will result in loss of loop when running new film.

19. LENS MOUNT:

A picture that is out of focus on one side may be corrected by adjusting the Lens Mount Stop Screw, #19301, located under and to the inside of the Lens Mount.

20. LAMP ADJUSTING NUT:

If shaded areas appear on either side of the screen, this would indicate that the projection lamp is not in correct alignment. This can be corrected by loosening the Lamp Adjusting Nut, #20496, and moving from side to side to clear up dark areas. This is located directly beneath the lamphouse assembly.

21. PROJECTION LAMP:

The Projection Lamp should always be replaced when blisters or bubbles appear on it. The greatest damage is done to a projection lamp immediately after the lamp is turned off. Blisters or bubbles can be prevented by turning on the motor switch and letting it run for two or three minutes after the lamp switch has been turned off, thus cooling the lamphouse and lamp.

22. PROJECTION LAMP SWITCH:

When the Projection Lamp Switch, #23330, is turned on and the projection lamp burns but the motor will not run, this would indicate a faulty lamp switch.

23. OSCILLATING GEAR ASSEMBLY:

The Oscillating Gear Assembly, #19479-A, should be checked for wear making certain that there is not over .003 end play as this assembly controls the action of the shuttle.

24. CAM BEARING:

The Cam Bearing, #20563, should be checked very carefully for wear and if found to be worn should be replaced. Before disassembling the Cam Pulley Assembly, #20565-A, a mark should be put on the pulley to indicate the exact location of the cam so that when assembling this unit, the cam can be put back into the exact position. This is done to prevent the Cam Pulley getting out of balance.

- When replacing the Cam Pulley Assembly, #20565-A, make certain to place the small washer, #19113, on the cam shaft in front of the pulley assembly. One washer is usually sufficient and not more than two should be used.

25. SHUTTER SUPPORT PLATE:

The Shutter Support Plate, #26210-A, is adjustable. If there appears to be excessive gear noise in the shutter support plate, it can be adjusted by loosening the nut on the jack shaft and adjusting the eccentric screw.

26. EXCITER LAMP:

If the Exciter Lamp, #19299, lights inter-


mittently, check for a corroded contact. This can be quickly corrected by polishing with a piece of emery cloth.

27. SNAP-ACTION MICRO SWITCH:

The Models 60-4, 60-10 and 60-25 are equipped with a Snap-Action Micro Switch, #26949, in conjunction with the motor wiring. If the motor races when the projector is not in operation, this would indicate that an adjustment is necessary on the switch arm or that the switch is in need of replacement.

28. IMPEDANCE LOOP ROLL ASSEMBLY:

The Impedance Loop Roll Assembly, #30369-A, should be checked to make certain there are no flat spots on it and also that this assembly with the flywheel is free and spins easily.

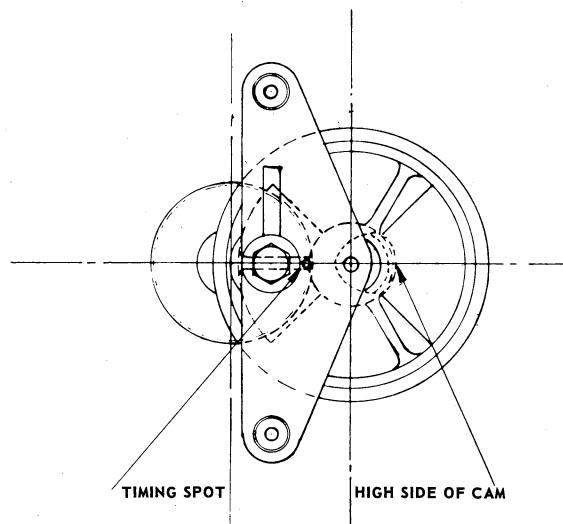

Shutter to be in this position when spot on oscillating gear is in line with rib of cam pulley — with high side of cam in position as shown.

29. TIMING THE PROJECTOR:

The Victor projector is the simplest to time and it is almost impossible to do it incorrectly. Only TWO simple precautions have to be observed.

- Replace the Cam Pulley Shutter and Gear Assembly, #20565-A, with the small end of the cam centered (horizontally) against the punch mark on the large Cam Oscillating Gear, #19479-A. (It will be noticed that one "spoke" of the pulley is

over the center punch mark of the oscillating gear.)

b. While the two gears are still set horizontally as above, set the Shutter Assembly, #20580-A, so that the blades are horizontal also. This places the open part of the shutter at the top and at the bottom. Then replace the Support Plate, #26210-A.

If these things are done the projector will be set correctly but it is always a good idea to turn it over by hand and make sure. Check to see that the shuttle teeth start to pull down while the shutter is closed.

TOLERANCES

19061-A	Impedance Roll (end play)	.004 - or - .001
30368-A	Sound Sprocket (end play)	.004 - or - .001
19185-A	Feed Sprocket Clutch and Shaft Assembly (end play)	.004 - or - .001
20261	Motor Armature Shaft (end play)	.004 - or - .001
19479-A	Oscillating Gear Assembly (end play)	.000 to .002
19533	Governor Setting $\frac{1}{8}$ " clearance between Brush Holders and Commutator	
30151-A	Aperture Plate (Float) $\frac{1}{32}$ " Side to Side, .020" in and out, tension 4 oz. not over 6 oz.	

20219-A	Shuttle Pawls Extend Through Film Channel $\frac{1}{16}$ "	
	Distance between upper and lower pawl	.272
	Distance between upper and lower cam race	.654
20041-A	Film Shoe Roll 18218 should ride lightly on flange of 21184-A Feed Sprocket	
20040-A	Film Shoe Roll 18218 should ride lightly on flange of 21184-A Feed Sprocket	

MOTOR WIRING COLOR CODE

One side of field Red
 One side of field Green
 Left motor brush Blue
 Right motor brush White
 Outside governor brush Black
 Inside governor brush Yellow
 (Center Governor Brush Wire 19528A connects motor brush with governor brush)

TERMINAL STRIP COLOR CODE

Right side of speed switch Black
 Right side and center of reverse switch White
 Left side of resistor Blue
 Right side bottom reverse switch Green
 Left side bottom reverse switch Red

Speaker

Wipe dust from speaker cone and make certain it is not cracked or broken.

SOME COMMON PROJECTOR TROUBLES AND THEIR REMEDIES

1. Premature Lamp Blow Out

a. High Line Voltage:

This is nearly always the cause of the trouble. Check line with a good meter. The power companies often boost the supply voltage to compensate for heavy loads in outlying districts. Voltages also tend to vary with the general industrial load and may vary greatly in different parts of the same area at the same time.

b. Incorrect Lamp Used:

The lamps usually stocked by the dealer are rated for 110 volts and are suitable for line voltages of from 100 volts to 115 volts. While they can be used on 120 volt lines, their life will be curtailed, especially the ten hour lamps.

Lamps rated at 100 V, 105 V, 115 V, 120 V, and 125 V can be obtained on order. (Use of a low rating lamp increases illumination at the expense of lamp life.) Occasionally we run into line voltages of 130 and 135 volts. Obviously,

even a 125 volt lamp will burn out on such a line.

2. Main Line Fuse Blows

This indicates a short or ground in the wiring. Test the projector and amplifier separately. Localize the fault by disconnecting motor, lamp, governor, etc., as necessary until the faulty part is found.

3. Motor Will Not Run

- a. Check cords and plugs.
- b. Check motor brushes.
- c. Check main switch contacts.
- d. Check governor brushes and contacts.
- e. Check line fuse.

4. Speed Variation

Clean governor contact points and readjust setting if necessary.

5. Loss of Top Loop

Check for:

- a. Friction washer on feed arm spindle may be sticking due to dirt (Model 40 only). Try oiling before disassembling.
- b. Improper seating of upper film shoe.
- c. Torn film perforations.

6. Loss of Lower Loop

Check for:

- a. Torn film perforations.
- b. Film not threaded properly at gate.
- c. Film shoes and gate clearance.
- d. Excessive wear of shuttle.

7. Film Scratches

This is usually due to an accumulation of hardened emulsion on aperture plates or film channel because these parts have not been kept clean. It may also be due to physical damage to extremely smooth surface of gate plates or wear of guides on back film channel, aperture plate, or sound drum. If so, replacement is indicated.

8. Pictures Unsteady

- a. Film badly shrunken and perforations chipped.
- b. Wear on shuttle or other parts of intermittent mechanism.
- c. Projector used on shaky table.
- d. Pressure plate not properly seated in film channel.

9. Flicker

- a. Governor set too slow.
- b. Cam gear replaced "out of time".
- c. Light shutter "out of time".

10. Film Spills Over

- a. Insufficient friction on feed spindle.
- b. Worn takeup clutch.
- c. Rewind belt not in place on reel arm.
(Applies to all projectors in metal cases.)

11. "Motor-Boating"

- a. Sound drum not replaced properly, causing film misalignment.
- b. Impedance roll sticking.

12. Film Tears at Drive Sprocket

- a. If sprocket is replaced without hardened thrust washer between it and the casting, the sprocket teeth will not align with groove of idler rollers.
- b. Film shoes too tight. Adjust with 2 thicknesses of film.

13. Film Perforations Chip

- a. Worn sprocket teeth.
- b. Worn shuttle or shuttle teeth.
- c. Tension at gate insufficient.
- d. Badly shrunken film.

14. Insufficient Light on Screen

- a. Still picture shutter "up". (Not furnished on all models.)
- b. Dirty lens, condenser, or reflector.
- c. Lamp old, blackened or dirty.
- d. Low line voltage.
- e. Dirty screen.
- f. Lamp improperly seated.

15. Picture Partly Out of Focus

- a. Aperture plate improperly aligned — must be parallel to film channel.
- b. Too little tension at gate allows film to move in and out of focus.
- c. Dirt on lens.
- d. Projector not at 90° angle with screen.

16. Travel Ghost

A picture with a streaked effect, particularly on white scenes, is caused by light shutter not properly timed.

POSSIBLE AMPLIFIER TROUBLES AND THEIR REMEDIES

1. Hum:

- a. Shield off of 1st stage tube or P. E. Cell.
- b. Excessive voltage on P. E. Cell. Check the setting of the P. E. potentiometer screw on models that are so equipped.
- c. Check all condensers, particularly filter condensers.

2. Noise:

- a. Try reversing plug in power supply line.
- b. Check speaker cord and connections.
- c. Defective or microphonic 1st stage tube. Try one or two other tubes.
- d. A loose connection, particularly in the plugs connecting to the projector.
- e. Check resistors.
- f. Check condensers.

3. Low Volume:

- a. Check P. E. Cell adjustment on models so equipped. Make certain the proper type of cell is in use.
- b. Defective tubes, P. E. Cell, or exciter lamp.
- c. Make certain exciter lamp is aligned with slit.

- d. Dirt or oil on optical slit or lens.
- e. Low line voltage.

4. No Sound Response:

- a. Check power source, cords, etc. Check fuse (see items listed under FUSE).
- b. Check output transformer, speaker, etc.
- c. Check speaker for ground, short, or open circuit.

5. Fuse:

- a. Blows as power is switched on — probably a short in power transformer.
- b. If amplifier warms up and then fuse blows, check the rectifier and output tubes and then the filter condensers.

6. P. E. Cell:

- a. Short life; caused by excessive voltage setting of potentiometer screw (on models so equipped). (This ionizes the cell.)
- b. Excessive "rushing" sound or hiss in speaker line when exciter lamp is off is caused by slightly high setting of potentiometer screw (on models so equipped).



PARTS SECTION

16mm
SOUND MOTION PICTURE
PROJECTORS

MODELS
40-A, 40-B, 40-BX, 55,
56, 60-B, 60-2, 60-4,
60-10, 60-25,
AND
G (BRITISH GREYLINE VICTOR)

PREPARED BY
VICTOR ANIMATOGRAPH CORPORATION
DAVENPORT, IOWA, U. S. A.

**OPERATOR'S
VIEW
MODEL
60-25
PROJECTOR
HEAD
(USE AS
REFERENCE
FOR MODEL
60-2)**


No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	20587-50-AR	Lamp house assembly	11									
2	20466-50-AR	Lamp house cover	11									
3	19402	Lamp house lock screw	11		1	1						
4	23135-A	Support bar oil tube	35									
5	19315	Film channel	17	1	1	1						
6	20224-50	Shuttle oiler				1						
	36147	Oil wick (not shown)									2	2
6-A	19245-50A	Cam shaft support & oiler assembly		1	1	1						
7	19491-A	Automatic trip assembly	21	1	1	1						
8	20230	Pilot lamp cap	23			1						
9	19302	Lens mount lock plate	23	1	1	1	1	1				
10	26902-AR	Body casting										
11	30254	Reel arm lock screw	13				1	1				
12	26208	Take-off feed roll	13				6	6	6	6	6	6
13	20040-A	Film shoe (upper)	15	1	1	1						
13-A	20047-A	Film guard	17		1	1						
14	21184-A	Feed sprocket	71	1	1	1	1	1	1	1		
15	20041-A	Film shoe (lower)	15	1	1	1	1	1	1	1		
16	20739-AR	Hand control knob & shaft assembly	75									
17	30488-A	P.E. Cell cover assembly	17									
18	19086	Film support roll	23		1	1	1	1	1	1		
19	30523-A	P.E. Cell contact (female)	67									
20	30368-A	Sound sprocket*				1	1	1	1	1		
21	19233-A	Tension roll	19	1	1	1						
22	26561-A	P.E. Cell connector (male)	67									
23	26917	P.E. Cell contact (female)	67									
24	26918	P.E. Cell connector	67					1		1	1	
25	19547-50A	Exciter cord assembly	63						1	1		
26	20628	Exciter plug (male)	63						1	1		
27	20629	Exciter socket (female)	63						1	1		
28	30366-A	Base support sleeve	73		4	4	4	4	4	4	4	4
29	23110	Base support bar (front)	73		1	1	1	1	1	1	1	
30	18640	Silent-sound switch	65	1	1	1	1		1	1		
31	20264	Motor brush plug	79			2	2	2	2	2	2	2
32	30428-A	Sound lens core complete	17		1	1	1	1	1	1		
33	30369-A	Loop roll assembly†		1	1	1	1	1	1	1		
34	18058-A	Tension roll	19	1	1	1	1	1	1	1	1	
35		8/32 x 3/4 Truss Head (Motor mounting) screw									4	4
36	20169	AC line plug				1	1	1	1	1		
37	26901-AR	Lamp house casting	41									
38	19747	AC line plug (male)			1	1	1	1	1	1		
39	19034-50A	Power lead assembly	45		1	1	1	1	1	1		
40	18641	Motor switch	65	1	1	1	1	1	1	1		
41	23330	Lamp switch	45	1	1	1	1	1	1	1		
42	30151-A	Aperture plate assembly	21	1	1	1	1	1	1	1		
43	19254-A	Lens mount assembly	21	1	1	1	1	1	1	1		

*No. 20, 30368-A, is interchangeable with 19497-A (Page 9) and replaces this assembly.

†No. 33, 30369-A, is interchangeable with 19061-A (Page 9) and replaces this assembly.

**OPERATOR'S
VIEW
MODEL
60-25
PROJECTOR
HEAD**

**(USE AS
REFERENCE
FOR MODEL
60-2)**

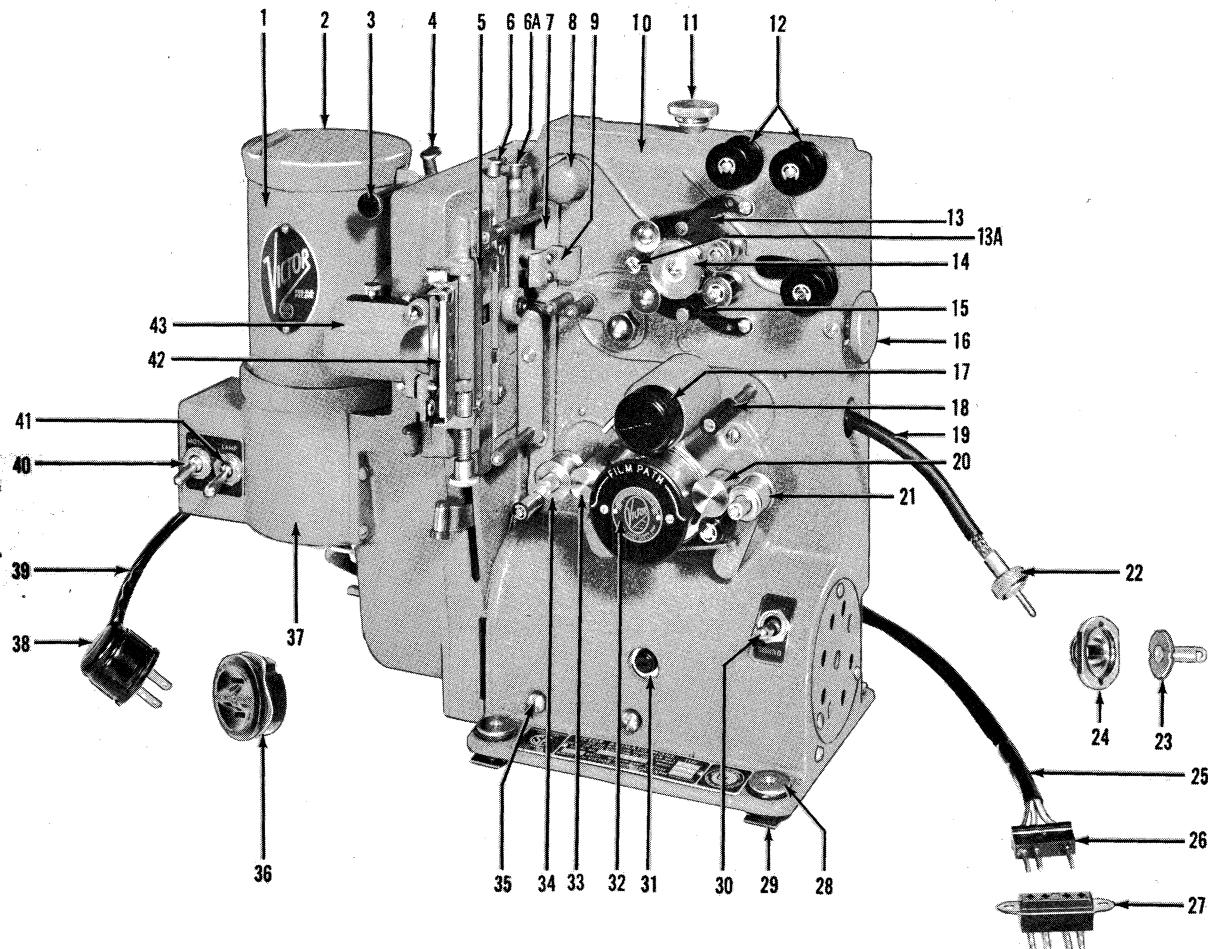


**OPERATOR'S
VIEW
MODELS
60-10
AND 60-4
PROJECTOR
HEAD
(USE AS
REFERENCE
FOR MODELS
55, 56)**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	19402	Lamp house lock screw	11									
2	23135-A	Support bar oil tube	35									
3	19130	Shutter housing										
4	20224	Shutter oiler with wick										
5	19245-50A	Cam shaft support & oiler assy.	23									
6	19302	Lens lock plate	23	1	1	1	1	1	1	1	1	
7	20230	Pilot lamp cap	23		1	1			1			
8	26759-A	P.E. Cell cord assembly	67									
9	26561-A	P.E. Cell connector (male)	67					1	1	1	1	
10	26918	P.E. Cell connector base	67				1	1	1	1		
11	30254-A	Reel arm holder screw assembly	13				1	1	1	1	1	
12	26208	Take-off feed roll (2 per assy.)	13				6	4	6	6	6	6
13	26917	P.E. Cell contact (female)	67				1	1	1	1		
14	26902-AR	Body casting assembly										
15	20040-A	Film shoe (upper)	15	1	1	1	1	1	1	1	1	
15-A	20047-A	Film guard	17									
16	21184-A	Feed sprocket	71	1	1	1	1	1	1	1	1	
17	20041-A	Film shoe (lower)	15	1	1	1	1	1	1	1	1	
18	20739-AR	Hand operating knob & shaft assy.	75	1	1	1	1	1	1	1	1	
19	30488-A	P.E. Cell cover assembly	17									
20	19086	Film support roll	23	1	1	1	1	1	1	1	1	
21	30368-A	Sound sprocket assembly		1	1	1	1	1	1	1	1	
22	23298	Exciter four contact plug (male)	75									
23	26726-AR	Sound sprocket tension arm assy.	19	1	1	1	1	1	1	1	1	
24	30586	Four contact exciter socket (female)	75								1	
25	26587	Silent-sound speed switch	65	1	1	1	1	1	1	1	1	
26	30366-A	Base support sleeve	73	4	4	4	4	4	4	4	4	4
27	22091	Base support washers (rubber)	73	8	8	8	8	8	8	8	8	8
28	26908-A	Base support bar (front)	73	1	1	1	1	1	1	1	1	1
29	20264	Motor brush plugs	79		2	2	2	2	2	2	2	2
30	30428-A	Sound lens assembly	17									
31	26725-AR	Loop tension arm assembly	19	1	1	1	1		1	1		
32	26907-A	Base support bar (rear)	73									
33	30369-A	Loop roll shaft assembly		1	1	1	1	1	1	1	1	
34	26644-AR	Automatic trip lever assembly	21	1	1	1	1	1	1	1	1	
35	19034-50A	Power lamp wire assembly	45									
36	19747	Main line plug (male)	45	1	1	1	1	1	1	1	1	
37	20169	AC outlet for amplifier	45									
38	23340	Motor switch	65	1	1	1	1	1	1	1	1	
39	23330	Lamp switch	45	1	1	1	1	1	1	1	1	
40	30151-A	Aperture plate	21	1	1	1	1	1	1	1	1	
41	19254-AR	Lens mount assembly	21	1	1	1	1	1	1	1	1	
42	19315	Film channel	17	1	1	1	1	1	1	1	1	
43	26583-AR	Lamp house assembly	11									
44	20466-50R	Lamp house cap	11	1	1	1	1	1	1	1	1	

**OPERATOR'S
VIEW
MODELS
60-10
AND 60-4
PROJECTOR
HEAD**

(USE AS
REFERENCE
FOR MODELS
55, 56)

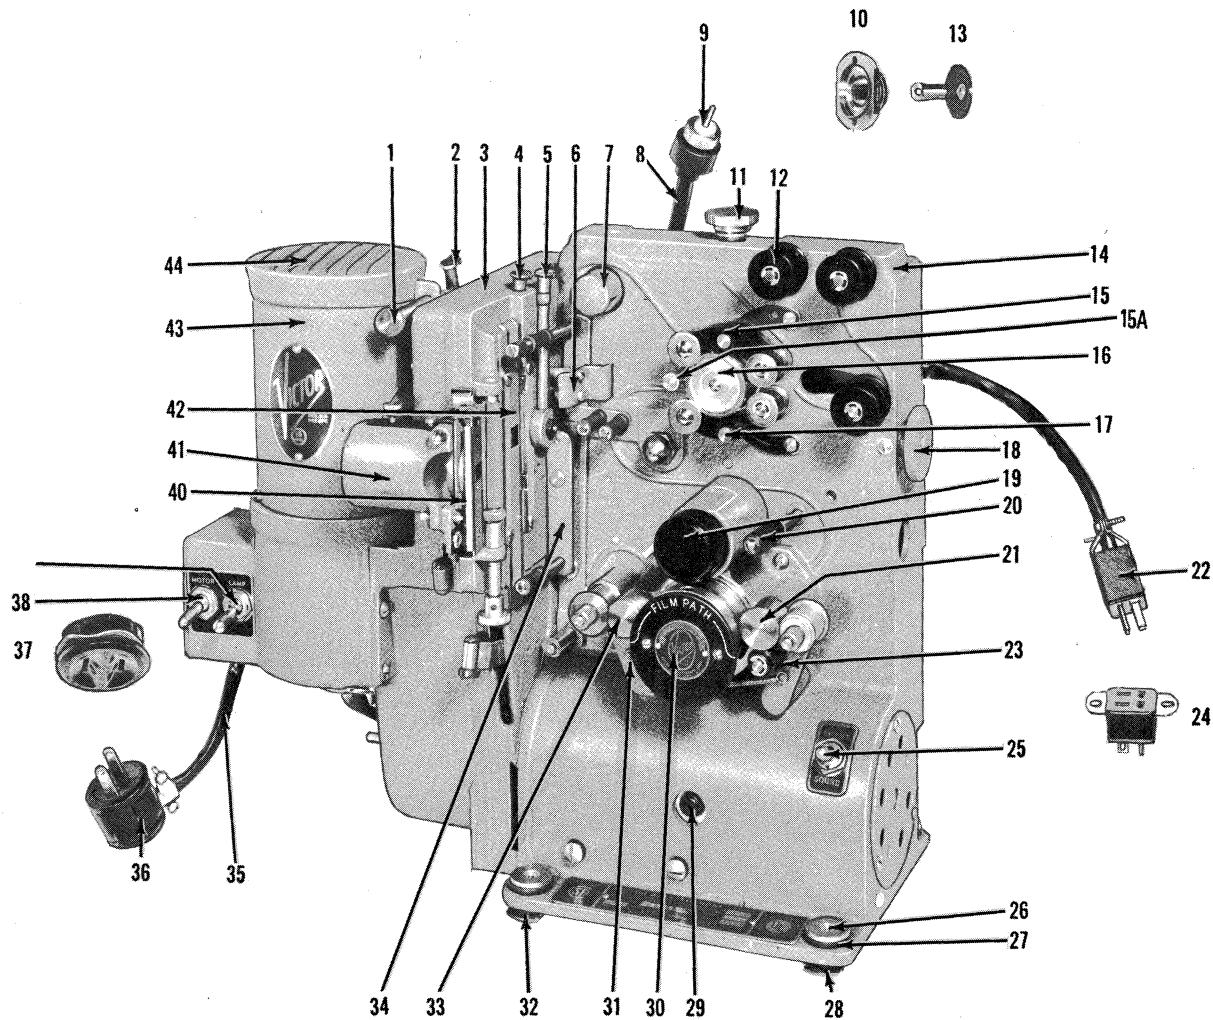

**OPERATOR'S
VIEW
MODEL
60-B
PROJECTOR
HEAD**


No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26583-AK	Lamp house assembly	11										
2	20466-50R	Lamp house cap cover	11										
3	23135-A	Support bar oil tube	35										
4	19315	Film channel	17										
5	20224-50	Shuttle oiler											
6	19245-50A	Cam shaft support & oiler assy.	23										
7	20230-K	Pilot lamp cap	23										
8	19302-K	Lens mount lock plate	23										
9	20790-2	Body casting											
10	23186-A	Reel arm socket assembly	13										
11	20040-A	Film shoe (upper)	15										
11-A	20047-A	Film guard	17										
12	21184-A	Feed sprocket	71										
13	19847	Take-off feed roll	75										
14	20041-A	Film shoe (lower)	15										
15	20739-40	Hand control knob*	75										
16	20595-A	P.E. Cell cover	17										
17	19086	Film support roll	23										
18	30368-A	Sound sprocket											
19	19561-A	Tension arm assembly†	19										
20	20717-A	P.E. Cell cord assembly	67										
21	19818	P.E. Cell connector (female)	67										
22	18640	Silent-sound switch	65										
23	19819	P.E. Cell connector (male)	67										
24	19547-50A	Exciter cord assembly	63										
25	20628	Exciter cord plug (male)	63										
26	20629	Exciter cord socket (female)	63										
27	23184-A	Reel arm (front)	77										
28	20264	Motor brush plug	87		2	2	2	2	2	2	2	2	2
29	30428-A	Sound lens assembly	17										
30	30369-A	Loop roll assembly											
31	19598	Reel arm holder screw											
32	19563-A	Tension arm loop roll**	19	2	2	2	2	2	2	2			
33	26644-AK	Automatic film trip assembly	21										
34	23184-50A	Reel arm (rear)	77										
35	19390-3	Lamp house casting	43										
36	20169	AC receptacle	43										
37	19747	AC plug (male)	43										
38	19034-50A	Power lead assembly	45										
39	18641	Motor switch	45	2	2	2	1	1	2	2	1	1	2
40	23330	Lamp switch	45										
41	30151-A	Aperture plate assembly	21										
42	19254-A	Lens mount assembly	21										

*No. 15, 20739-40 and 19501-40 (not shown) are replaced by 20739-AR (Page 75).

†No. 19, 19561-A is replaced by 26726-AR (Page 19).

**No. 32, 19563-A is replaced by 26725-AR (Page 19).

**OPERATOR'S
VIEW
MODEL
60-B
PROJECTOR
HEAD**

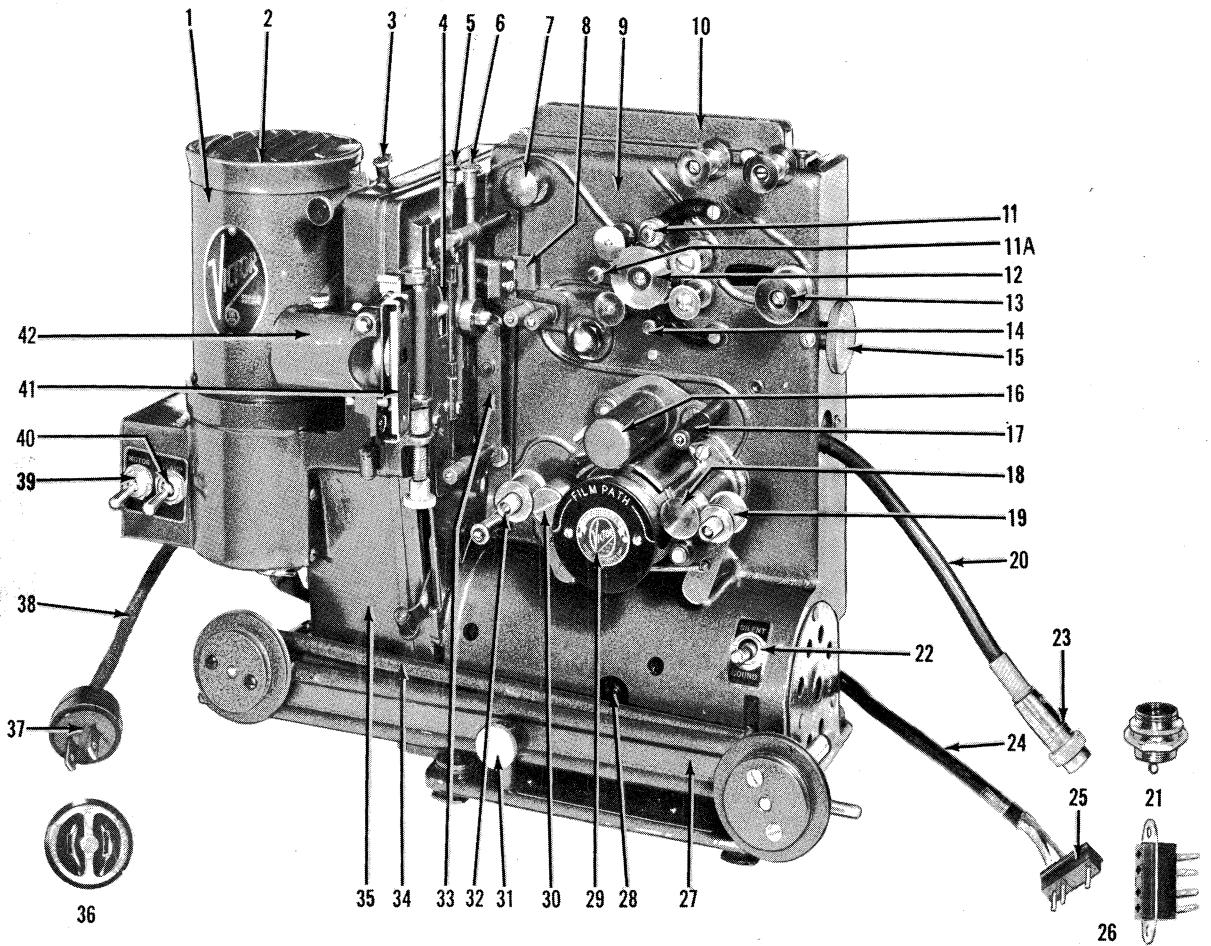

**OPERATOR'S
VIEW
MODEL
40-B
PROJECTOR
HEAD
(USE AS
REFERENCE
FOR MODEL
40-A)**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	20587-A	Lamp house assembly*	11		1							
2	20466-50	Lamp house cover	11		1							
3	19315	Film channel	17	1	1	1	1	1	1	1	1	1
4	20224-50	Shuttle oiler			1		1	1	1	1	1	1
4-A	19245-50A	Cam shaft support & oiler assy.	23	1	1	1	1	1	1	1	1	1
5	19491-A	Automatic trip assembly	21	1	1	1	1	1	1	1	1	1
6	20230	Pilot lamp cap	23		1		1	1	1	1	1	1
7	19302	Lens lock plate	23	1	1	1	1	1	1	1	1	1
8	20790-2	Body casting			1		1	1	1	1	1	1
9	19850-A	Reel arm socket assembly	13	1	1	1						
10	20040-A	Film shoe (upper)	15	1	1	1	1	1	1	1	1	1
11	21184-A	Feed sprocket	71	1	1	1	1	1	1	1	1	1
11-A	20047-A	Film guard	17		1		1	1	1	1	1	1
12	19847	Take-off feed roll	75	1	1	1	1	1	1	1	1	1
13	20041-A	Film shoe (lower)	15	1	1	1	1	1	1	1	1	1
14	20595-A	P.E. Cell cover	17	1		1	1	1	1	1	1	1
15	19086	Support roll	23	1	1	1	1	1	1	1	1	1
16	19497-A	Sound sprocket assembly†			1	1	1	1	1	1	1	1
17	19561-A	Sound sprocket tension arm**	19	1	1	1	1	1	1	1	1	1
18	20717-A	P.E. Cell cord assembly	67		1	1	1	1	1	1	1	1
19	19819	P.E. Cell connector (male)	67		1	1	1	1	1	1	1	1
20	19818	P.E. Cell socket (female)	67		1	1	1	1	1	1	1	1
21	20619	Exciter plug socket	63									
22	20618	Exciter plug (male)	63									
23	19547-A	Exciter cord assembly	63									
24	18640	Silent-sound switch	69	1	1	1	1	1	1	1	1	1
25	20591-A	Complete sound lens core assy.‡	17	1	1	1	1	1	1	1	1	1
26	19598	Reel arm holder screw			1	1						
27	19061-A	Impedance loop roll shaft assy.***			1	1	1	1	1	1	1	1
28	19563-A	Loop tension arm assembly††	19	1	1	1	1	1	1	1	1	1
29	30002-AR	Model 40 complete rear reel arm assembly	77	1	1	1						
30	30002-AF	Model 40 complete front reel arm assembly	77	1	1	1						
31	20169	AC receptacle (Female)	45		1	1	1	1	1	1	1	1
32	19747	Main line plug in projector head	45		1	1	1	1	1	1	1	1
33	19034-50A	Power lead assembly	45	1	1	1	1	1	1	1	1	1
34	18641	Motor rewind switch — also exciter switch	45		2	2	1	1	2	2	1	2
35	23330	Lamp switch	45	1	1	1	1	1	1	1	1	1
36	30151-A	Aperture plate assembly	21	1	1	1	1	1	1	1	1	1
37	19254-A	Lens mount assembly	21	1	1	1	1	1	1	1	1	1

*No. 1, 20587-A is replaced by 26583-AR with the exception of color. (Page 11).

†No. 16, 19497-A is replaced by 30368-A (Page 3).

**No. 17, 19561-A is replaced by 26726-AR (Page 19).


‡No. 25, 20591-A is replaced by 30428-A (Page 17).

***No. 27, 19061-A is replaced by 30369-A (Page 3).

††No. 28, 19563-A is replaced by 26725-AR (Page 19).

**OPERATOR'S
VIEW
MODEL
40-B
PROJECTOR
HEAD**

**(USE AS
REFERENCE
FOR MODEL
40-A)**

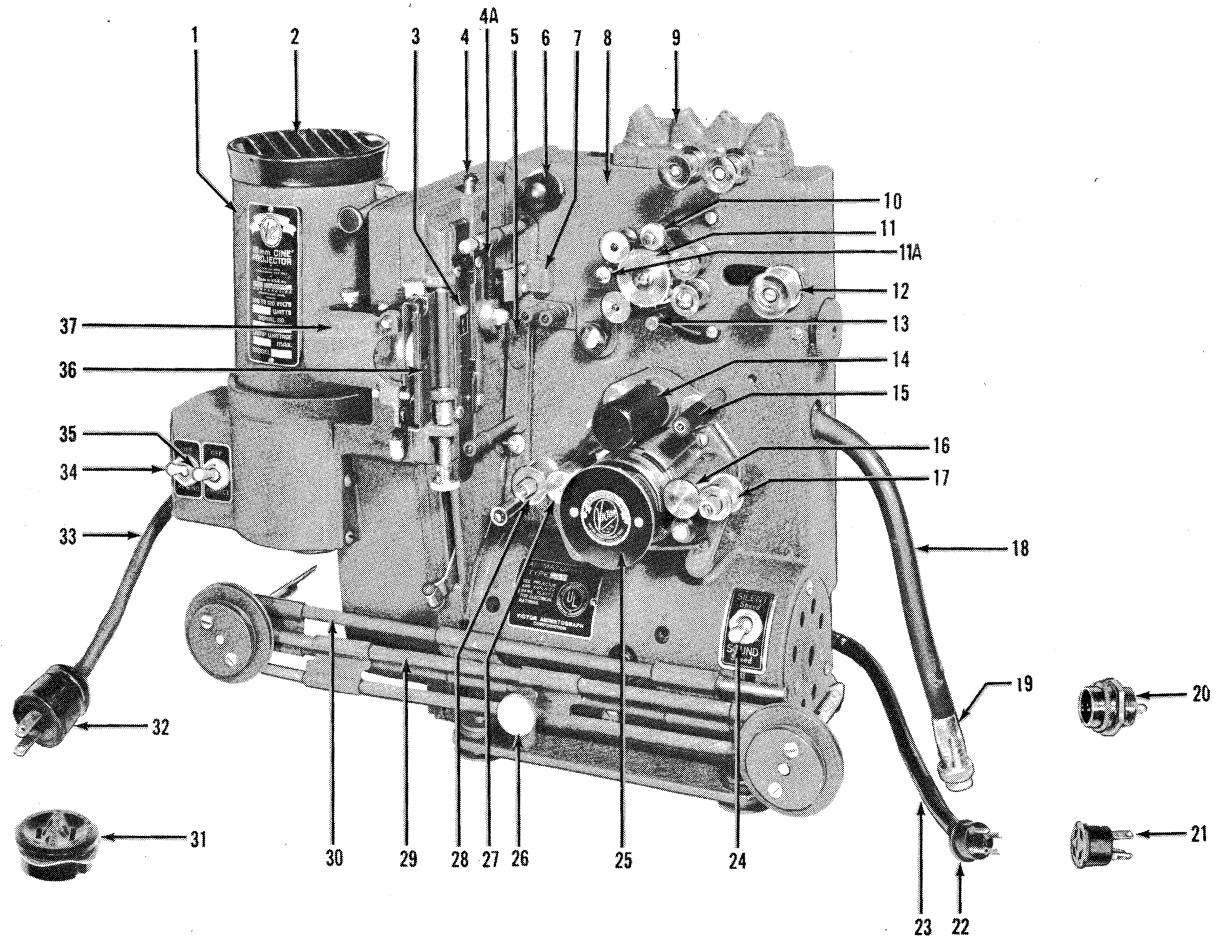

**LAMP
HOUSE
ASSEMBLY**


No.	Part No.	Part Name	Page	USED ON MODELS							
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	26583-AR	Lamp house assembly*			1	1	1	1	1	1	1
2	20586-50	Lamp house sleeve (inner)			1	1	1	1	1	1	1
3	20585	Lamp house sleeve			1	1	1	1	1	1	1
4	20584	Reflector			1	1	1	1	1	1	1
5	20500	Reflector			1						
6	19276	Retaining ring†			1	1	1	1	1	1	1
7	20510	Conza condenser			1	1	1	1	1	1	1
8	19402	Lamp house lock screw			1	1	1	1	1	1	1
9		4/40 x 1/8 R.H. screw			2	2	2	2	2	2	2
10	20587-A	Lamp house assembly‡			1	1					
11	20466-50R	Lamp house cover			1	1	1	1	1	1	1
12	20466	Lamp house cover			1	1					
13	20514	Condenser spring†			1	1	1	1	1	1	1
14	19277-R	Condenser mount			1	1	1	1	1	1	1
15		4/40 x 5/8 R.H. screw			3	3	3	3	3	3	3
16	26875	Condenser retaining spring†			1	1	1	1	1	1	1

*No. 1, 26583-AR, is interchangeable and replaces No. 10, 20587-A, with the exception of color.

†No. 6, 19276 Retaining ring and No. 13, 20514 condenser spring are replaced with No. 16, 26875 condenser retaining spring.

‡No. 10, 20587-A, is used on Model 40 wood cases and cannot be used on projectors having metal cases.

LAMP HOUSE ASSEMBLY

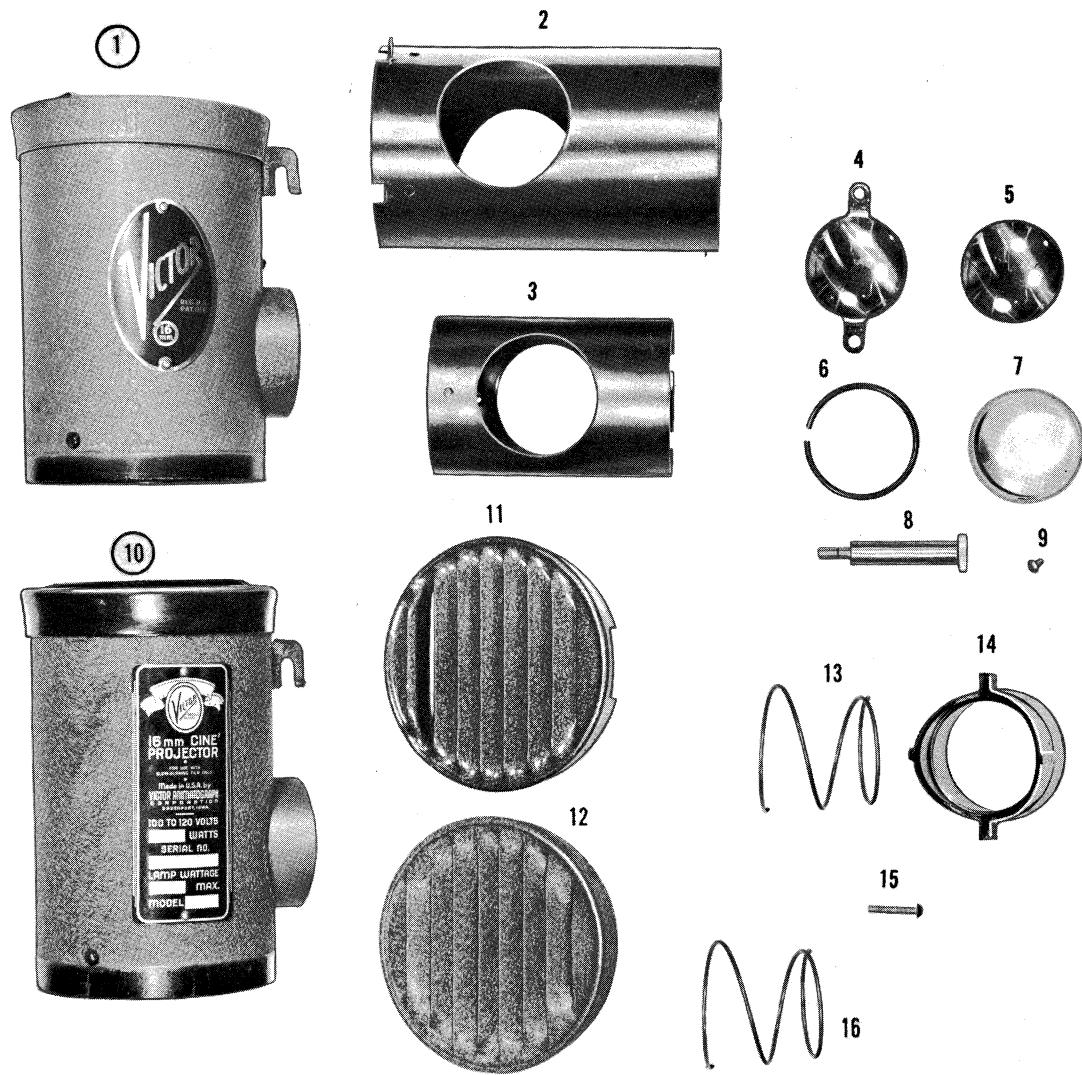

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
PILOT LAMP	1 28130	Pilot lamp				1	1		1	1	1	1	1
	2 19210	P.E. cell*				1	1	1	1	1	1	1	1
P.E. CELL	3 19299	Exciter lamp† <i>BRS or BK</i>				1	1	1	1	1	1	1	1
	4 750 W. 115 V. Projection lamp					1	1	1	1	1	1	1	1

*No. 2, 19210, is used on Models starting with Model 40 through Model 60 series.

†Beginning with Model 40 Serial No. 63930, No. 3, 19299 (5 V-6.5 amp. S.C. prefocus base) is used through Model 60 series.

EXCITER LAMP

Model 40-A, 63018 to 64055 used 8 1/2 V. 4 amp. S.C. prefocus base exciter lamp.

Model 40, 63017 and lower require 8 1/2 V. 4 amp. S.C. bayonet base exciter lamp.

All models can use 750 W. or 1000 W. prefocus projection lamp except AC-DC Series 40, 55, 56 and 60-4 which require 750-115 only.

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
REEL ARM	1 19850-A	Reel arm holder assembly			1	1	1						
	2 19848	Take-off film rollers			2	2	2	2		2			
	3	5/40 x 3/4 F.H. reel arm holder retaining screw				4	4						
SOCKETS	4 19849	Take-off film roller bushing			2	2	2	2		2			
	5	6/32 x 1-1/8 R.H. take-up film roller retaining screw			2	2	2		2				
	6 30252-A	Reel arm holder assembly					1	1	1				
	7 30168	Film trap roller spacer					2	2	2		2		
	8 26580	Film trap roll sleeve					2	2	2		2		
	9 26208	Take-off feed roll					6	4	6	6	6	6	6
	10	5/40 x 3/4 F.H. reel arm holder retaining screw					2	2	2				
	11	6/32 x 1-1/8 R.H. take-up film roller retaining screw			2	2	2		2				
	12	#3 "C" Washer take-off feed roll retainer					3	2		3	3	3	3
	13 26749	Film trap roll shaft								2	2	2	
	14 26767	Reel arm locking wedge					1	1	1	1	1	1	
	15 30254	Reel arm lock screw					1	1	1	1	1	1	
	16	5/40 x 3/8 R.H. reel arm holder retaining screw					2		2				
	17 23186-A	Reel arm holder assembly					1	1					


BVS
BRK




1



2

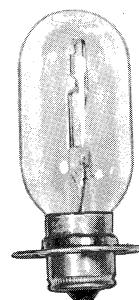


3

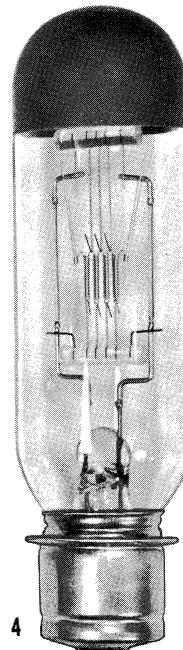

4

PILOT LAMP
P.E. CELL
EXCITER LAMP
PROJECTION LAMP

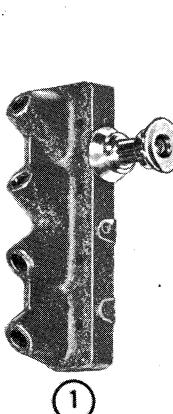


1




3



5

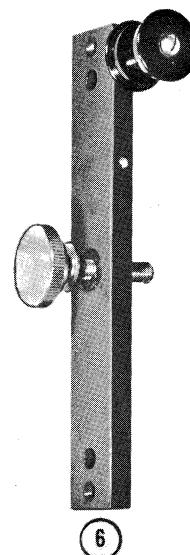

6

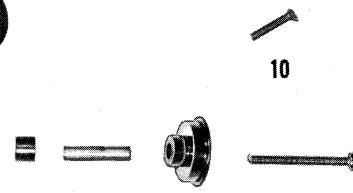


7



8




9

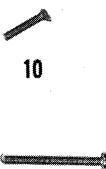

10

11

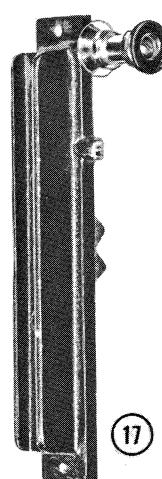


17



16




5

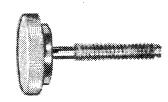

15

14

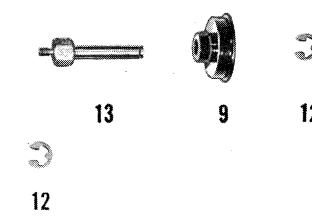

13

9

12

12

REEL ARM
SOCKETS

FILM SHOE (UPPER)

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1		5/40 x 3/16 B.H. screw			2	2	2	2	2	2	2	2	2
2		5/40 x 3/16 B.H. screw			2	2	2	2	2	2	2	2	2
3		5/40 x 3/16 B.H. screw			2	2	2	2	2	2	2	2	2
4	20028	Film shoe plate (upper)			1	1	1	1	1	1	1	1	1
5	20028	Film shoe plate (upper)			1	1	1	1	1	1	1	1	1
6	20028	Film shoe plate (upper)			1	1	1	1	1	1	1	1	1
7		#3 "C" Washer								2	2	2	2
8		2/56 x 1/8 R.H. screw			2	2	4	4	4	2	2	2	2
9		2/56 x 1/8 R.H. screw			2	2	4	4	4	2	2	2	2
10	T-78	Film shoe roll			2	2	2	2	2	2	2	2	2
11	T-78	Film shoe roll			2	2	2	2	2	2	2	2	2
12	18217	Film shoe roll			2	2	2	2	2				
13	T-78	Film shoe roll			2	2	2	2	2	2	2	2	2
14	18217	Film shoe roll			2	2	2	2	2	2	2	2	2
15	20040-A	Film shoe — plastic*			1	1	1	1	1	1	1	1	1
16	20040-2	Film shoe — metal*			1	1	1	1	1				
17	20040-2	Film shoe — metal*			1	1	1	1	1				
18	T-89	Film shoe roll			2	2	2	2	2	2	2	2	2
19	18220	Film shoe roll								2	2	2	2
20	T-89	Film shoe roll			2	2	2	2	2	2	2	2	2
21	18218	Film shoe roll shaft			2	2	2	2	2	2	2		
22	T-89	Film shoe roll			2	2	2	2	2	2	2	2	2
23	18220	Film shoe roll								2	2	2	2
24	26729	Film shoe pivot								2	2	2	2
25		2/56 x 1/8 R.H. screw			2	2	4	4	4	2	2	2	2
26		2/56 x 1/8 R.H. screw			2	2	4	4	4	2	2	2	2
27		10/32 Hex nut								2	2	2	2
28	20040-A	Film shoe assembly (upper)			1	1	1	1	1				
29	20040-A	Film shoe assembly (upper)			1	1	1	1	1				
30	20040-A	Film shoe assembly (upper)			1	1	1	1	1				

*No. 15, 20040-A Plastic film shoe replaces Nos. 16, 17, 20040-2 metal shoe.

Because of the method of assembly, 20040-2 is no longer available. 20040-A will be supplied.

Film shoe rolls may be obtained for metal film shoes.

FILM SHOE (LOWER)


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1		5/40 x 3/16 B.H. screw			1	1	1	1	1	1	1	1	1
2		5/40 x 3/16 B.H. screw			1	1	1	1	1	1	1	1	1
3		5/40 x 3/16 B.H. screw			1	1	1	1	1	1	1	1	1
4	20029	Film shoe guide (lower)			1	1	1	1	1	1	1	1	1
5	20029	Film shoe guide (lower)			1	1	1	1	1	1	1	1	1
6	20029	Film shoe guide (lower)			1	1	1	1	1	1	1	1	1
7		2/56 x 1/8 R.H. screw			2	2	2	2	2	2	2	2	2
8		2/56 x 1/8 R.H. screw			2	2	2	2	2	2	2	2	2
9		#3 "C" Washer					2	2	2	2	2	2	2
10	T-78	Film shoe roll			2	2	2	2	2	2	2	2	2
11	18217	Film shoe roll			2	2	2	2	2	2			
12	T-78	Film shoe roll			2	2	2	2	2	2	2	2	2
13	18217	Film shoe roll			2	2	2	2	2	2			
14	T-78	Film shoe roll			2	2	2	2	2	2	2	2	2
15	20041-A	Film shoe — plastic*			1	1	1	1	1	1	1	1	1
16	20041-2	Film shoe — metal*			1	1	1	1	1	1	1	1	1
17	20041-2	Film shoe — metal*			1	1	1	1	1	1	1	1	1
18	18220	Film shoe roll					2	2	2	2	2	2	2
19	T-89	Film shoe roll			2	2	2	2	2	2	2	2	2
20	18218	Film roll shaft			2	2			2				
21	T-89	Film shoe roll			2	2	2	2	2	2	2	2	2
22	18220	Film shoe roll					2	2	2	2	2	2	2
23	T-89	Film shoe roll			2	2	2	2	2	2	2	2	2
24	26729	Pivot								2	2	2	2
25		2/56 x 1/8 R.H. screw			2	2	2	2	2	2	2	2	2
26		10/32 Hex nut								2	2	2	2
27	20041-A	Film shoe (lower) metal			1	1	1	1	1	1	1	1	1
28	20041-A	Film shoe (lower) metal			1	1	1	1	1	1	1	1	1
29	20041-A	Film shoe (lower) plastic			1	1	1	1	1	1	1	1	1
30		2/56 x 1/8 R.H. screw			1	1	1	1	1	1	1	1	1

*No. 15, 20040-A Plastic film shoe replaces Nos. 16, 17, 20040-2 metal shoe.


Because of the method of assembly, 20040-2 is no longer available. 20040-A will be supplied.

Film shoe rolls may be obtained for metal film shoes.

**FILM SHOE
(UPPER)**

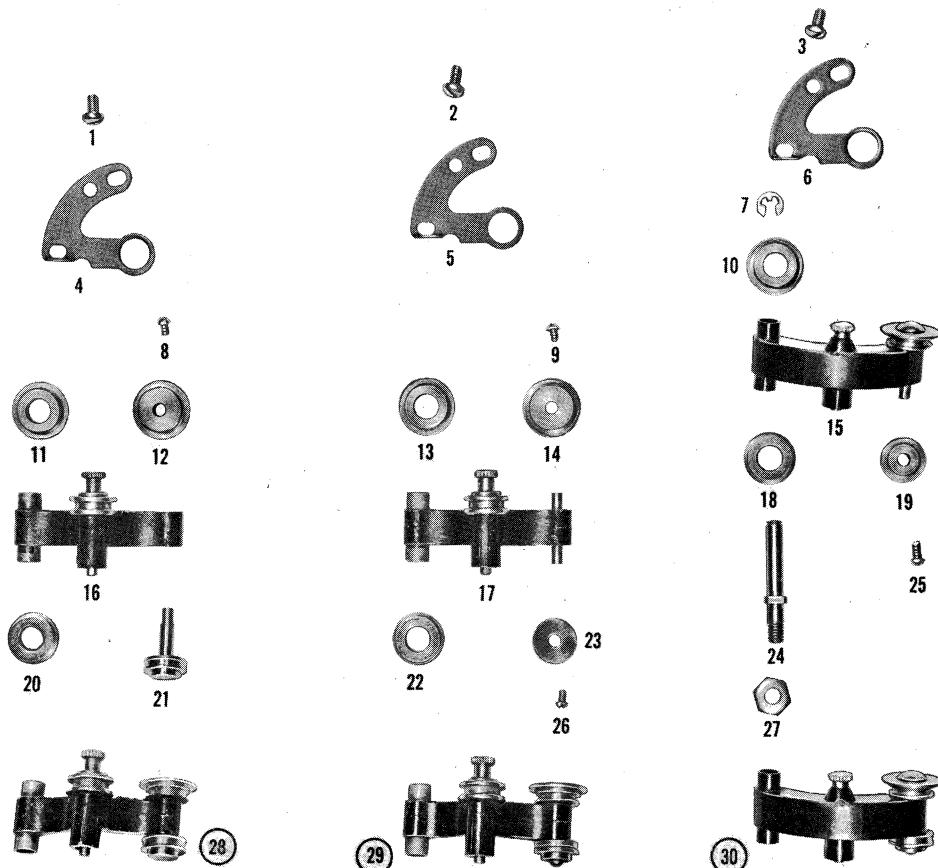

**FILM SHOE
(LOWER)**

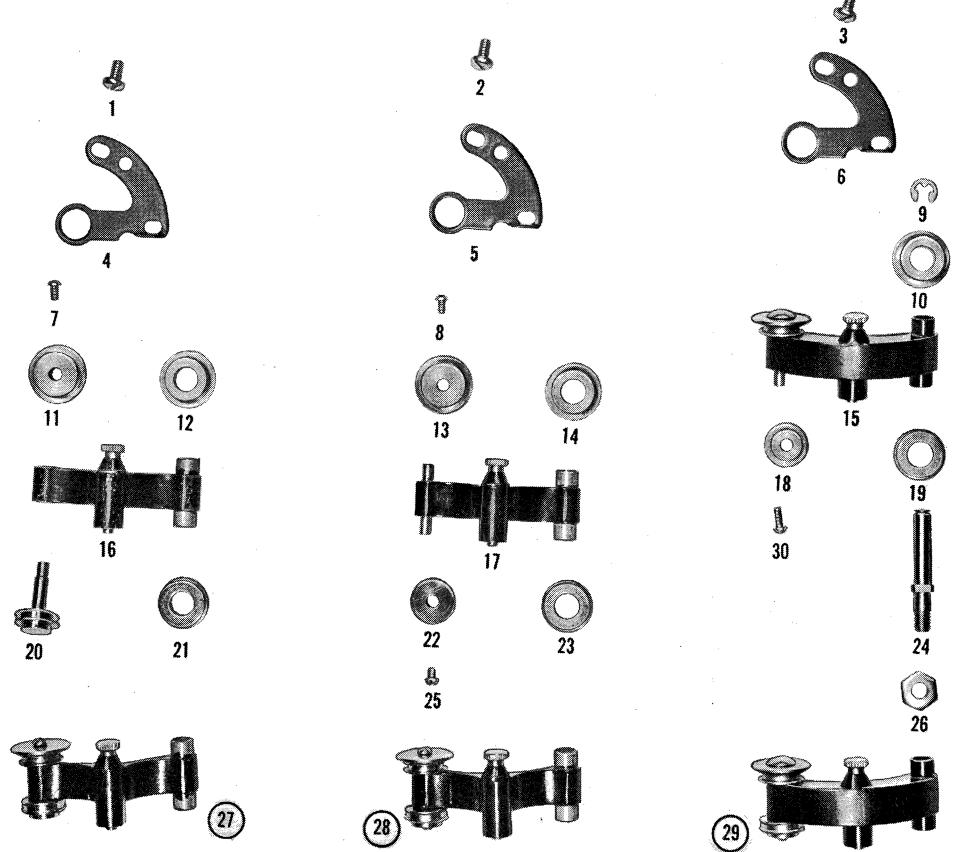


			USED ON MODELS										
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
REEL ARM HOLDER	1	5/40 x 3/8 F.H. retainer screw for 23315-A holder					2		2				
P.E. CELL COVERS	2	23315-A	Reel arm holder assembly				1		1				
	3	30488-A	P.E. cell cover assembly									1	1
FILM GUARD	4	19217	P.E. cell cover			1							
	5	20595-A	P.E. cell cover assembly		1		1	1	1	1	1		
FILM CHANNEL	6	23071-A	P.E. cell cover assembly				1						
	7	19089	Film guard spacer		1		1	1	1	1	1	1	1
	8	19088	Film guard		1		1	1	1	1	1	1	1
TENSION CLIP AND SPRING	9	19875	Film guard roller		1		1	1	1	1	1	1	1
	10	20047	Film guard screw		1		1	1	1	1	1	1	1
	11	19315	Film channel		1		1	1	1	1	1	1	1
	12	19316	Film channel tension clip	2	2	2	2	2	2	2	2	2	2
	13	19317	Film channel clip tension spring		1		1	1	1	1	1	1	1

			USED ON MODELS										
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
SOUND CORE ASSEMBLY	1	20710-A	Sound channel assembly*		1								
	19259	Sound channel only (not shown)				1							
2	19265-A	Sound slit assembly		1		1	1	1	1	1	1	1	1
3	20593	Sound lens holder		1		1	1	1	1	1	1	1	1
4	20761	Lens holder screw				2	2	2	2	2	2	2	2
5	26545	Sound channel core		1		1	1	1	1	1	1	1	1
6	19550-A	Core cap			1		1	1	1	1	1	1	1
7		3/48 x 1/4 R.H. screw				2	2	2	2	2	2	2	2
8		5/40 x 3/16 Fil. H. screw				3	3	3	3	3	3	3	3
9	30428-3	Sound channel assembly*			1		1	1	1	1	1	1	1
10	30428-A	Sound core assembly†		1		1	1	1	1	1	1	1	1
11		5/40 x 1/8 F.H. screw		2	2	2	2	2	2	2	2	2	2


*No. 1, 20710-A, replaces No. 9, 30428-3.

†No. 10, 30428-A Sound lens assembly replaces 19545-A, 20591-A & 26545-A (Obsolete).

All parts of these assemblies are interchangeable.

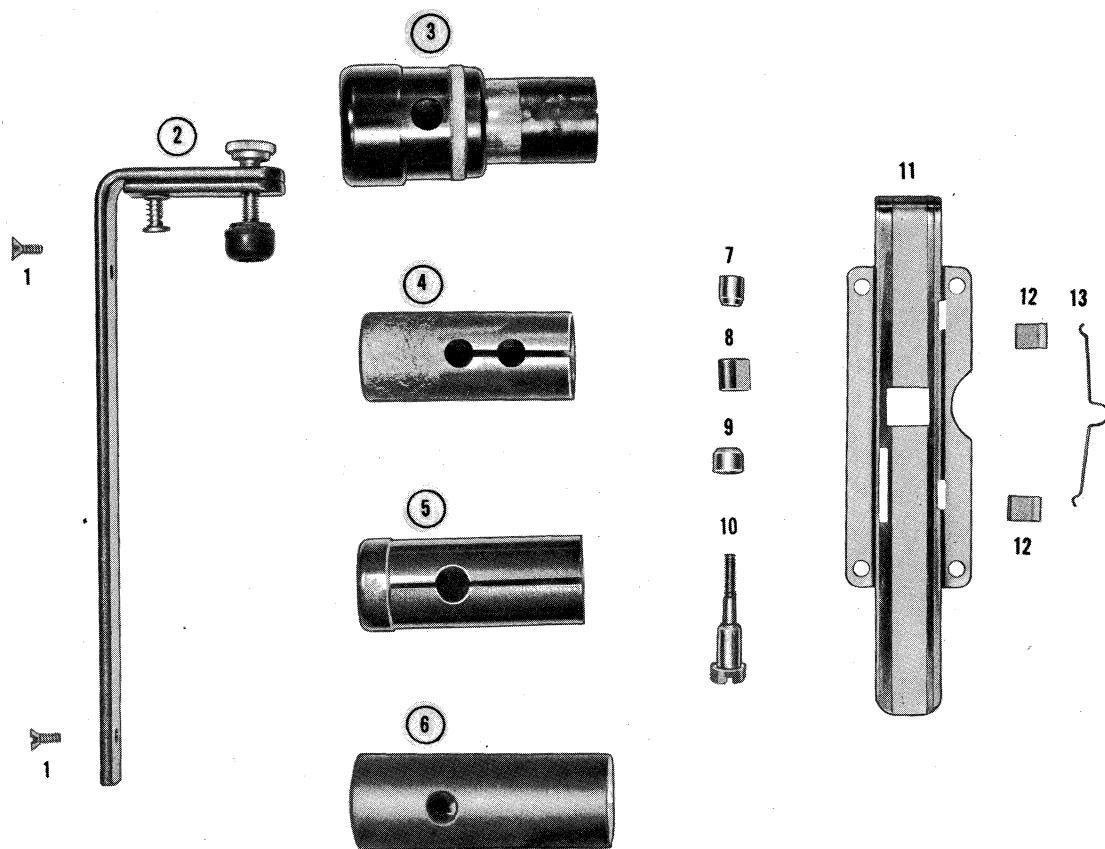

REEL ARM HOLDER
P.E. CELL COVER
FILM GUARD
FILM CHANNEL
TENSION CLIP AND SPRING

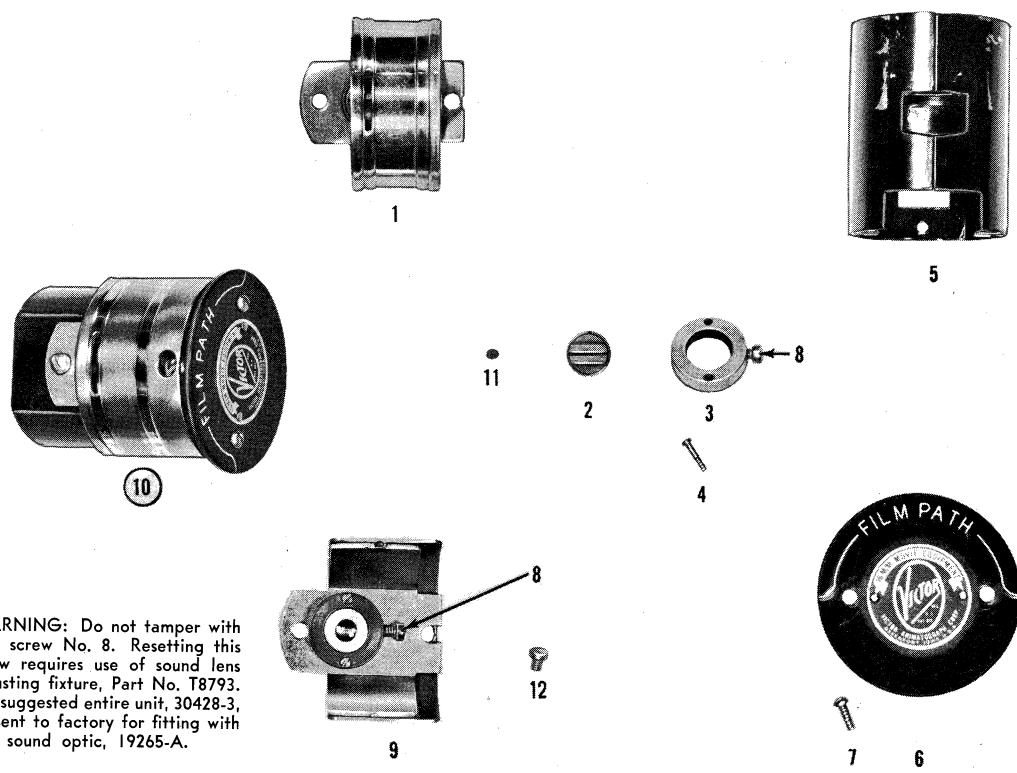

SOUND CORE
ASSEMBLY

WARNING: Do not tamper with lock screw No. 8. Resetting this screw requires use of sound lens adjusting fixture, Part No. T8793. It is suggested entire unit, 30428-3, be sent to factory for fitting with new sound optic, 19265-A.

**SOUND
SPROCKET
TENSION
ARM**

No.	Part No.	Part Name	Page	G	USED ON MODELS							
					40-A	40-BX	55	56	60-B	60-2	60-4	60-10
1	26997-A	Sound sprocket tension arm assy.										
2	26726-AR	Sound sprocket tension arm assy.*										
3	19561-A	Sound sprocket tension arm assy.*										
4		#2 "C" Washer										
5		#2 "C" Washer										
6	26727	Tension roll grip					2	2	2	2	2	2
7	26727	Tension roll grip					2	2	2	2	2	2
8		#3 "C" Washer					1		1	1	1	
9		4/36 x 3/16 R.H. screw			2	2			2			
10		4/36 x 3/16 R.H. screw			1	1	1	1	1	1	1	1
11	18062	Finger grip			1	1	1		1			
12	20030	Idler roll washer			1	1	1	1	1	1	1	1
13	19233-A	Sound sprocket tension roll			1	1	1	1	1	1	1	1
14	19233-A	Sound sprocket tension roll			1	1	1	1	1	1	1	1
15	19579	Idler roll			1	1	1	1	1	1	1	1
16	19233-A	Sound sprocket tension roll			1	1	1	1	1	1	1	1
17	19579	Idler roll			1	1	1	1	1	1	1	1
18	26997-2	Tension arm						1				
19	26726-2R	Tension arm					1		1	1	1	1
20	19561-2	Tension arm			1	1	1	1	1	1	1	1

*No. 2, 26726-AR, is interchangeable and replaces No. 3, 19561-A.

Parts that make up these assemblies are not interchangeable, except Nos. 13, 14, 19233-A, used on all models.


**LOOP
TENSION
ARM
ASSEMBLY**

No.	Part No.	Part Name	Page	G	USED ON MODELS							
					40-A	40-BX	55	56	60-B	60-2	60-4	60-10
1	26539-A	Loop tension arm assembly										
2	26725-AR	Loop tension arm assembly*										
3	19563-A	Loop tension arm assembly*										
4		#2 "C" Washer										
5		#2 "C" Washer										
6	26727	Finger grip										
7	26727	Finger grip										
8		4/36 x 3/16 R.H. screw			1	1	1	1	1			
9	18058-A	Tension roll			1	1	1	1	1	1	1	1
10	18058-A	Tension roll			1	1	1	1	1	1	1	1
11	18062	Finger grip			1	1	1	1	1			
12	26539-2	Tension arm										
13	26725-2R	Tension arm										
14	18058-A	Tension roll			1	1	1	1	1	1	1	1
15	19563-2	Tension arm			1	1	1	1	1			


*No. 2, 26725-AR, is interchangeable with and replaces No. 3, 19563-A.

Parts that make up these assemblies are not interchangeable except Nos. 9, 10, 18058-A, used on all assemblies.

**SOUND
SPROCKET
TENSION
ARM**

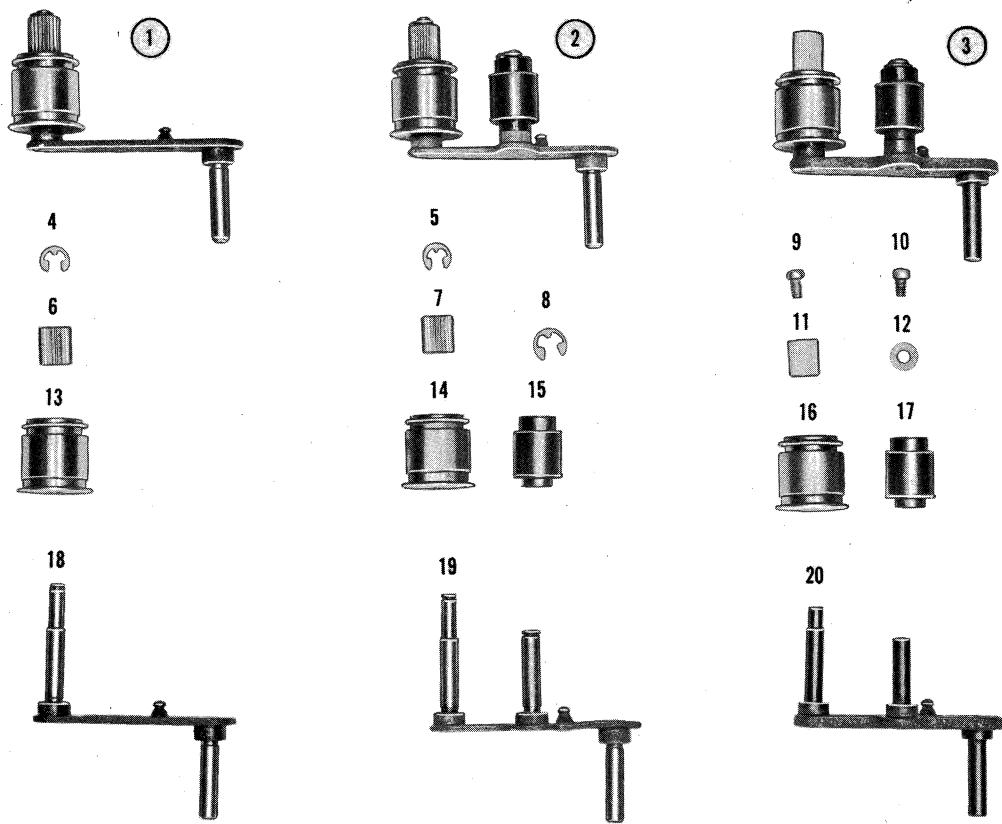

**LOOP
TENSION
ARM
ASSEMBLY**

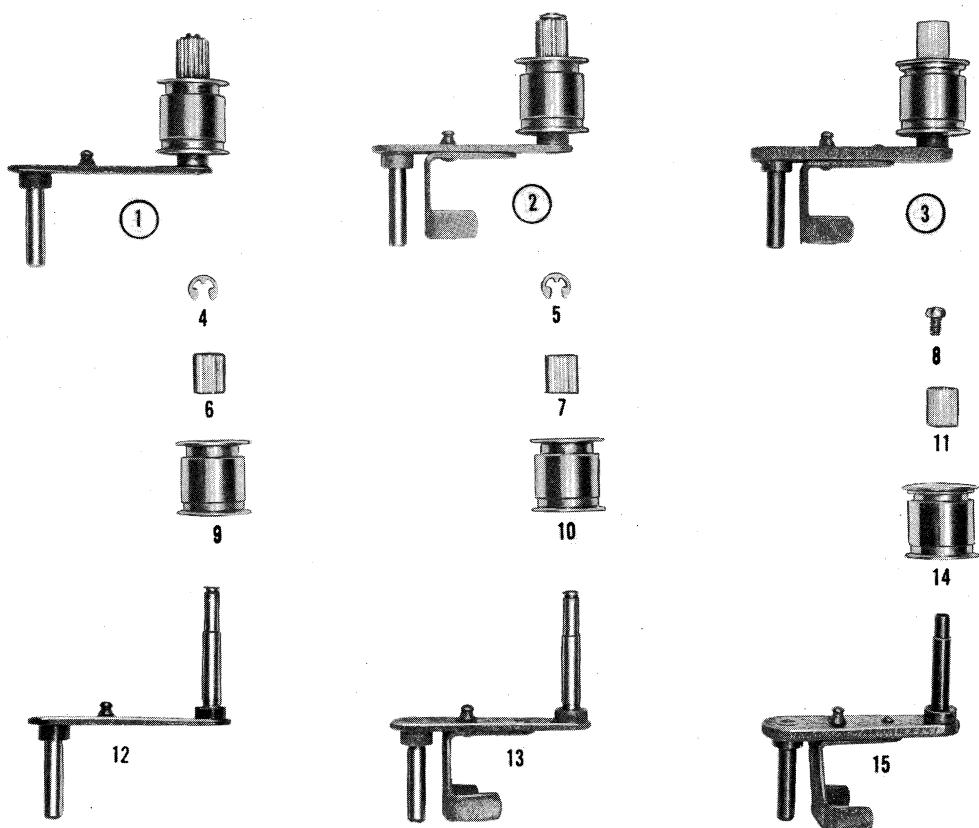

**LENS
MOUNT
ASSEMBLY**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-1
1	13327	Lens lock screw										
2	19254-AR	Lens mount assembly		1	1	1	1	1	1	1	1	
3	19832	Framing screw										
4	19833	Framing screw knob*										
5	30151-A	Aperture plate		1	1	1	1	1	1	1	1	
6	30165	Lens mount lock plunger		1	1	1	1	1	1	1	1	
7	19149	Lens mount spring		1	1	1	1	1	1	1	1	
8	19254-2	Lens mount										
9	19209	Aperture plate guide		1	1	1	1	1	1	1	1	
10	30163	Lens mount lock spring		1	1	1	1	1	1	1	1	
11	30100-A	Tension spring			1	1	1	1	1	1	1	
12	19301	Stop screw			1	1	1	1	1	1	1	
13		6/32 x 1/8 B.H. screw			2	2	2	2	2	2	2	2
14		4/36 x 3/16 R.H. screw			1	1	1	1	1	1	1	
15	20045	Tension spring screw			1	1	1	1	1	1	1	
16	20046	Lens mount plate screw			1	1	1	1	1	1	1	

*5/40 x 1/8 Headless set screw is used on No. 4, 19833.

**AUTOMATIC
TRIP
ASSEMBLY**


No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19326	Hand trip knob*							1				
2	T-148	Automatic trip roll	4	4	4	4	4	4	4	4	4	4	4
3	T-149	Automatic trip roll	4	4	4	4	4	4	4	4	4	4	4
4	19491-A	Automatic trip assembly		1	1	1	1	1	1	1	1	1	1
5		#1 "C" Washer					4	4	4	4	4	4	4
6	26739	Hand trip knob*					1	1	1	1	1	1	1
7	T-148	Automatic trip roll		1	4	4	4	4	4	4	4	4	4
8	T-149	Automatic trip roll		1	4	4	4	4	4	4	4	4	4
9	26644-AR	Automatic trip assembly†		1	1	1	1	1	1	1	1	1	1
10		5/40 x 3/16 Fil. H. screw											
11		#6 Flat washer			1	1							
12	20215	Automatic trip plunger		1	1	1	1	1	1	1	1	1	1
13		#3 "C" Washer					2	2	2	2	2	2	2
14	20215	Automatic trip plunger		1	1	1	1	1	1	1	1	1	1
15		4/48 x 1/4 Fil. H. screw			1	1							
16		#6 Shakeproof washer			1	1			1				
17		#6 Flat washer			1	1	1	1	1	1	1	1	1
18	19252	Automatic trip spring		1	1	1	1	1	1	1	1	1	1
19		#2 "C" Washer					2	2	2	2	2	2	2
20		#6 Flat washer			1	1	1	1	1	1	1	1	1
21	19252	Automatic trip spring		1	1	1	1	1	1	1	1	1	1
22		2/56 x 3/16 R.H. screw		1	1	1	1	1	1	1	1		

*No. 1, 19326, is not interchangeable with No. 6, 26739, because of method of assembly.


†No. 9, 26644-AR, is interchangeable on all models.

Film rolls, plunger and spring in 26644-AR assembly require "C" washers.

**LENS
MOUNT
ASSEMBLY**

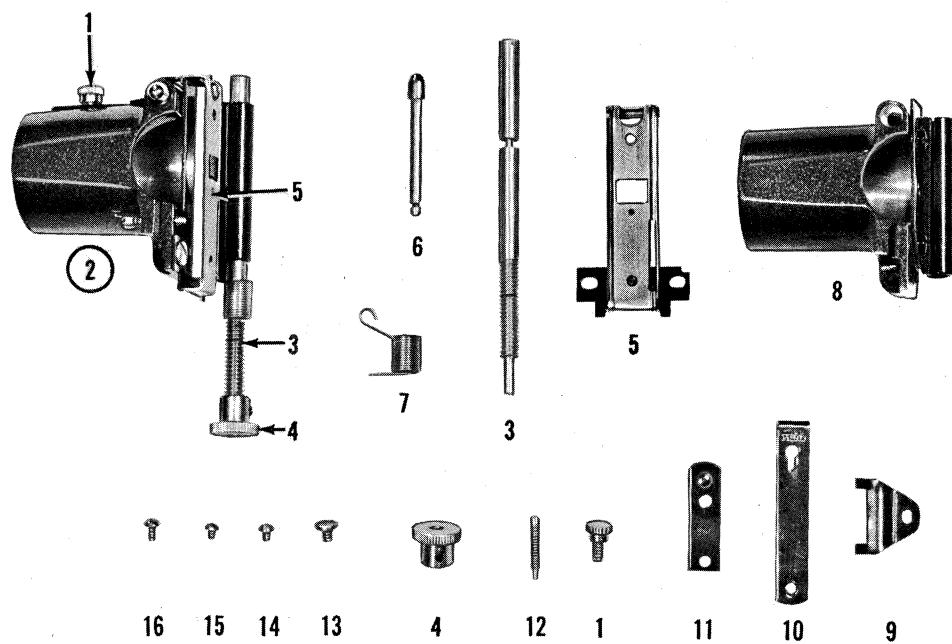

**AUTOMATIC
TRIP
ASSEMBLY**

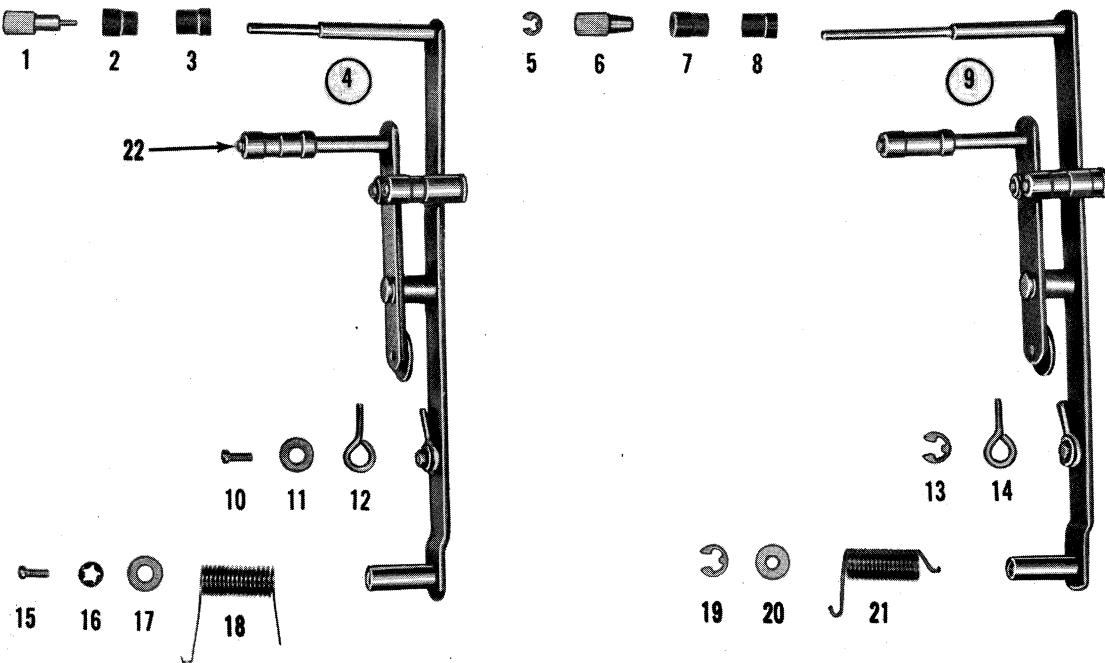


*No. 5, 19245-A is interchangeable with No. 6, 19245-50A.


Other parts shown are not interchangeable.

*These assemblies complete are not interchangeable.

30368-A (see operator's view) Sound sprocket and 30369-A (see operator's view) loop roll assemblies with these units are interchangeable.

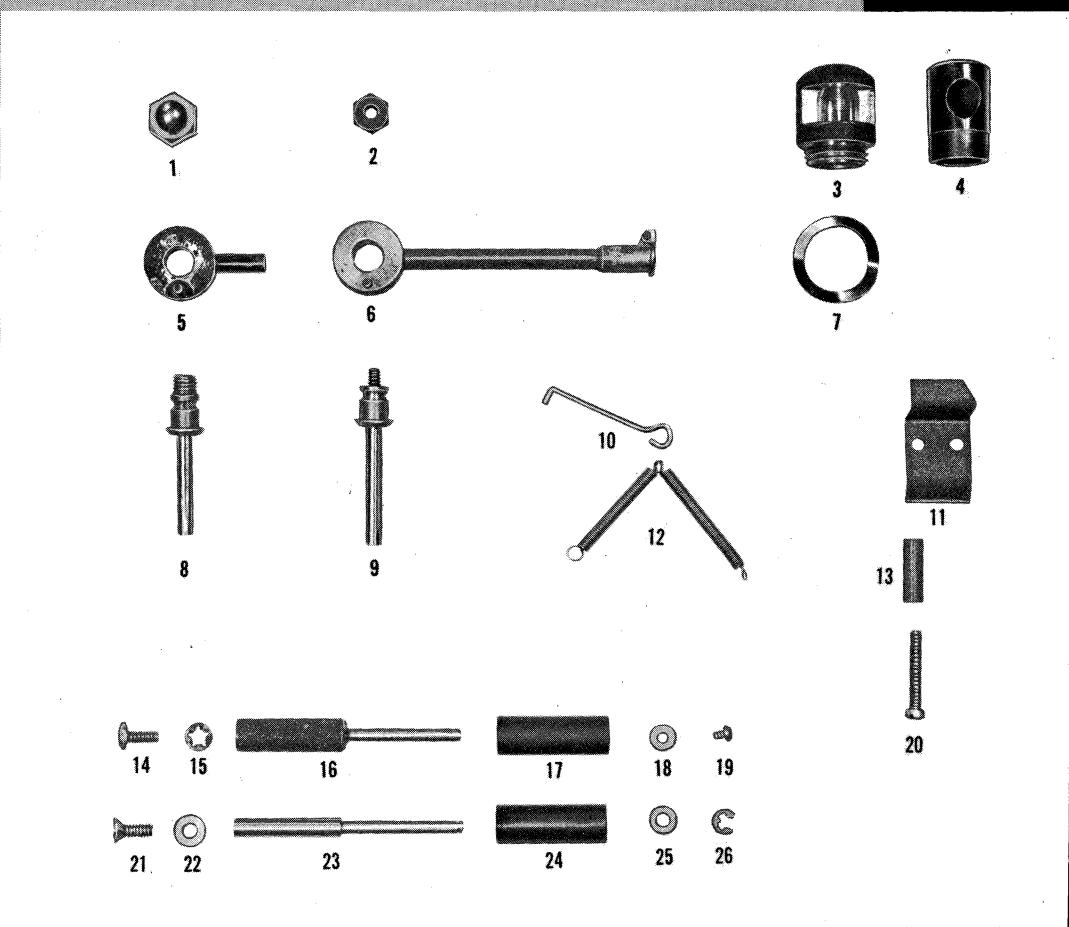

CAM SHAFT
OILER
PILOT LAMP
CAP & SPRING
LENS MOUNT
LOCK PLATE
SUPPORT ROLL
TENSION ARM
SPRINGS

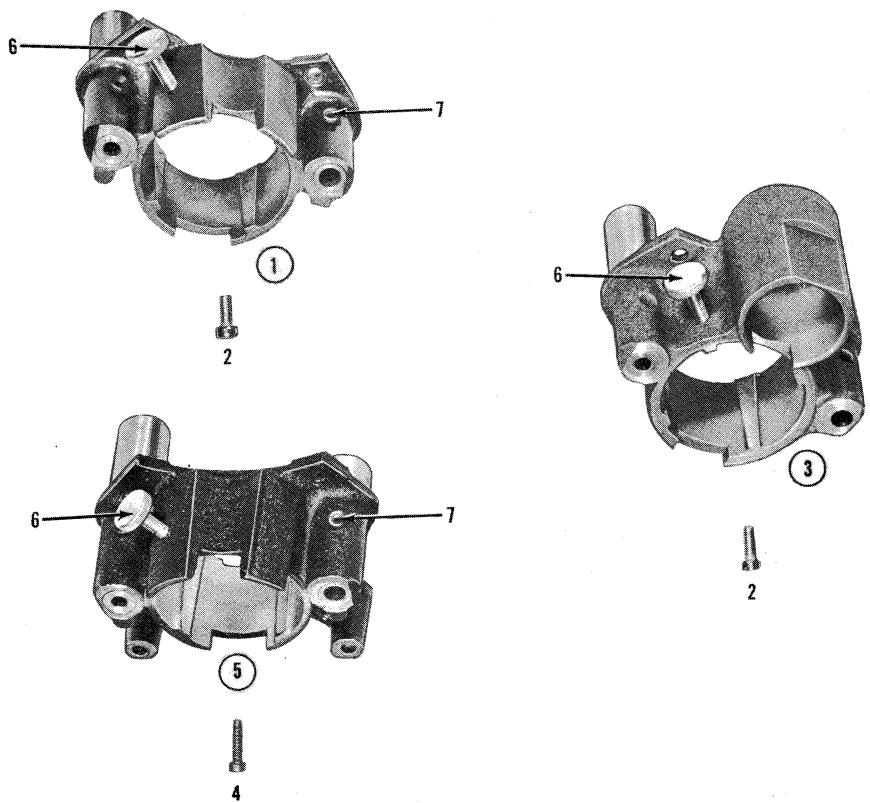


SOUND
UNIT
CASTINGS

**REAR VIEW
MODELS
60-4,
60-10, 60-25**

**(USE AS
REFERENCE
FOR MODELS
60-2, 55)**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	30254-A	Reel arm lock screw assembly	13				1	1		1	1	1	1
2	23135-AR	Support bar oil tube	35				1	1	1	1	1	1	1
3	19460-A	Safety shutter	33				1	1		1	1	1	1
4	19457	Safety shutter guide (upper)	33	1	1	1	1	1	1	1	1	1	1
5	26210-A	Shutter support bar assembly	35		1	1	1	1	1	1	1	1	1
6	20580-A	Light shutter assembly	37	1		1	1	1	1	1	1	1	1
7	20565-A	Cam pulley assembly	37	1		1	1	1	1	1	1	1	1
8	19471	Safety shutter guide (lower)	33	1	1	1	1	1	1	1	1	1	1
9	19128	Motor drive belt	73				1	1		1	1	1	1
10	19833	Framing screw knob	21	1	1	1	1	1	1	1	1	1	1
11	26829-A	Starting lever plate assembly	33				1	1		1	1	1	1
12	23384-A	Starting lever	33				1	1		1	1	1	1
13	20235	Drive belt guard					1	1		1	1	1	1
14	26610	Fan	79				1	1		1	1	1	1
15	26885-A	Rewind drive pulley	79							1	1	1	1
16	30366-A	Base support sleeve	73	4	4	4	4	4	4	4	4	4	4
17	23381	Starting lever spring	33				1	1		1	1	1	1
18	23354	Body terminal	73				2			2	2	2	2
19	19479-A6	Oscillating gear assembly	35	1	1	1	1	1	1	1	1	1	1
20	19130	Shutter housing			1	1	1	1	1	1	1	1	1
21		8/32 x 3/8 R.H. screw			4	4	4	4	4	4	4	4	4
22	26902-AR	Body casting								1	1	1	

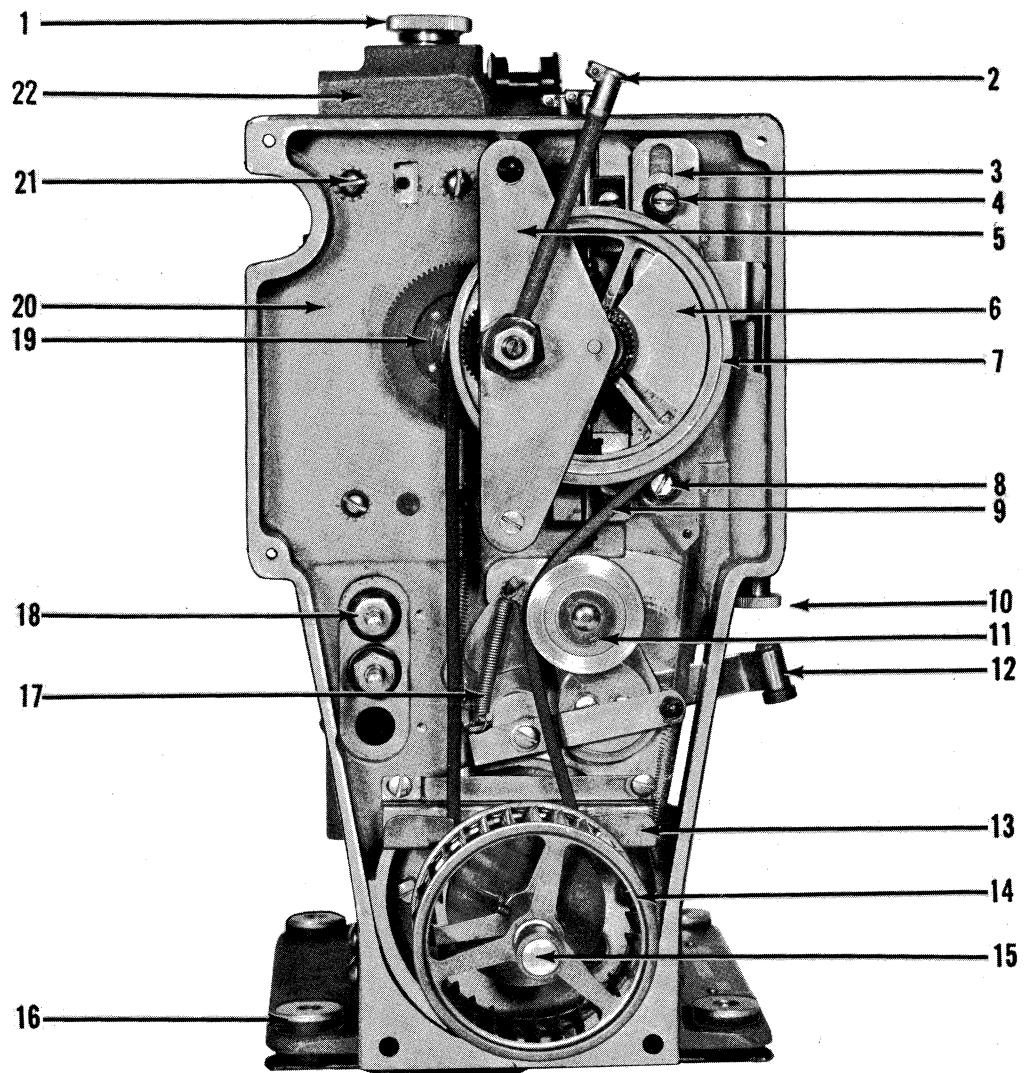


**REAR VIEW
MODELS
60-4,
60-10, 60-25**

**(USE AS
REFERENCE
FOR MODELS
60-2, 55)**

REAR VIEW MODEL 56

No.	Part No.	Part Name	Page	USED ON MODELS										
				G	40-A	40-B	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	26654-A	Lamp house casting								1				
2	26577-A	P.E. Cell cord assembly	67							1				
3	26506	Shutter housing								1				
4	30254-A	Reel arm lock screw assembly	13					1	1	1	1	1	1	1
5	20224-50	Shuttle oiler						1	1	1	1	1	1	1
6	23135-A	Support bar oil tube	35					1	1	1	1	1	1	1
7	26616-A	Safety shutter assembly	33							1				
8	26210-A	Shutter support plate assembly	35					1	1	1	1	1	1	1
9	20580-A	Shutter assembly	37	1				1	1	1	1	1	1	1
10	26615-A	Oscillating assembly	35						1					
11	20565-A	Cam pulley assembly	37	1				1	1	1	1	1	1	1
12	19128	Drive belt	73					1	1	1	1	1	1	1
13	26829-A	Starting lever plate assembly	33					1	1	1	1	1	1	1
14	23384-A	Starting lever	33					1	1	1	1	1	1	1
15	19469	Safety shutter spring	33					1	1	1	1	1	1	1
16	20235	Belt guard						1	1	1	1	1	1	1
17	26610	Fan	81					1	1	1	1	1	1	1
18	23350	Rewind pulley	81					1	1	1	1			
19	30366-A	Base support sleeve	73	4	4	4	4	4	4	4	4	4	4	4
20		5/40 x 3/16 B.H. belt guard screw						4	4	4	4	4	4	4
21	26536-A	Motor wiring harness	69							1				
22	26941	Fan baffle	45					1	1	1	1	1	1	1
23		5/40 x 3/16 B.H. fan baffle screw	45					4	4	4	4	4	4	4
24	20714	Lens mount stop						1	1	1	1	1	1	1


**REAR VIEW
MODEL 56**

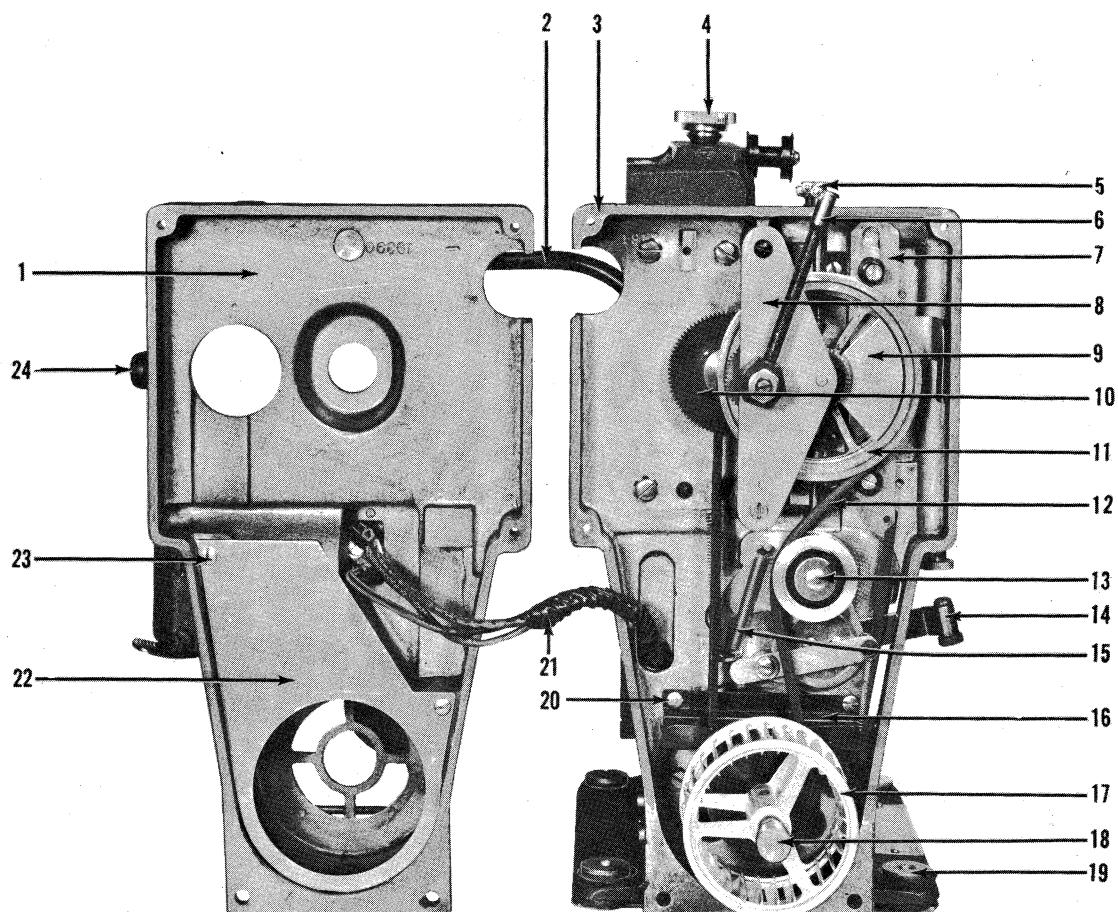

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19850-A	Reel arm holder assembly	13	1	1	1							
2	20224	Shuttle oiler				1	1	1	1	1	1	1	1
3	19460-A40	Safety shutter	33	1	1	1	1	1	1	1	1	1	1
4	20565-A	Cam pulley assembly	37	1	1	1	1	1	1	1	1	1	1
5	20568-A	Shutter support oil tube	35	1	1								
6	20572-A	Shutter support plate assembly	35			1							
7	20580-A	Light shutter assembly	37	1		1	1	1	1	1	1	1	1
8	19128-40	Drive belt	73	1	1	1							
9	19833	Framing screw knob	21		1	1	1	1	1	1	1	1	1
10	20085-A	Starting lever plate	33	1	1	1			1				
11	20086-A	Starting lever assembly	33	1	1	1	1			1			
12	19469	Safety shutter spring	33	1	1	1	1	1	1	1	1	1	1
13	19163-A	Drive belt guard				1	1						
14	20274-A	Motor fan	87	1	1	1				1			
15	19598	Reel arm holder screw				1	1			1			
16	22091	Base support rubber washer	73		8	8	8	8	8	8	8	8	8
17	30366-A	Base support sleeve	73		4	4	4	4	4	4	4	4	4
18	20273	Rewind pulley	87	1		1							
19	19869	.5 Mfd. condenser	69		1	1	1			1			
20	19201	Starting lever spring	33	1	1	1	1	1	1	1	1	1	1
21	19250-A	Terminal block	73		1	1	1	1		1			
22	19130	Shutter housing			1	1	1		1	1			
23	19479-A	Oscillating assembly	35	1	1	1				1			
24	19593	Adjusting eccentric screw			1	1	1	1		1			
25	20790-A	Body casting			1	1	1	1	1	1	1		

REAR VIEW MODEL 40-B

(USE AS
REFERENCE
FOR MODEL
60-B)

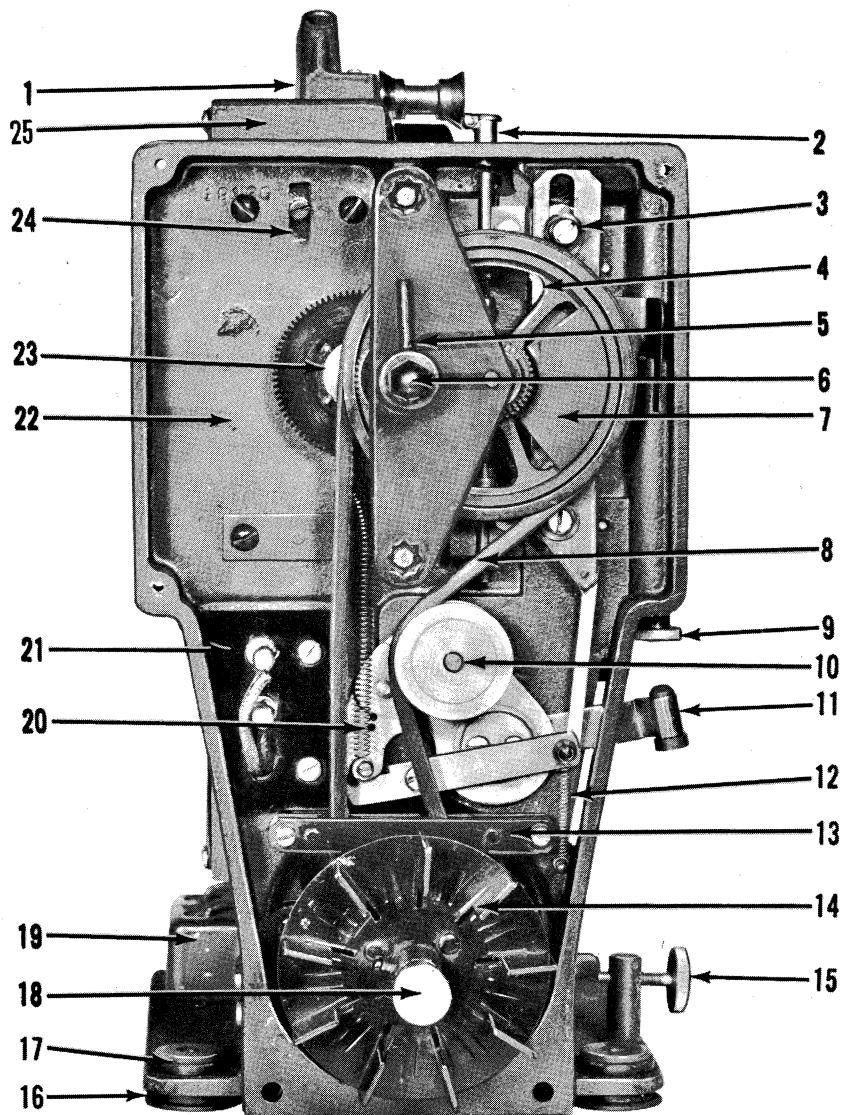


REAR VIEW MODEL 40-B

(USE AS
REFERENCE
FOR MODEL
60-B)

**REAR VIEW
MODEL 40-A**

No.	Part No.	Part Name	Page	USED ON MODELS							
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	19850-A	Reel arm holder assembly	13	1	1	1					
2	19460-A40	Safety shutter	33	1	1	1			1		
3	19120-A	Light shutter assembly	37		1						
4	19128-40	Motor drive belt	73	1	1	1			1		
5	20085-A	Starting lever plate	33	1	1	1			1		
6	20086-A	Starting lever	33	1	1	1			1		
7	19469	Safety shutter spring	33	1	1	1	1	1	1	1	1
8	19163-A	Belt guard			1	1					
9	20274-A	Fan	85		1						
10	19598	Reel arm holder screw			1	1			1		
11	19518	Rewind pulley 1/4"	85		1						
12	30366-A	Base support sleeve	73		4	4	4	4	4	4	4
13	19869	.5 Mfd. condenser	69		1	1			1		
14	19250-A	Terminal post assembly			1	1	1	1	1		
15	19201	Starting lever spring	33	1	1	1			1		
16	19056-A	Cam pulley assembly	37		1						
17	19130	Shutter housing			1	1	1		1	1	
18	19593	Eccentric screw			1	1	1	1	1		
19	20790-A	Body casting			1	1	1	1	1	1	

**REAR VIEW
MODEL 40-A**

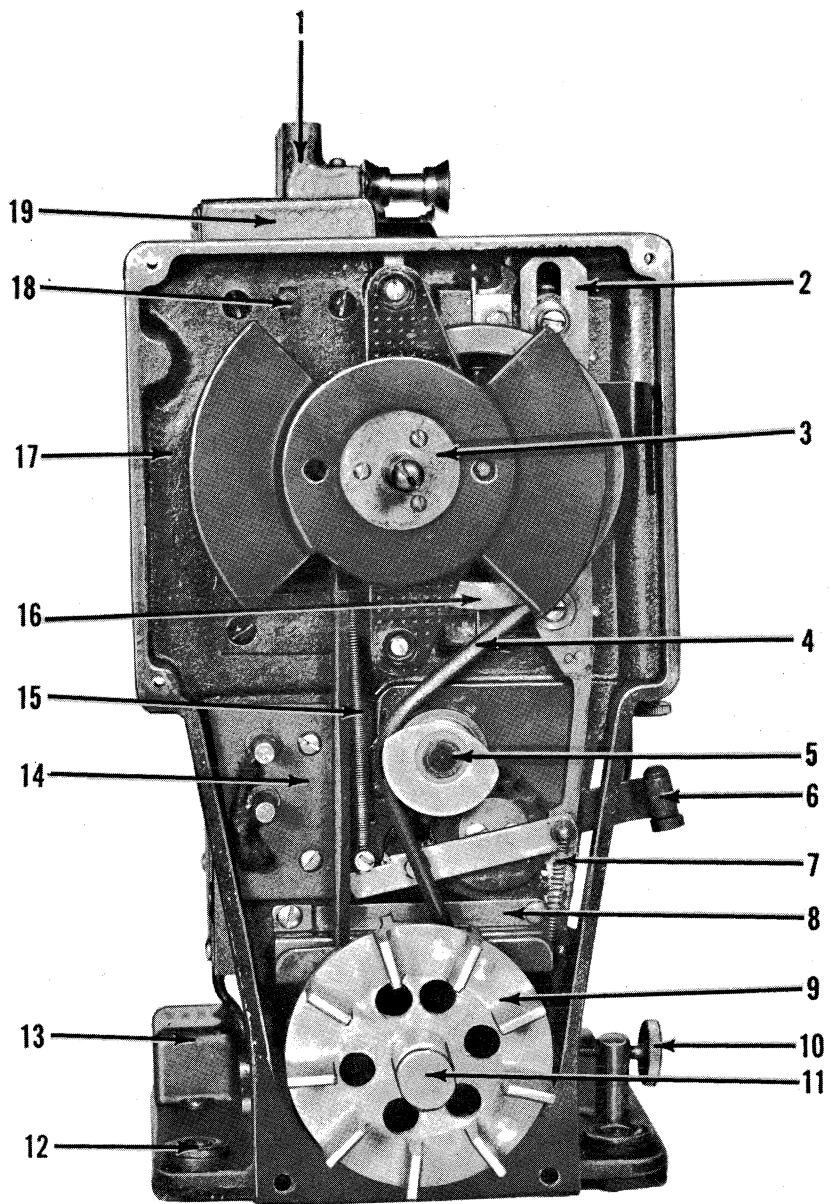

SAFETY SHUTTER ASSEMBLY

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19463	Safety shutter bearing											
2	19471	Safety shutter guide (lower)											
3	19457	Safety shutter guide (upper)											
4	19469	Shutter spring											
5		#5 Shakeproof washer (lock washer for guides)			2	2	2	2	2	2	2	2	2
6		5/40 x 5/8 F.H. guide retaining screw (upper)											
7		5/40 x 5/16 F.H. guide retaining screw (lower)											
8		5/40 x 3/8 F.H. shutter bearing screw											
9	19460-A40	Safety shutter*											
10	20084	Shutter eccentric											
11	19471	Shutter guide (lower)											
12	19457	Shutter guide (upper)											
13	19469	Safety shutter spring											
14		#5 Shakeproof washer (guide lock washer)			2	2	2	2	2	2	2	2	2
15		5/40 x 5/16 F.H. guide retaining screw (upper)											
16		5/40 x 7/8 F.H. guide retaining screw (lower)											
17		5/40 x 5/16 B.H. eccentric retainer screw											
18		9/64 x 3/8 Flat washer											
19	19460-A	Safety shutter*											


*No. 9, 19460-A40, is not interchangeable with No. 19, 19460-A.

STARTING LEVER PLATE ASSEMBLY


USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	20085-A	Starting lever plate*											
2	20086-A	Starting lever											
2-A	19406	Starting lever knob (lower)											
2-B	19404	Starting lever knob (upper)											
3	19172	Pivot washer					2	2		2	2	2	2
4	20125	Starting lever pivot washer											
5	19171	Starting lever pivot											
6	19201	Spring											
7	20088	Spring hook eccentric											
8	20089	Spring hook screw											
9		5/40 x 3/8 B.H. screw			2	2	2	2	2	2	2	2	2
10	26829-A	Starting lever plate assembly*											
11	23384-A	Starting lever											
12	19172	Pivot washer					2	2	1	2	2	2	2
13	19172	Pivot washer					2	2	1	2	2	2	2
14	19171	Pivot											
15	19201	Starting lever plate spring											
16	23381	Starting lever spring											
17		5/40 x 3/8 B.H. screw			2	2	2	2	2	2	2	2	2

*No. 1, 20085-A, is not interchangeable with No. 10, 26829-A.

**SAFETY
SHUTTER
ASSEMBLY**

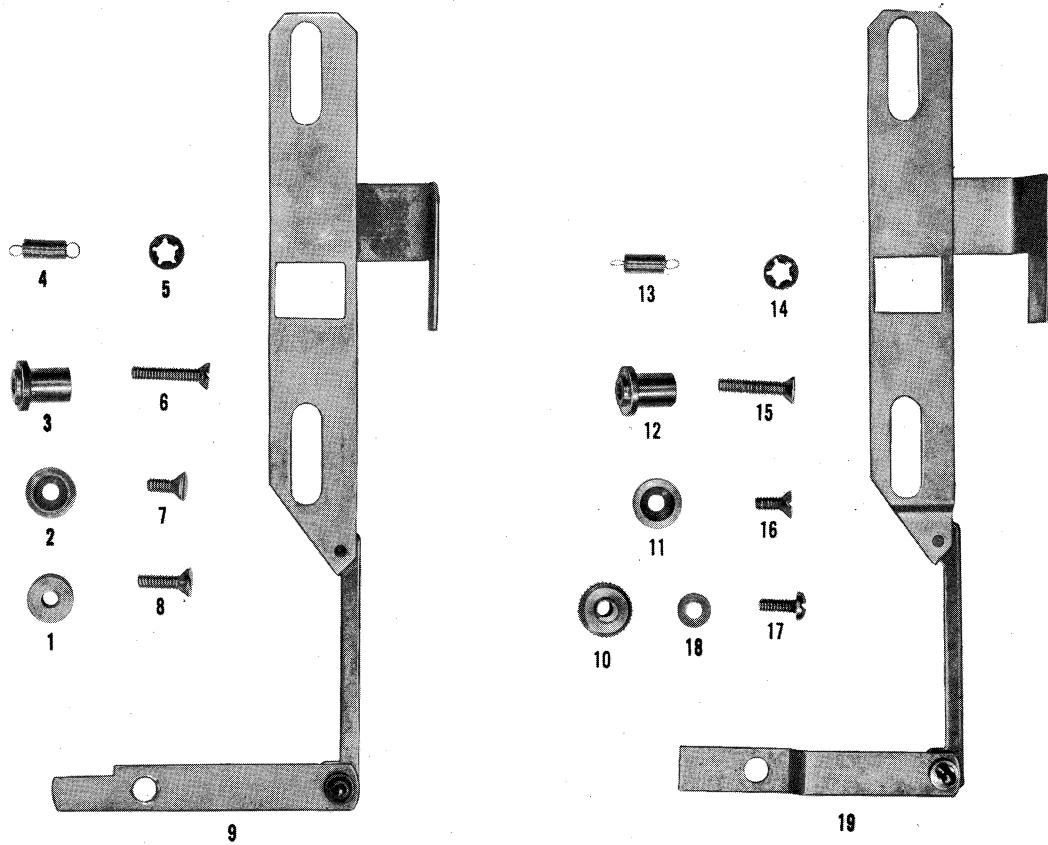

**STARTING
LEVER
PLATE
ASSEMBLY**

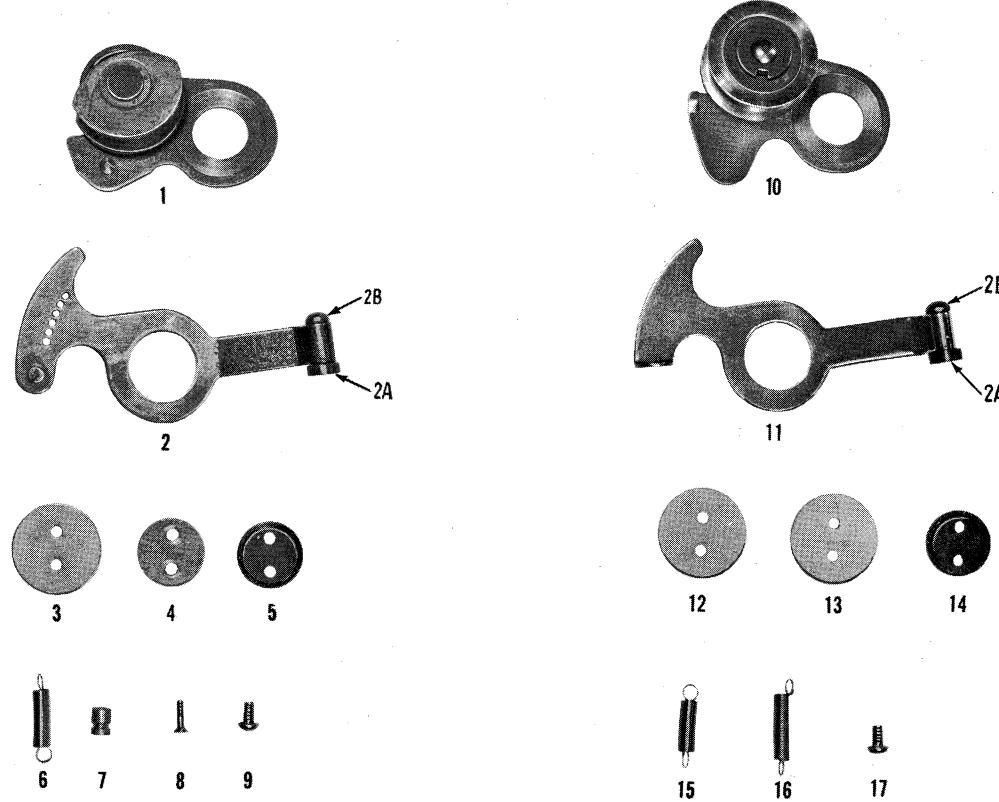

**SHUTTER
SUPPORT
PLATE
ASSEMBLY**

USED ON MODELS														
No.	Part No.	Part Name	Page	G	40-A	40-B	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	26210-A	Shutter support plate assembly*												
2	20572-A	Shutter support plate assembly*												
3	20573	Jack shaft												
4	20573-40	Jack shaft												
5	20561-A	Intermediate drive gear†												
6	20561-A	Intermediate drive gear†												
7	23382	Shutter support spacer (lower)												
8	20582	Jack shaft collar												
9	26211	Shutter support spacer (upper)												
10	20582	Jack shaft collar												
11	26210	Shutter support plate (only)												
12	20572-2	Shutter support plate												
13		5/40 x 3/4 F.H. screw												
14	23365	Fibre washer												
15	23137	Jack shaft support washer												
16		5/40 x 3/4 T.H. screw												
17	20568-A	Jack shaft collar and oiler												
18		1/4 x 28 Hex nut												
19	23135-A	Support bar oil tube												
20		10/32 Hex nut												

*No. 1, 26210-A, replaces No. 2, 20572-A. Retaining screws for No. 2, 20572-A, are 5/40 x 3/4 Fil. head.


†Nos. 5, 6, 20561-A Intermediate gears used on both assemblies.

**OSCILLATING
GEAR
ASSEMBLY**


USED ON MODELS														
No.	Part No.	Part Name	Page	G	40-A	40-B	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	26615-A	Oscillating assembly*												
1-A	19479-2	Oscillating sleeve and bushing only												
2	19479-A40	Oscillating assembly*												
2-A	19479-2	Oscillating sleeve and bushing only												
3	19479-A6	Oscillating assembly*												
3-A	19479-2	Oscillating sleeve and bushing only												
4	19323	Oscillating washer												
5	26615-2	Oscillating gear and shaft												
6		#18 1/2" Pin			4	4	4	4	4	4	4	4	4	4
7	U-79	1/16 x 1/4 Pin												
8	U-178	1/16 x 3/8 Pin												
9	19472	Oscillating gear												
10	19477	Spiral gear												
11	19324-A	Oscillating gear and shaft assy.												
12	19481	Spacer washer		2	2	2	2	2	2	2	2	2	2	2
13	19481	Spacer washer		2	2	2	2	2	2	2	2	2	2	2

*No. 3, 19479-A6, is not interchangeable with No. 1, 26615-A.

*No. 3, 19479-A6, replaces No. 2, 19479-A40.

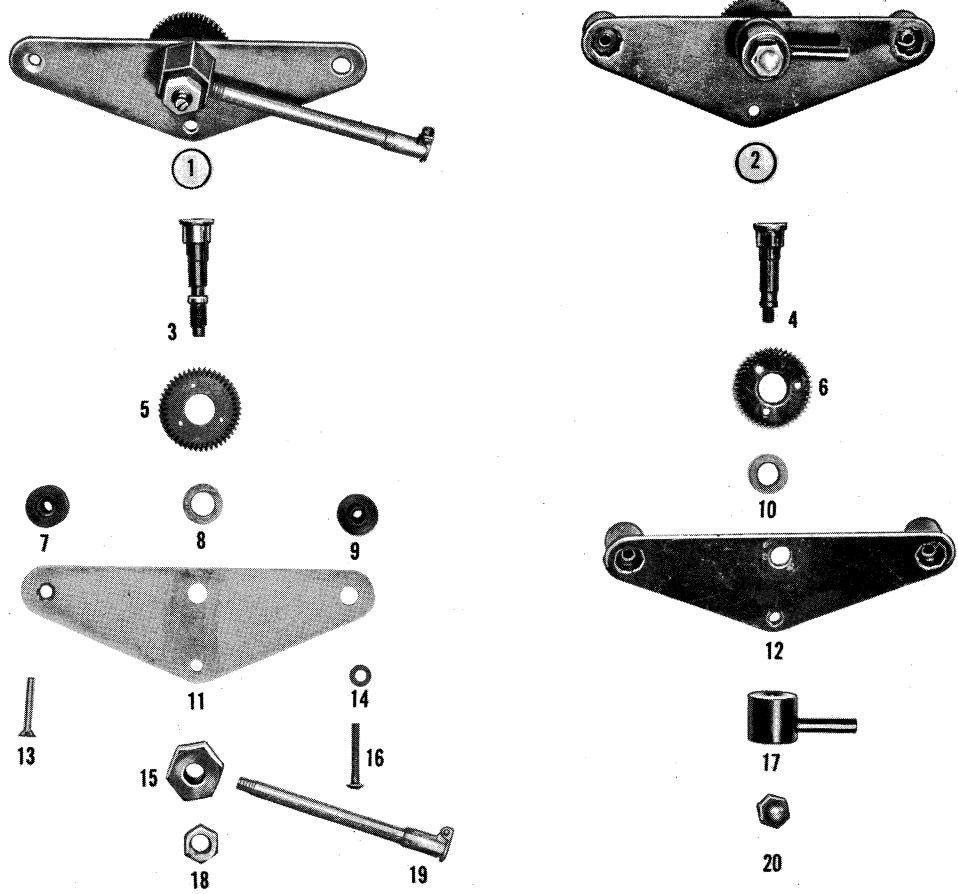

**SHUTTER
SUPPORT
PLATE
ASSEMBLY**

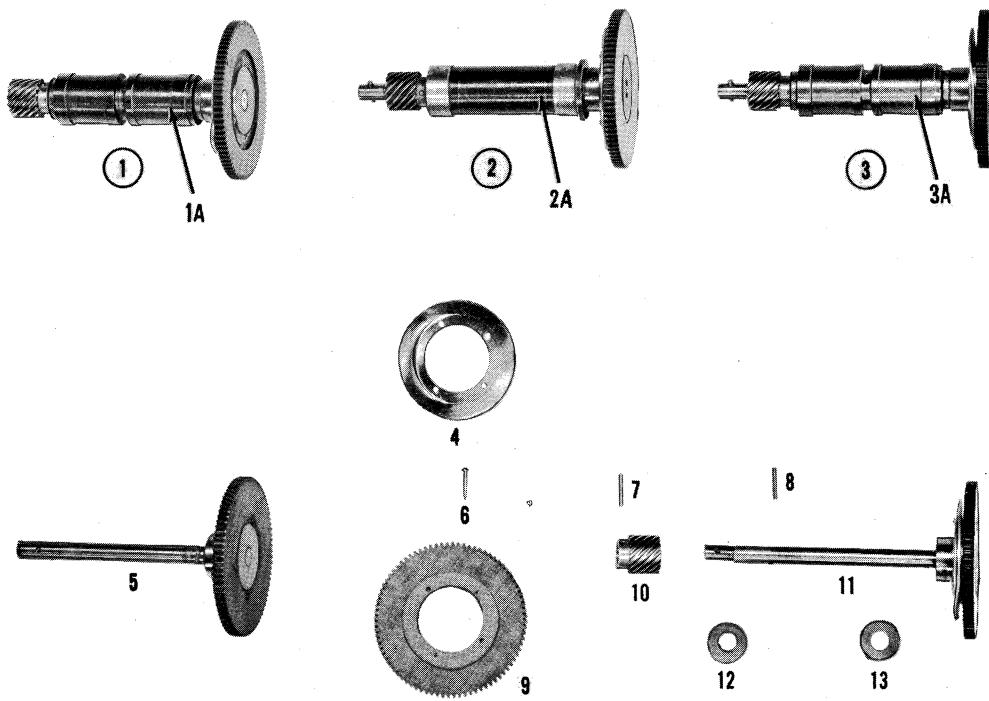

**OSCILLATING
GEAR
ASSEMBLY**

**LIGHT
SHUTTER
ASSEMBLY
MODEL 40-A**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	19826	Shutter retainer shaft (long)							1				
2		10/32 x 3/16 R.H. screw							1				
3	19826	Shutter retainer shaft (short)							1				
4	19829	Retainer flange washer							1				
5		3/48 x 3/8 T.H. screw							3				
6	19120	Light shutter							1				
7	19825-A	Gear and hub assembly							1				
8		5/40 x 5/8 Fil. H. screw							2				
9		5/40 x 5/8 Fil. H. screw							2				
10	19364-A	Support plate							1				
11	19120-A	Light shutter assembly							1				

**CAM PULLEY
ASSEMBLY**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-20
1		2/56 x 5/8 Fil. H. Shutter gear retaining screw							3				
2	19117	Cam rivet†			1	1	1						
3	19365	Shutter drive gear											
4	19110	Cam											
5	19505-A	Cam and gear assembly**											
6	19056	Cam pulley only											
7	19056-A	Cam pulley assembly*											
8	30579-A	Cam and gear assembly** ‡			1	1	1	1	1	1	1	1	1
9	30578	Cam rivet (long) ‡‡											
10	30182	Cam rivet (short) † ‡‡											
11		2/56 x 3/8 F.H. Shuttle drive gear retaining screw					3	3	3	3	3	3	3
12	30579	Cam gear†††											
13	30180	Cam††											
14	20580-A	Shutter assembly			1	1	1	1	1	1	1	1	1
15	20563	Cam bearing			1	1	1	1	1	1	1	1	1
16	20577-A	Intermediate drive gear			1	1	1	1	1	1	1	1	1
17	20565	Cam pulley			1	1	1	1	1	1	1	1	1
18	20565-A	Cam pulley assembly*			1	1	1	1	1	1	1	1	1
19	20564-A	Cam and gear assembly** ‡			1	1	1	1	1	1	1	1	1
20	20210	Cam††			1	1	1	1	1	1	1	1	1
21	20564	Cam gear†††			1	1	1	1	1	1	1	1	1
22	30180-A	Cam and gear assembly†			1	1	1	1	1	1	1	1	1
23	20715	Cam gear spacing washer			1	1	1	1	1	1	1	1	1

Cam assembly

†No. 8, 30579-A replaces No. 19, 20564-A and No. 22, 30182.

††No. 2, 19117 is not interchangeable with No. 10, 30182.

††No. 9, 30578 is not interchangeable with No. 10, 30182.

**No. 5, 19505-A is not interchangeable with No. 19,

†††No. 12, 30579 is not interchangeable with No. 21, 20564-A.

20564-A or No. 8, 30579-A.


††No. 13, 30180 is not interchangeable with No. 20, 20210.

Cam pulley assembly


*No. 7, 19056-A is not interchangeable with No. 18, 20565-A.

19056-A was used on Model 40 projectors up to and through serial No. 73105. Starting with serial No. 73106, 20565-A replaced 19056-A and is used on all models including Model 60 series.

**LIGHT
SHUTTER
ASSEMBLY
MODEL 40-A**

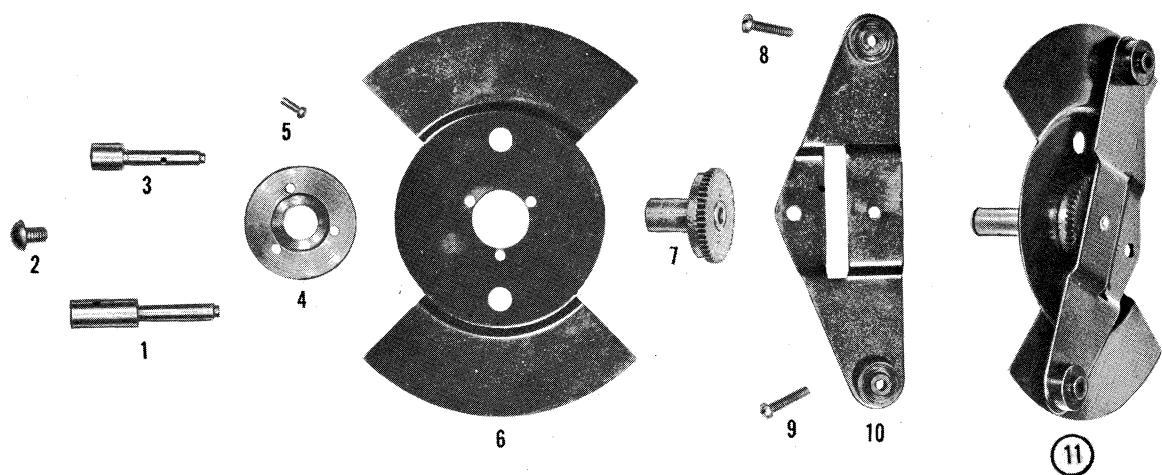

**CAM PULLEY
ASSEMBLY**

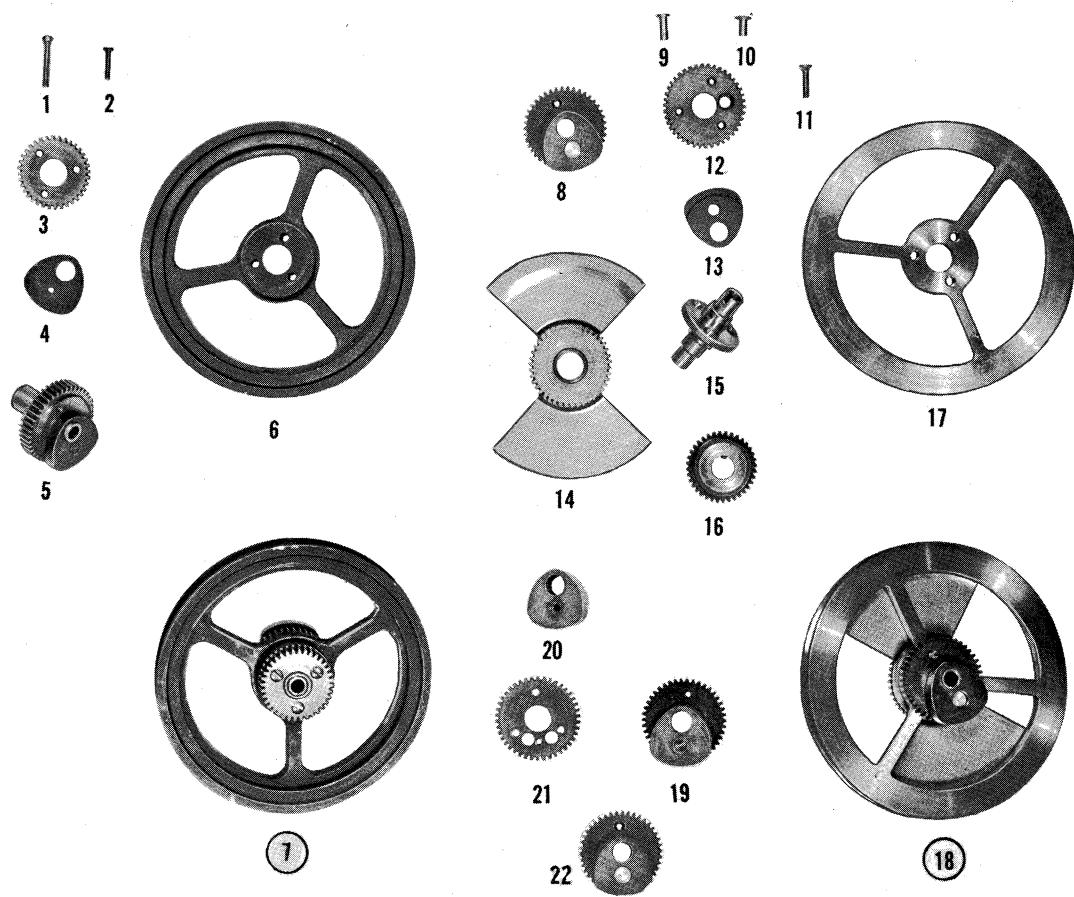

SHUTTLE ASSEMBLIES

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	20222	Shuttle rod bearing	2		2	2	2	2	2	2	2	2
2	20228	Shuttle rod clamp	2		2	2	2	2	2	2	2	2
3		5/40 x 5/16 B.H. (shuttle clamp) screw				2	2	2	2	2	2	2
4	19589	Shutter oiler felt	1	3	1	1	1	1	1	1	1	1
5	19096	Shuttle rod (long)	1									
6	19097	Shuttle rod clamp	2									
7		5/40 x 3/8 B.H. (shuttle clamp) screw				2						
8		5/40 x 3/16 B.H. (shuttle spring) screw			1	1	1	1	1	1	1	1
9	19592	Shuttle spring	1	1	1	1	1	1	1	1	1	1
10		#17 3/8 Pin (shuttle spring pin)		1	1	1	1	1	1	1	1	1
11	19091	Shuttle rod (short)	1									
12	19580-A	Shuttle*	1									
13	20126	Shuttle spring							1	1	1	1
14	20127	Shuttle spring pin							1	1	1	1
15	20219-A	Shuttle†					1	1	1	1	1	1
15-A	26761-A	Shuttle‡	1	1	1	1	1	1	1	1	1	1

*No. 12, 19580-A, used on Model 40s up to and through Serial No. 70656.

†No. 15, 20219-A, used on all Models through Model 60 series.


‡No. 15-A, 26761-A interchangeable with No. 15, 20219-A.

The difference between 20219-A and 26761-A is shuttle body 20219 is hardened.

The pawls are adjusted with oscillating assembly. The shuttle arm of 26761-A has a soft spot and pawls can be adjusted by applying pressure.

20219-A can be used in place of 26761-A if oscillating assembly 19479-A6 (Page 35) is installed.

SHUTTLE ASSEMBLIES

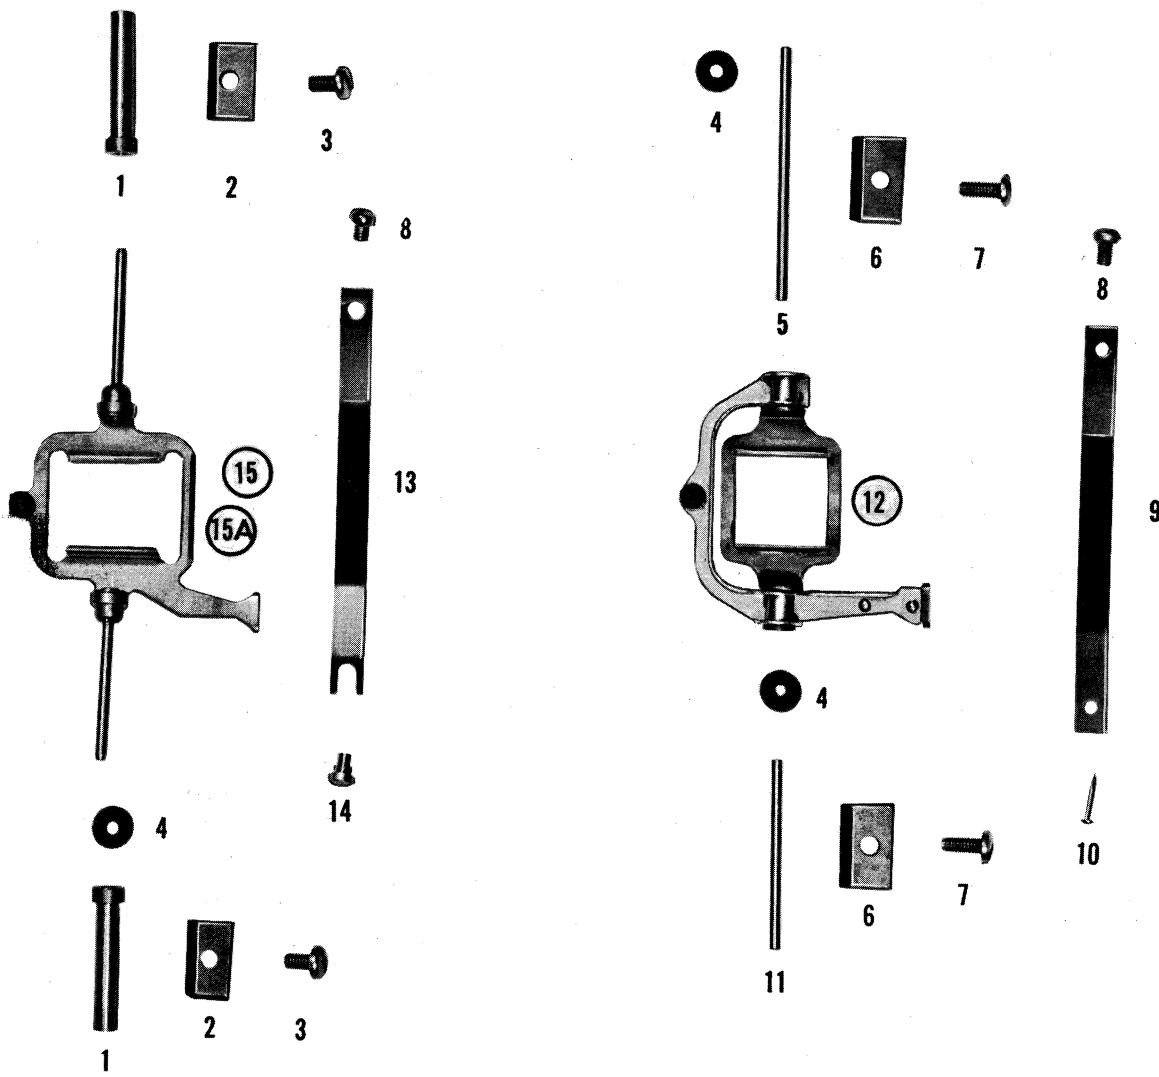


**LAMP HOUSE
AND BASE
ASSEMBLY
60-4, 60-10,
60-25
FRONT VIEW**


No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	26901-AR	Lamp house casting										
2	19345	Still picture pivot		1	1	1			1	1		
3	20169	AC socket (female)	45	1	1	1		1	1	1		
4	19034-50A	Power lead assembly	45	1	1	1		1	1	1		
5	19747	AC plug (male)	45	1	1	1		1	1	1		
6	26941	Fan baffle	45				1	1	1	1		
7	22351-50	Rewind lever	47				1	1	1	1		
8	19392	Lamp house body plate	45	1	1	1		1	1	1		
9		5/40 x 3/16 B.H. screw	45		3	3	3	3	3	3	3	3
10	19343-50A	Still picture shutter	45	1	1	1			1	1		
11	20714	Lens mount stop			1	1	1	1	1	1	1	

**LAMP HOUSE
AND BASE
ASSEMBLY
60-4, 60-10,
60-25
REAR VIEW**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	26901-AR	Lamp house casting assy.										
2	20714	Lens mount stop		1	1	1	1	1	1	1	1	
3		5/40 x 3/16 B.H. terminal cover screw	45		4	4	4	4	4	4	4	4
4	19393	Terminal cover	45	1	1	1	1	1	1	1	1	
5	23340	Motor switch	45	1	1	1	1	1	1	1	1	
6	23330	Lamp switch	45	1	1	1	1	1	1	1	1	
7	20496	Lamp socket adjusting nut	45	1	1	1	1	1	1	1	1	
8	22351-50	Rewind lever	47		1	1	1	1	1	1	1	
9	30373	Rewind tension spring (large)	47				2	2	2	2	2	2
10		#3 "C" Washer	47				2	2	2	2	2	2
11	23225	Rewind disengaging spring (small)	47			1	1	1	1	1	1	
12		#3 "C" Washer	47			2	2	2	2	2	2	2
13	26916	Rewind belt guard	47						1	1		
14		10/32 Hex nut (belt guard retainer nut)							1	1		
15	26890-A	Rewind assembly	47						1	1		
16	26883-2	Rewind pulley	47							1		
17	19747	AC plug (male)	45	1	1	1	1	1	1	1		
18	20169	AC socket (female)	45	1	1	1	1	1	1	1		
19	19034-50A	Power lead assembly	45	1	1	1	1	1	1	1		
20	19391-A	Lamp house base casting		1	1	1	1	1	1	1		

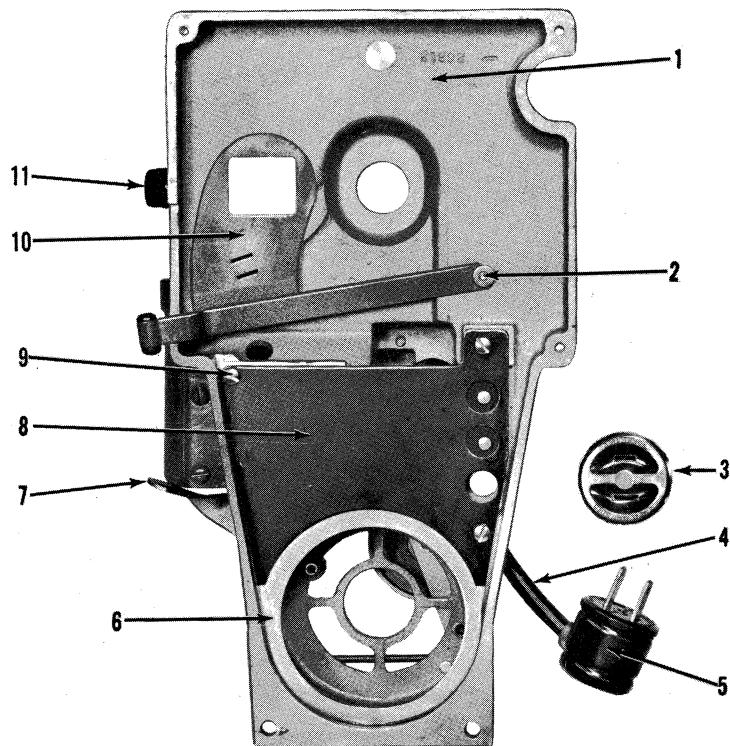

**LAMP HOUSE
AND BASE
ASSEMBLY**
60-4, 60-10
60-25
FRONT VIEW

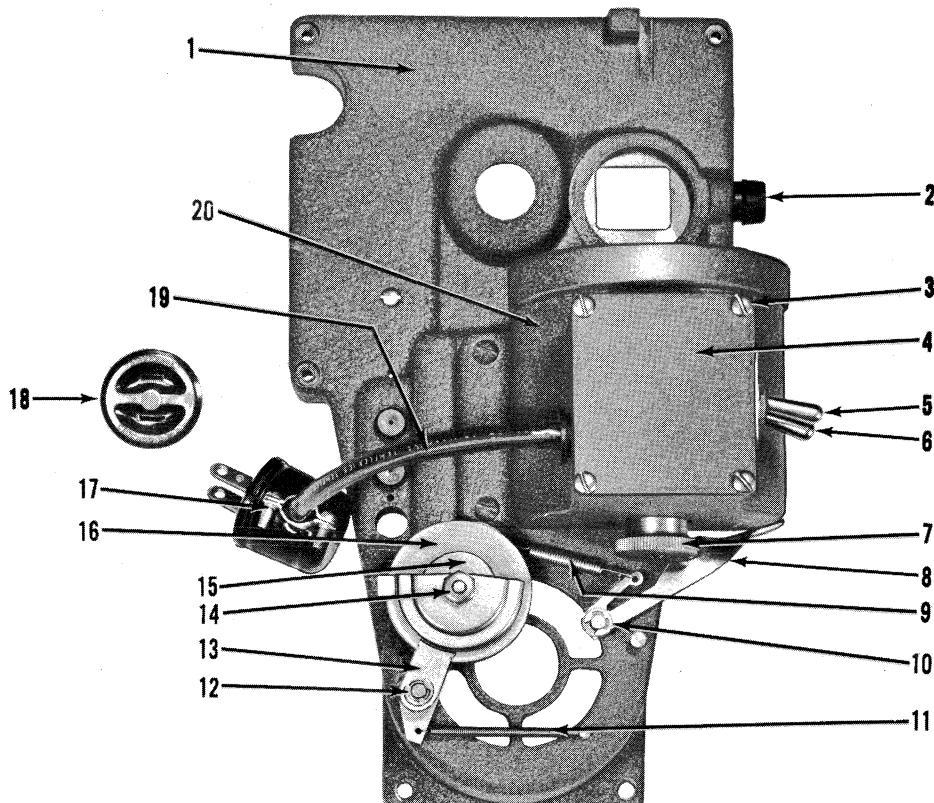

**LAMP HOUSE
AND BASE
ASSEMBLY**
60-4, 60-10
60-25
REAR VIEW

**LAMP HOUSE
AND BASE
ASSEMBLY
55, 60-B,
60-2**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19390-55A	Lamp house casting											
2	20714	Lens mount pad											
3		5/40 x 3/16 B.H. screw			4	4	4	4	4	4	4	4	
4	19393	Terminal cover	45										
5	18641	Motor switch*	45										
6	20496	Lamp socket adjusting nut	45		1	1							
7	22351-50	Rewind lever	47										
8		5/40 x 3/16 B.H. screw											
9	23225	Rewind disengaging spring	47										
10		5/40 x 1/4 B.H. screw											
11	22349-50A	Rewind assembly	47										
12	23257	Rewind belt guard	47										
13		5/40 x 1/4 Rewind belt guard retainer B.H. screw											
14	23345-A	Rewind disc & pulley assy.	47										
15	23348	Rewind tension spring	47										
16	19747	AC plug (male)	45		1	1							
17	19034-50A	Power lead assembly	45		1	1							
18	20169	AC socket (female)	45		1	1	1	1	1	1	1	1	
19	19391-A	Lamp house base casting			1	1	1	1	1	1	1	1	


*No. 5, 18641, is interchangeable with 23340 (Page 5).

18641 and 23340 are also used for exciter switches.


**LAMP HOUSE
AND BASE
ASSEMBLY
40-A, 40-B**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19390-A	Lamp house casting assy.											
2	20110	Lens mount stop screw											
3		5/40 x 3/16 B.H. retainer screw	45		6	6	4	4	4	4	4	4	
4	18641	Motor switch*	45	2	2	2	1	1	2	2	1	1	2
5	19393	Terminal cover plate	45	1	1	1	1	1	1	1	1	1	
6	20496	Lamp socket adjusting nut	45		1	1							
7	19519	Rewind belt guard			1	1	1						
8		5/40 x 3/16 B.H. retainer screw				6	6	4	4	4	4	4	
9	19747	AC plug (male)	45		1	1	1	1	1	1	1	1	
10	19034-50A	Power lead assembly	45		1	1	1	1	1	1	1	1	
11	20169	AC socket (female)	45		1	1	1	1	1	1	1	1	
12	19391-A	Lamp house base casting			1	1	1	1	1	1	1	1	

*No. 4, 18641 Motor switch is also used as exciter switch.

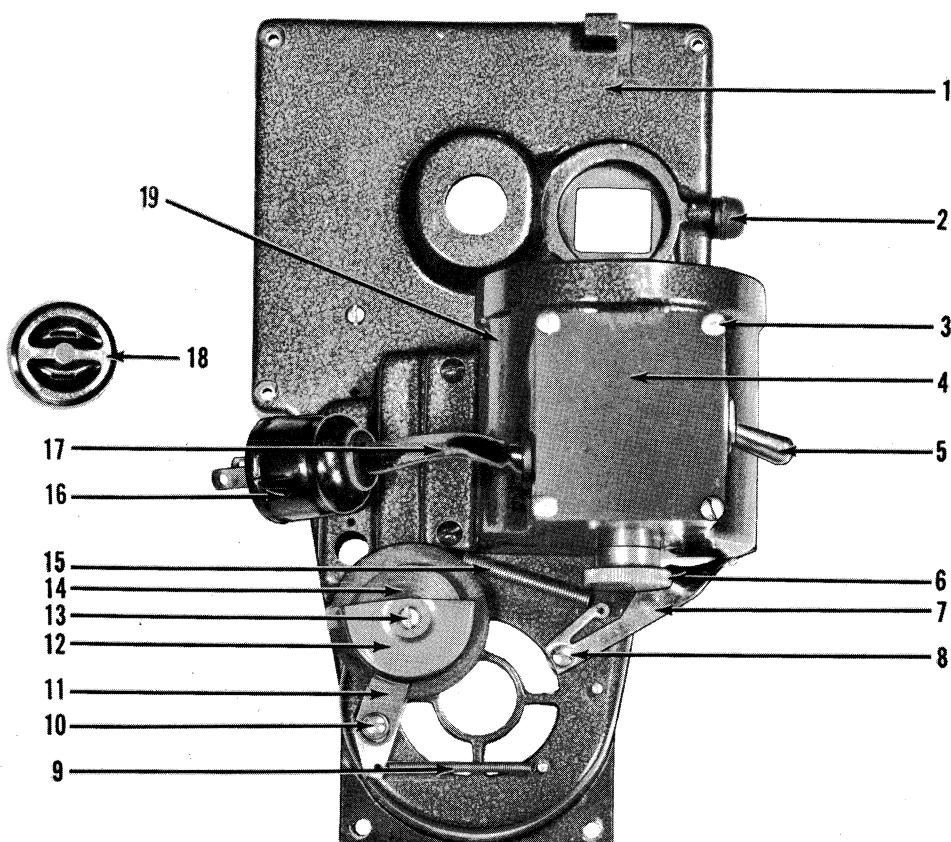

**LAMP HOUSE
AND BASE
ASSEMBLY
55, 60-B,
60-2**

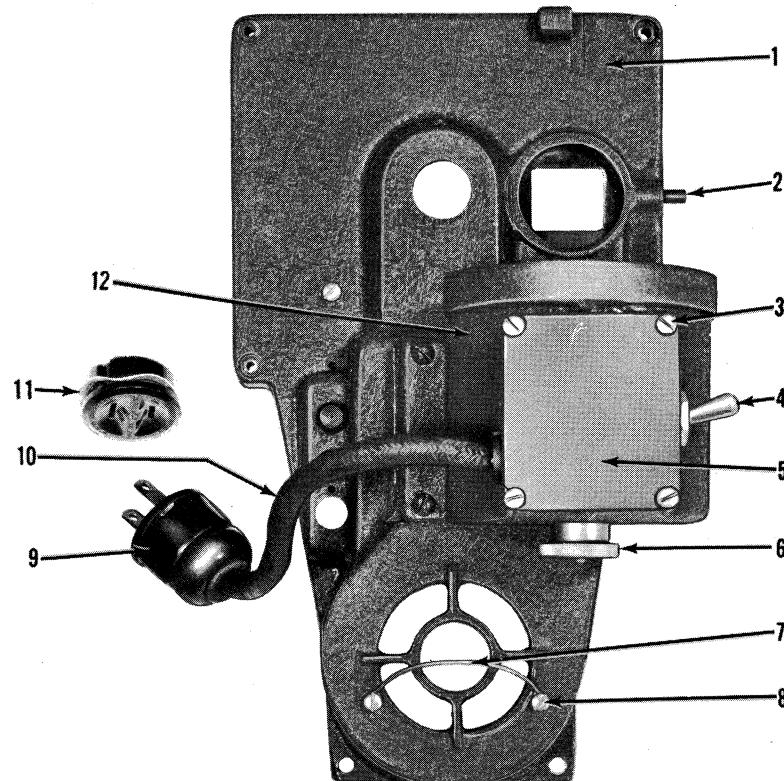

**LAMP HOUSE
AND BASE
ASSEMBLY
40-A, 40-B**

**LAMP SOCKET
ASSEMBLY
STILL PICTURE
ASSEMBLY
BAFFLE
ASSEMBLY**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	20491-A	Lamp adjusting plate*											
2	23376-A	Lamp adjusting plate*											
3	20492	Lamp socket insulator											
4	20496	Lamp socket adjusting nut											
5	19747	AC line plug											
6	19747	AC line plug											
7	20169	AC socket (female)											
8	19036	Insulator bushing											
9	19034-50A	Power lead assembly											
10	20490	Lamp socket											
11	19158	Nameplate (off-project)†											
12	19429	Nameplate (off-rewind)†											
13	26724	Nameplate (lamp-motor-off)†											
14	19311	Terminal plunger			2	2	2		2	2	3	2	2
15		5/40 x 3/16 B.H. retainer screw			6	6	4	4	4	4	4	4	4
16	19393	Terminal cover											
17	23292	Terminal insulator											
18	19519	Rewind belt guard											
19		5/40 x 3/16 B.H. retainer screw											
20	19345	Still picture pivot											
21		5/40 x 3/8 B.H. retainer screw			3	3	3		3	3	3	3	3
22	1014	Switch nut			4	4	4	4	3	4	4	4	4
23	18690	Switch washer			4	4	4	4	3	4	4	4	4
24	18641	Motor switch‡			1	1	1	1	1	1	1	1	1
25	19343-50A	Still picture shutter			1	1	1	1	1	1	1	1	1
26	19404	Lever knob				3	3	3	1	3	3	3	3
27	19404	Lever knob				3	3	3	1	3	3	3	3
28	26941	Motor fan baffle						1	1	1	1	1	1
29		5/40 x 3/8 B.H. retainer screw				2	2	2		2	2	2	2
30	19310	Terminal post sleeve insulator				2	2	2		2	2	3	2
31	19307	Terminal post washer				2	2	2		2	2	3	2
32	19312	Terminal post spring				2	2	2		2	2	3	2
33	23330	Lamp switch**				1	1	1	1	1	1	1	1
34		5/40 x 1/4 B.H. retainer screw				3	3	3		3	3	3	3
35	19392	Lamp house body plate				1	1	1	1	1	1	1	1
36		4/36 x 7/16 F.H. retainer screw				2	2	2		2	2	2	2
37	19311	Terminal plunger				2	2	2		2	2	3	2


*No. 2, 23376-A, replaces No. 1, 20491-A.

†No. 13, 26724, replaces No. 11, 19158, and No. 12, 19429.

‡No. 24, 18641, is also used for exciter switch.

**No. 33, 23330, replaces 20445 (Model 40 Parts Book).

**LAMP SOCKET
ASSEMBLY
STILL PICTURE
ASSEMBLY
BAFFLE
ASSEMBLY**

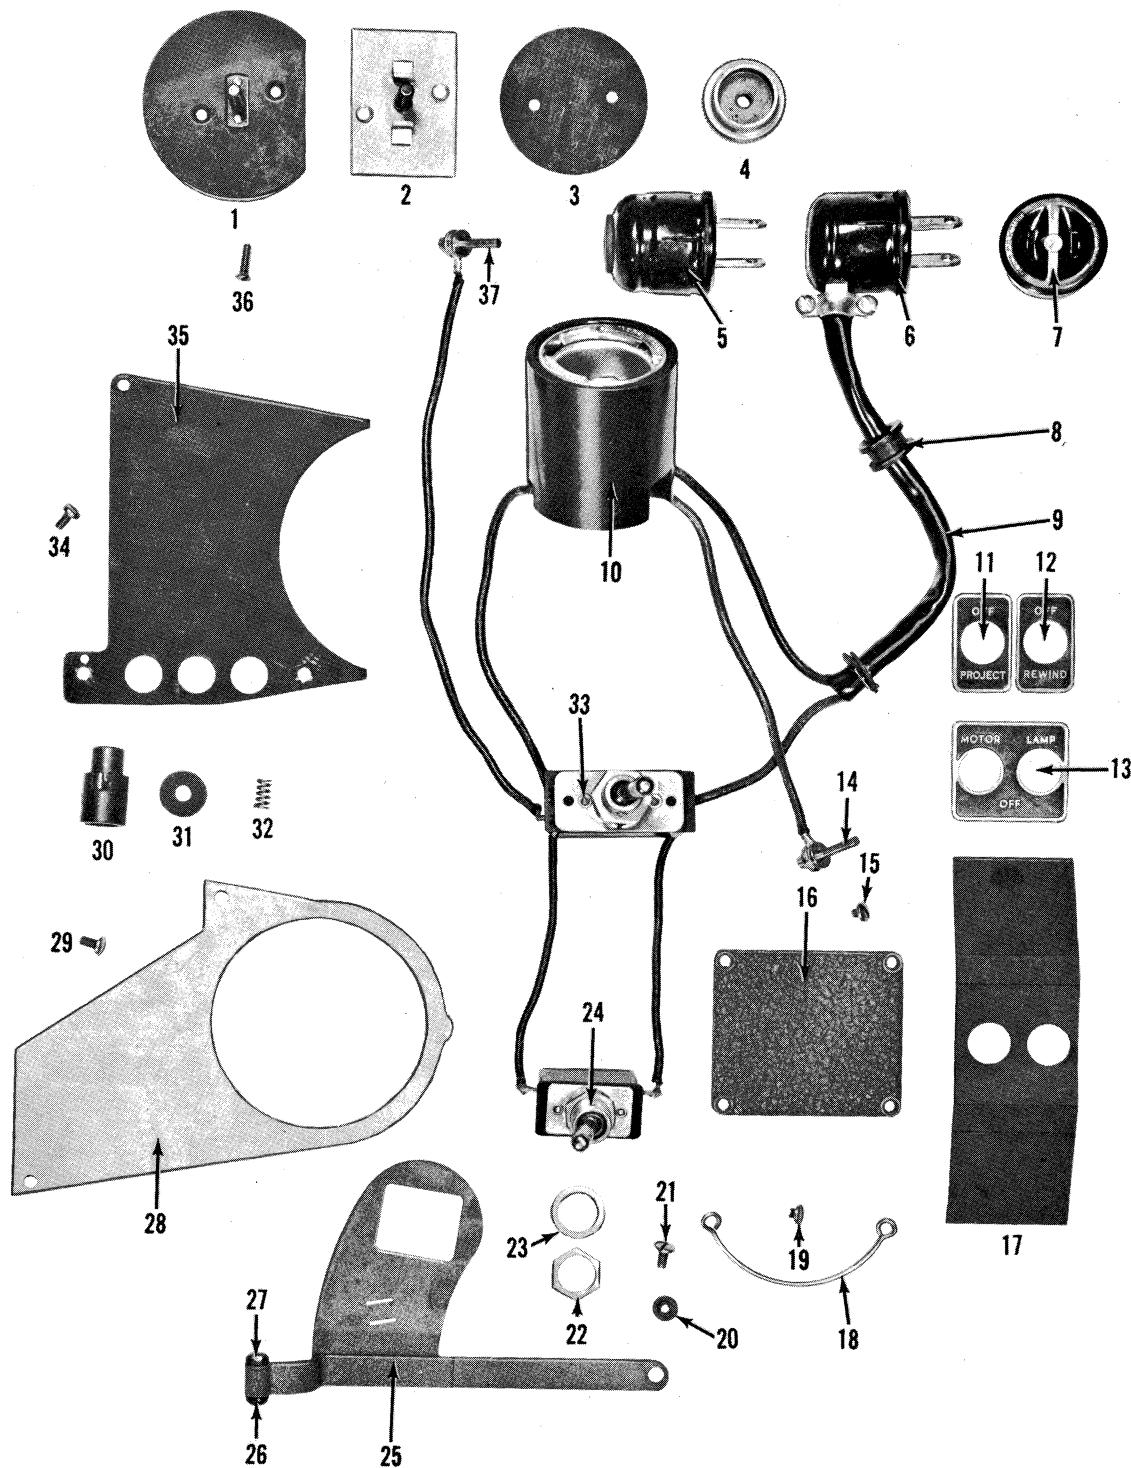

**REWIND
ASSEMBLY
MODELS 60-4,
60-10, 60-25**


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10
1	26883-2	Rewind pulley											
2	26909	Rewind pulley spacer											
3	22351-50	Rewind lever											
4	26890-A	Rewind assembly											
5	26916	Rewind belt guard											
6	26890-2	Rewind pivot bar assembly											
7	23225	Rewind disengaging spring											
8		#3 Rewind assembly retainer "C" washer											
9		#10 Rewind assembly plain flat spacer washer											
10		#10 Rewind assembly retainer shakeproof lock washer											
11		10/32 Rewind assembly retainer hex nut											
12	30373	Rewind tension spring											

**REWIND
ASSEMBLY
MODELS 55,
56, 60-B,
60-2**


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10
1	23345-A	Rewind disc and pulley assembly											
2	22351-50	Rewind lever											
3	22349-50A	Rewind assembly*											
4	23257	Rewind belt guard											
5	22349-50-2	Rewind pivot bar											
6	23225	Rewind disengaging spring											
7	23213	Rewind needle bearing						12	12	12	12		
8		5/40 x 1/4 T.H. rewind pulley and disc retainer screw											
9	23348	Rewind tension spring											

*No. 3, 22349-50A, is not interchangeable with 26890-A (above).

**REWIND
ASSEMBLY
MODELS 60-4,
60-10, 60-25**

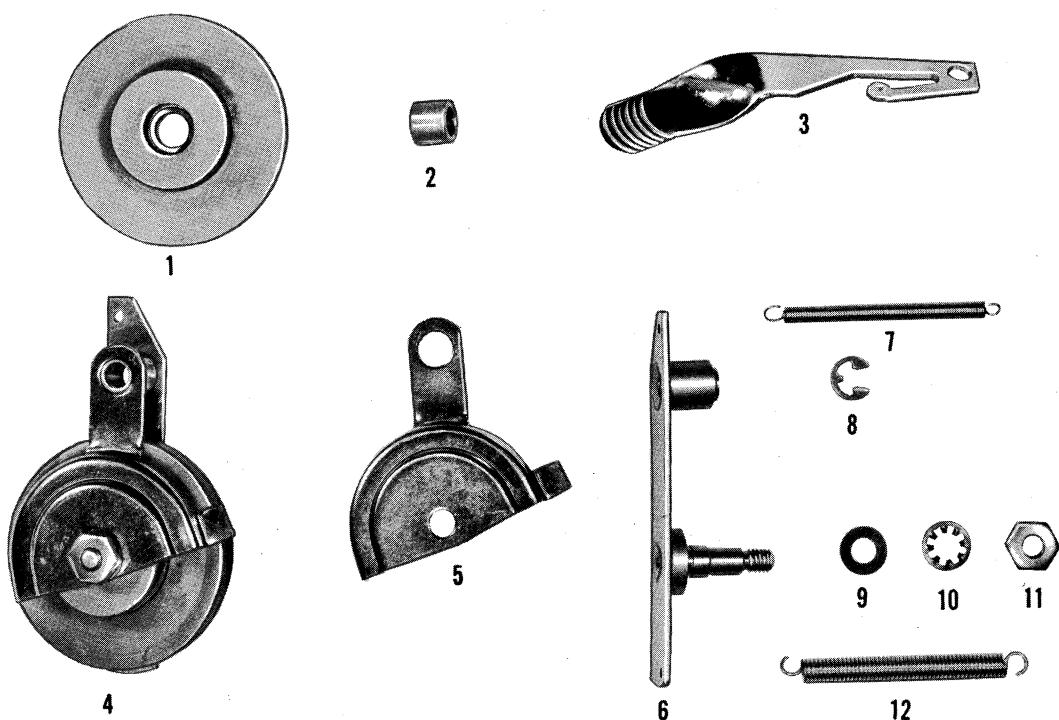

**REWIND
ASSEMBLY
MODELS 55,
56, 60-B,
60-2**

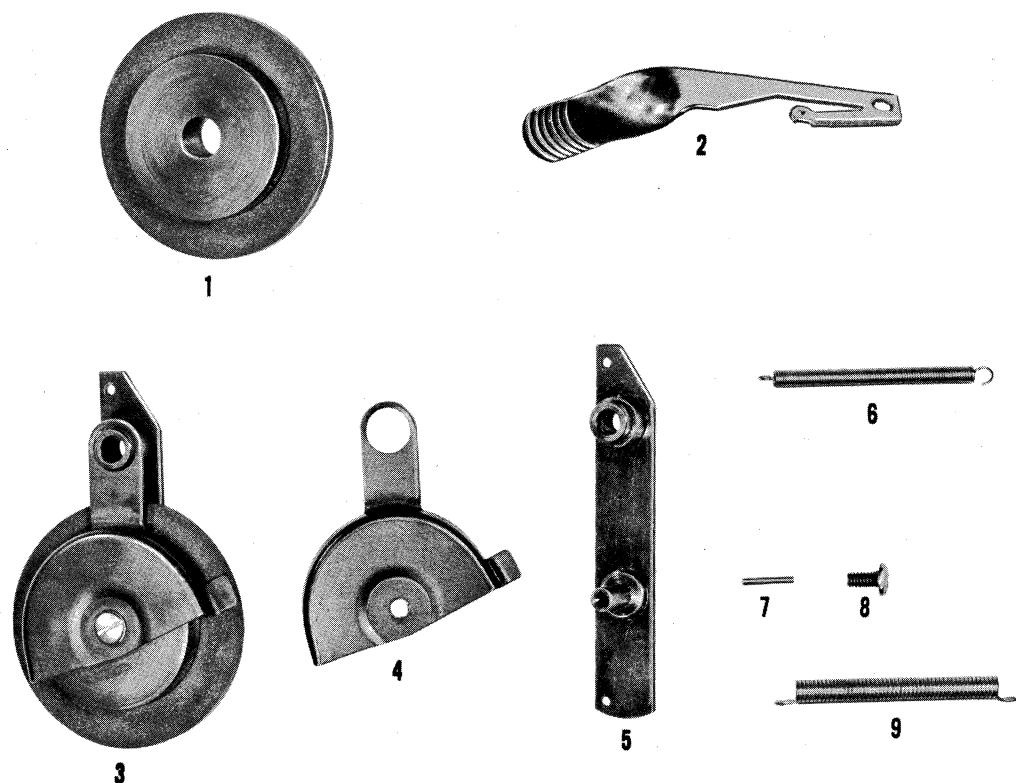

BACK VIEW
MODEL 60-25


(USE AS
REFERENCE
FOR MODELS
60-2, 60-B)

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26767	Reel arm lock wedge	13				1	1		1	1	1	1
2	30254	Reel arm lock screw	13				1	1		1	1	1	1
3	30190-A	Spiral intermediate & shaft assy.	61	1			1	1	1	1	1	1	1
4	26210-A	Shutter support plate assembly	35			1	1	1	1	1	1	1	1
5	26610	Motor fan	79				1	1		1	1	1	1
6	26885-A	Rewind drive pulley	79								1	1	1
7	30366-A	Base support sleeve	73	4	4	4	4	4	4	4	4	4	4
8	26907-A	Base support bar (rear)				1	1	1	1	1	1	1	1
9	20629	Exciter socket (female)	63				1		1	1			1
10	26902-AR	Body casting								1	1	1	
11	20628	Exciter plug (male)	63				1		1	1			1
12	26904-A	Exciter cord and socket assembly	63				1		1	1			1
13	20264	Motor brush plug	81			2	2	2	2	2	2	2	2
14	30461-AR	Wiring harness	65										
15	26918	P.E. Cell connector base	67					1	1	1	1		
16	26917	P.E. Cell connector (contact)	67					1	1	1	1	1	1
17	26561-A	P.E. Cell connector (male)	67					1	1	1	1	1	1
18	30370-A	Impedance flywheel		1	1	1	1	1	1	1	1	1	1
19	30523-A	P.E. Cell cord assembly	67										1
20	30367-A	Sound sprocket filter flywheel assembly*		1	1	1	1	1	1	1	1	1	1
21	19180-A	Sound sprocket drive gear assy.	61	1	1	1	1	1	1	1	1	1	1
22	26722-A	Take-up lever assembly	75				1	1	1	1	1	1	1
23	20739-AR	Hand shaft and knob assy.	75								1	1	1
24	26836-A	Take-up clutch assembly	71	1	1	1			1	1	1	1	1
	19188	Feed sprocket shaft bearings (not shown)			2	2	2	2	2	2	2	2	2

*No. 20, 30367-A, Filter flywheel assembly is interchangeable and replaces 19200-A (Page 59).

**BACK VIEW
MODEL 60-2**

(USE AS
REFERENCE
FOR MODELS
60-2, 60-B)

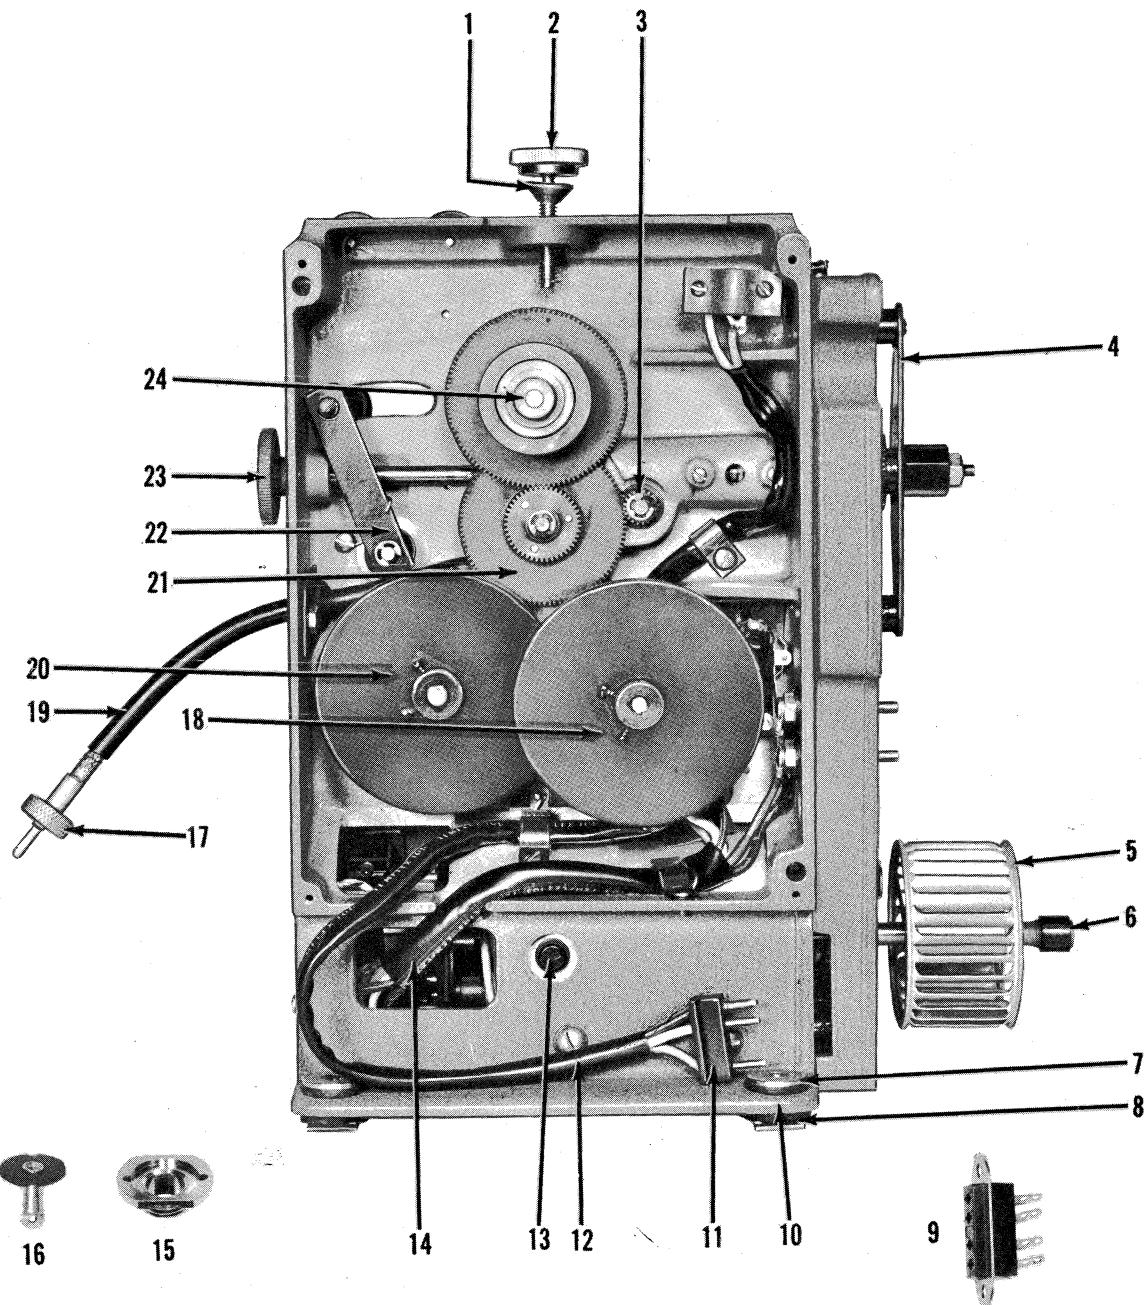

No.	Part No.	Part Name	Page	USED ON MODELS										
				G	40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26918	P.E. Cell connector base	67							1	1	1	1	1
2	26917	P.E. Cell contact (female)	67							1	1	1	1	1
3	26561-A	P.E. Cell connector (male)	67							1	1	1	1	1
4	26759-A	P.E. Cell cord assembly	67								1	1		
5	19296	Pilot lamp socket	63	1	1	1				1	1	1	1	1
6	26210-A	Shutter support plate assy.	35		1	1	1	1	1	1	1	1	1	1
7	30190-A	Spiral intermediate pinion & shaft assy.	61		1	1	1	1	1	1	1	1	1	1
8	30548	P.E. Cell cord clamp	67		1	1					1	1		
9	19130	Shutter housing			1	1	1	1	1	1	1	1	1	1
10	26610	Motor fan	79		1	1				1	1	1	1	1
11	20063	Cord clamp			1	1	1	1	1	1	1	1	1	1
12	26885-A	Rewind drive pulley	79								1	1		
13	30366-A	Base support sleeve	73		4	4	4	4	4	4	4	4	4	4
14	26907-A	Base support bar (rear)			1	1	1	1	1	1	1	1	1	1
15		8/32 x 1/2 T.H. motor mounting screw								4	4	4		
16	20264	Motor brush plug	81		2	2	2	2	2	2	2	2	2	2
17	26908-A	Base support bar (front)								1	1	1		
18	22091	Base support washer	73		8	8	8	8	8	8	8	8	8	8
19	30556-AR	Wiring harness, Model 60-10*	65									1		
20	30370-A	Impedance flywheel†			1	1	1	1	1	1	1	1	1	1
21	30367-A	Sound sprocket filter flywheel assembly**			1	1	1	1	1	1	1	1	1	1
22	19180-A	Sound sprocket drive gear assy.	61	1	1	1	1	1	1	1	1	1	1	1
23	20739-AR	Hand control knob & shaft assy.	75								1	1	1	
24	26722-A	Take-up lever assembly	75		1	1	1	1	1	1	1	1	1	1
25	26836-A	Take-up clutch assembly	71	1	1	1	1	1	1	1	1	1	1	1
26	26902-AR	Body casting								1	1	1		
27	30254-A	Reel arm lock screw assembly	13		1	1				1	1	1	1	1

*Wiring harness for 60-4 is Part No. 30464-AR (Page 65).

†No. 20, 30370-A is interchangeable and replaces 19062-A (Page 59).


**No. 21, 30367-A is interchangeable and replaces 19200-A (Page 59).

BACK VIEW MODELS 60-4 AND 60-10

(USE AS
REFERENCE
FOR MODEL 55)

**BACK VIEW
MODELS 60-4
AND 60-10**


**(USE AS
REFERENCE
FOR MODEL 55)**

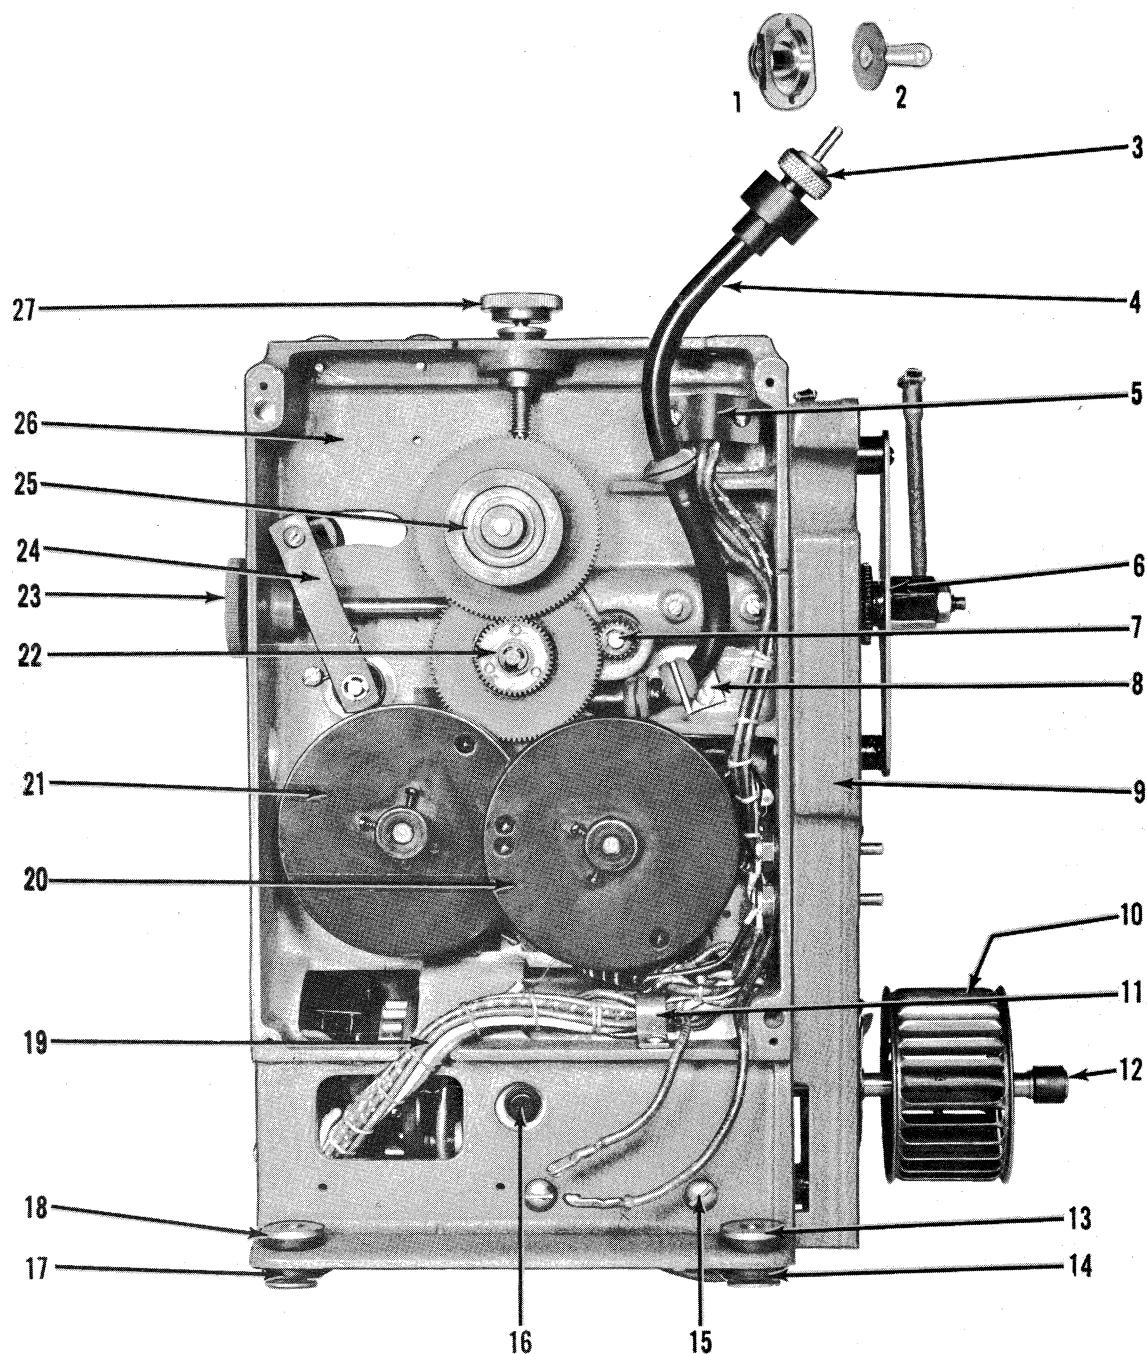

**BACK VIEW
MODEL 56**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	30254-A	Reel arm lock screw assy.	13				1	1	1	1	1	1
2	26918	P.E. Cell connector (base)	67					1	1	1	1	1
3	26917	P.E. Cell contact (female)	67					1	1	1	1	1
4	26561-A	P.E. Cell connector (male)	67				1	1	1	1	1	1
5	26577-A	P.E. Cell socket assembly						1				
6	23135-A	Shutter support bar oil tube	35				1	1	1	1	1	1
7	26210-A	Shutter support bar assembly	35				1	1	1	1	1	1
8	20573	Shutter support jack shaft	35				1	1	1	1	1	1
9	30190-A	Spiral intermediate & shaft assy.	61	1			1	1	1	1	1	1
10	19130	Shutter housing casting					1	1	1	1	1	1
11	30370-A	Impedance flywheel					1	1	1	1	1	1
12	26610	Motor fan	81					1	1	1	1	1
13	20063	Cord clamp					1	1	1	1	1	1
14	23350	Rewind pulley	81				1	1	1	1	1	1
15		8/32 x 1/2 F.H. motor mounting screw					4	4	4	4	4	
16	20264	Motor brush plug	81				2	2	2	2	2	2
17	22091	Base support washer (rubber)	73	8	8	8	8	8	8	8	8	8
18		8/32 x 1/4 R.H. retainer screw						1				
19	26612-A	#18 x 2" ground wire						1				
20	26536-A	Motor wiring harness	69					1				
21	30367-A	Sound sprocket filter flywheel assembly					1	1	1	1	1	1
22	19180-A	Sound sprocket drive gear assy.	61	1	1	1	1	1	1	1	1	1
23	26722-A	Take-up lever assembly	75					1	1	1	1	1
24	26510	Take-up belt guard						1				
25	26961-A	Take-up pulley assembly	61					1				
26	26700-A	Main body casting						1				

**BACK VIEW
MODEL 56**

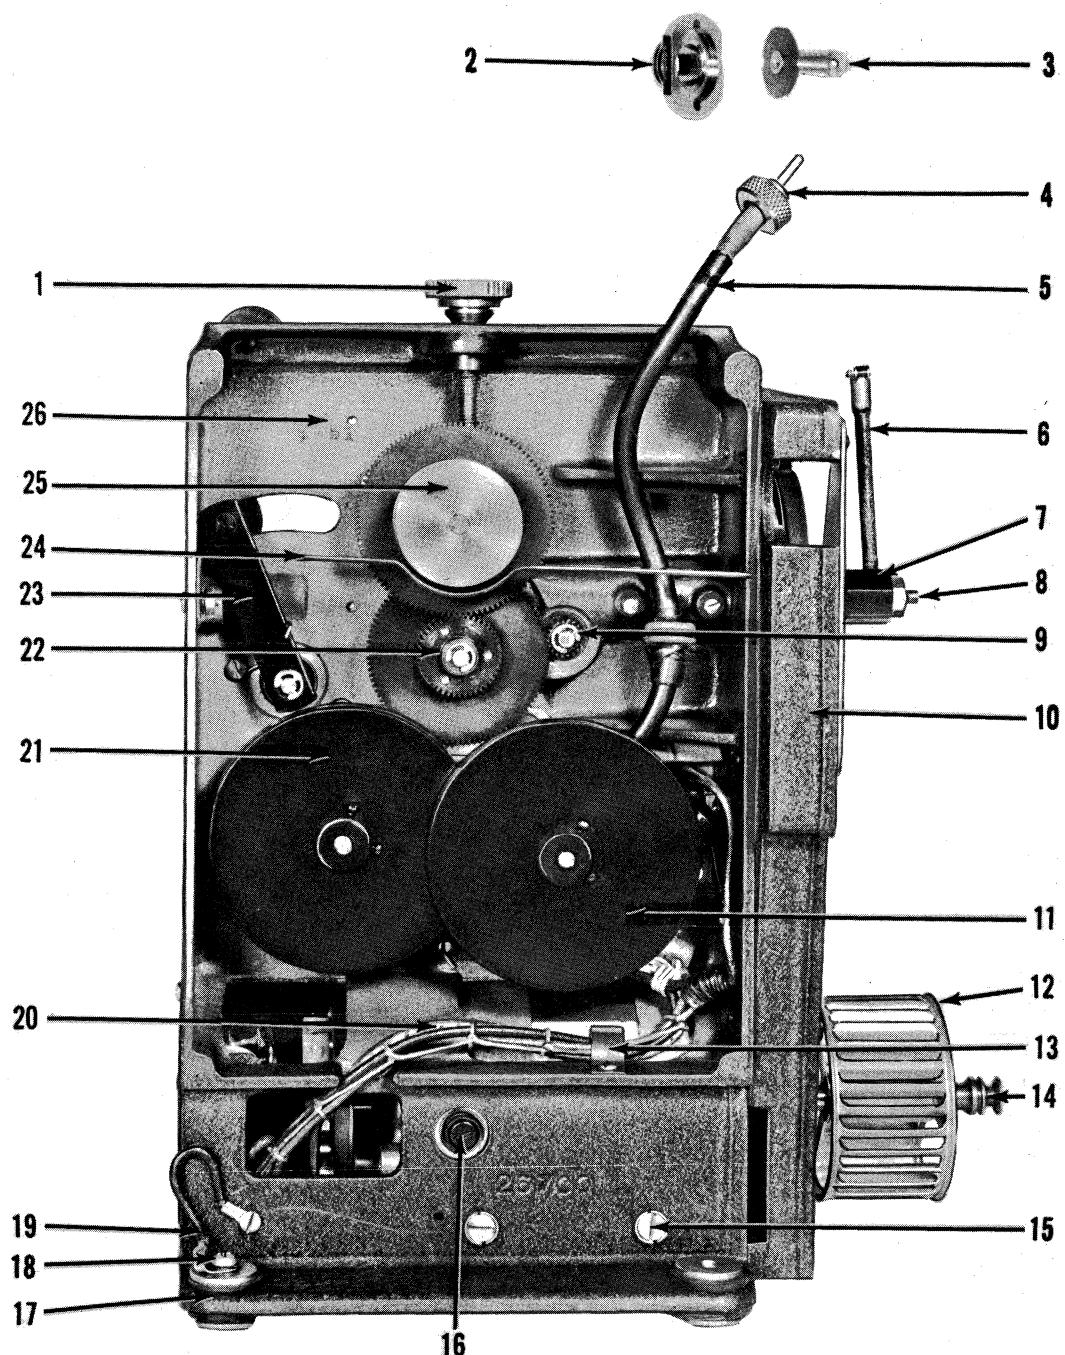

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	19850-A	Reel arm holder assembly	13	1	1	1						
2	19296	Pilot lamp socket	63	1	1	1	1	1	1	1	1	1
3	19130	Shutter housing				1	1	1	1	1	1	1
4	20572-A	Shutter support plate assy.*	35			1						
5	20700-A	Spiral intermediate pinion & shaft assy.†	61	1		1						
6	19547-50-2	Exciter lamp socket	63	1	1	1	1	1	1	1	1	1
7	20274-A	Motor fan	87	1		1			1			
8	20273	Rewind pulley	87	1		1						
9	20618	Four contact exciter plug (male)			1	1	1	1				
10	20619	Four contact exciter plug (female)			1	1	1	1				
11		8/32 x 1/2 F.H. motor mounting screw				4	4	4	4	4	4	4
12	20264	Motor brush plug	81			2	2	2	2	2	2	2
13	19547-50A	Exciter socket and cord assy.				1	1		1	1		
14	19869	.5 Mfd. motor condenser	69			1	1	1		1		
15	19818	P.E. Cell connector (female)	67			1	1	1		1		
16	22091	Base support washer (rubber)	73	8	8	8	8	8	8	8	8	8
17	19052-A	Base support sleeve**	73	4	4	4	4	4		4	4	
18	19819	P.E. Cell plug (male)	67		1	1	1		1			
19	20063	Cord clamp			1	1	1	2	2	1	3	3
19A	20062	Insulator bushing				1	1			1		
20	20717-A	P.E. Cell cord assembly	67		1	1				1		
21	19180-A	Sound sprocket drive gear assy.	61	1	1	1	1	1	1	1	1	1
22	19501-40	Hand control shaft‡	75	1	1	1						
23	20739-40	Hand control knob‡	75	1	1	1						
24	19075-A	Take-up lever assembly	75	1	1	1						
25	19185-A	Take-up pulley and clutch assy.††	71	1	1	1	1	1				
26	20790-A	Main body casting			1	1	1		1	1		

*No. 4, 20572-A is replaced by 26210-A (Page 35).


†No. 5, 20700-A is replaced by 30190-A (Page 61).

**No. 17, 19052-A is replaced by 30366-A (Page 73).

‡No. 22, 19501-40 and No. 23, 20739-40 are replaced by 20739-AR (Page 75).

††No. 25, 19185-A is replaced by 26836-A (Page 71).

BACK VIEW MODEL 40-B

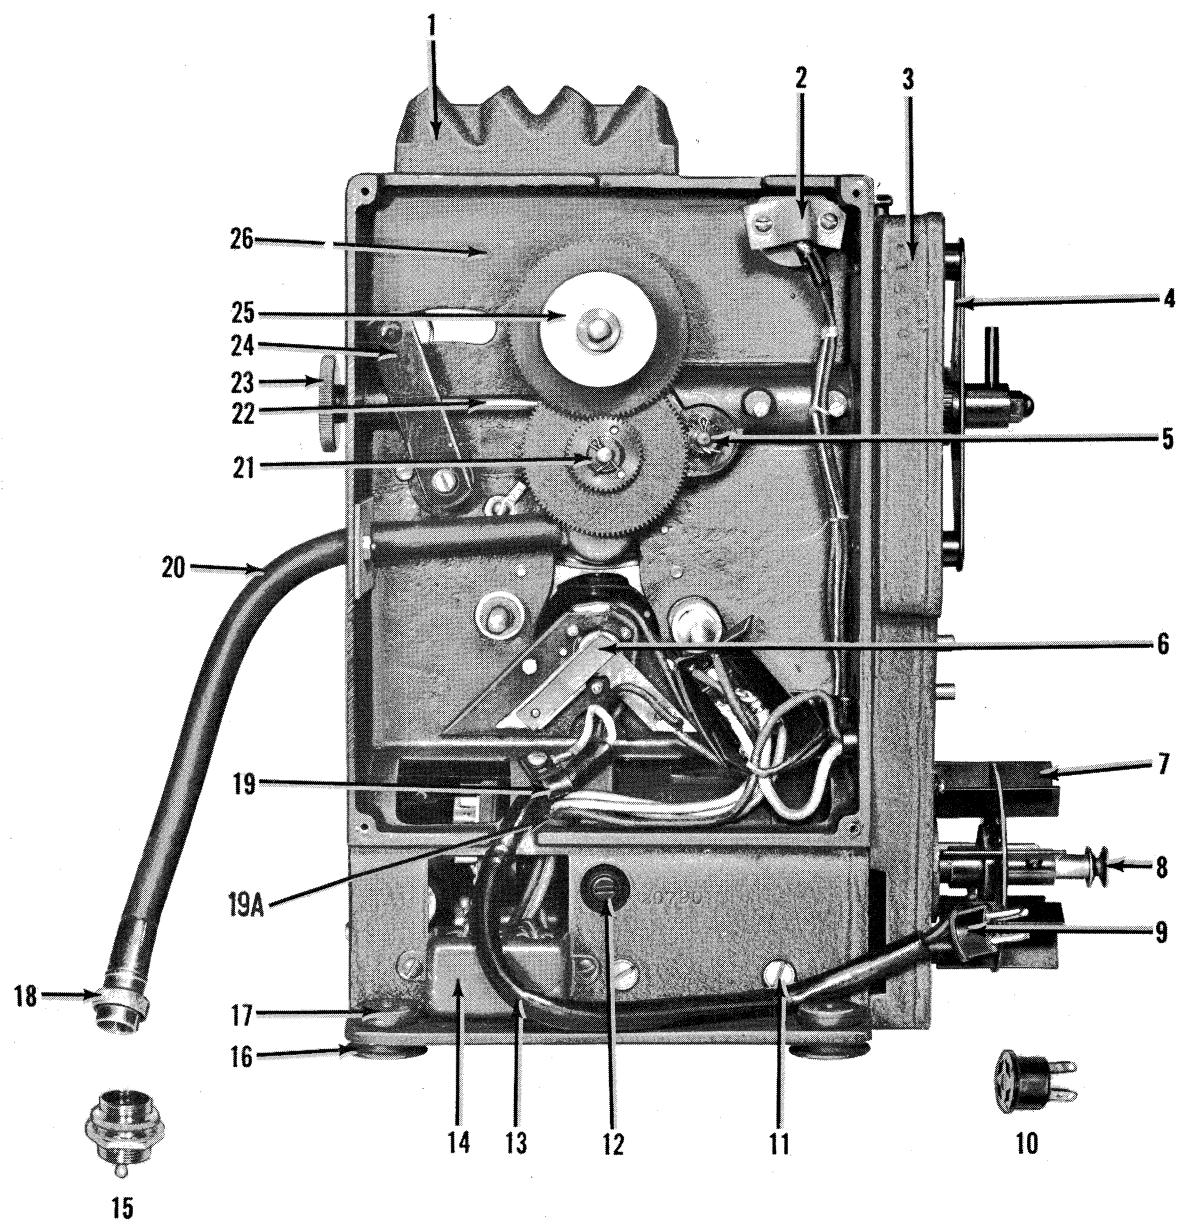

BACK VIEW
MODEL 40-B

**BACK VIEW
MODEL 40-B**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19850-A	Reel arm holder assembly	13	1	1	1							
2	19185-A	Take-up pulley & clutch assembly*	71	1	1	1	1	1	1	1	1	1	1
3	19180-A	Sound sprocket drive gear assy.	61	1	1	1	1	1	1	1	1	1	1
4	20700-A	Spiral intermediate pinion & shaft assy.†	61	1		1							
5	26210-A	Shutter support plate assy.	35	1		1	1	1	1	1	1	1	1
6	20274-A	Motor fan	87	1		1			1				
7	20273	Rewind pulley	87	1		1							
8	20619	Exciter socket (female—4 prong)				1							
9	19052-A	Base support sleeve assy.‡	73	4	4	4	4	4	4	4	4	4	4
10	22091	Base support washer (rubber)	73	8	8	8	8	8	8	8	8	8	8
11	20790-A	Main body casting			1	1	1		1	1			
12	19547-50A	Exciter cord assembly				1			1	1			
13		8/32 x 1/2 F.H. motor mounting screw			4	4	4	4	4	4	4		
14	20264	Motor brush plug	81			2	2	2	2	2	2	2	2
15	19818	P.E. Cell socket (female)	67	1	1	1			1				
16	19869	.5 Mfd. motor condenser	69			1	1						
17	19819	P.E. Cell plug (male)	67	1	1	1							
18	20717-A	P.E. Cell cord assembly	67	1	1								
19	20063	Wire clamp		1	1	1	2	2	1	2	2	2	2
20	30369-A	Impedance flywheel		1	1	1	1	1	1	1	1	1	1
21	30367-A	Sound sprocket flywheel assy.		1	1	1	1	1	1	1	1	1	1
22	20068	P.E. Cell cord clamp	67	1	1				1	1			
23	19075-A	Take-up lever assembly	75	1	1	1	1						
24	20739-40	Hand control knob**	75	1	1	1	1		1	1			
25	19501-40	Hand control shaft**	75	1	1	1	1		1	1			


*No. 2, 19185-A is replaced by 26836-A (Page 71).

†No. 4, 20700-A is replaced by 30190-A (Page 61).

‡No. 9, 19052-A is replaced by 30366-A (Page 73).

**No. 24, 20739-40 and No. 25, 19501-40 are replaced by 20739-AR (Page 75).

**BACK VIEW
MODEL 40-B**

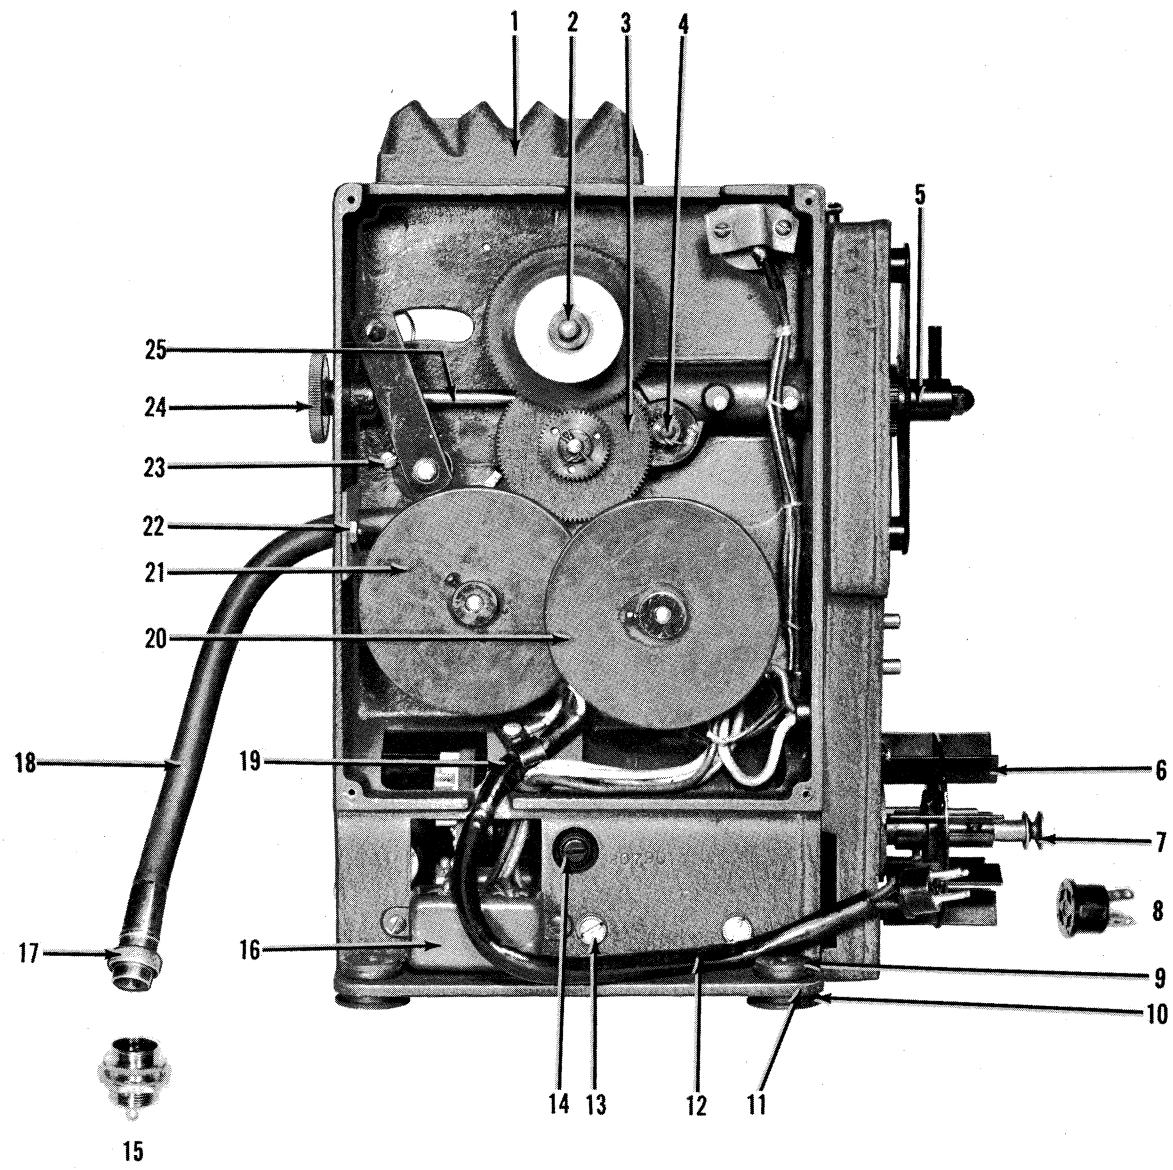

**BACK VIEW
MODEL 40-A**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19850-A	Reel arm holder assembly	13	1	1	1							
2	19296	Pilot light socket	63	1	1	1	1	1	1	1	1	1	1
3	19130-40A	Shutter housing			1	1	1	1	1				
4	19477	Spiral drive pinion	61	1	1	1	1	1	1	1	1	1	1
5	19476-A	Spiral gear assembly			1	1							
6	19062-A	Impedance flywheel*			1	1	1	1	1	1	1	1	1
7	19135	Motor fan	85			1							
8	19518	Rewind pulley	85			1							
9	19644	Exciter socket				1							
10	19643	Exciter plug (male)				1							
11	19818	P.E. Cell socket (female)	67		1	1	1	1	1				
12	19053	Base support washer (metal)			4	4	4	4	4	4	4		
13	22091	Base support washer (rubber)	73	8	8	8	8	8	8	8	8	8	8
14	19869	.5 Mfd. motor condenser	69		1	1	1	1	1				
15	19819	P.E. Cell plug (male)	67		1	1	1	1	1				
16	19547-A	Exciter lamp socket assembly	63		1	1							
17	20063	Cord clamp			1	1	1	1	1	1	1	1	1
18	20717-A	P.E. Cell cord assembly	67		1	1							
19	19200-A	Sound sprocket filter flywheel†			1	1	1	1	1	1	1	1	
20	19075-A	Take-up lever assembly			1	1							
21	19180-A	Sound sprocket drive gear assy.	61	1	1	1	1	1	1	1	1	1	1
22	19501-40	Hand control shaft**	75	1	1	1	1	1	1	1	1		
23	20739-40	Hand control knob**	75	1	1	1	1	1	1	1	1		
24	19185-A	Take-up clutch assembly‡	71	1	1	1	1	1	1	1			
25	20790-A	Body casting			1	1	1	1	1				


*No. 6, 19062-A, is replaced with 30370-A (Page 51).

†No. 19, 19200-A, Assembly is replaced with 30367-A (Page 51).

**No. 22, 19501-40 and No. 23, 20739-40 are replaced by 20739-AR (Page 75).

‡No. 24, 19185-A is replaced by 26836-A (Page 71).

**BACK VIEW
MODEL 40-A**

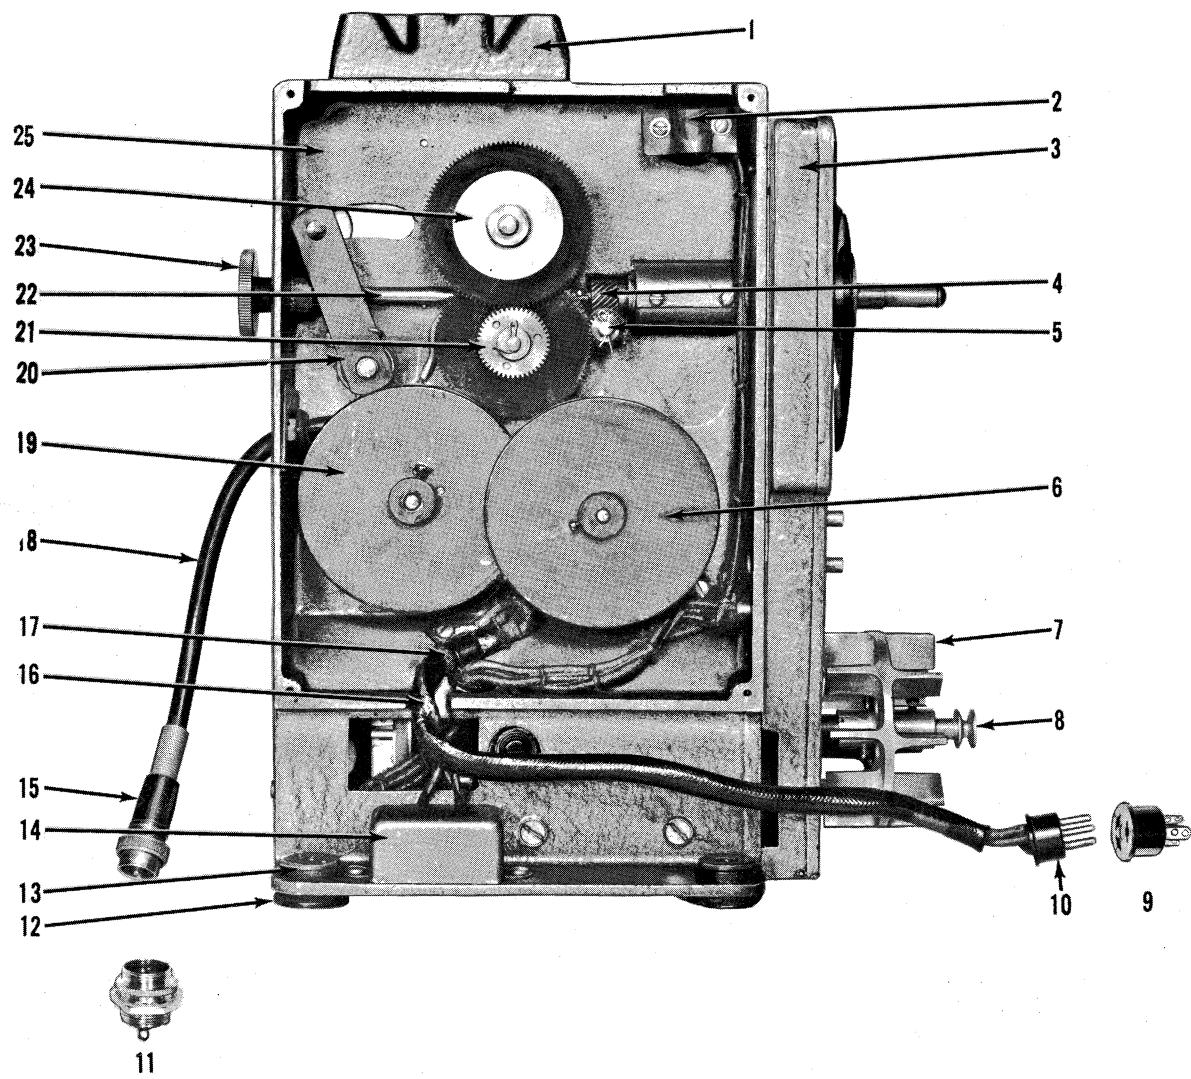

**SPIRAL
INTERMEDIATE
PINION AND
SHAFT
ASSEMBLY**

No.	Part No.	Part Name	Page	USED ON MODELS										
				G	40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10	60-25
1		#3 "C" Washer						1	1	1	1	1	1	1
2		1/16 x 1/2 cotter key			1	1								
3		4/48 x 1/4 F.H. retainer screw						2						
4	20733	Grease retainer washer					1							
5	19482	Spiral and sound sprocket drive gear retainer washer			3	3	3	3	3	3	3	3	3	3
6	30190-A	Spiral intermediate pinion and shaft assembly*												
7	30189-A	Spiral intermediate pinion			1			1						
8	20700-A	Spiral intermediate pinion and shaft assembly*					1	1	1	1				
9	19476-A	Spiral intermediate pinion				1								
10	19443-A	Spiral intermediate pinion					1	1	1	1				
11	30190-2	Spiral intermediate pinion shaft												
12	20700-2	Spiral intermediate pinion shaft					1	1	1	1				
13	20130-A	Spiral intermediate pinion shaft					1							
14	20129	Spiral intermediate pinion ball bearing			12	12	12	12	12					
15	20132	Spiral retainer nut			1	1	1	1	1	1	1	1	1	1

*No. 6, 30190-A, replaces No. 8, 20700-A.

Parts making up these two assemblies are not interchangeable.

**TAKE-UP
ASSEMBLY**


**FILTER GEAR
ASSEMBLY**

**SOUND SPROCKET
DRIVE GEAR
ASSEMBLY**

MODEL 56

No.	Part No.	Part Name	Page	USED ON MODELS										
				G	40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26961-A	Take-up pulley and feed sprocket gear assembly							1					
2		5/40 x 1/4 F.H. retainer screw for feed sprocket gear							3					
3	26573	Feed sprocket gear							1					
4	19270-A	Filter gear assembly			1	1	1	1	1	1	1	1	1	1
5	19248	Sound filter spring			1	1	1	1	1	1	1	1	1	1
6	19248-50	Sound filter spring			1	1	1	1	1	1	1	1	1	1
7		#2 Flat plain sound filter spring washer			2	2	2	2	2	2	2	2	2	2
8		2/56 x 1/8 Sound filter spring retainer screw			2	2	2	2	2	2	2	2	2	2
9	30192	Sound sprocket drive gear shaft			1	1	1	1	1	1	1	1	1	1
10		1/8 x 1/2 cotter key for spiral intermediate and sound drive gear			1	1	1	1	1	1				
11	19482	Thrust washer			3	3	3	3	3	3	3	3	3	3
12		5/40 x 5/16 B.H. sound sprocket drive gear retainer screw			3	3	3	3	3	3	3	3	3	3
13	19496-A	Feed sprocket drive pinion gear			1	1	1	1	1	1	1	1	1	1
14	19180	Sound sprocket drive gear			1	1	1	1	1	1	1	1	1	1
15	19180-A	Sound sprocket drive gear assy.			1	1	1	1	1	1	1	1	1	1

**SPIRAL
INTERMEDIATE
PINION AND
SHAFT
ASSEMBLY**

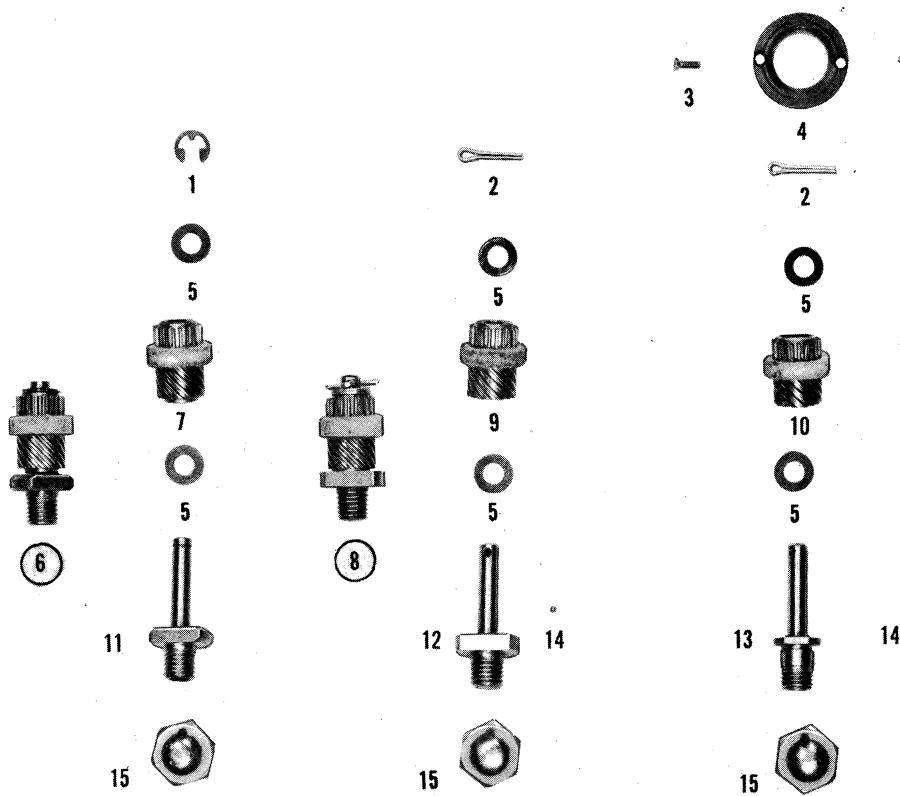


**TAKE-UP
ASSEMBLY**

**FILTER GEAR
ASSEMBLY**

**SOUND SPROCKET
DRIVE GEAR
ASSEMBLY**


MODEL 56

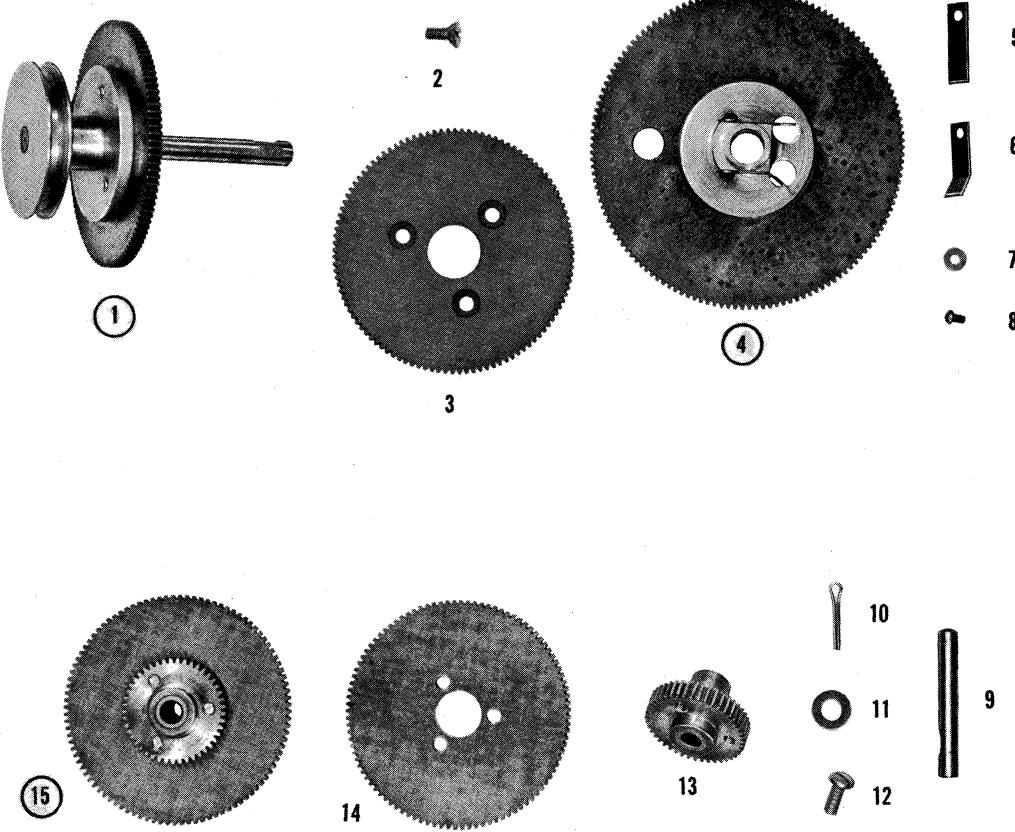

**EXCITER
SOCKET
ASSEMBLY**


No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX	40-B	55	56	60-B	60-2	60-4
1	19296	Pilot lamp socket			1	1	1			1	1	1
2	19547-A	Exciter socket assembly			1	1				1	1	
3	19547-51-2	Exciter lamp socket			1	1	1	1	1	1	1	1
4	20628	Exciter plug (male)				1				1	1	
5	20628	Exciter plug (male)				1			1	1		
6	19296	Pilot lamp socket			1	1	1			1	1	1
7	26904-A	Exciter socket assembly			1	1				1	1	
8	19547-51-2	Exciter socket			1	1	1	1	1	1	1	1
9	20629	Exciter socket (female)				1				1	1	
10	19296	Pilot lamp socket			1	1	1			1	1	1
11	19547-56A	Exciter socket assembly								1		
12	19547-50-2	Exciter lamp socket			1	1	1	1	1	1	1	1

**EXCITER
SOCKET
ASSEMBLY**

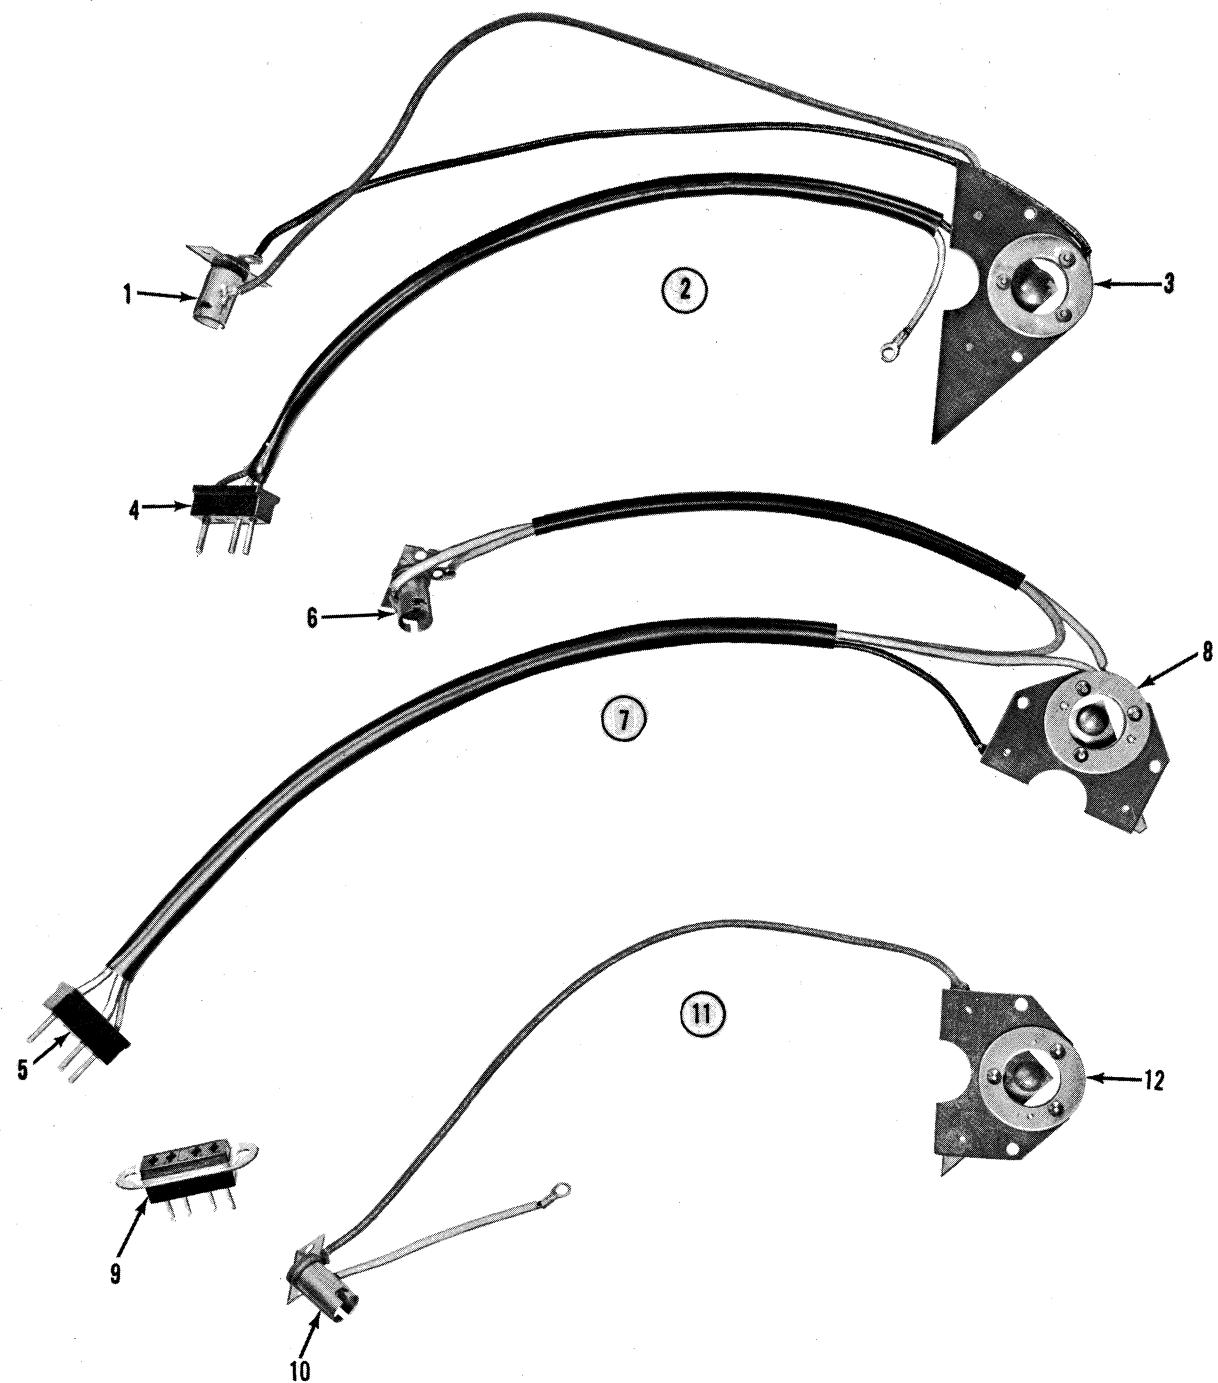

**MOTOR
WIRING
HARNESSES
MODELS 60-4,
60-10, 60-25**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	26587	Silent-sound switch										
2	30531	Switch lock plate										
3	26930	90 ohm resistor										
4	30464-AR	Wiring harness, Model 60-4										
5	19547-51-2	Exciter lamp socket assembly										
6	26617-A	.0039 Mfd. 600 VDC condenser										
7	11026	Reverse switch										
8	19223	Switch insulator										
9	26949	Snap action switch										
10	25021	.22 Mfd. 400 DC condenser										
11	26931	110 ohm 30 watt resistor										
12	19019-2R	Front body plate assembly										
13	26587	Silent-sound switch										
14	30531	Switch lock plate										
15	26930	90 ohm 20 watt resistor										
16	30556-AR	Wiring harness, Model 60-10										
17	19547-50-2	Exciter lamp socket assembly										
18	11026	Reverse switch										
19	19223	Switch insulator										
20	26949	Snap action switch										
21	25021	.22 Mfd. 400 VDC condenser										
22	19296	Pilot lamp socket										
23	26931	110 ohm 30 watt resistor										
24	19019-2R	Front body plate assembly										
25	19223	Switch insulator										
26	18640	Silent-sound switch										
27	26930	90 ohm 20 watt resistor										
28	30461-AR	Wiring harness, Model 60-25										
29	26949	Snap action switch										
30	25021	.22 Mfd. 400 VDC condenser										
31	11026	Reverse switch										
32	19223	Switch insulator										
33	26931	110 ohm 30 watt resistor										
34	19019-2R	Front body plate assembly										

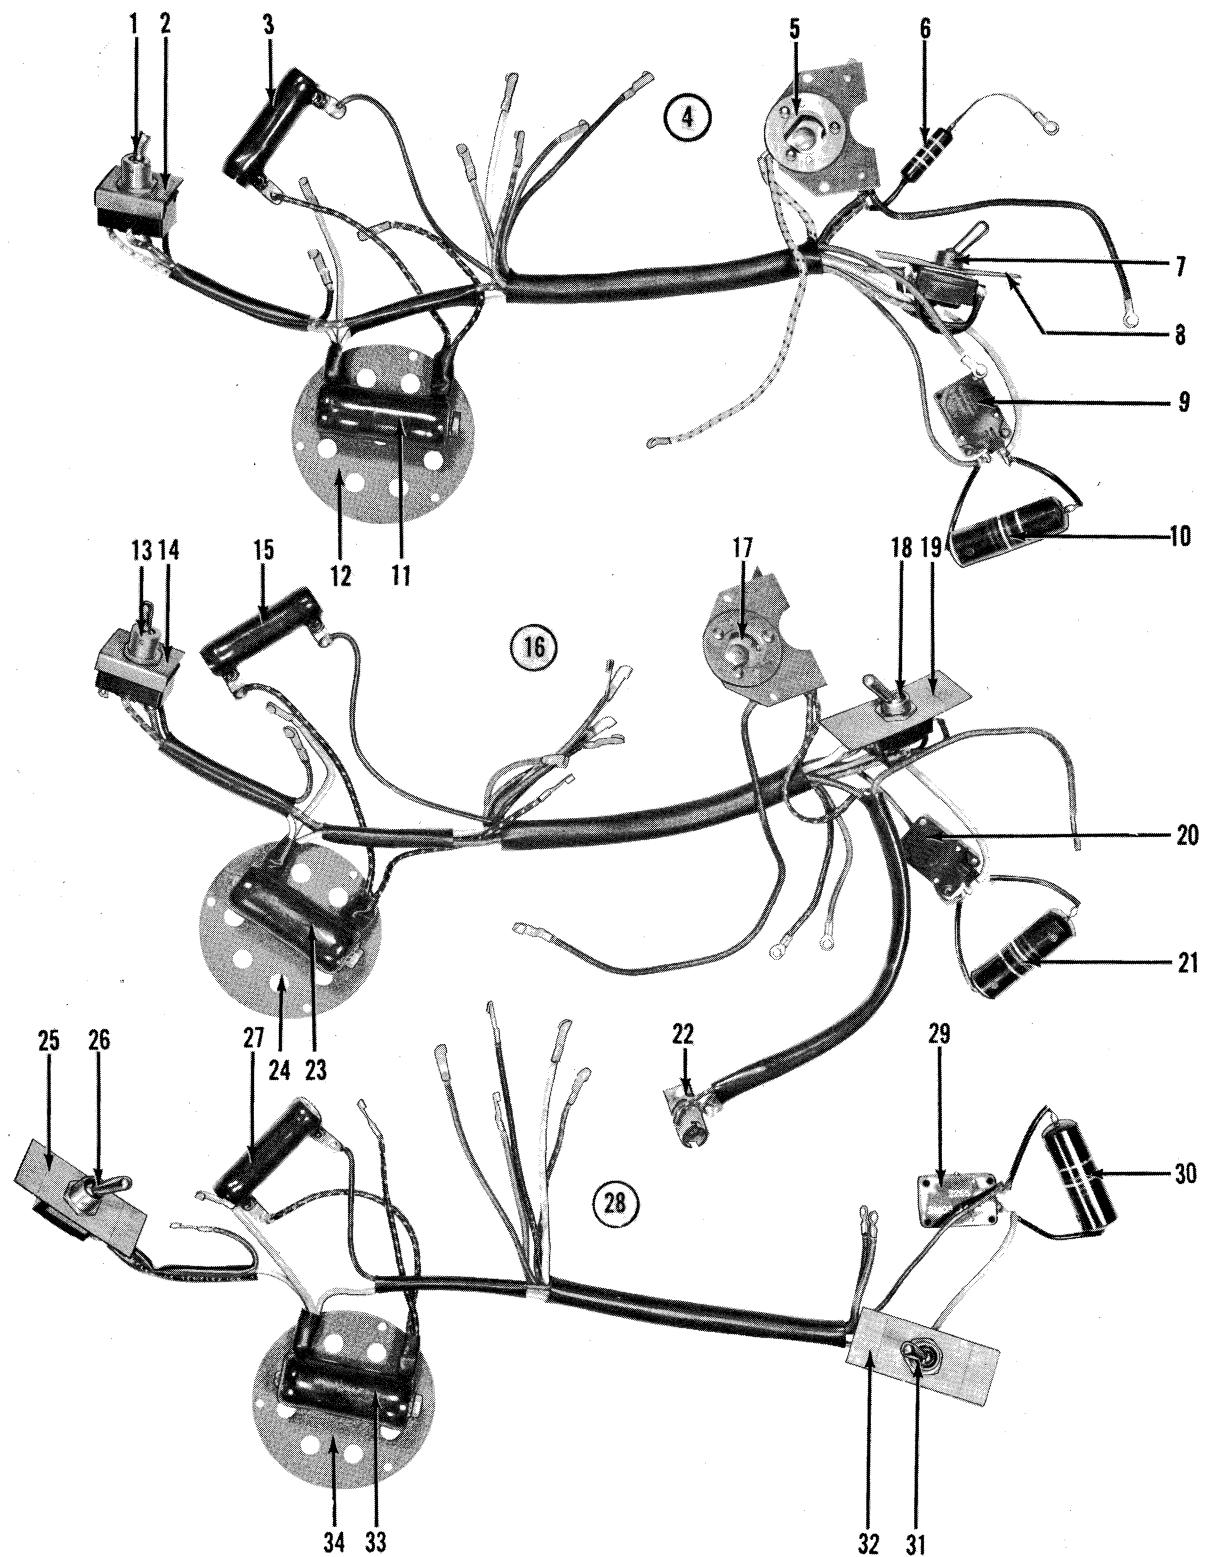


**MOTOR
WIRING
HARNESSES
MODELS 60-4
60-10, 60-25**

**P. E. CELL
CORD
ASSEMBLY
ALL MODELS**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	19818	P.E. Cell socket (female)			1	1	1		1				
2	19819	P.E. Cell plug (male)			1	1	1		1				
3	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
4	20717-A	P.E. Cell cord assembly			1	1			1				
5	19143	P.E. Cell socket grommet			2	2	2	2	2	2	2	2	2
6	19819	P.E. Cell plug (male)			1	1	1		1				
7	20717-50A	P.E. Cell cord assembly			1	1			1				
8	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
9	19143	P.E. Cell socket grommet			2	2	2	2	2	2	2	2	2
10	26561-A	P.E. Cell connector (male)						1	1	1	1	1	
11	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
12	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
13	26905-A	P.E. Cell cord assembly								1			
14	19143	P.E. Cell socket grommet			2	2	2	2	2	2	2	2	2
15	19819	P.E. Cell plug (male)			1	1	1		1				
16	20717-56A	P.E. Cell cord assembly					1						
17	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
18	19139	P.E. Cell socket sleeve			2	2	2	2	2	2			
19		5/40 Hex nut retainer nut						2		2	2	2	
20		5/40 x 1/2 B.H. retainer screw						2		2	2	2	
21	20068	P.E. Cell cord clamp			1	1			1	1			
22	19819	P.E. Cell plug (male)			1	1	1		1				
23	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
24	23072-A	P.E. Cell cord 55 AC DC assy.					1						
25	30548	P.E. Cell cord clamp					1						
26	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
27	19143	P.E. Cell socket grommet			2	2	2	2	2	2	2	2	2
28	26561-A	P.E. Cell connector (male)						1	1	1	1	1	
29	30523-A	P.E. Cell cord assembly											
30	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
31	19143	P.E. Cell socket grommet			2	2	2	2	2	2	2	2	2
32	26561-A	P.E. Cell connector (male)						1	1	1	1	1	
33	26759-A	P.E. Cell cord assembly									1	1	
34	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
35	1009	P.E. Cell cord grommet			1	1	4	1	2	2	3	3	1
36	26927	P.E. Cell wire lead								1	1		
37	19143	P.E. Cell socket grommet			2	2	2	2	2	2	2	2	2
38	19139	P.E. Cell socket sleeve			2	2	2	2	2	2			
39		5/40 x 1/2 Fil. H. retainer screw			2	2	2	2	2	2			
40	26918	P.E. Cell connector base						1	1	1	1	1	
41	26917	P.E. Cell contact (female)						1	1	1	1	1	


P.E. Cell cord assembly for Model 56 is Part No. 26577-A. (not shown)

**P. E. CELL
CORD
ASSEMBLY
ALL MODELS**

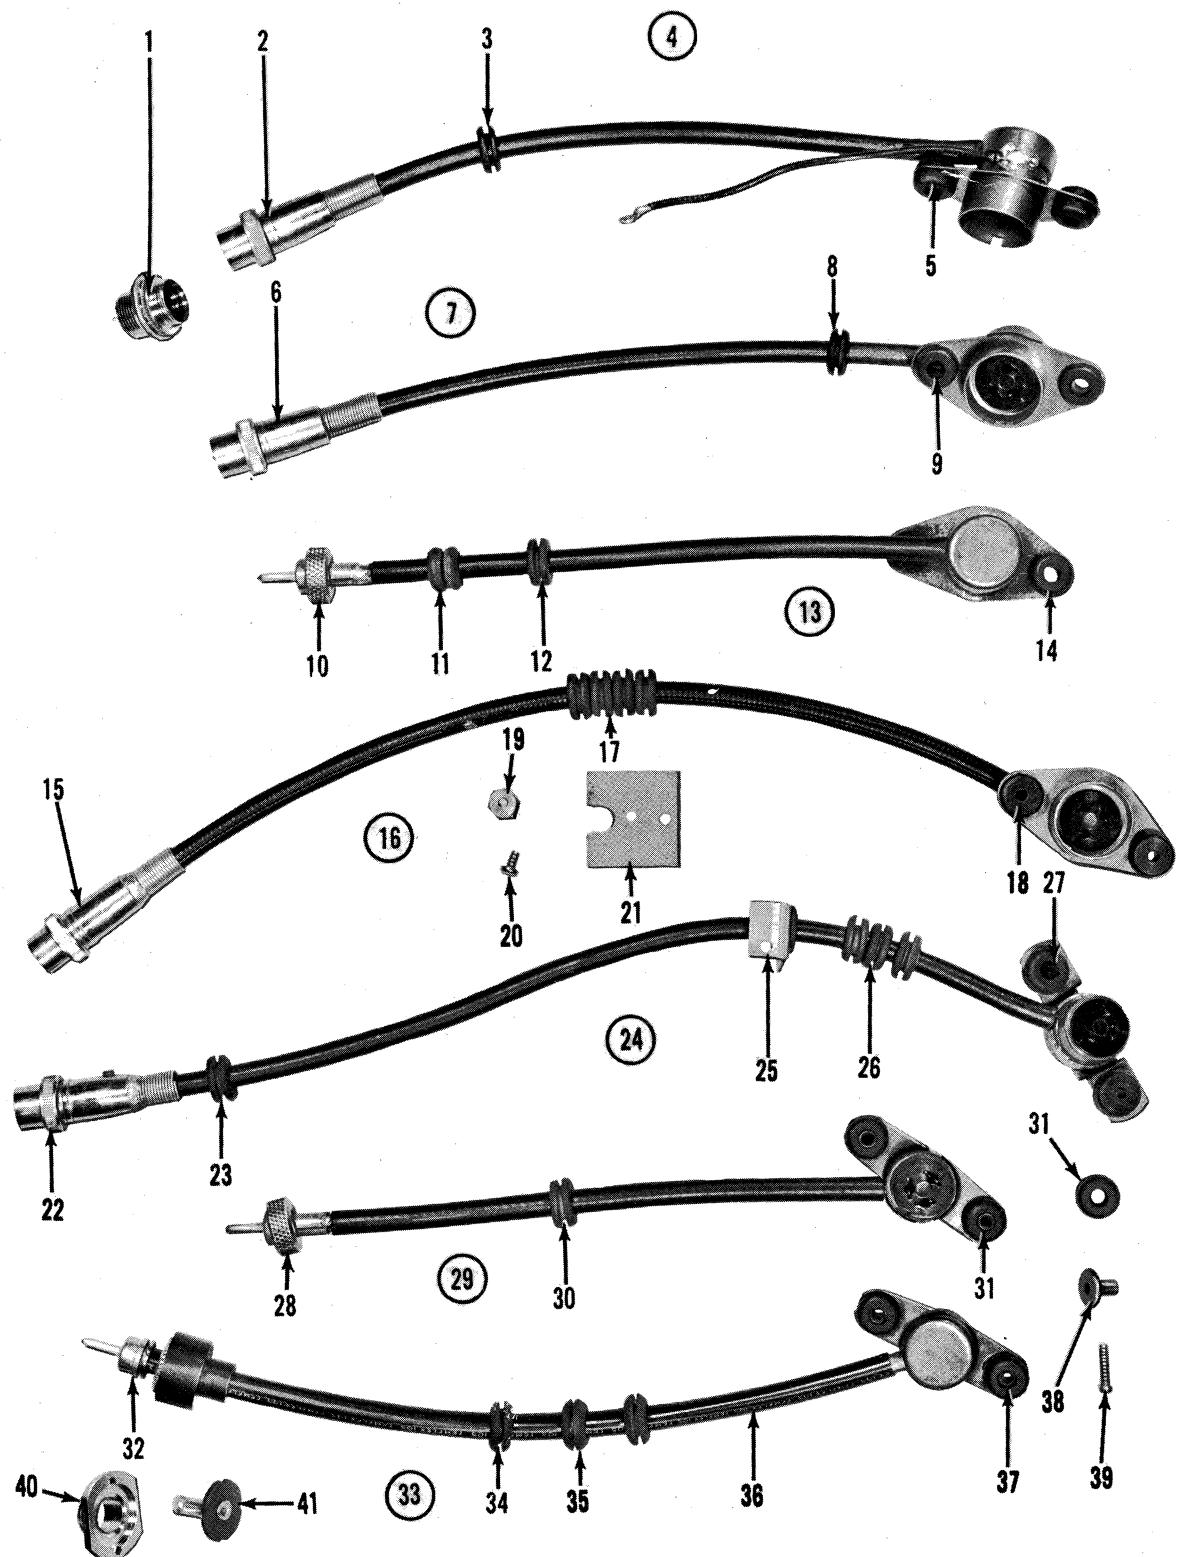

**WIRING
HARNESSES**
**MODELS 40-A,
40-B, 40-BX,
55, 56, 60-B,
60-2**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
2	19685	70 ohm resistor, 30 watts	1	1	1	1						
3	26151-2	Wiring harness		1	1	1						
4	11026	Reverse switch	1	1	1	1		1	1	1	1	
5	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
6	19869	Motor condenser .5 Mfd.	1	1	1							
7	19866-A	Terminal block	1	1	1	1						
8	18640	Silent-sound speed switch	1	1	1	1		1	1			1
9	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
10	26151-A	Wiring harness		1	1	1						
11	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
12	11026	Reverse switch	1	1	1	1		1	1	1	1	
13	25127	Motor condenser dual .5-.1 Mfd.		1	1	1	1	1	1	1		
14	19019-A	Body front plate cover assembly	1	1	1	1	1	1	1	1	1	
15	19685	70 ohm resistor, 30 watts	1	1	1	1						
16	18640	Silent-sound speed switch	1	1	1	1		1	1			1
17	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
18	26536-A	Wiring harness					1					
19	18631	Motor condenser .004 Mfd. 400 V. DC					1	1				
20	19547-51-2	Exciter socket					1					
21	26930	Resistor 90 ohm 20 watt wire wound					1	1	1	1	1	1
22	19019-A	Body front plate cover assembly	1	1	1	1	1	1	1	1	1	
23	19685	70 ohm resistor, 30 watts	1	1	1	1		1				
24	26587	Silent-sound speed switch					1		1	1		
25	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
26	26990-A	Wiring harness					1		1			
27	18631	Motor condenser .004 Mfd. 400 V. DC					1	1				
28	11026	Reverse switch	1	1	1	1		1	1	1	1	
29	19223	Reverse and silent-sound switch insulator	2	2	2	2	1	2	2	2	2	2
30	26930	Resistor 90 ohm 20 watt wire wound					1	1	1	1	1	
31	19019-A	Body front plate cover assembly	1	1	1	1	1	1	1	1	1	
32	19685	70 ohm resistor, 30 watts	1	1	1	1		1				
33	18640	Silent-sound speed switch	1	1	1	1		1				

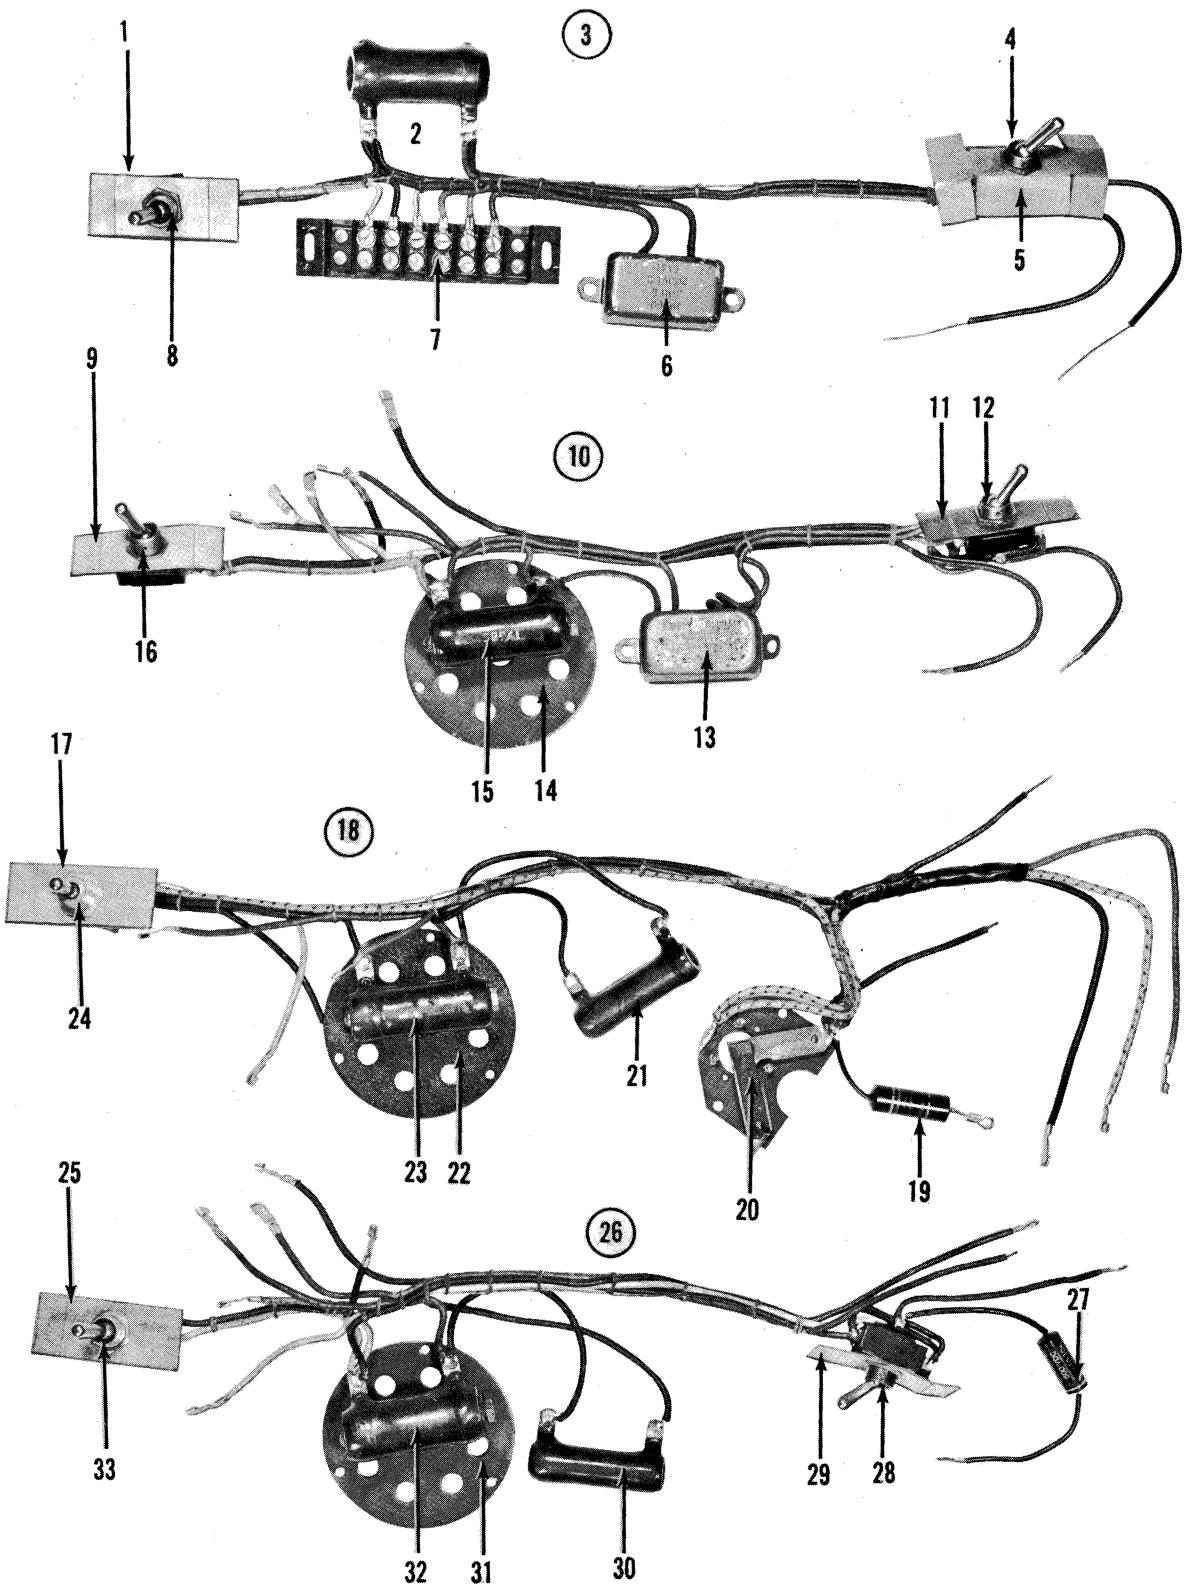

WIRING HARNESSES

**MODELS 40-A
40-B, 40-BX
55, 56, 60-B
60-2**

TAKE-UP CLUTCH ASSEMBLY


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26860-A	Cam and hub assembly								1	1	1	1
2	26825	Clutch roll retainer								2	2	2	2
3	26859-A	Take-up pulley								2	2	2	2
4	23063	Thrust washer								1	1	1	1
5	26859-A	Take-up pulley								2	2	2	2
6	26825	Clutch roll retainer								2	2	2	2
7	26836-2	Gear and hub assembly								1	1	1	1
8	26826	Clutch roll								6	6	6	6
9	26826	Clutch roll								6	6	6	6
10	26836-A	Take-up clutch assembly*			1	1	1	1	1	1	1	1	1
11	19494	Washer spacing			2	2	2	2	2	2	2	2	2
12	19494	Washer spacing			2	2	2	2	2	2	2	2	2
13	21184-A	Feed sprocket			1	1	1	1	1	1	1	1	1
14	20205	Set screw feed sprocket			2	2	2	2	2	2	2	2	2
15	20205	Set screw feed sprocket			2	2	2	2	2	2	2	2	2

*No. 10, 26836-A, is interchangeable and replaces 19185-A (Page 71). Parts that make up these assemblies are not interchangeable.



TAKE-UP CLUTCH ASSEMBLY

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1		5/40 x 1/8 Take-up pulley retainer set screw					1	1	1			1	
2	19576	Take-up pulley retainer bearing					1	1	1			1	
3	19575-A	Take-up pulley			2	2	2	2				2	
4	22149	Take-up pulley cam rollers			6	6	6	6				6	
5	19775-A	Take-up cam					1	1	1			1	
6	19185-3	Feed sprocket gear and shaft assy.			1	1	1	1				1	
7	19186	Feed sprocket gear			1	1	1	1				1	
8		#18 x 3/8 Feed sprocket gear and retainer escutcheon pin			4	4	4	4				4	
9	20205	Feed sprocket retainer screw				2	2	2	2	2	2	2	2
10	21184-A	Feed sprocket				1	1	1	1	1	1	1	1
11	19494	Feed sprocket spacer washer			2	2	2	2	2	2	2	2	2
12	19185-A	Take-up pulley and clutch assy.*			1	1	1	1	1	1	1	1	1

*No. 12, 19185-A, is replaced and interchangeable with 26836-A (above). Parts are not interchangeable.

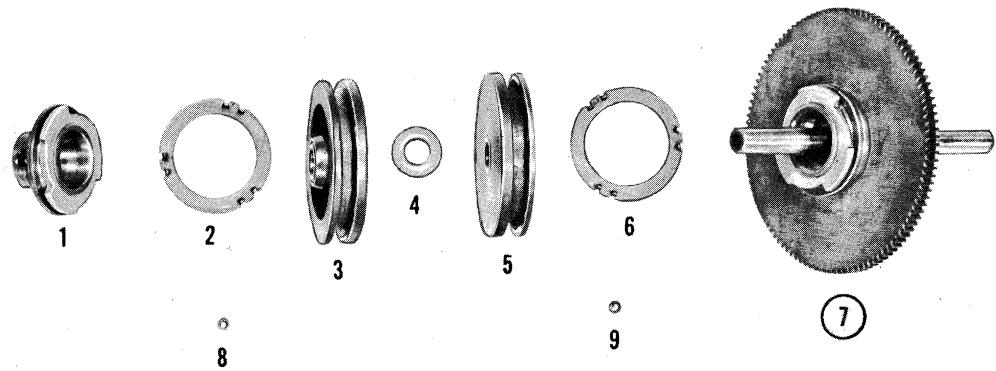

**TAKE-UP
CLUTCH
ASSEMBLY**

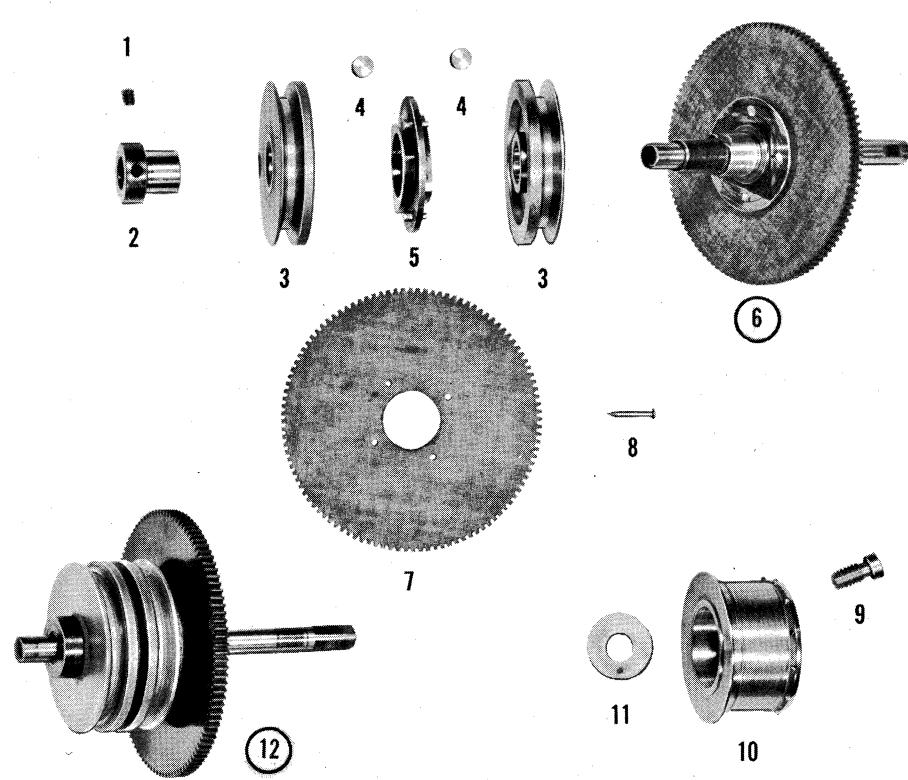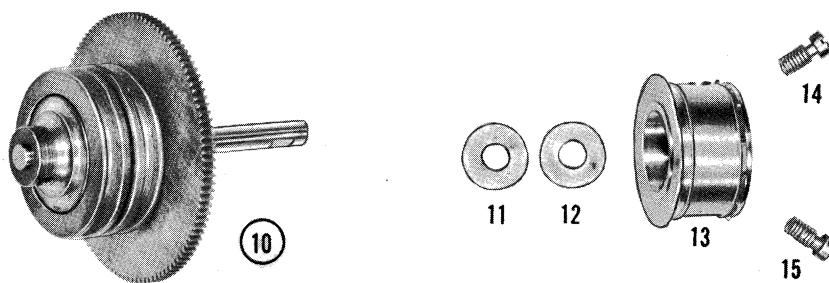

**TAKE-UP
CLUTCH
ASSEMBLY**

**PROJECTOR
BODY PARTS**

**TERMINAL
ASSEMBLY**

**BASE SUPPORT
BAR ASSEMBLY**

**MOTOR DRIVE
BELTS**

**GEAR BOX
FOR 40-BX**

		USED ON MODELS											
No.	Part No.	Part Name	Page	G	40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1		5/40 x 3/8 B.H. screw (lens mount pad)					1	1	1	1	1	1	
2	20111	Lens mount pad spacer					1	1	1	1	1	1	
3	20714	Lens mount pad					1	1	1	1	1	1	
4	23353	Body terminal insulator				2			2	2	2	2	
5	23352	Insulator washer				2			2	2	2	2	
6	19841	Thrust washer				2			2	2	2	2	
7		6/32 x 3/16 B.H. (body terminal) screw				2			2	2	2	2	
8	23354	Body terminal				2			2	2	2	2	
9	23354-A	Terminal assembly				2			2	2	2	2	
10	26953-A	Resistor retainer assembly				1	1	1	1	1	1	1	
11		5/40 x 3/8 B.H. (lens mount pad retainer) screw			2	2	1	1	2	1	1	1	
12	19250	Terminal plate insulator			1	1	1		1				
13	19250-A	Terminal plate assembly			1	1	1		1				
14		8/32 x 1/4 F.H. motor mounting screw			4	4	4	4	4	4			
15	19015	Motor support sleeve			4	4	4	4	4	4			
16	1004	Motor mounting screw								4	4	4	
17	30520	Motor support sleeve								4	4	4	
18	20596-A	Spiral gear housing					1						
19	19866-A	Motor terminal block			1	1	1	1	1				
20	19862	Motor terminal block insulator			1	1	1	1	1				
21		5/40 x 3/8 B.H. (lens mount pad retainer) screw			2	2	1	1	2	1	1	1	
22	19128	Motor drive belt					1	1	1	1	1	1	
23	19128-40	Motor drive belt			1	1	1		1				
24	23112	Base support bar (rear)							1	1	1	1	
25	23110	Base support bar (front)							1	1	1	1	
26	30366-A	Base support sleeve			4	4	4	4	4	4	4	4	
27	22091	Base support washer (rubber)			8	8	8	8	8	8	8	8	
28		12/24 Hex nut (body terminal retainer nut)					2		2	2	2	2	


**PROJECTOR
BODY PARTS**

**TERMINAL
ASSEMBLY**

**BASE SUPPORT
BAR ASSEMBLY**

**MOTOR DRIVE
BELTS**

**GEAR BOX
FOR 40-BX**

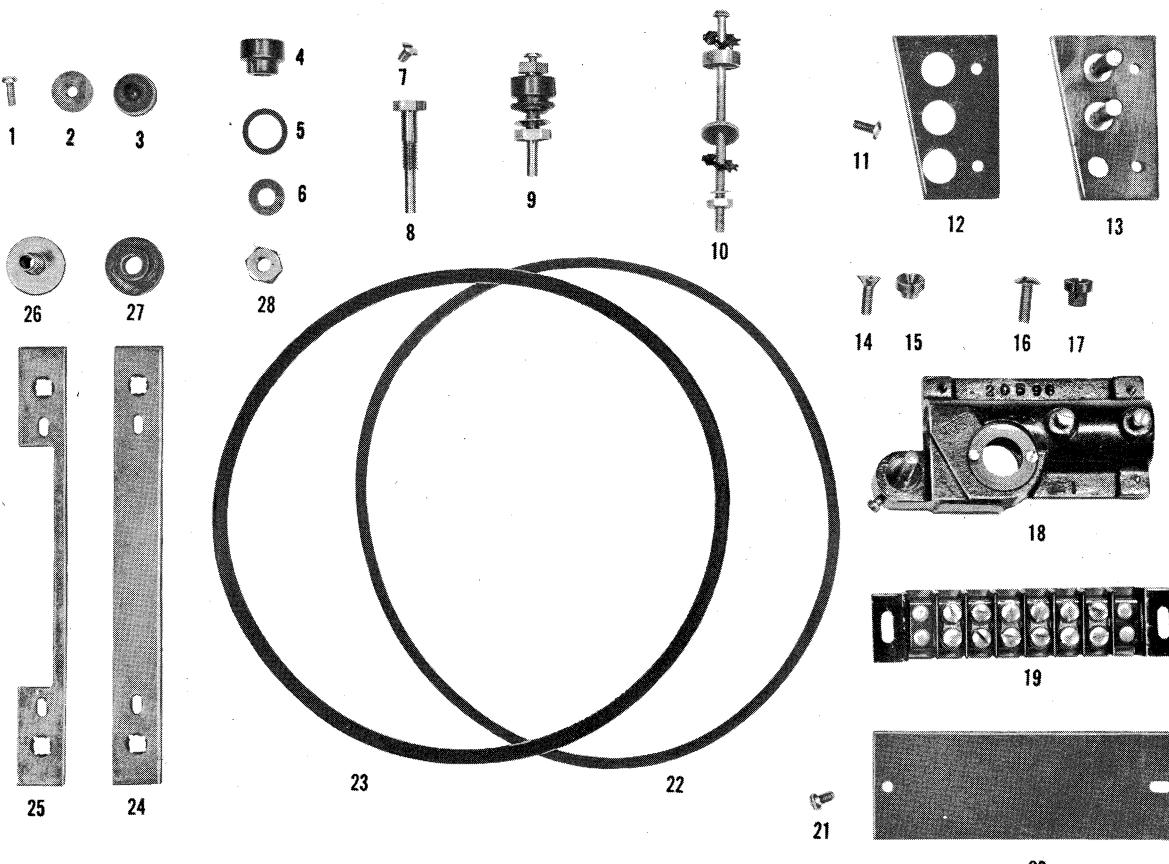

**TAKE-UP LEVER
ASSEMBLY
HAND
OPERATING
SHAFT
ASSEMBLY**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	26722-A	Take-up lever assembly*										
2	19075-A	Take-up lever assembly*		1	1	1	1		1	1	1	
3	26722-2	Take-up lever arm					1		1	1	1	1
4	19075-2	Take-up lever arm			1	1	1		1			
5	20739-AR	Hand control knob and shaft assy.†		1	1	1	1		1	1	1	1
6	19501-40	Hand control shaft			1	1	1	1				
7	20739-40	Hand control knob†			1	1	1	1				
8	19506	Snubber arm spring			1	1	1	1	1	1	1	1
9	19482	Washer						1	1	1	1	1
10	26208	Take-off feed roll						2	2	2	2	2
11	19506	Snubber arm spring			1	1	1	1	1	1	1	1
12	19847	Take-off feed roll			1	1	1	1				
13	26208	Take-off feed roll						2	2	2	2	2
14		#3 "C" Washer					1		1	1	1	1
15		5/40 x 3/16 B.H. screw			1	1	1	1				
16		Hand control knob set screw			1	1	1	1				
17	20044	Hand shaft lock screw			1	1	1	1	1	1	1	1

*No. 1, 26722-A, is interchangeable with No. 2, 19075-A.

Parts for these assemblies are not interchangeable.

†No. 5, 20739-AR Hand operating shaft and knob assembly replaces No. 6, 19501-40 shaft and No. 7, 20739-40 knob.



**PROJECTOR
BODY
SIDE PLATE,
ALL MODELS**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	23299	Exciter power transformer										1
2	30585-AR	Body plate assembly*										1
3	19055-56A	Body plate assembly†						1				
4	23299	Exciter power transformer					1					1
5	23298	Exciter cord plug (male)					1					1
6	23297	Exciter socket (female)					1					1
7	19055-A	Body side plate		1	1	1			1	1		
8	17189	AC plug (female)		1	1	1	1	1	1	1	1	1
9	19055	Body side plate		1	1	1	1	1	1	1	1	1

*No. 2, Body plate only is Part No. 30585-2.

†No. 3, Body plate only is Part No. 19055-56-2.

**TAKE-UP LEVER
ASSEMBLY
HAND
OPERATING
SHAFT
ASSEMBLY**

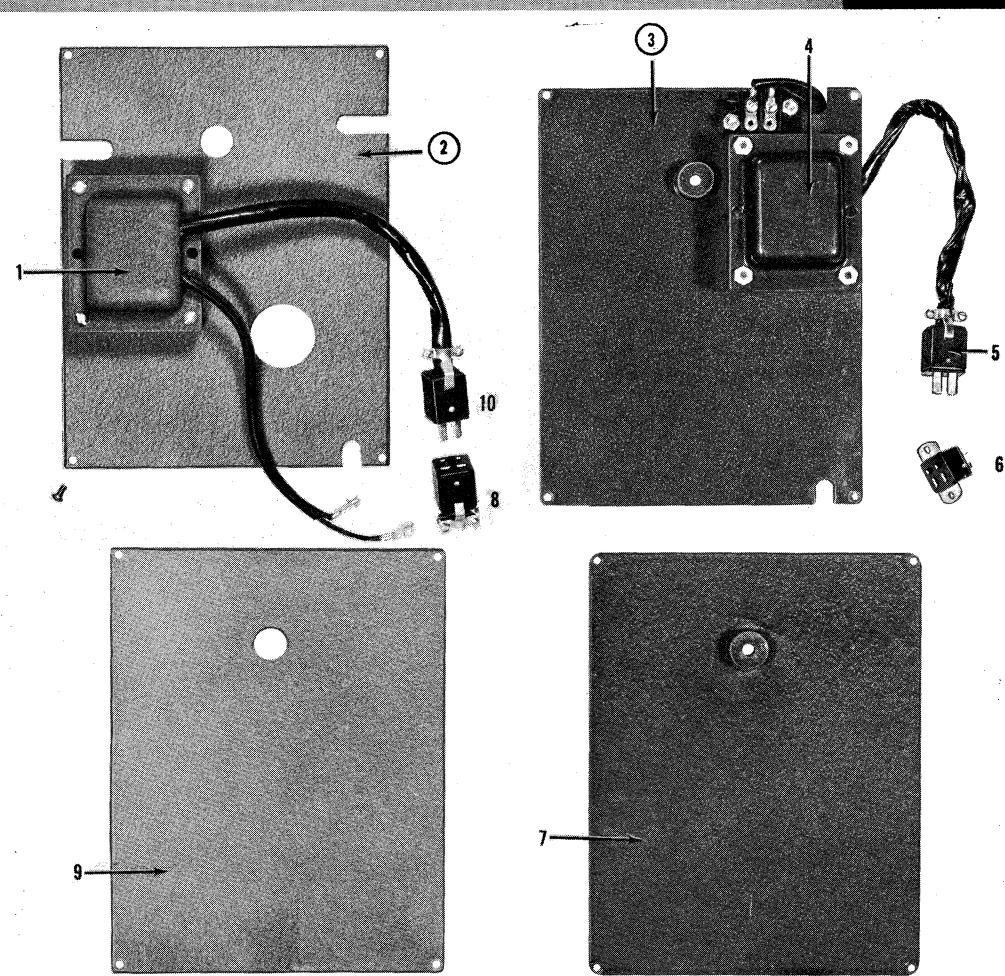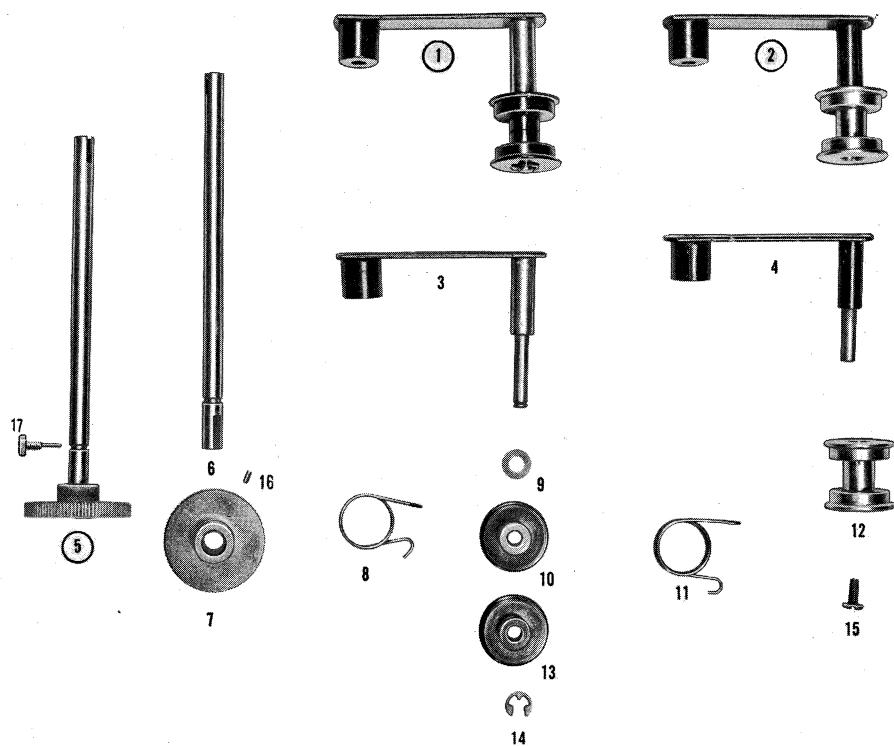

**PROJECTOR
BODY
SIDE PLATE,
ALL MODELS**

**REEL ARMS
MODELS 60-4,
60-10 AND
60-25**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	30379-AR	Reel arm assembly (rear) **					1	1	1	1	1	1	1
2	30383-R	Rewind reel arm pulley								1	1	1	
3		6/32 x 3/8 B.H. retaining screw for reel arm pulleys		4	4	4	4	4	4	4	4	4	
4		#5 Everlock retaining lockwasher for reel arm pulleys		4	4	4	4	4	4	4	4	4	
5	U-178	Reel arm pulley retaining pin	2	2	2	2	2	2	2	2	2	2	2
6	19595	Reel arm friction spring	2	2	2	1	1	1	1	1	1	1	1
7	27307	Reel arm friction washer	2	2	2	1	1	1	1	1	1	1	1
8	30382-R	Reel take-up pulley*					2						
9	30381-R	Reel arm auxiliary pulley†					1	1	1	1	1	1	1
10	22143-A	Reel arm shaft	2	2	2	2	2	2	2	2	2	2	2
11	30380-A	Reel arm assembly (front) ‡					1	1	1	1	1	1	1
12	23216	Rewind belt					1	1	1	1	1	1	1
13	23217	Take-up belt					2	1	2	2	2	2	2
14	22088	Reel arm bearing		4	4	4	4	4	4	4	4	4	

*No. 8, 30382-R, is interchangeable and replaces 19512-50 (below).

†No. 9, 30381-R, is interchangeable and replaces 22042-50 (below).

**Reel Arm only, 30379-2.

†Reel Arm only, 30380-2R.

**REEL ARMS
MODELS 55
AND 60-B**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1		6/32 x 3/8 B.H. reel arm pulley retainer screw			4	4	4	4	4	4	4	4	4
2		#6 Reel arm pulley retainer shakeproof lock washer			4	4	4	4	4	4	4	4	4
3	U-178	Reel arm pulley retainer pin	2	2	2	2	2	2	2	2	2	2	2
4	19595	Reel arm friction spring	2	2	2	1	1	1	1	1	1	1	1
5	27307	Reel arm friction washer	2	2	2	1	1	1	1	1	1	1	1
6	19512-50	Reel take-up pulley*	2	2	2	2		2					
7	22042-50	Reel arm auxiliary pulley†	2	2	2	2		2					
8	22143-A	Reel arm shaft assembly	2	2	2	2	2	2	2	2	2	2	2
9	23216	Rewind belt				1	1	1	1	1	1	1	1
10	23217	Take-up belt				2	1	2	2	2	2	2	2
11	23184-50A	Reel arm assembly (rear) **					1						
12	23184-A	Reel arm assembly (front) ‡					1						
13	22088	Reel arm bearing		4	4	4	4	4	4	4	4	4	

*No. 6, 19512-50, is replaced with 30382-R (above).

†No. 7, 22042-50, is replaced with 30381-R (above).

**Reel Arm only, 23184-50-2.

†Reel Arm only, 23184-2.

**REEL ARMS
MODELS 40-A
AND 40-B**


No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	30002-AR	Reel arm assembly (rear) **			1	1	1						
2		6/32 x 3/8 B.H. reel arm pulley retainer screw			4	4	4	4	4	4	4	4	4
3		#6 Shakeproof washer reel arm pulley retainer lock washer			4	4	4	4	4	4	4	4	4
4	U-178	Reel arm pulley retainer pin	2	2	2	2	2	2	2	2	2	2	2
5	19595	Reel arm friction spring	2	2	2	1	1	1	1	1	1	1	1
6	27307	Reel arm friction washer	2	2	2	1	1	1	1	1	1	1	1
7	19512-50	Reel arm take-up pulley*	2	2	2	2		2					
8	22042-50	Reel arm auxiliary pulley†	2	2	2	2		2					
9	22143-A	Reel arm shaft assembly	2	2	2	2	2	2	2	2	2	2	2
10	30002-AF	Reel arm assembly (front) ‡	1	1	1								
11	16164	Take-up spring belt	2	2	2								
12	19513	Rewind belt	1	1	1								
13	22088	Reel arm bearing		4	4	4	4	4	4	4	4	4	

*No. 7, 19512-50, is replaced with 30382-R (above).


†No. 8, 22042-50, is replaced with 30381-R (above).

**Reel Arm only, 30002-2F.


†Reel Arm only, 2000-2R.

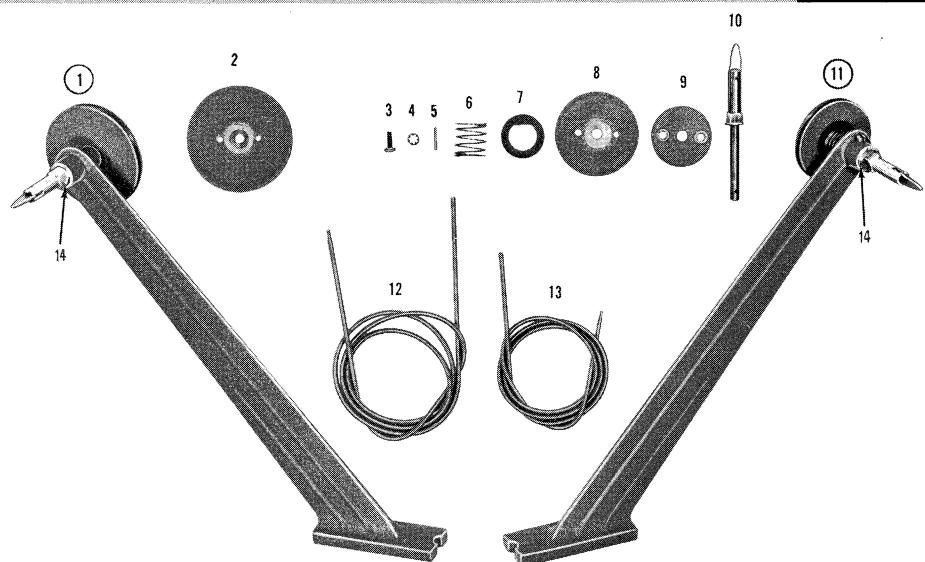

**REEL ARMS
MODELS 60-4,
60-10 AND
60-25**

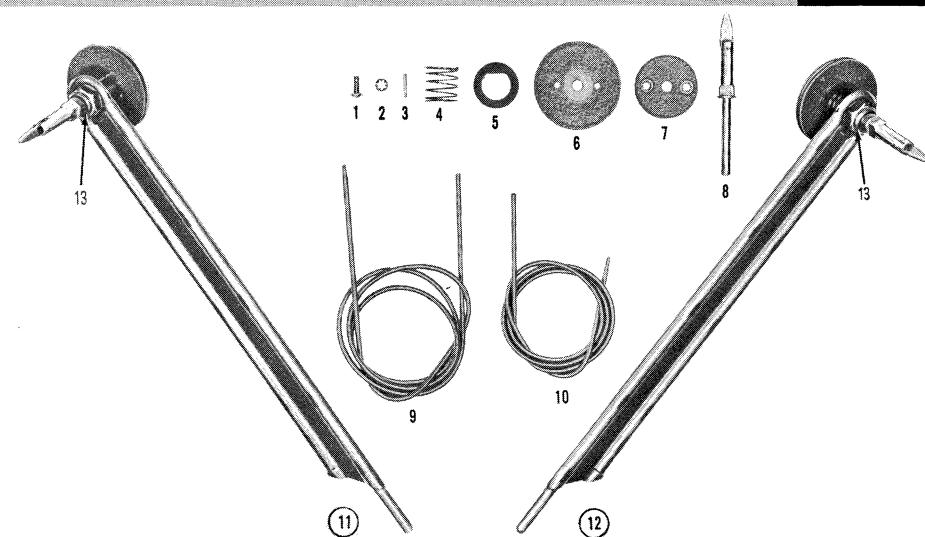

**REEL ARMS
MODELS 55
AND 60-B**

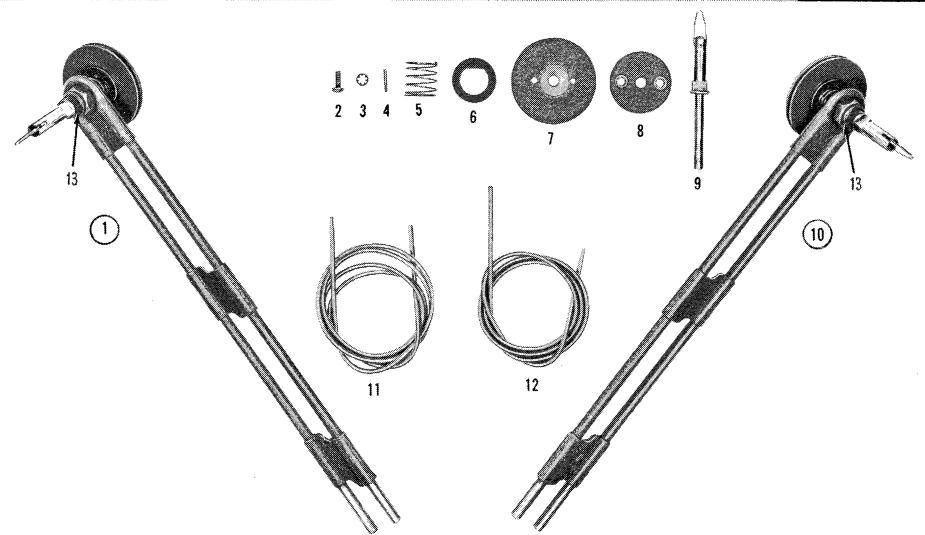

**REEL ARMS
MODELS 40-A
AND 40-B**

**MOTOR
ASSEMBLY
MODELS 60-4,
60-10, 60-25**


No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX	40-B	55	56	60-B	60-2	60-4
1	26885-A	Motor rewind drive pulley										
2	26610	Motor fan										
3	26611	Motor pulley										
4	26708-A	Two speed governor with condenser										
5	30517-A	Complete motor assembly 9 wire										

**BALL BEARING
MOTOR PARTS
FOR MODELS
55, 56-4,
60-2, 60-4,
60-10, 60-25**


No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX	40-B	55	56	60-B	60-2	60-4
1	36164	Knife connector insulator						6	6	6	8	8
2	19788	Motor cap insulator	3	3	3	3	3	3	3	3	3	3
3	20264	Motor brush plug			2	2	2	2	2	2	2	2
4	20262	Motor brush holder			2	2	2	2	2	2	2	2
5	20263	Motor brush			2	2	2	2	2	2	2	2
6	U-178	1/16 x 1/2 Sl. Motor pin	2	2	2	2	2	2	2	2	2	2
7	26872	Motor cap screw				2	2		2	2	2	2
8	19080	Motor field clamp stud	2	2	2	2	2	2	2	2	2	2
9	26863	Rubber ball bearing mounting 5/16				1	1		1	1	1	1
10	26865	Rubber ball bearing mounting 1/4				1	1		1	1	1	1
11	26839	Governor brush insulator	3	3	3	3	3	3	3	3	3	3
12	19534	Governor brush	3	3	3	3	3	3	3	3	3	3
13	26841-A	Ball bearing motor armature 5/16				1	1		1	1	1	1
14	30519	Split four wire motor field										
15	30517-2	Governor end motor cap										
16	19010	Motor field sleeve	2	2	2	2	2	2	2	2	2	2
17	26840	Motor cap pulley end				1	1		1	1	1	1
18	26570	Knife connector	10	10				10	16	16	16	16

Note: For Armature and Bearings, see Page 81.

**MOTOR
ASSEMBLY
MODELS 60-4,
60-10, 60-25**

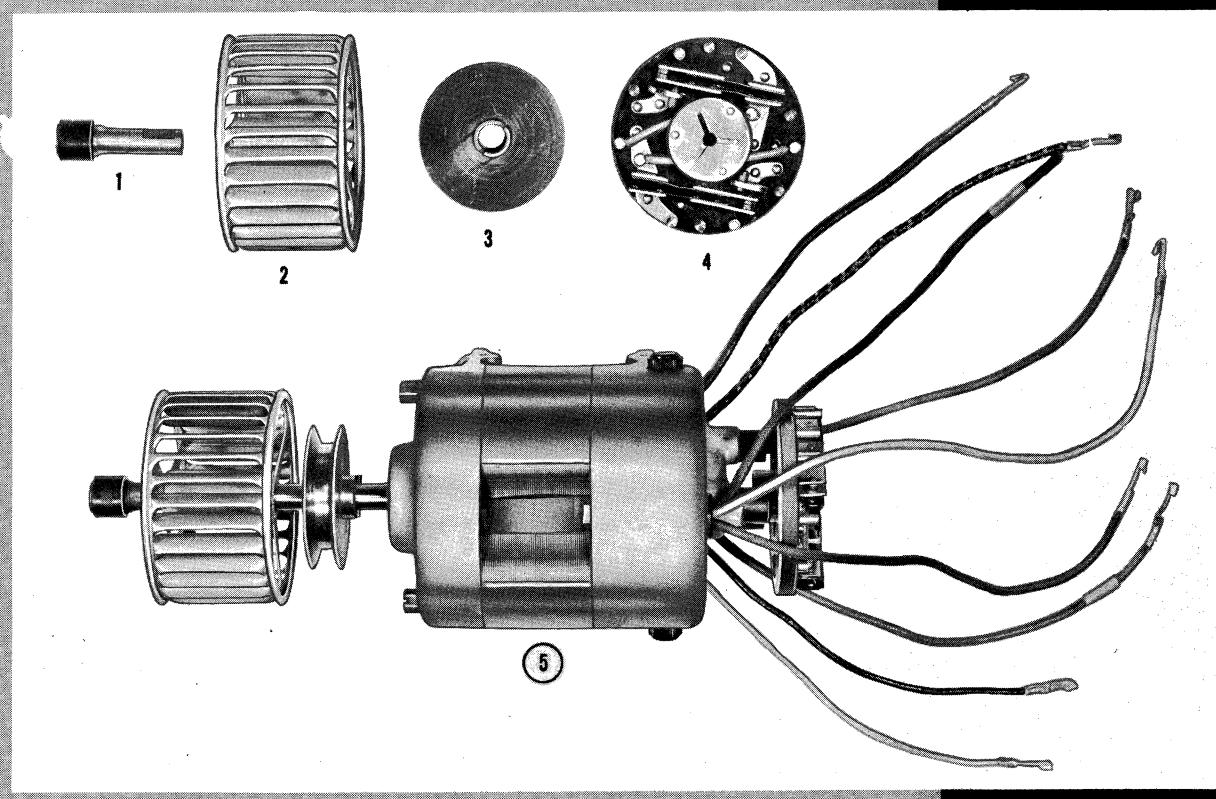

**BALL BEARING
MOTOR PARTS
FOR MODELS
55, 56-4,
60-2, 60-4,
60-10, 60-25**

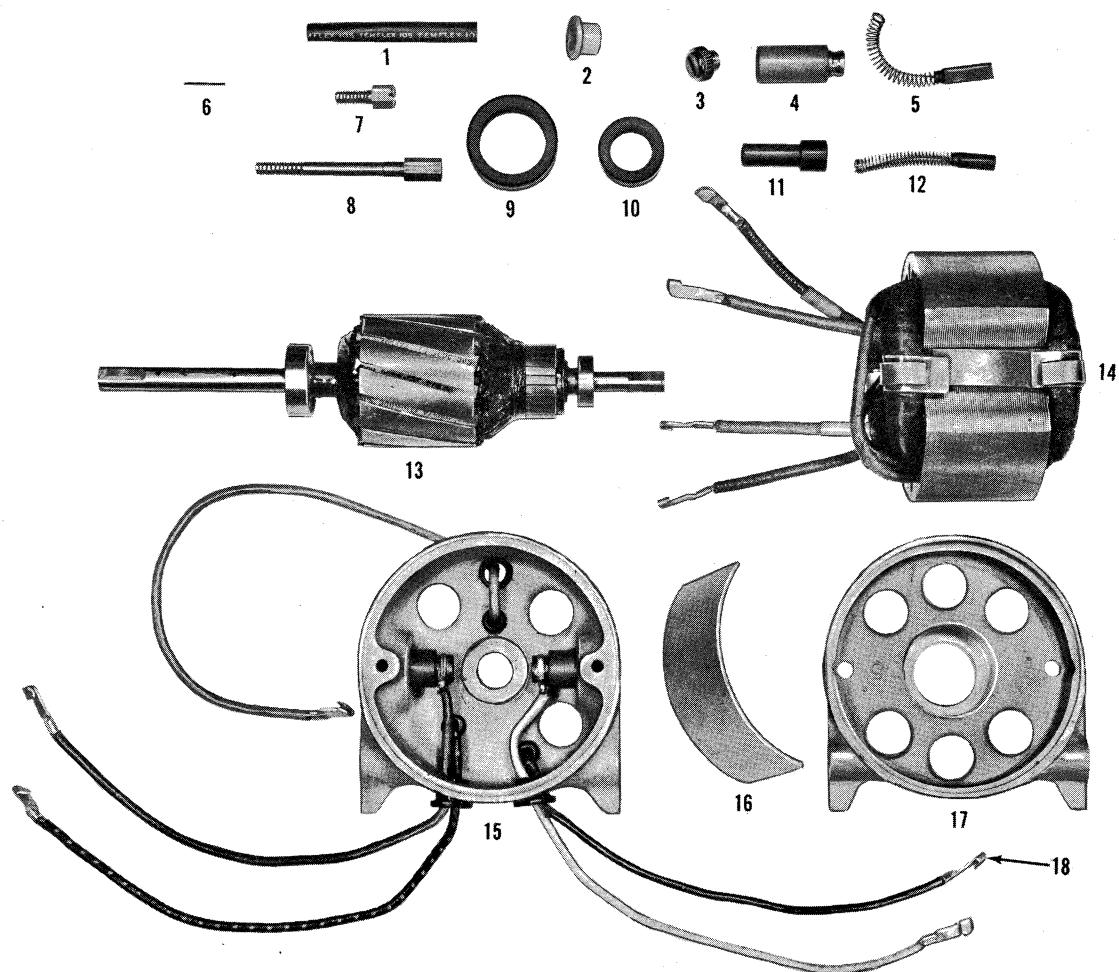


**MOTOR
ASSEMBLY
MODELS 55,
56 AND 60-2**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	23350	Rewind pulley					1	1	1	1			
2	26610	Fan					1	1	1	1	1	1	1
3	26840	Motor cap					1	1	1				
4	19010	Field sleeve	2	2	2	2	2	2	2	2	2	2	2
5	26838-2	Motor cap					1						
6	26708-A	Governor					1	1	1	1	1	1	1
7	26837-A	Motor complete					1	1	1				


**MOTOR PARTS
MODELS 55,
56, 60-2**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26838-2	Motor cap					1	1	1	1			
2	20260	Motor field					1	1	1	1	1		
3	20264	Brush plug					2	2	2	2	2	2	2
4	20262	Motor brush holder					2	2	2	2	2	2	2
5	20263	Motor brush					2	2	2	2	2	2	2
6	26839	Governor brush insulator								3	3	3	3
7	19534	Governor brush					3	3	3	3	3	3	3
8	19788	Motor cap insulator					3	3	3	3	3	3	3
9	36164	Knife connector insulator						6	6	6	9	9	9
10	26872	Motor cap screw						2	2	2	2	2	2
11	19080	Motor field stud			2	2	2	2	2	2	2	2	2
12	26841-A	Armature with bearings					1	1	1	1	1	1	1
13	U-178-50	Armature pin	2	2	2	2	2	2	2	2	2	2	2
14	26611	Drive pulley					1	1	1	1	1	1	1
15	26863	Rubber bearing mounting 5/16					1	1	1	1	1	1	1
16	26864	5/16 Bearing					1	1	1	1	1	1	1
17	26841	Armature					1	1	1	1	1	1	1
18	26862	1/4 Bearing					1	1	1	1	1	1	1
19	26865	Rubber bearing mounting 1/4					1	1	1	1	1	1	1

**MOTOR
ASSEMBLY
MODELS 55,
56 AND 60-2**

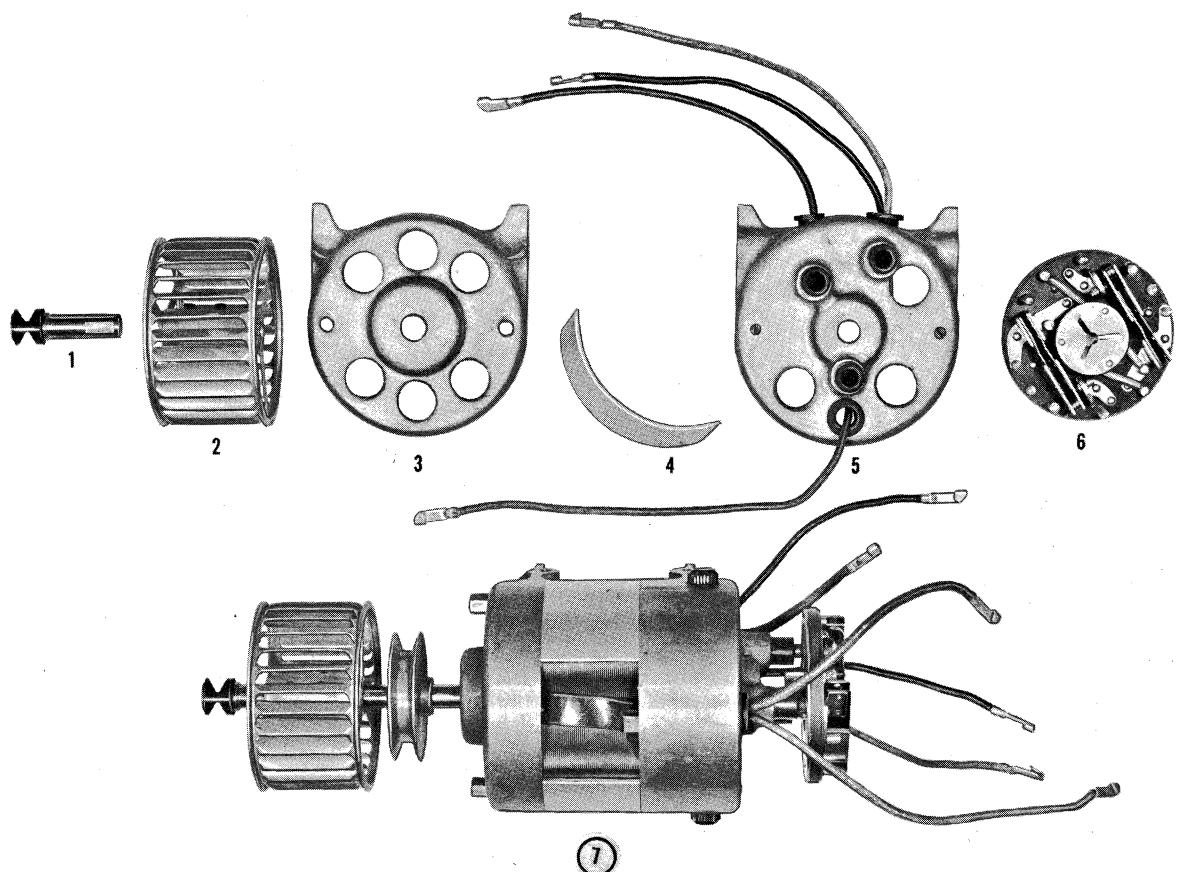

**MOTOR PARTS
MODELS 55,
56, 60-2**

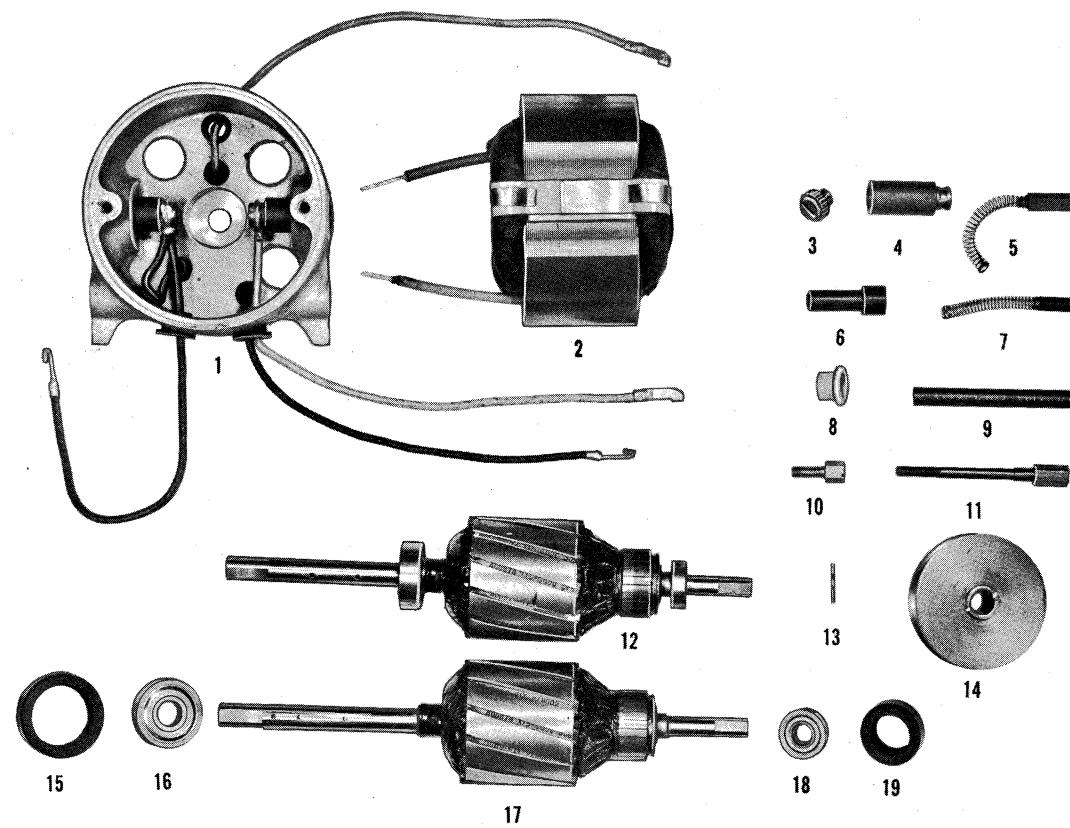

**MOTOR
ASSEMBLY
MODELS
40-B, 60-B***



No.	Part No.	Part Name	Page	G	USED ON MODELS						
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	19033-A	Motor cap				1			1		
2	19010	Motor field sleeve	2	2	2	2	2	2	2	2	2
3	19532-A	Motor cap governor end		1		1			1		
4	19533	Governor		1	1	1			1		
5	20260-A	Motor complete				1			1		
6	18644	Soldering lugs	12	12					12		

*Complete breakdown on Page 87.

**MOTOR PARTS
MODELS 40-B,
60-B**

No.	Part No.	Part Name	Page	G	USED ON MODELS						
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	19532-A	5/16 Governor end motor cap assembly, 40-BX, 40-B, 60-B		1		1			1		
2	20260	5/16 Motor field		1		1	1	1	1	1	
3	20261	5/16 Motor armature		1		1			1		

**MOTOR
ASSEMBLY
MODELS
40-B, 60-B**

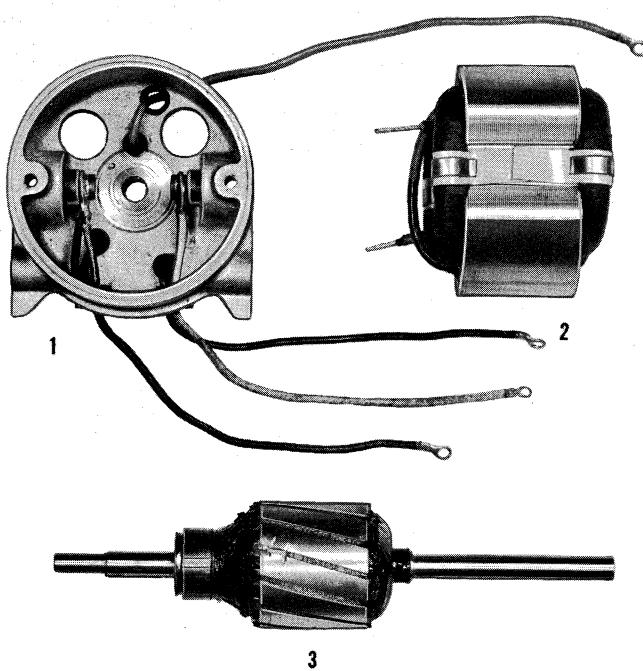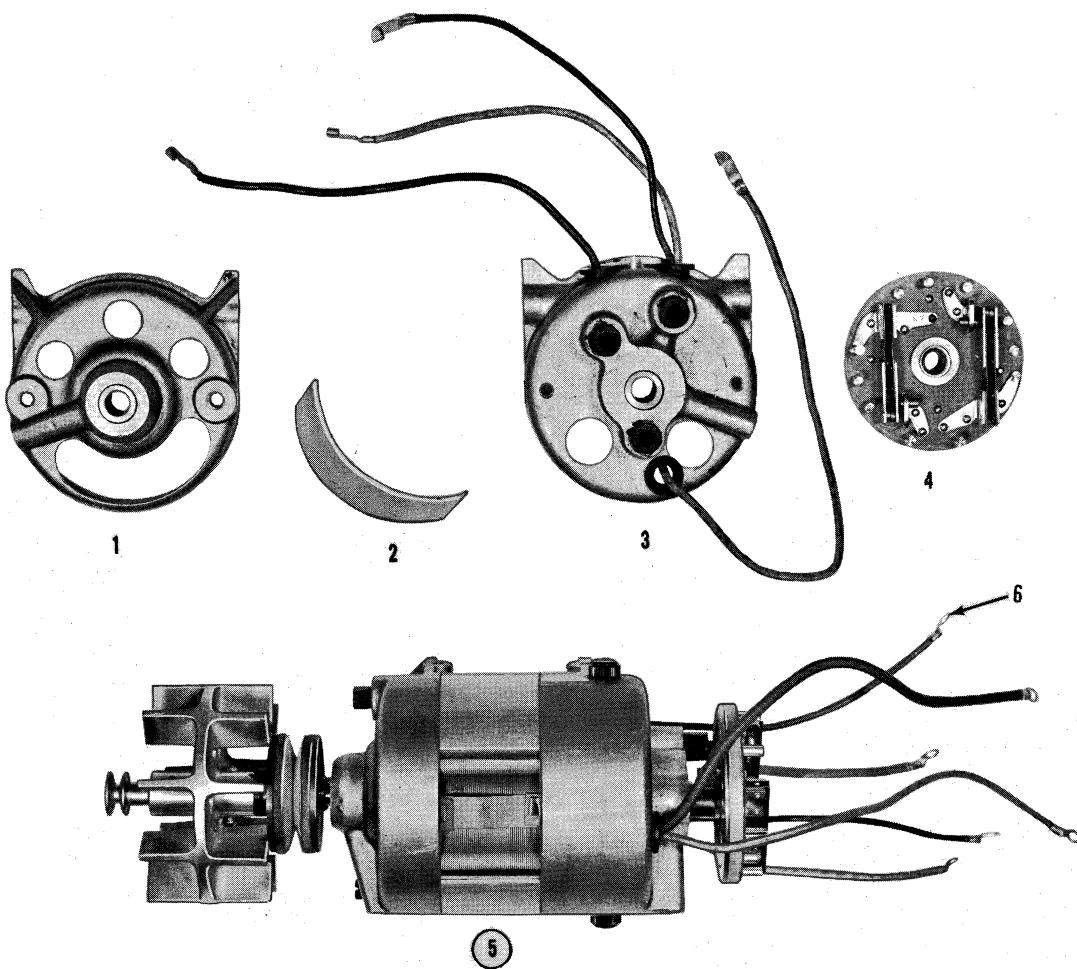

**MOTOR PARTS
MODELS 40-B
60-B**

**MOTOR
ASSEMBLY
MODEL 40-A***


No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	19518	Rewind pulley					1					
2	19135	Fan					1					
3	19033-A	Motor cap pulley end					1					
4	19010	Motor field sleeve	2	2	2	2	2	2	2	2	2	2
5	19532-A	Motor cap governor end			1							
6	19533	Governor		1	1	1						
7	19008-A	Motor complete			1							

*Complete breakdown on Page 87.


**MOTOR PARTS
MODEL 40-A**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	19532-A-40A	Governor end motor cap					1					
2	19008	1/4 Motor field					1					
3	19009	1/4 Motor armature					1					

**MOTOR
ASSEMBLY
MODEL 40-A**

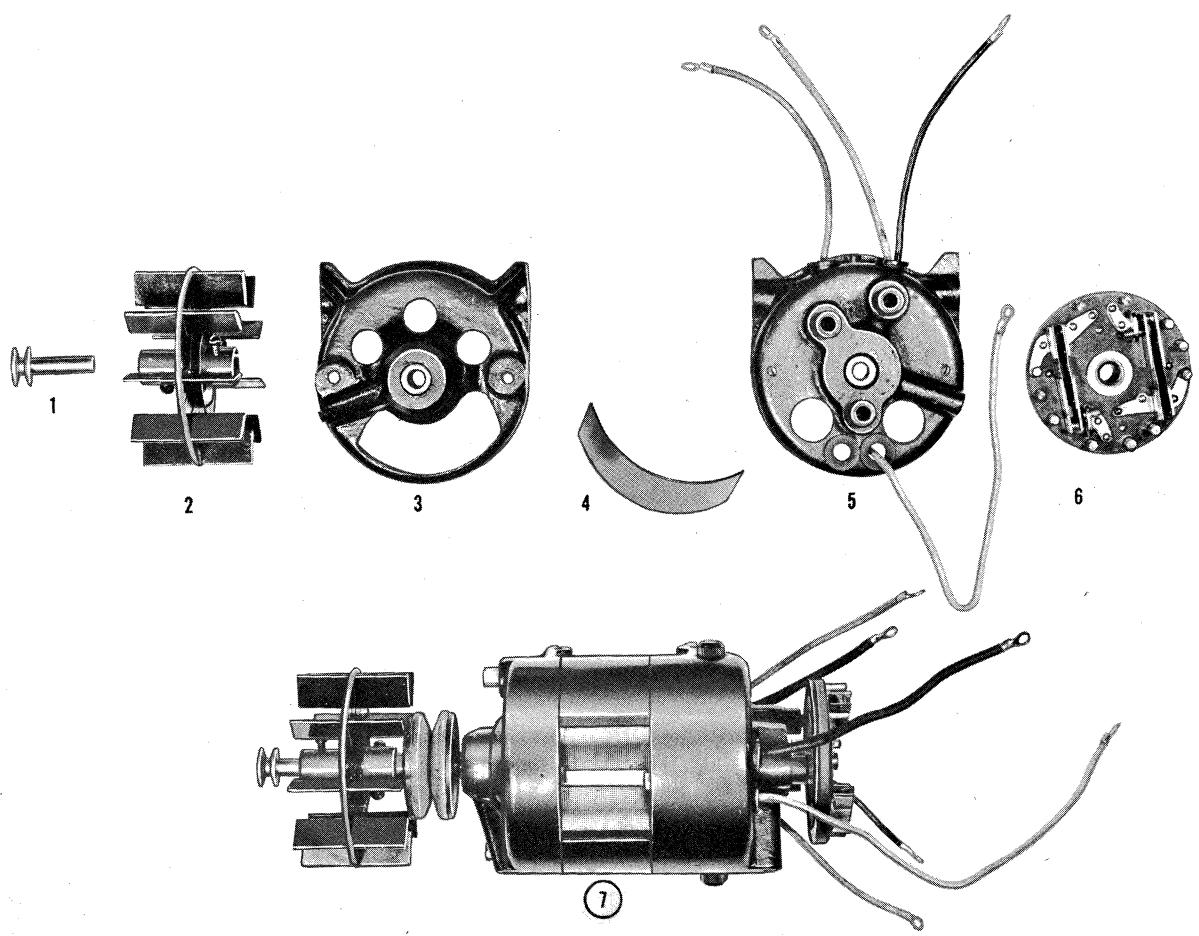

**MOTOR PART
MODEL 40-A**

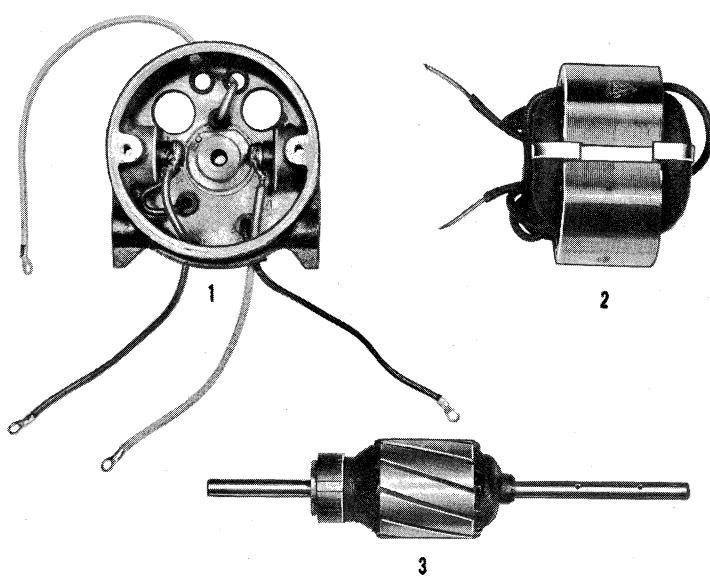

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	20268-A	Clutch flange (front)											
1-A	20269-A	Clutch flange (rear)											
2	23236	Motor drive pulley*											
3	20274-A	Fan											
4	20273	Rewind pulley											
5	20270	Clutch core 5/16											
6	19160	Friction disc											
7	20270	Clutch core 5/16											
8	19160	Friction disc											
9	26611	Drive pulley											
10	26610	Fan											
11	23350	Rewind pulley											
12	U-178	Motor pin 1/2 x 1/16	2	2	2	2	2	2	2	2	2	2	2
13	20263	Motor brush	2		2	2	2	2	2	2	2	2	2
14	20262	Motor brush holder	2		2	2	2	2	2	2	2	2	2
15	20264	Motor brush cap			2	2	2	2	2	2	2	2	2
16	19080	Field stud			2	2	2	2	2	2	2	2	2
17	20781	Bearing oil felt	2	2	2								
18	20782	Bearing oil wick	2	2	2								
19	20266	Motor bearing 5/16	2		2								
20	20783	Spacer washer 5/16			4								
21	19534	Governor brush	3	3	3	3	3	3	3	3	3	3	3
22	19535	Governor brush holder	3	3	3								
23	20762	Motor cap screw			2	2							
24	20266-A	Motor bearing 5/16			2	2							

*No. 2, 23236 Motor drive pulley replaces friction clutch assembly. (Nos. 1, 1-A, 5, 6, 7, 8)

To replace friction clutch assembly, it is also necessary to replace drive belt guard with Part No. 20235 (Page 25).


USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19080	Field stud			2	2	2	2	2	2	2	2	2
2	20762	Motor cap screw			2	2							
3	U-178	1/16 x 1/2 Motor pin	2	2	2	2	2	2	2	2	2	2	2
4	19535	Governor brush holder	3	3	3								
5	19534	Governor brush	3	3	3	3	3	3	3	3	3	3	3
6	11120	Armature spacer 1/4			4								
7	11118	Motor brush plug			2								
8	11114	Brush holder			2								
9	11116	Motor brush			2								
10	30126	Motor drive pulley*			1								
11	19018	Motor bearing 1/4			2								
12	19161-A	Friction flange (front)			1								
13	19160	Friction disc	2	2	2								
14	19160	Friction disc	2	2	2								
15	19162-A	Friction flange (rear)			1								
16	20781	Bearing felt	2	2	2								
17	20782	Bearing oil wick	2	2	2								
18	19137	Clutch core			2								
19	19137	Clutch core			2								
20	19018-A	Motor bearing 1/4			2								

*No. 10, 30126 Motor drive pulley replaces friction clutch assembly. (Nos. 12, 13, 14, 15, 18, 19)


To replace friction clutch assembly, it is also necessary to replace drive belt guard with Part No. 20235 (Page 25).

MOTOR PARTS

MODEL 40-A

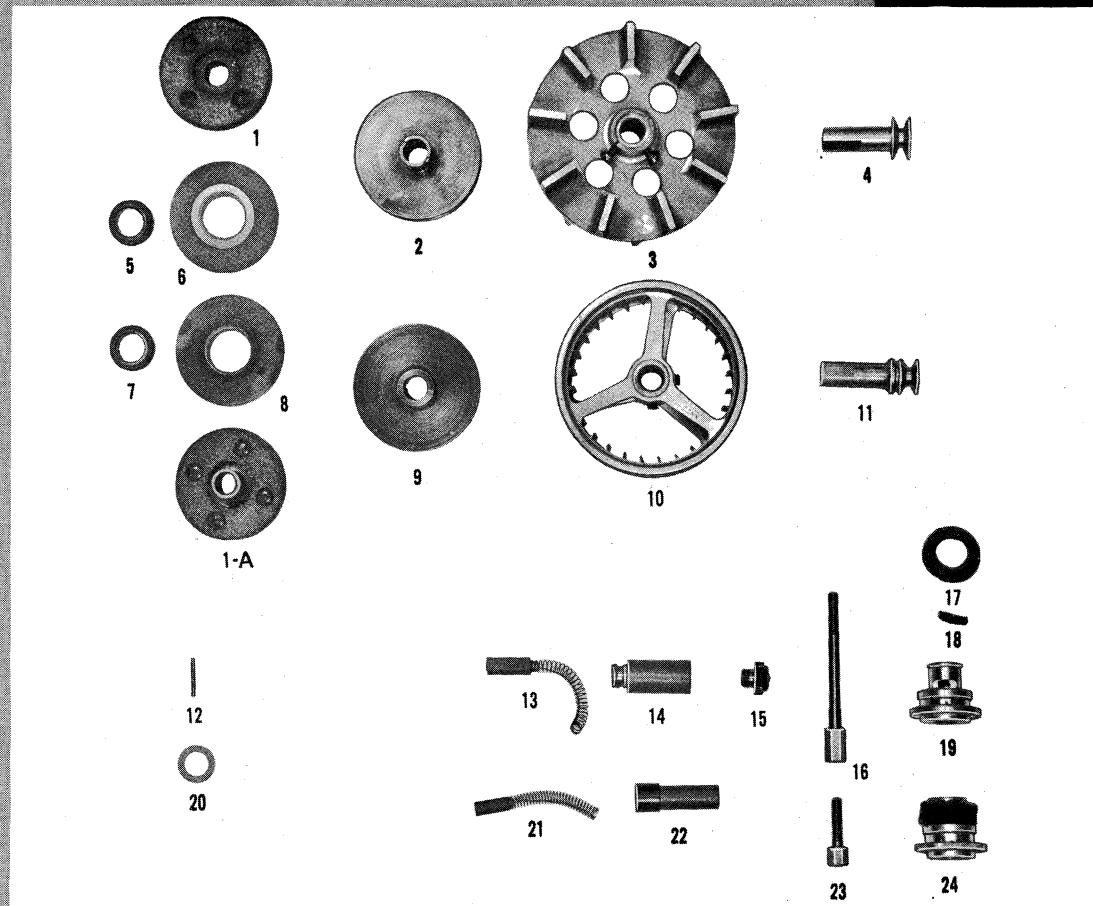

MOTOR PARTS

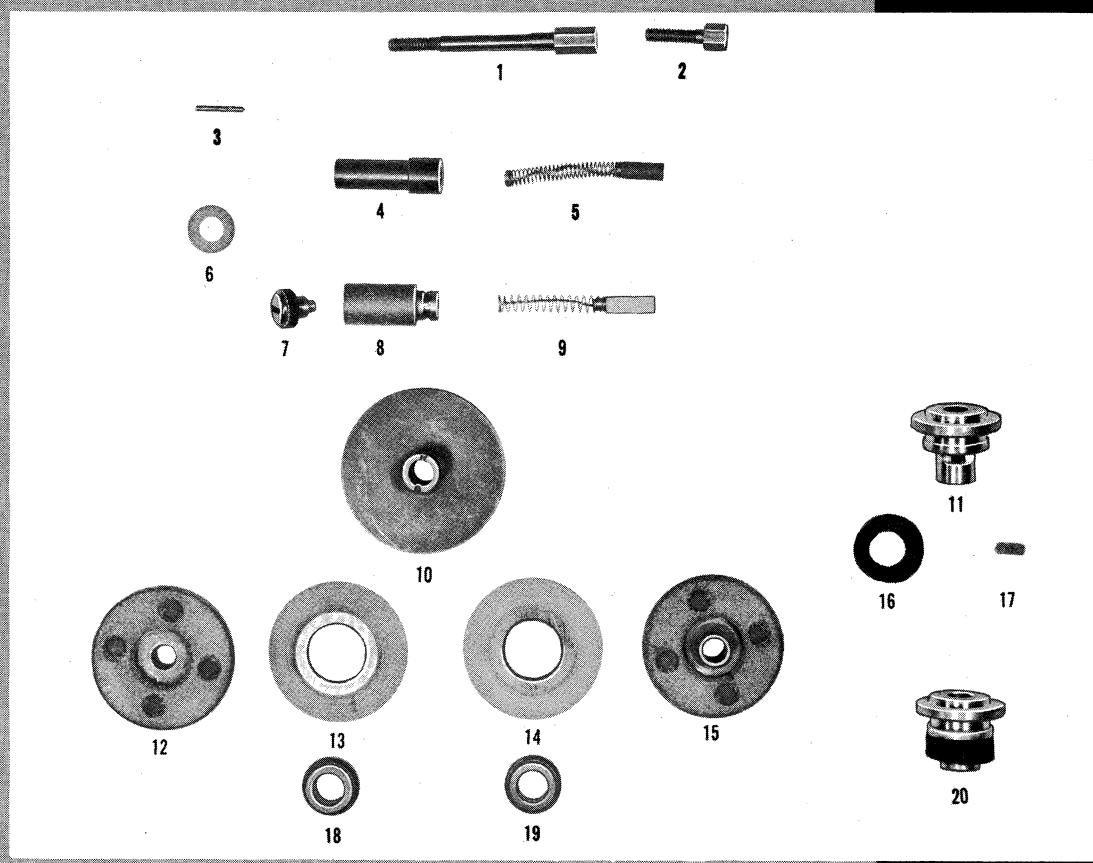

**MOTOR PARTS
MODEL 40-A**

AMPLIFIERS
MODELS 40-A,
40-B, 60-B,
60-2, 60-25

No.	Part No.	Part Name	Page	G	USED ON MODELS							
					40-A	40-B	40-BX	55	56	60-B	60-2	60-4
1		Model 40-A amplifier										
2	19745	Power transformer 50-60 cycle										
3	19990-A	Model 40-B amplifier										
4	19845	Power transformer 50-60 cycle*										
5	23250-A	Model 60-B amplifier										
6	19845	Power transformer 50-60 cycle										
7	26925	Power transformer 50-60 cycle										
8	26855-A	Model 60-2 and 60-25 amplifiers†										
9	19608	Control knob			2	2		3	2		2	
10	19608	Control knob			2	2		3	2		2	
11	26876	Dial light socket										
12	18641	Exciter switch										
13	19747	Main line AC plug										
14	26874	Dial light cap										
15	19947	Pilot lamp										
16	26787	Speaker socket (female)										
17	19608	Control knob			2	2		3	2		2	
18	19608	Control knob			2	2		3	2		2	
19	18641	Exciter switch										
20	25030	Speaker socket (female)										
21	19747	Main line AC plug										
22	25096	Speaker plug (male)			2	2		2	2		1	2
	25055	Speaker plug (female) (not shown)										
23	19978	2 Amp. fuse										
24	23128	Fuse holder										
25	19608	Control knob			2	2		3	2		2	
26	18641	Exciter switch										
27	17189	AC plug (female)										
28	25030	Speaker socket (female)										
29	18688-A	Fuse cover										
30	19747	Main line AC plug										
31	19608	Control knob			2	2		3	2		2	
32	19608	Control knob			2	2		3	2		2	
33	25030	Speaker socket (female)										
34		6/32 x 3/16 R.H. screw (fuse cover)					2	2				
35	19748	AC line socket										
36	19608	Control knob			2	2		3	2		2	
37	18688-A	Fuse cover										
	18645	Fuse holder (not shown)										
38	19747	Main line AC plug										
39	19608	Control knob			2	2		3	2		2	

*25 Cycle transformer 19846 is used on 40-A, 40-B and 60-B.

†25 Cycle transformer 26936 is used on 60-2 and 60-25.


NOTE: Replacing 50-60 cycle transformers with 25 cycle transformers will not convert amplifiers for use on 25 cycles. Many other changes are necessary. Such a change is not recommended.

AMPLIFIERS
MODELS 40-A,
40-B, 60-B,
60-2, 60-25


No.	Part No.	Part Name	Page	G	USED ON MODELS							
					40-A	40-B	40-BX	55	56	60-B	60-2	60-4
1		Model 40-A amplifier										
2	19818	P.E. cell socket										
3	19719	P.E. cell control*										
4	25040	Microphone control knob										
5	18643	Microphone and phono jack			1	1	2	1	2	1	1	1
6	19922	Microphone nameplate			2	2						
7	19922	Microphone nameplate			2	2						
8	19920	P.E. cell nameplate										
9	19990-A	Model 40-B amplifier										
10	19818	P.E. cell socket										
11	19719	P.E. cell control*			1	1	1	1	1	1	1	1
12	19922	Microphone nameplate			2	2						
13	18643	Microphone and phono jack				2	1		2	1	1	1
14	25040	Microphone control knob			1	1	1	1	1	1	1	1
15	19922	Microphone nameplate			2	2						
16	19920	P.E. cell nameplate										
17	23250-A	Model 60-B amplifier										
18	19818	P.E. cell socket										
19	19719	P.E. cell control*										
20	23126	Nameplate										
21	18643	Microphone and phono jack				2	1		2	1	1	1
22	18643	Microphone and phono jack					2	1		2	1	1
23	25040	Microphone control knob				1	1	1	1	1	1	1
24	26855-A	Models 60-2 and 60-25 amplifiers										
25	26917	P.E. cell contact connector										
26	25040	Microphone control knob			1	1	1	1	1	1	1	1
27	18643	Microphone and phono jack				2	1		2	1	1	1
28	26791	Microphone jack										
29	26780	Nameplate										

* 20058 P.E. cell control cap

AMPLIFIERS
MODELS 40-A
40-B, 60-B,
60-2, 60-25

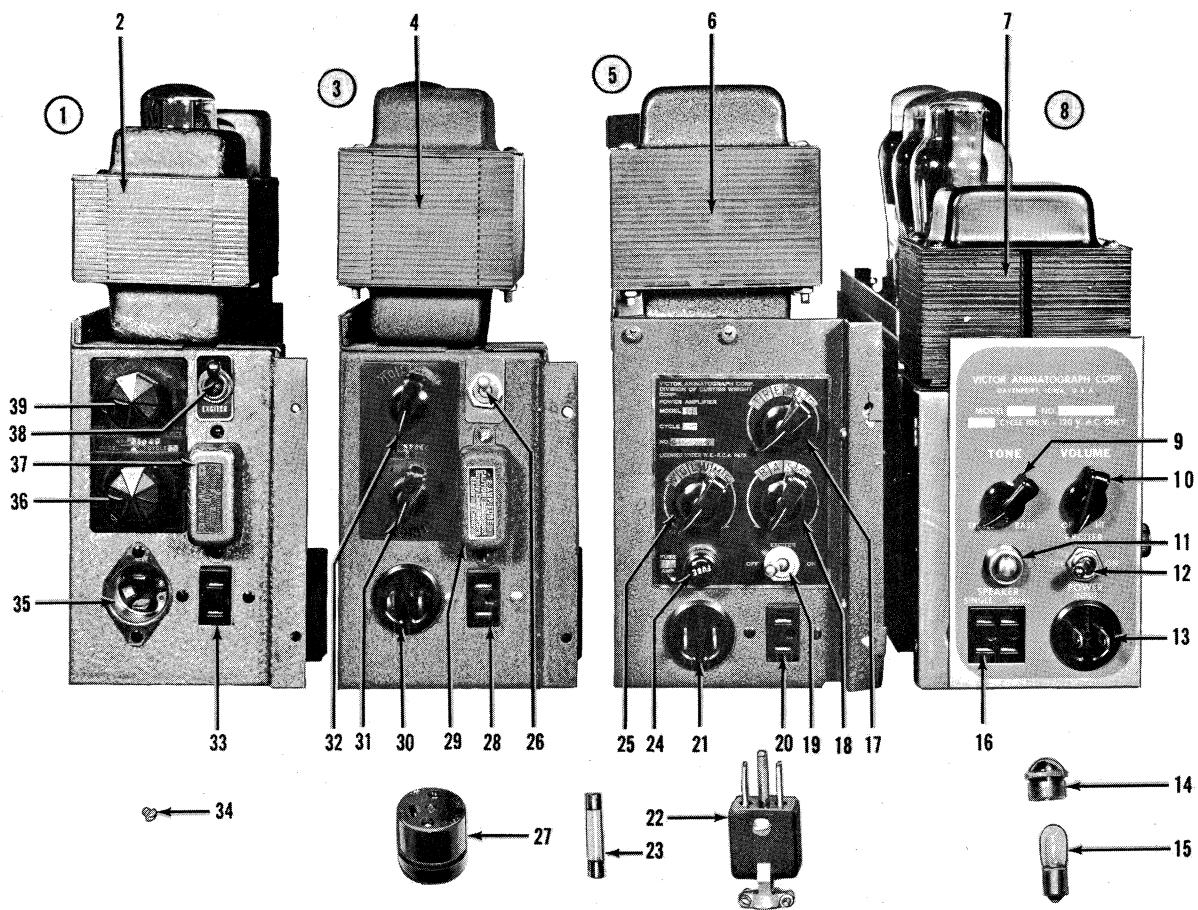

AMPLIFIERS
MODELS 40-A
40-B, 60-B,
60-2, 60-25

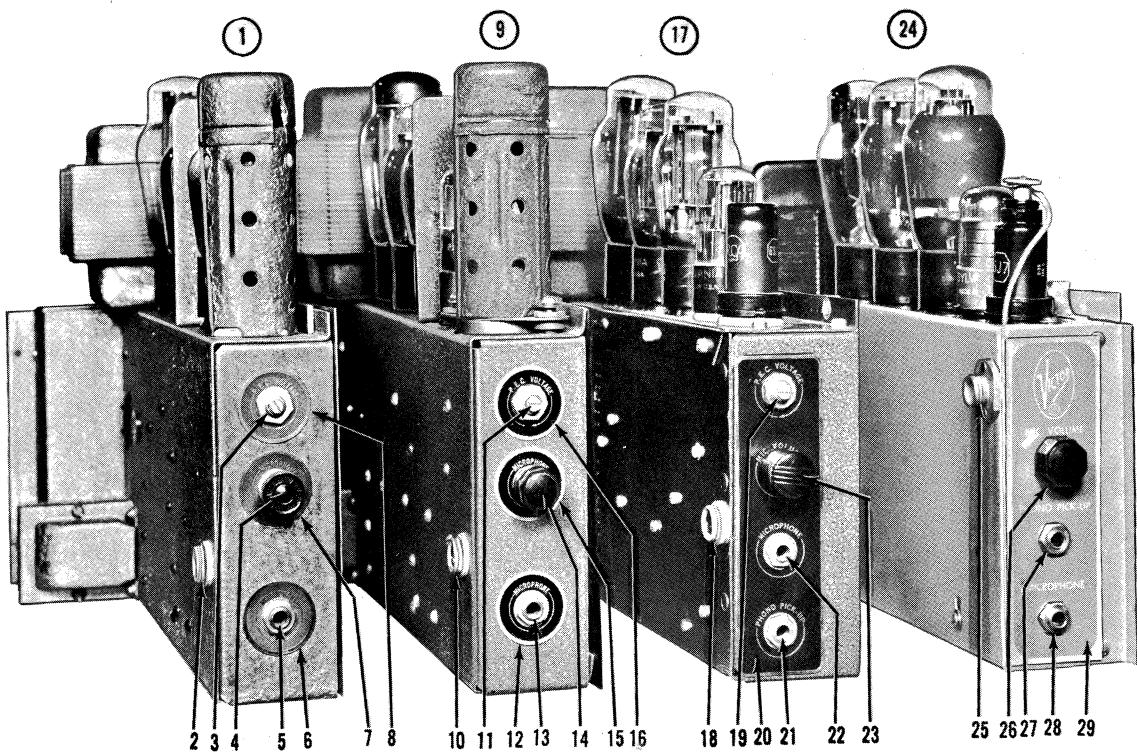

**AMPLIFIER
MODELS
60-2, 60-25**


No.	Part No.	Part Name	Page	G	USED ON MODELS						
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	26925	Power transformer 50-60 cycle*								1	
2	19729	Transformer half-shell cover								1	
3	5U4G	Rectifier tube			1	1			1	1	
4	6L6G	Output tube				2			2	2	2
5	6C4GT	Input tube						1	1		1
6	6L6G	Output tube				2			2	2	2
7	6SJ7M	Second stage tube			1	1			1		
8	6J7M	Input tube			1	1					
9	26917	P.E. cell connector (female)						1		1	1
10	25040	Microphone control knob			1	1			1		
11	26791	Microphone jack									
12	18643	Microphone jack			1	2	1		2	1	1
13	18766	Microphone plug (male)			1	1	1	1	1		
14	26561-A	P.E. cell connector (male)					1				
15	20628	Exciter plug (male)			1				1		
16	20629	Exciter socket (female)				1					
17	19747	AC main line plug			1	1	1	1		1	1
18	20169	AC power plug (female)			1	1	1	1	1	1	1
19	23128	Fuse holder				1	1	1	1	1	1
20	26855-A	Amplifier complete						1			

*25 Cycle transformer 26936 is used on Models 60-2 and 60-25.


**AMPLIFIER
MODEL 60-B**

No.	Part No.	Part Name	Page	G	USED ON MODELS						
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	19845	Power transformer 50-60 cycle*				1			1		
2	23234-A	Transformer top cover assembly								1	
3	5U4G	Rectifier tube			1	1			1	1	1
4	6L6G	Output tube				2			2	2	2
5	6L6G	Output tube				2			2	2	2
6	6SL7GT	Second stage tube					1		1	1	
7	6SJ7M	Input tube				1	1				1
8	19719	P.E. cell voltage control			1	1	1				
9	25040	Microphone control knob			1	1	1		1		
10	19818	P.E. cell socket (female)			1	1	1		1		
11	18643	Microphone and phono jack			1	2	1		2	1	1
12	18643	Microphone and phono jack			1	2	1		2	1	1
13	18766	Microphone plug (male)			1	1	1		1	1	1
14	19819	P.E. cell plug (male)			1	1	1		1		
15	20628	Exciter plug (male)			1				1		
16	20629	Exciter socket (female)			1				1		
17	19747	AC plug (male)			1	1	1	1		1	1
18	20169	AC socket (female)			1	1	1	1	1	1	1
19	23250-A	Amplifier complete							1		

*25 Cycle transformer 19846 is used on Model 60-B.

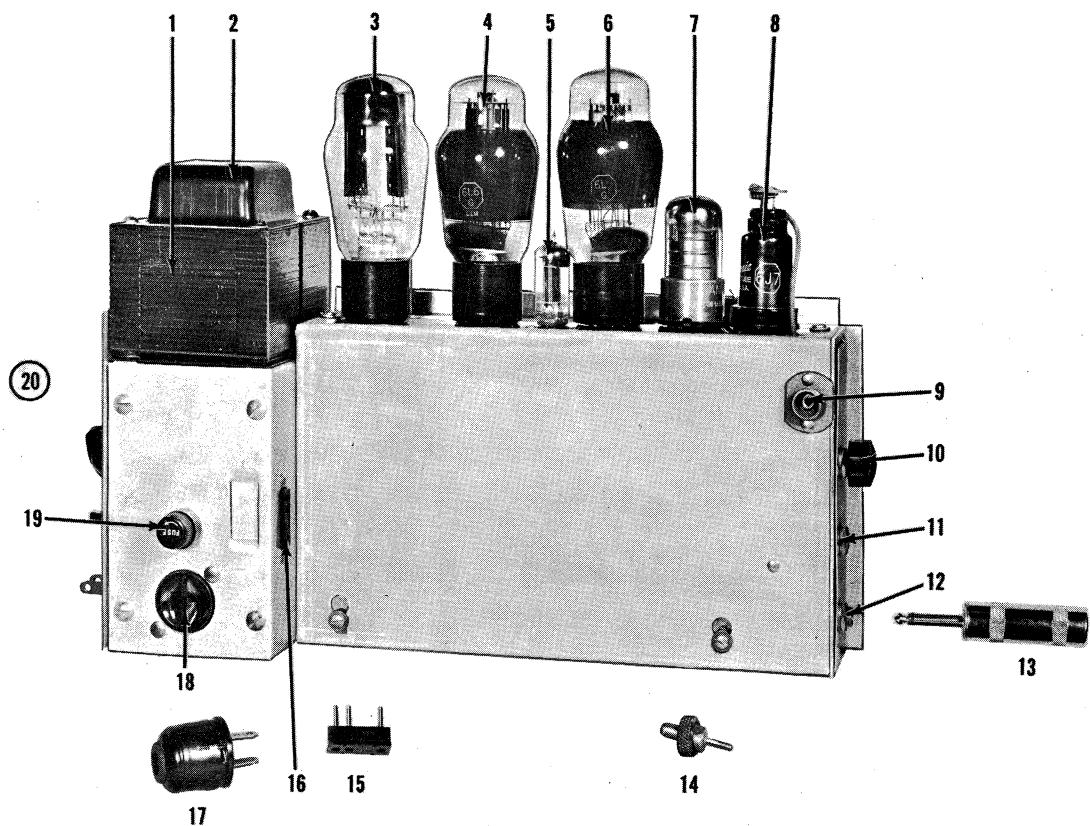

**AMPLIFIER
MODELS
60-2, 60-25**

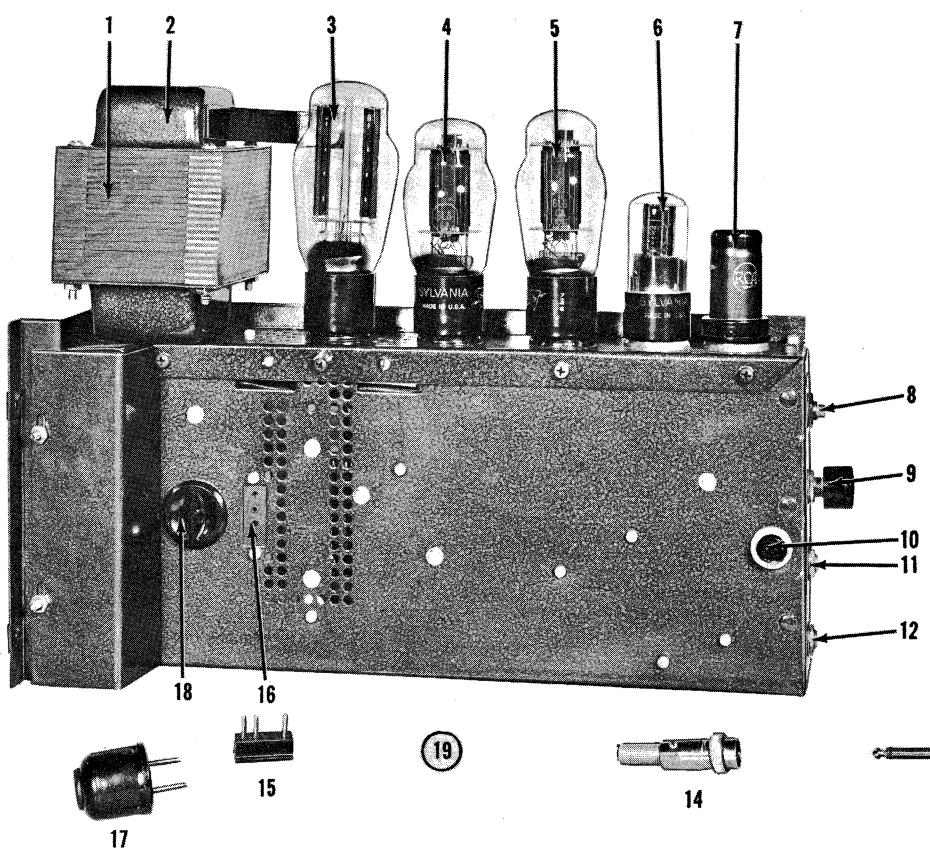

**AMPLIFIER
MODEL 60-B**

AMPLIFIER MODEL 40-B

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19845	Power transformer 50-60 cycle*											
2	19789	Transformer half shell											
3	5U4G	Rectifier tube											
4	6L6G	Output tube				2			2	2			2
5	6L6G	Output tube				2			2	2			2
6	6N7GT	Second stage tube											
7	18728-A	Tube shield											
8	6J7M	Input tube											
9	19719	P.E. cell voltage control											
10	25040	Microphone control knob											
11	19818	P.E. cell socket (female)											
12	18643	Microphone and phono jack				2				2			
13	18766	Microphone plug											
14	19819	P.E. cell plug (male)											
15	19990-A	Complete model 40-B Amplifier†											
16	20618	Four contact exciter plug (male)											
17	19747	AC plug (male)											
18	18732	200 ohm filter choke											
19	20619	Four contact exciter socket (female)											
20	20169	AC socket power output to projector head											

*25 Cycle power transformer 19846 is used on Model 40-B.


By making a few minute changes the 60-25 amplifier is interchangeable. All that is necessary is to raise amplifier 3/4", place adapter on P.E. cell connector and shield 6J7 tube.

†No. 15, 19990-A, 40-B amplifier can no longer be supplied.


AMPLIFIER MODEL 40-A

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19745	Power transformer, 50-60 cycle*											
2	5U4	Tube											
3	6V6	Tube				2							
4	6V6	Tube				2							
5	6N7GT	Tube											
6	18728-A	Tube shield											
7	6J7	Tube											
8	19719	P.E. cell control											
9	25040	Microphone control knob											
10	19818	P.E. cell socket (female)											
11	18643	Microphone jack								2			
12	18766	Microphone plug (male)											
13	19819	P.E. cell connector (male)											
14	19643	Exciter plug (male)											
15	19747	AC plug (male)											
16	18732	200 ohm filter choke											
17	19748	AC plug (female)											
18	19648	Exciter socket (female)											

*25 Cycle transformer 19846 is used on Model 40-A.

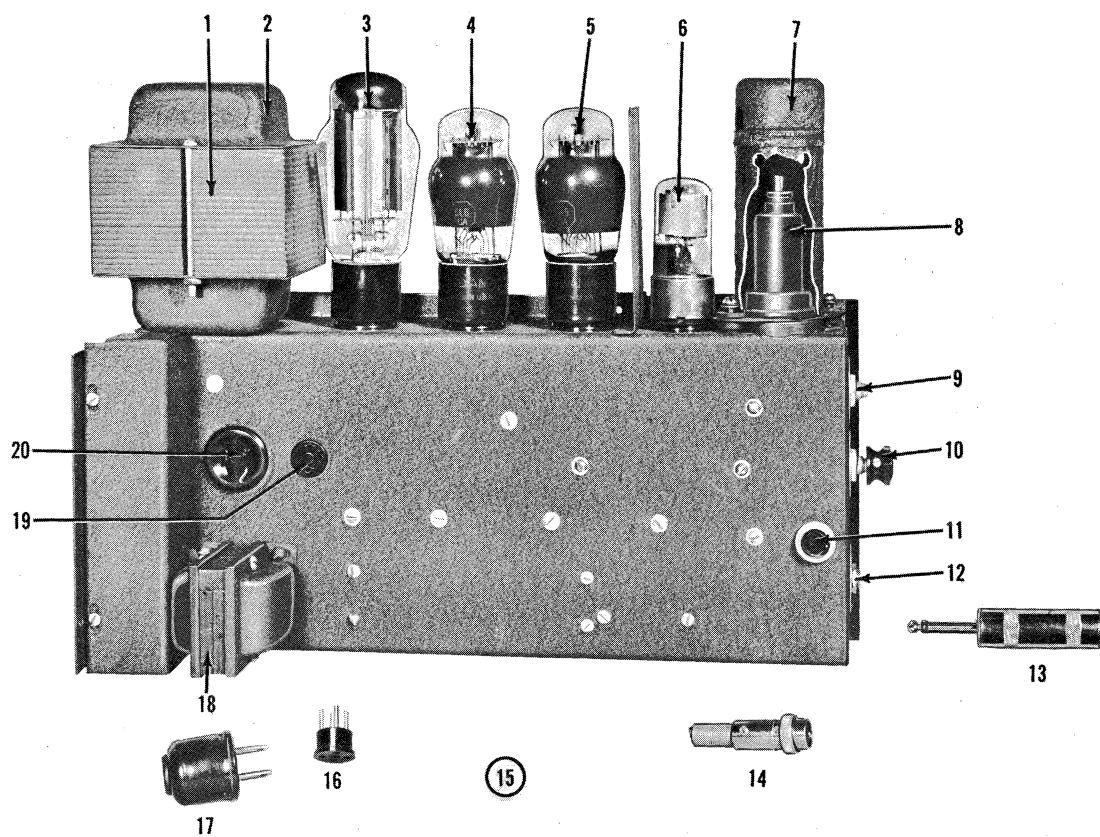

**AMPLIFIER
MODEL 40-B**

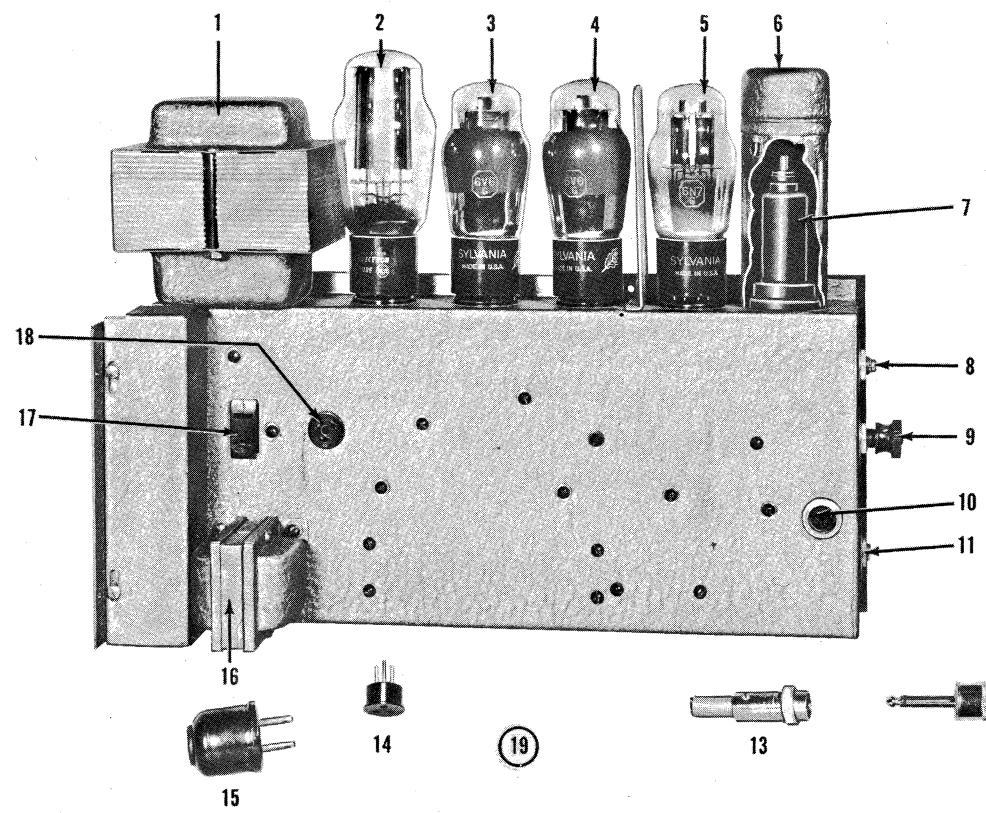

**AMPLIFIER
MODEL 40-A**

**AMPLIFIER
MODEL 60-10**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	26561-A	P.E. cell connector (male)						1					
2	26917	P.E. cell socket (female)					1		1				
3	30586	Four contact exciter socket (female)						1					
4	30586-A	Exciter cord assembly											
5	30543-A	Model 60-10 amplifier complete assembly											1
6	36190	200 Mfd. 150 VDC condenser						1					
7	23128	Fuse holder					1	1	1	1	1		
8	50L6GT	Output tube						2		2	2		
9	30503-A	AC cord assembly power line					1						
10	19747	AC plug (male)			1	1	1	1	1	1	1		
11	26522-2	AC power receptacle						1					
12		6/32 x 3/8 B.H. AC power retainer screw for case						1					
13	17189	AC plug for power cord replacement (female)			1	1	1	1	1	1	1		
14	12AX7G	Second stage tube											
15	5879G	Input tube											
16	23284	Tone control knob					1	1					
17	23283	Volume control knob					1	1					
18	26935	Volume control											
19	25096	Speaker cord plug (male)*			2	2	1	1	2	2	1	1	2
20		5/40 x 3/8 B.H. speaker cord retainer screw for case					2	2		2	2		
21	18643	Microphone jack			1	2	1		2	1	1	1	
22	26934	Tone control											
23	25030-2	Speaker socket assembly					1	1					
24	30550-A	Speaker socket cord assembly					1	1					
25	23298	Four contact exciter plug (male)					1						

*No. 19, 25096, is interchangeable with 25054 (page 131).


**AMPLIFIER
MODEL 60-4**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	25030-2	Speaker socket assembly					1	1					
2	26934	Tone control											
3	26561-A	P.E. Cell connector (male)					1		1				
4	30550-A	Speaker socket cord assembly					1	1					
5	26917	P.E. Cell contact (female)					1		1				
6	30490-A	60-4 Amplifier*											
7	36190	200 Mfd. 150 Volts DC condenser											
8	23128	Fuse holder					1	1	1				
9	50L6GT	Tube							2		2	2	
10	30503-A	AC cord assembly					1						
11	19747	AC plug (male)			1	1	1	1	1	1	1	1	
12	26522-2	Receptacle shell sub assembly					1						
13		6/32 x 1/4 B.H. screw						2		2	2		
14	17189	AC plug (female)			1	1	1	1	1	1	1	1	
15	50L6GT	Tube						2		2	2		
16	12AX7GT	Tube											
17	5879GT	Tube											
18	23284	Tone control knob					1	1					
19	23283	Volume control knob					1	1					
20	25096	Speaker plug (male)†			2	2	1	1	2	2	1		
21	26935	Volume control											
22	18643	Microphone and phono jack			1	2	1		2	1	1	1	
23		5/40 x 3/8 B.H. screw					2	2			2	2	


*Model 60-4 amplifier may be used on 25-50-60 cycle and AC-DC.

†No. 20, 25096, is interchangeable with 25054 (Page 131).

**AMPLIFIER
MODEL 60-10**

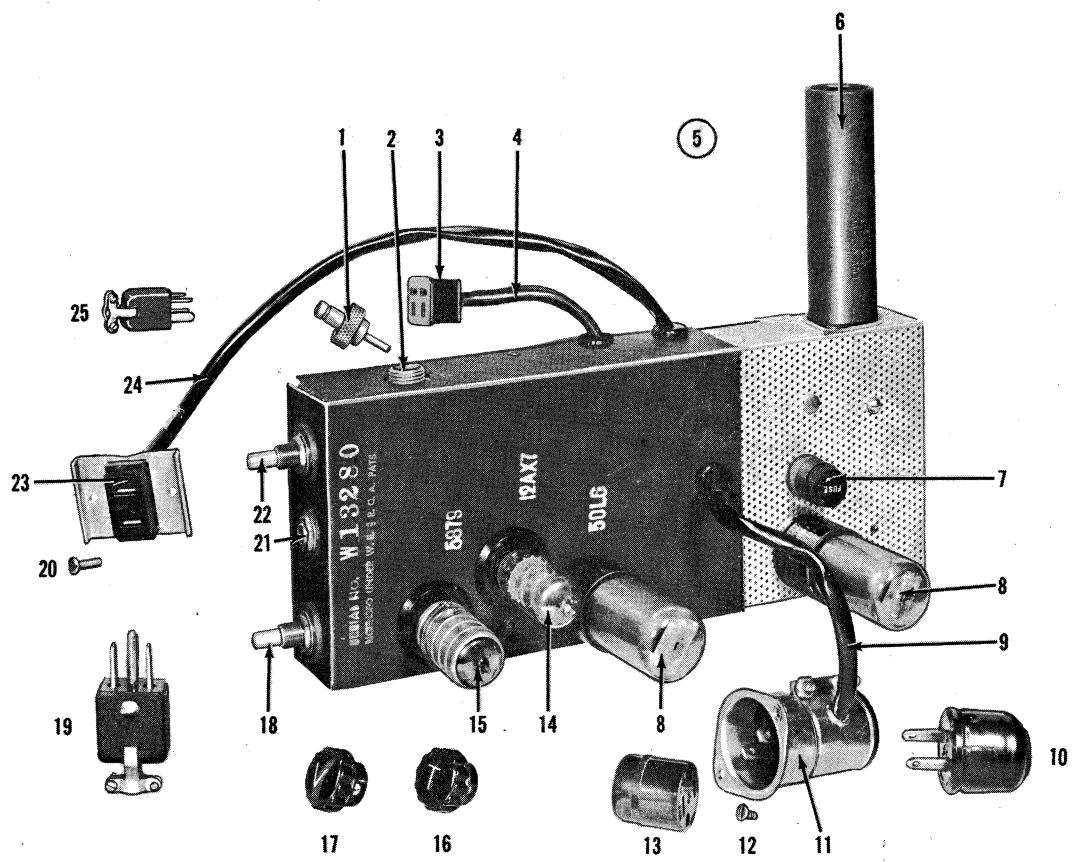

**AMPLIFIER
MODEL 60-4**

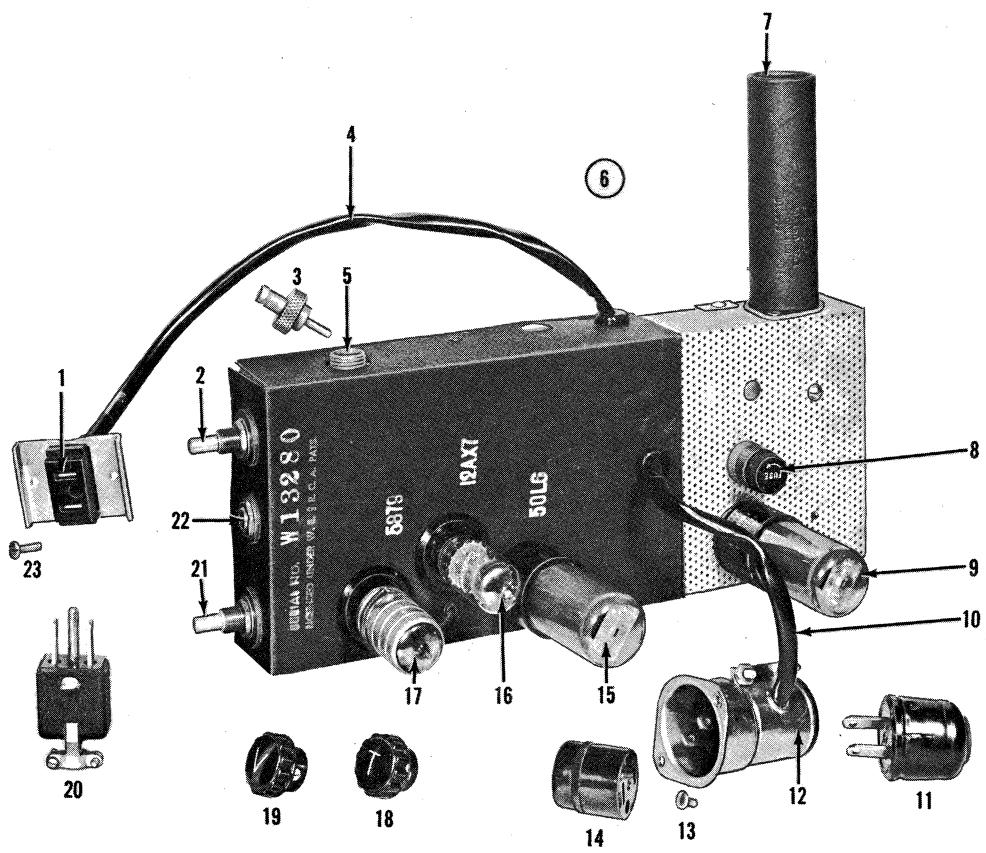

AMPLIFIER MODEL 55

No.	Part No.	Part Name	Page	G	USED ON MODELS									
					40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	23270-A	Model 55 amplifier complete						1						
2	25040	P.E. Cell voltage control knob												
3	18643	Microphone jack			3	2				2	1	1	1	
4	6SJ7M	Input tube				1				1				
5	6SL7GT	Second stage tube								1				
6	25L6GT	Output tube						2						
7	19747	AC Plug (male)				1	1			1	1	1	1	
8	20169	AC Receptacle (female)				1	1			1	1	1	1	
9	25L6GT	Output tube						2						
10	25Z6GT	Rectifier tube						2						
11	25Z6GT	Rectifier tube						2						
12	23284	Tone control knob "T"						1	1			1	1	
13	23283	Volume control knob "V"						1	1			1	1	
14		5/40 x 3/8 B.H. speaker socket retainer screw						2	2		2	2		
15	25030-2	Speaker socket assembly						1	1		1	1		
16	25096	Speaker plug (male)*			2	2				2	2	1	1	2
17	18635	Tone control			1	1								
18	18852	Volume and switch control			1	1				1				
19	25030-A	Speaker cord assembly												
20	23128	Fuse holder								1	1	1	1	
21	17189	AC Plug (female)				1	1			1	1	1	1	
22	19747	AC Plug (male)				1	1			1	1	1	1	
23	23297	4 Contact exciter socket (female)												
24	23298	4 Contact exciter plug (male)												
25	19819	P.E. Cell cord plug (male)				1	1							
26	19818	P.E. Cell socket (female)				1	1							



*No 16, 25096, is interchangeable with 25054 (Page 131).

AMPLIFIER MODEL 56


No.	Part No.	Part Name	Page	G	USED ON MODELS									
					40-A	40-BX	40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	25030-2	Speaker socket assembly						1	1					
2	18635	Tone control												
3	25030-A	Speaker socket and cord assembly						1	1					
4	26561-A	P.E. Cell connector (male)												
5	26917	P.E. Cell connector (female)						1	1					
6	26623-A	Model 56-C amplifier complete*												
7	23128	Fuse holder						1	1	1	1	1	1	
8	30586-A	AC cord assembly power output amplifier												
9	50L6G	Output tube						2		2	2			
10	26522-A	Receptacle AC shell assembly						1		1	1			
11		6/32 x 3/8 B.H. AC receptacle retainer screw							2		2	2		
12	17189	AC Power plug (female)						1	1	1	1	1	1	
13	19747	AC plug (male)						1	1	1	1	1	1	
14	20169	AC Main line plug (female)						1	1	1	1	1	1	
15	50L6G	Output tube							2		2	2		
16	12AH7GT	Second stage tube												
17	6C4GT	Input tube												
18	23284	Tone control knob						1	1					
19	23283	Volume control knob						1	1					
20	25096	Speaker plug (male)			2	2		1	1	2	2	1	1	2
21	18852	Volume and switch control												


*Model 56C amplifier can be used on 25-50-60 cycle and AC-DC.

**AMPLIFIER
MODEL 55**

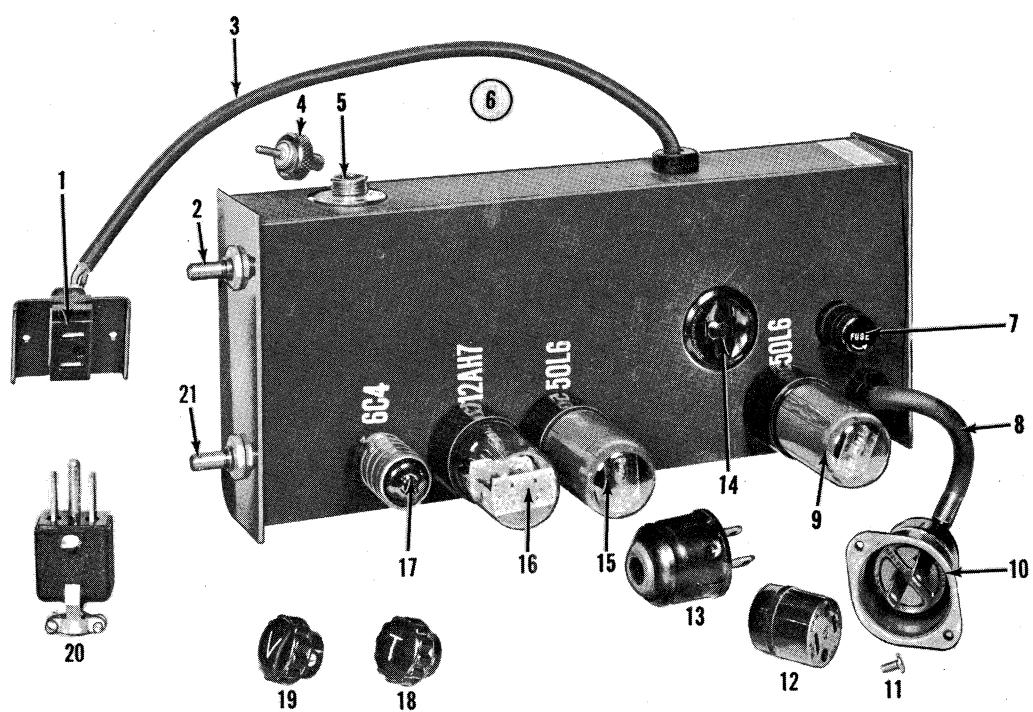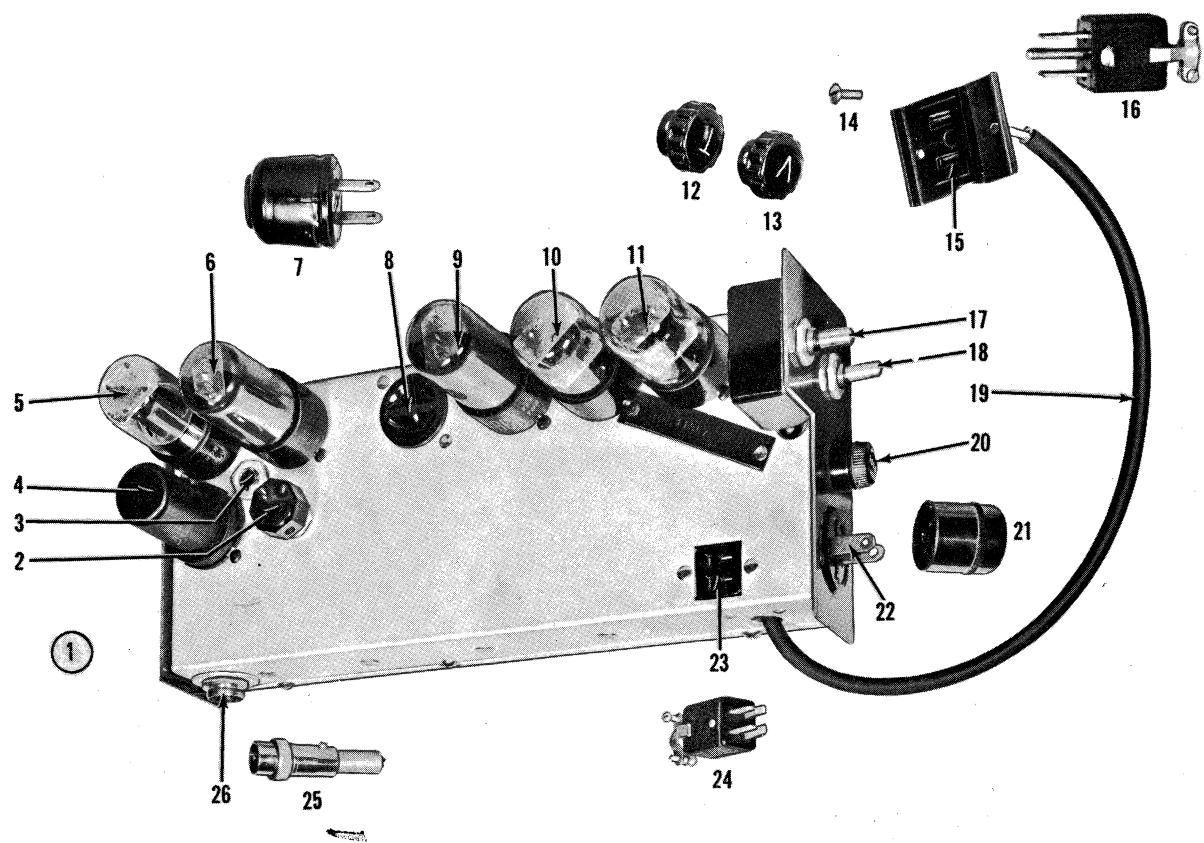

**AMPLIFIER
MODEL 56**

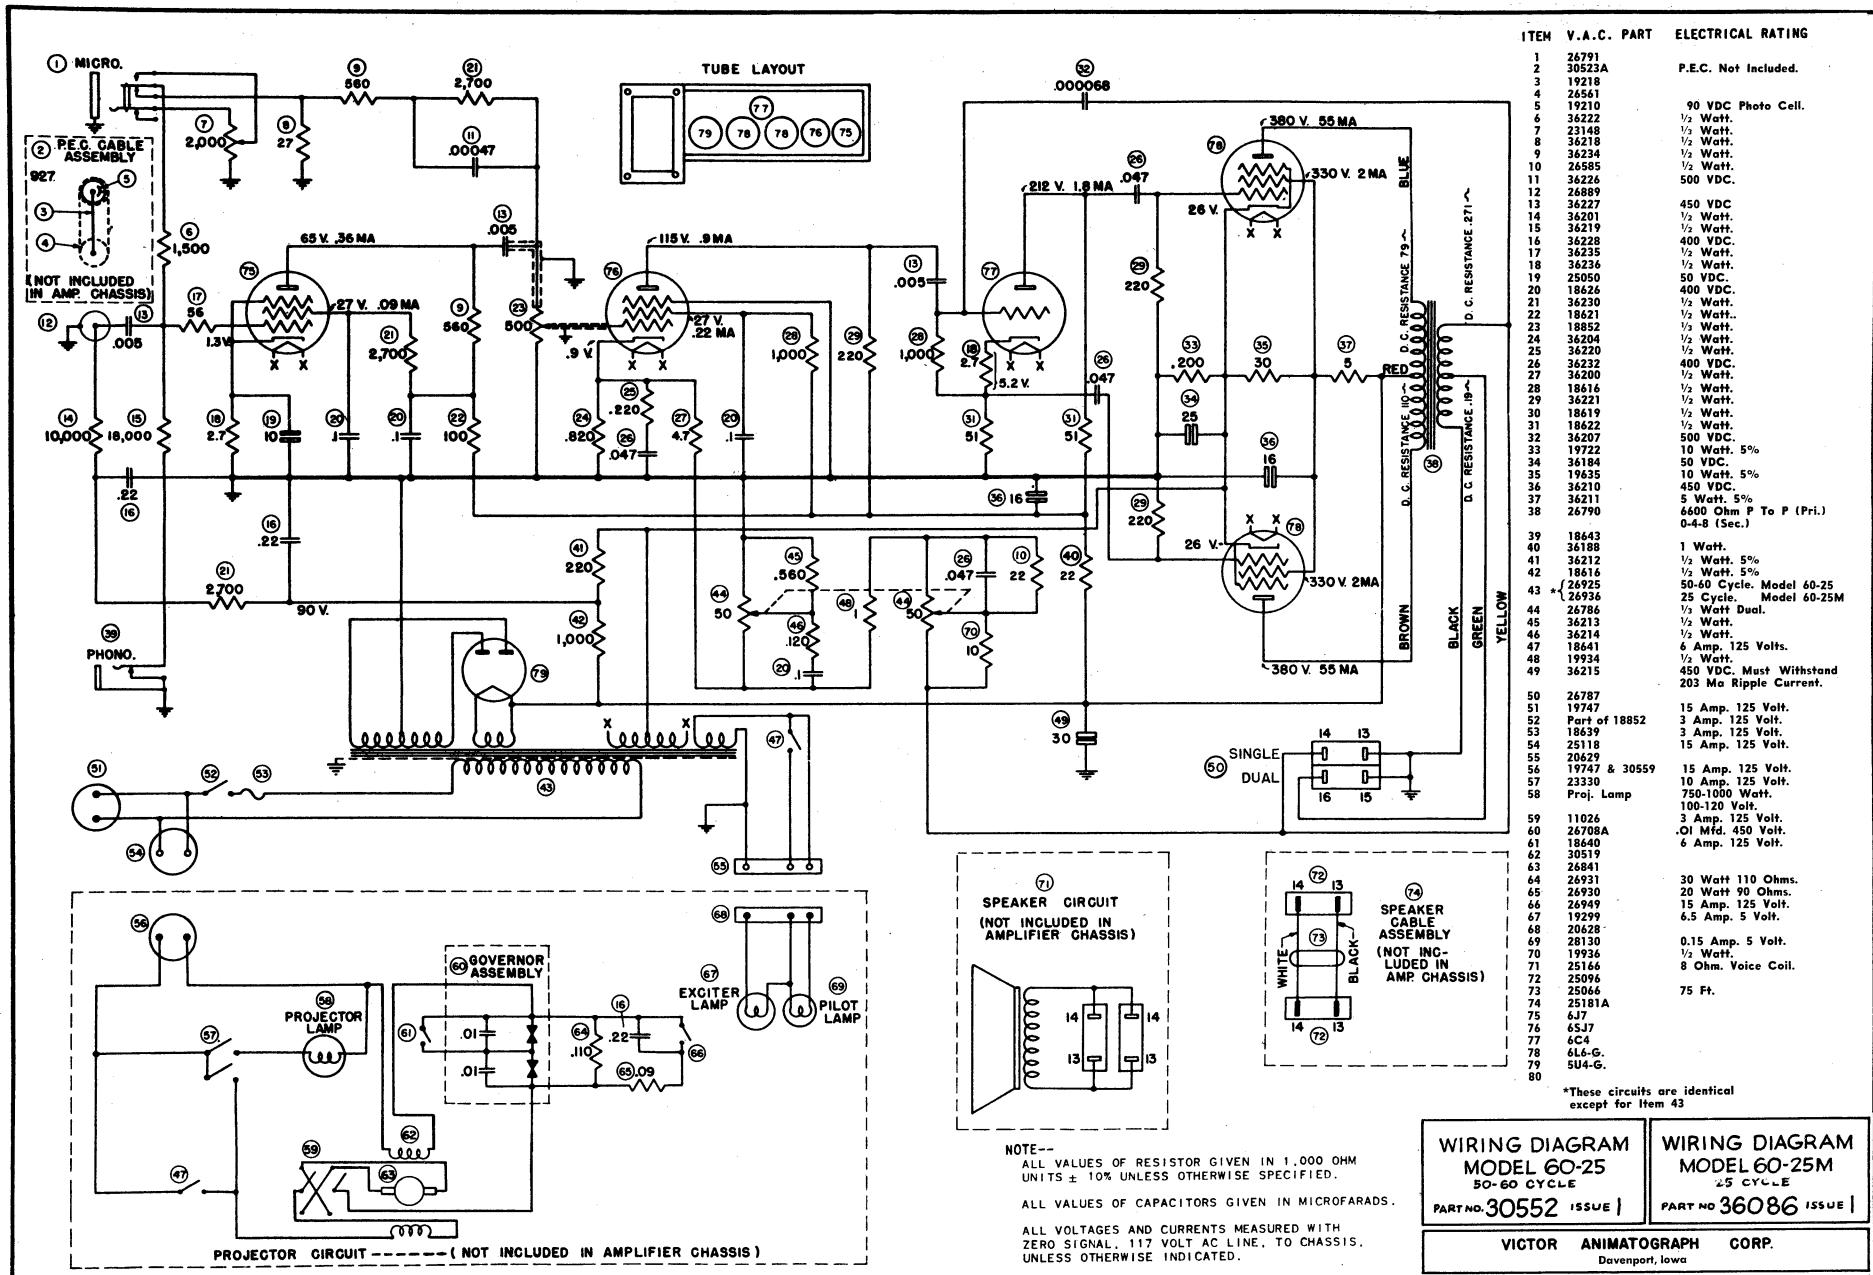

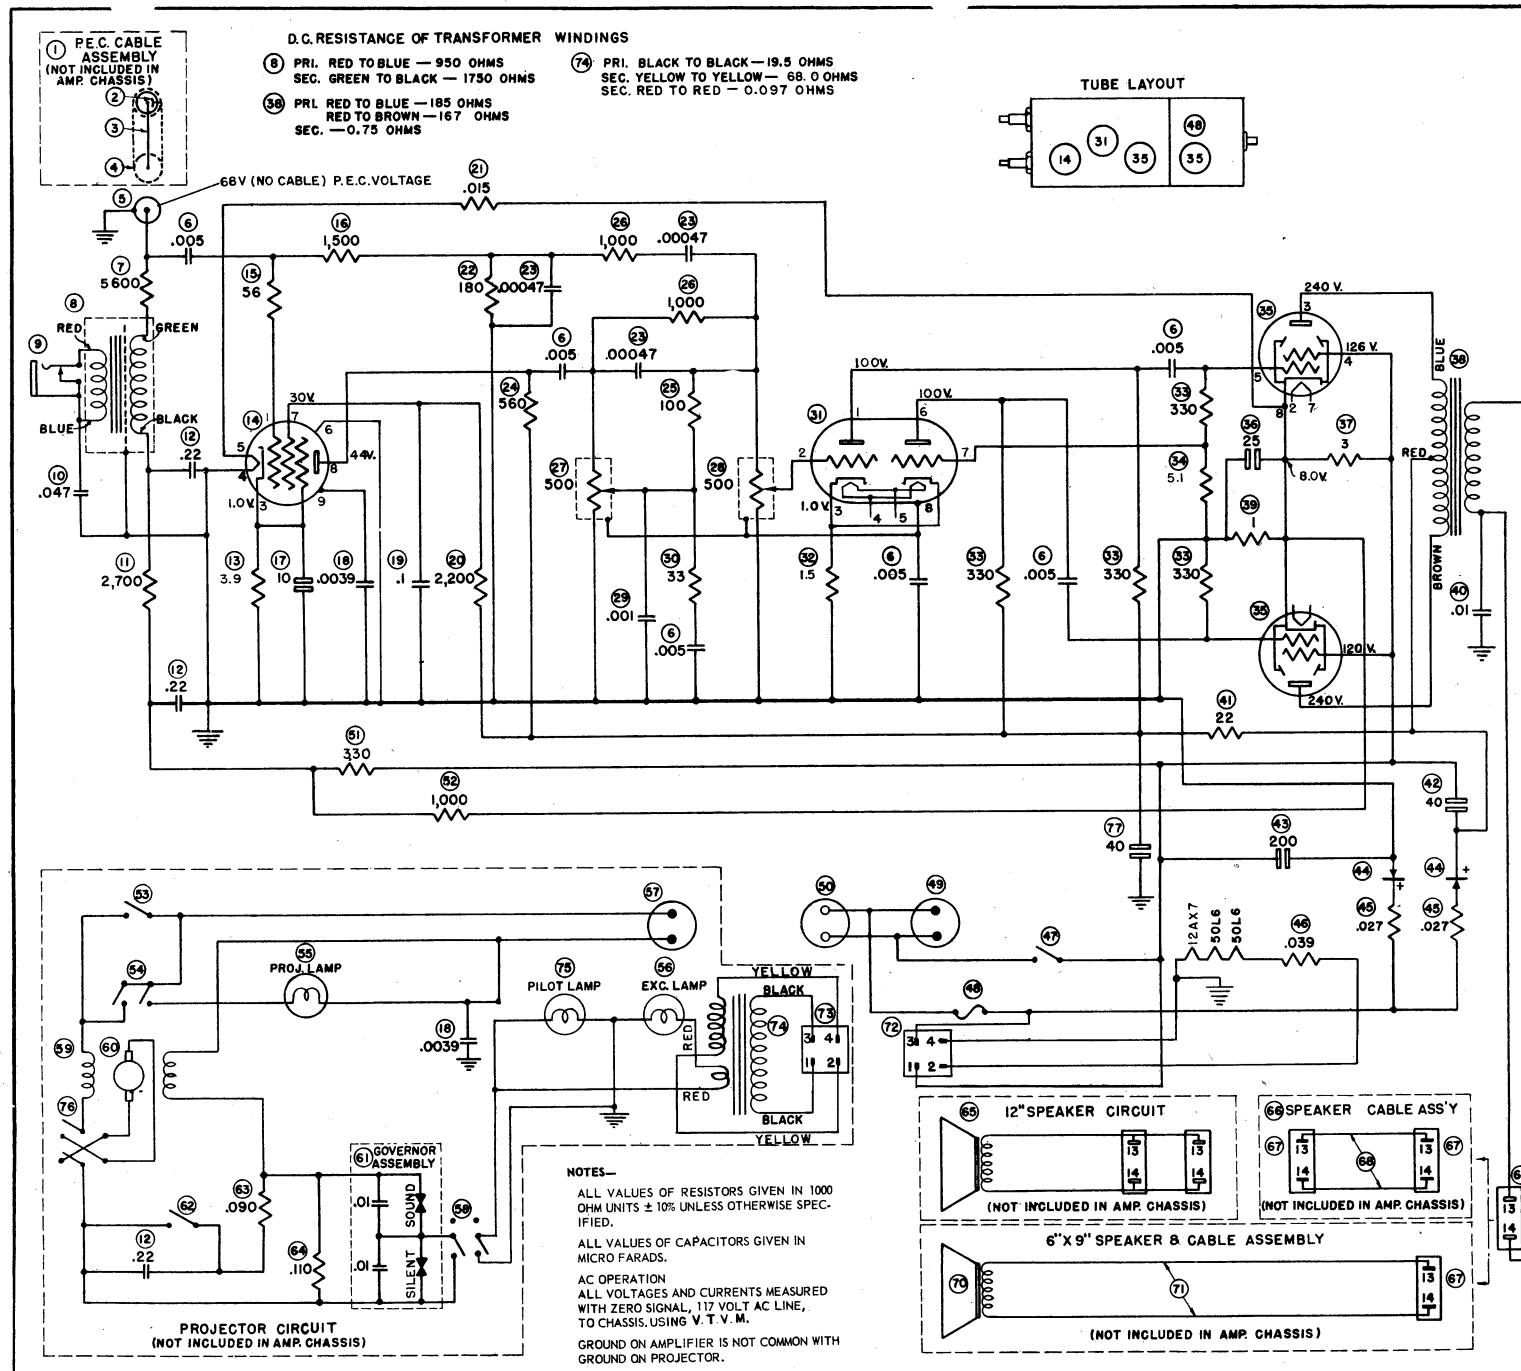

ITEM	V.A.C. PART NO.	ELECTRICAL RATING
1	26759-A	
2	19210	90 V.D.C. PHOTO CELL
3	19218	COAX CABLE
4	26561 & 26646	MALE CONNECTOR
5	26659	MALE CONNECTOR
6	36227	450 V.D.C.
7	36237	1/2 WATT
8	30504
9	18643
10	36232	400 V.D.C.
11	36230	1/2 WATT
12	36228	400 V.D.C.
13	36243	1/2 WATT
14	5879
15	36235	1/2 WATT
16	36222	1/2 WATT
17	25050	50 V.D.C.
18	36238	600 V.D.C.
19	18626	400 V.D.C.
20	36239	1/2 WATT
21	36240	1 WATT
22	36241	1/2 WATT
23	36226	500 V.D.C.
24	36234	1/2 WATT
25	18621	1/2 WATT
26	18616	1/2 WATT
27	26934	1/4 WATT
28	26935	1/4 WATT
29	36242	500 V.D.C.
30	36181	1/2 WATT
31	12AX7
32	18618	1/2 WATT
33	36182	1/2 WATT 5%
34	36233	1/2 WATT 5%
35	50L6
36	36184	50 V.D.C.
37	36185	5 WATT
38	30507	PRI. 6000 OHM P.P. SEC. 0-8 OHM
39	36186	2 WATT
40	18628	450 V.D.C.
41	36188	1 WATT
42	36189	150 V.D.C.
43	36190	150 V.D.C.
44	23113	150 M.A.
45	36191	5 WATT
46	36192	2 WATT
47	PART OF #26935	3 AMP, 125 V. 2 AMP.
48	19978	15 AMP, 125 V.
49	30541	15 AMP, 125 V.
50	20169	15 AMP, 125 V.
51	36182	1/2 WATT 5%
52	18616	1/2 WATT 5%
53	18641	6 AMP, 125 V.
54	23330	10 AMP, 125 V.
55	PROJ. LAMP	750 WATT 110 V.
56	19299	6.5 AMP, 5 V.
57	19747, 30559, & 30540	15 AMP, 125 V.
58	26587	6 AMP, 125 V.
59	30519
60	26841
61	26708-A	GOVERNOR ASSY.
62	26949	15 AMP, 125 V.
63	26930	20 WATT
64	26931	30 WATT
65	25166	8 OHM VOICE COIL
66	25181-A
67	25096
68	25066	50 FEET
69	25030-2
70	26103
71	25066	50 FEET
72	30586	15 AMP, 125 V.
73	23298	15 AMP, 125 V.
74	23299	PRI. 117 V. 50-60 CYCLE SEC. 5.65AMP & 117V.15A
75	28130	0.15 AMP, 5 V.
76	11026	3 AMP, 125 V.
77	36195	350 V.



WIRING DIAGRAM MODEL 60-10

VICTOR ANIMATOGRAPH CORP.

DAVENPORT, IOWA U. S. A.

U. S. A.

ISSUE 3

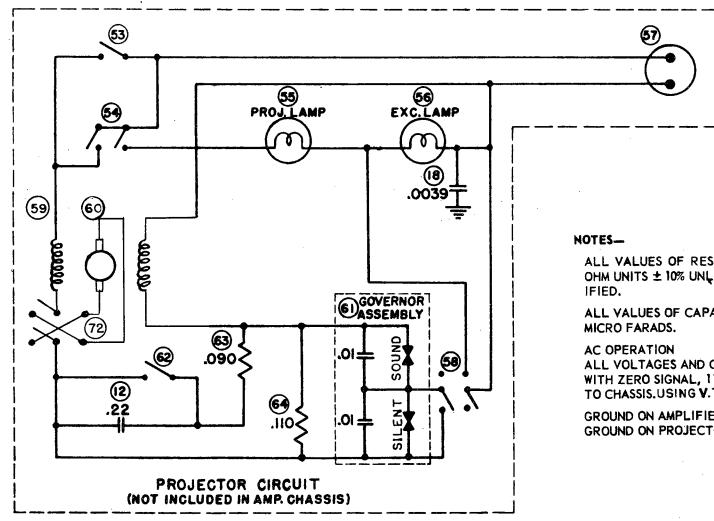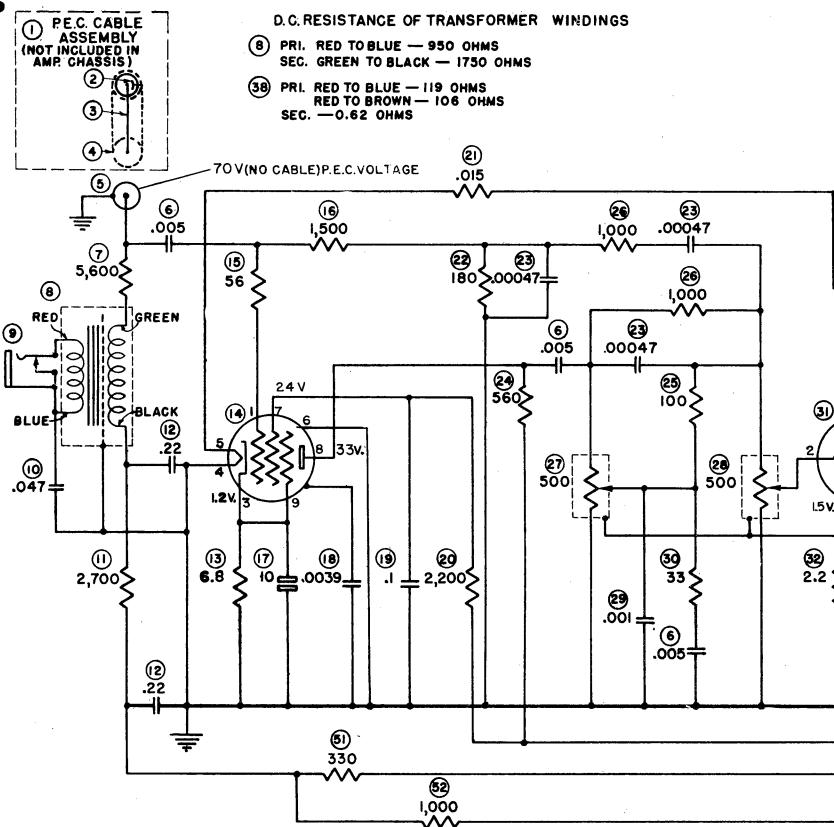

NOTES.




ALL VALUES OF RESISTORS GIVEN IN 1000 OHM UNITS $\pm 10\%$ UNLESS OTHERWISE SPECIFIED.

ALL VALUES OF CAPACITORS GIVEN IN
MICRO FARADS.

AC OPERATION
ALL VOLTAGES AND CURRENTS MEASURED
WITH ZERO SIGNAL, 117 VOLT AC LINE,
TO CHASSIS.USING V.T.V.M.

GROUND ON AMPLIFIER IS NOT COMMON WITH
GROUND ON PROJECTOR.

GROUND ON AMPLIFIER IS NOT COMMON WITH GROUND ON PROJECTOR.

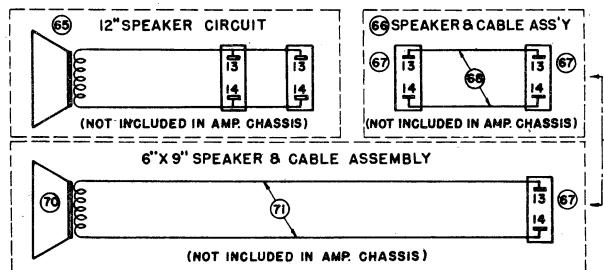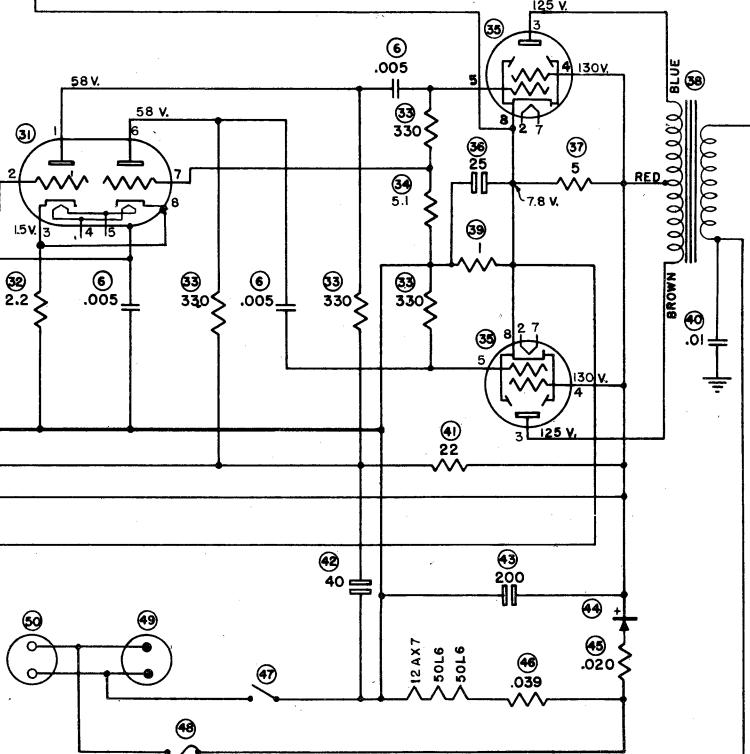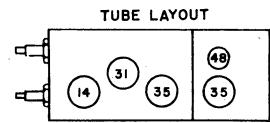

ITEM	V.A.C. PART	ELECTRICAL RATING
1	26759-A
2	19210	90 V.D.C. PHOTO CELL # 927
3	19218	COAX CABLE
4	26561 & 26646	MALE CONNECTOR
5	26889	FEMALE CONNECTOR
6	36227	450 V.D.C.
7	36237	1/2 WATT
8	30504
9	18643
10	36232	400 V.D.C.
11	36230	1/2 WATT
12	36278	400 V.D.C.
13	36196	1/2 WATT
14	5879
15	36235	1/2 WATT
16	36222	1/2 WATT
17	25950	50 V.D.C.
18	18631	600 V.D.C.
19	18676	400 V.D.C.
20	36239	1/2 WATT
21	36240	1 WATT
22	36241	1/2 WATT
23	36226	500 V.D.C.
24	36234	1/2 WATT
25	18621	1/2 WATT
26	18616	1/2 WATT 5%
27	26934	1/4 WATT
28	26935	1/4 WATT
29	36242	500 V.D.C.
30	36181	1/2 WATT
31	12KA7
32	36197	1/2 WATT
33	36182	1/2 WATT 5%
34	36233	1/2 WATT 5%
35	50L6
36	36184	50 V.D.C.
37	36198	5 WATT
38	30502	(PRI) 4000A~P.P. (SEC.) 0-8~
39	36186	2 WATT
40	18628	450 V.D.C.
41	36188	1 WATT
42	36189	150 V.D.C.
43	36190	150 V.D.C.
44	23113	150 M.A.
45	36199	5 WATT
46	36192	2 WATT
47	PART OF # 26935	3 AMP. 125 V.
48	19978	2 AMP.
49	30541	15 AMP. 125 V.
50	20169	15 AMP. 125 V.
51	36182	1/2 WATT 5%
52	18616	1/2 WATT 5%
53	18641	3 AMP. 125 V.
54	23330	10 AMP. 125 V.
55	PROJ. LAMP	750 WATT 110 V.
56	19299	6.5 AMP. 5 V.
57	19747, 30559 & 30540	15 AMP. 125 V.
58	26587	6 AMP. 125 V.
59	30519
60	26841
61	26708-A	GOVERNOR ASSY.
62	26949	15 AMP. 125 V.
63	26930	20 WATT
64	26931	30 WATT
65	25166	8 OHM VOICE COIL
66	25181-A
67	25096
68	25066	75 FEET
69	25030-2
70	26103
71	25066	50 FEET
72	31074	34AMP. 125V

WIRING DIAGRAM MODEL 60-4





VICTOR ANIMATOGRAPH CORP.

DAVENPORT, IOWA

U. S. A.

PART NO. 36061

ISSUE 1

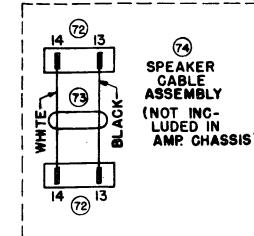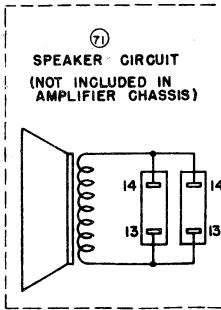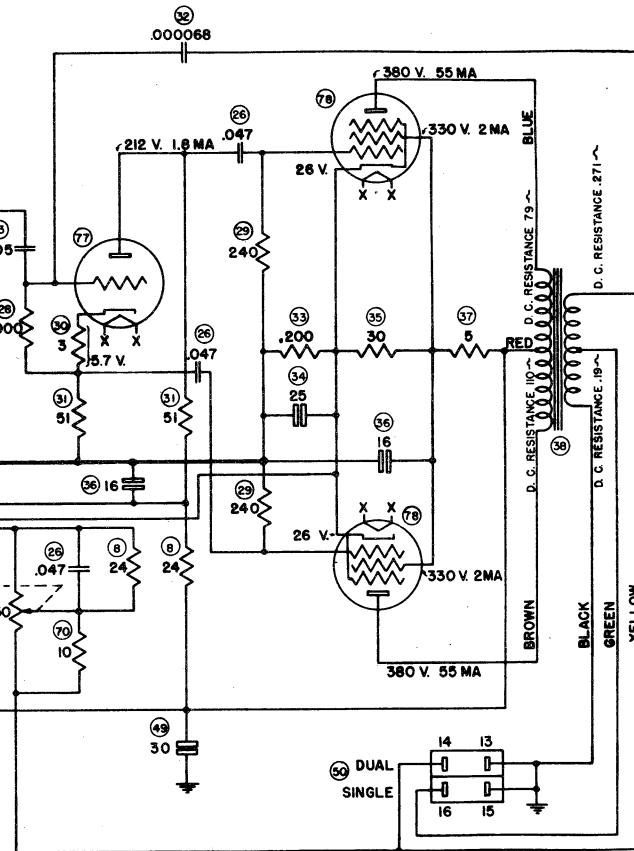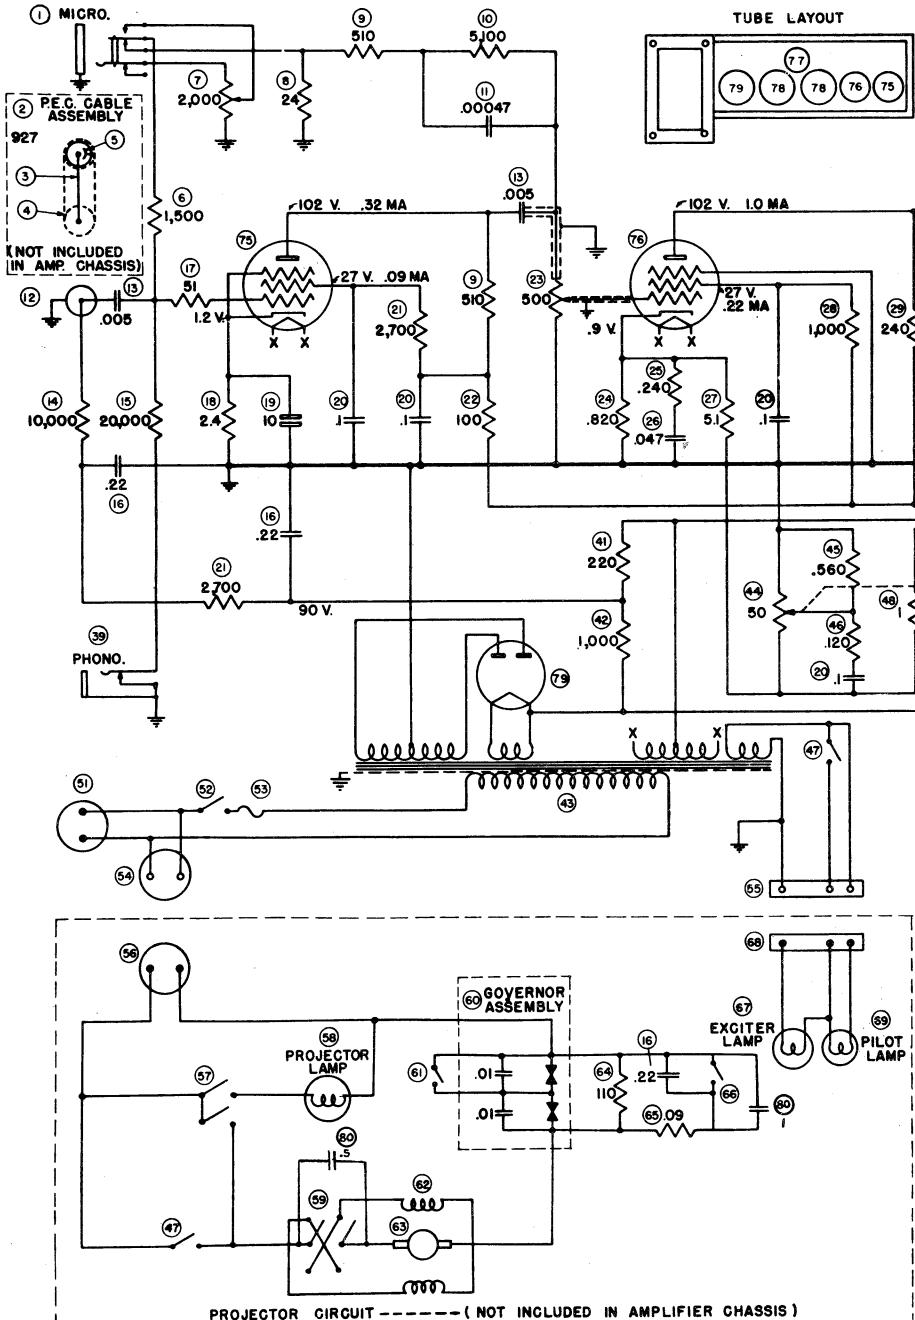

NOTE--
ALL VALUES OF RESISTOR GIVEN IN 1,000 OHM
UNITS \pm 10% UNLESS OTHERWISE SPECIFIED.

ALL VALUES OF CAPACITORS GIVEN IN MICROFARADS

ALL VOLTAGES AND CURRENTS MEASURED WITH
ZERO SIGNAL, 117 VOLT AC LINE, TO CHASSIS
UNLESS OTHERWISE INDICATED.

ITEM V.A.C. PART ELECTRICAL RATING



1	262701	
2	26905A	
3	19218	
4	26561	
5	19210	90 VDC Photo Cell.
6	36222	1/2 Watt.
7	23148	1/2 Watt.
8	18670	1/2 Watt.
9	15056B	1/2 Watt.
10	11115	1/2 Watt.
11	36226	500 VDC.
12	24889	
13	36227	450 VDC.
14	36201	1/2 Watt.
15	36202	1/2 Watt.
16	36228	400 VDC.
17	18622	1/2 Watt.
18	36203	1/2 Watt.
19	25050	50 VDC.
20	11626	400 VDC.
21	34230	1/2 Watt.
22	18621	1/2 Watt.
23	18852	1/2 Watt.
24	36204	1/2 Watt.
25	36231	1/2 Watt.
26	36232	400 VDC.
27	36233	1/2 Watt. 5%
28	18616	1/2 Watt. 5%
29	15059	1/2 Watt.
30	18619	1/2 Watt.
31	18622	1/2 Watt.
32	36207	500 VDC.
33	19722	10 Watt. 5%
34	36184	50 VDC.
35	19635	10 Watt. 5%
36	36210	450 VDC.
37	36211	5 Watt. 5%
38	26790	6600 Ohm P to P (Pri.) 0-4-8 (Sec.)
39	18643	
40		
41	36212	1/2 Watt. 5%
42	18614	1/2 Watt. 5%
43	* 26925	50-60 Cycle. Model 60-2
44	26936	25 Cycle. Model 60-2M
45	26786	1/3 Watt. Dual.
46	36213	1/2 Watt.
47	36214	1/2 Watt.
48	18641	6 Amp. 125 Volts.
49	19934	1/2 Watt.
50	36215	450 VDC. Must Withstand 203 Ma Ripple Current.
51	26787	
52	19747	
53	Part of 18852	15 Amp. 125 Volt.
54	19978	3 Amp. 125 Volt.
55	25118	2 Amp.
56	20629	15 Amp. 125 Volt.
57	19747 & 30559	15 Amp. 125 Volt.
58	23330	10 Amp. 125 Volt.
59	Proj. Lamp	750-1000 Watt. 100-120 Volt.
60	11024	3 Amp. 125 Volt.
61	26708A	.01 Mfd. 450 Volt.
62	18640	6 Amp. 125 Volt.
63	20260	
64	26841	
65	26931	30 Watt 110 Ohms.
66	26730	200 Watt 90 Ohms.
67	26949	15 Amp. 125 Volt.
68	19209	6.5 Amp. 5 Volt.
69	20428	
70	28130	0.15 Amp. 5 Volt.
71	19936	1/2 Watt.
72	25166	8 Ohm. Voice Coil.
73	25096	
74	25066	75 Ft.
75	25181A	
76	647	
77	647	
78	646-G.	
79	5144-G.	
80	25127.	200 VDC.

*These circuits are identical except for Item 43

**WIRING DIAGRAM
MODEL 60-2
50-60 CYCLE
PART NO. 26867 ISSUE**

WIRING DIAGRAM
MODEL 60-2M
25 CYCLE
PART NO. 26873 ISSUE 2

VICTOR ANIMATOGRAPH CORP.
Davenport, Iowa

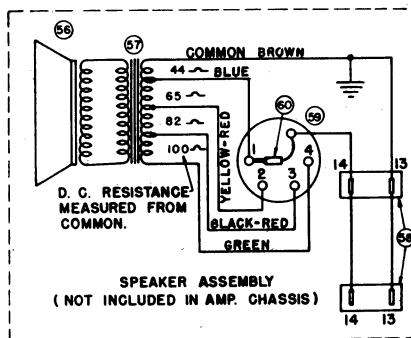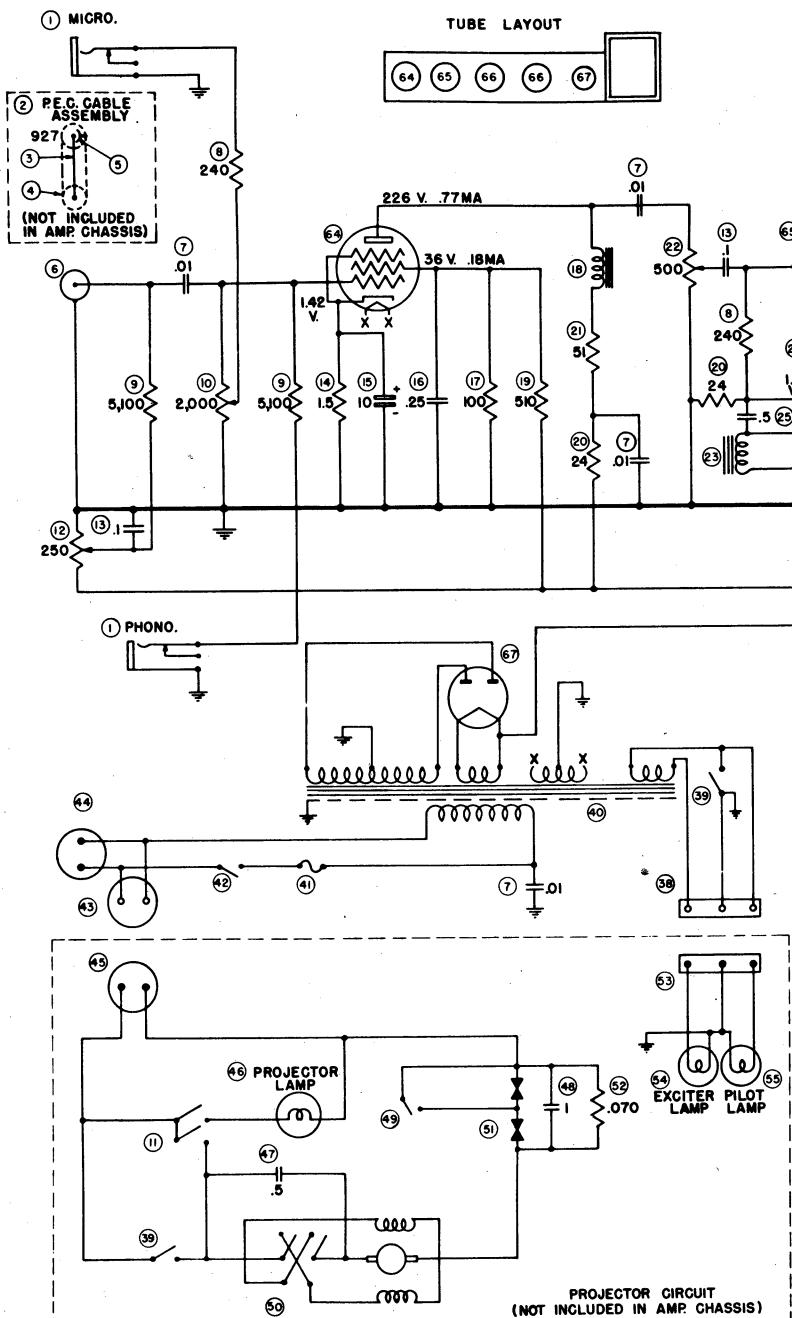

NOTE--
ALL VALUES OF RESISTOR GIVEN IN 1,000 OHM
UNITS $\pm 10\%$ UNLESS OTHERWISE SPECIFIED.

ALL VALUES OF CAPACITORS GIVEN IN MICROFARADS.

ALL VOLTAGES AND CURRENTS MEASURED WITH
ZERO SIGNAL, 117 VOLT AC LINE, TO CHASSIS.
UNLESS OTHERWISE INDICATED.

GROUND ON AMPLIFIER IS COMMON WITH GROUND ON PROJECTOR.

ITEM	V.A.C. PART	ELECTRICAL RATING
1	18643	
2	20717-A	P.E.C. NOT INCLUDED
3	19218	COAX. CABLE
4	19819	
5	19210	90 VDC PHOTO CELL
6	19818	
7	18628	450 VDC
8	15069	1/2 WATT
9	18615	1/2 WATT
10	23148	1/3 WATT
11	23330	10 AMP. 125 VOLT
12	19719	1/3 WATT
13	18626	400 VDC
14	18618	1/2 WATT
15	25050	50 VDC
16	25021	400 VDC
17	18621	1/2 WATT
18	15076	PEAKING CHOKE D.C. RESISTANCE 300~
19	15068	1/2 WATT
20	18670	1/2 WATT
21	18622	1/2 WATT
22	18852	1/3 WATT
23	15077	BASS CHOKE D.C. RESISTANCE 200~
24	25126	1/2 WATT
25	15072	200 VDC
26	18661	600 VDC
27	18635	1/3 WATT
28	18631	600 VDC
29	23127	1/3 WATT
30	23277	500 VDC
31	19635	10 WATT
32	19934	1/2 WATT
33	19722	10 WATT
34	15120	6600 P TO P (PRI) 500 OHM LINE (SEC)
35	19675	.450 VDC
36	19668	5 WATT
37	23134	D.C. RESISTANCE 175~
38	20629	
39	18641	6 AMP. 125 VOLT
40	19845	50-60 CYCLE
41	19978	2 AMP.
42	PART OF 18852	3 AMP. 125 VOLT
43	20169	15 AMP. 125 VOLT
44	19747	15 AMP. 125 VOLT
45	17192	15 AMP. 125 VOLT
46	PROJ. LAMP	750-1000 WATT 100-120 VOLT
47	25127	200 VDC
48		
49	18640	6 AMP. 125 VOLT
50	11026	3 AMP. 125 VOLT
51	20257	
52	19685	WIRE WOUND 30 WATT
53	20628	
54	19299	6.5 AMP. 5 VOLT
55	28130	.15 AMP. 5 VOLT
56	15061	
57	15064	0-500-1000-1500-2000 (PRI) 8 OHM (SEC)
58	25030	
59	19717	
60	19718	
61	25096	
62	25066	75 FT.
63	26146-A	
64	6S17	
65	6SN7-GT	
66	6L6-G	
67	5U4-G	


WIRING DIAGRAM


MODEL 60

VICTOR ANIMATOGRAPH CORP.


DAVENTON, TOWN

PART NO. 23244 ISSUE 9

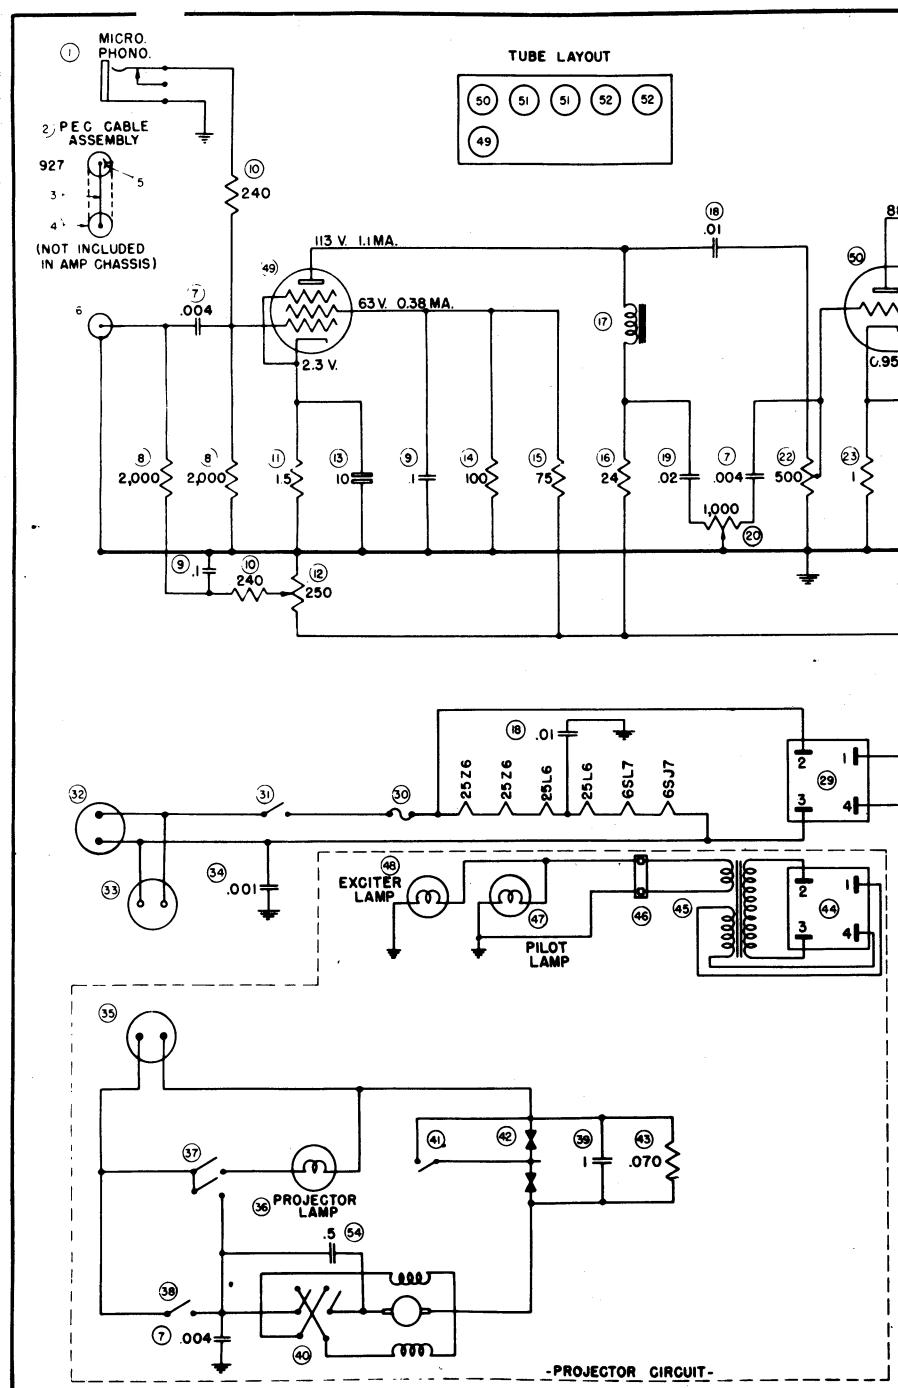

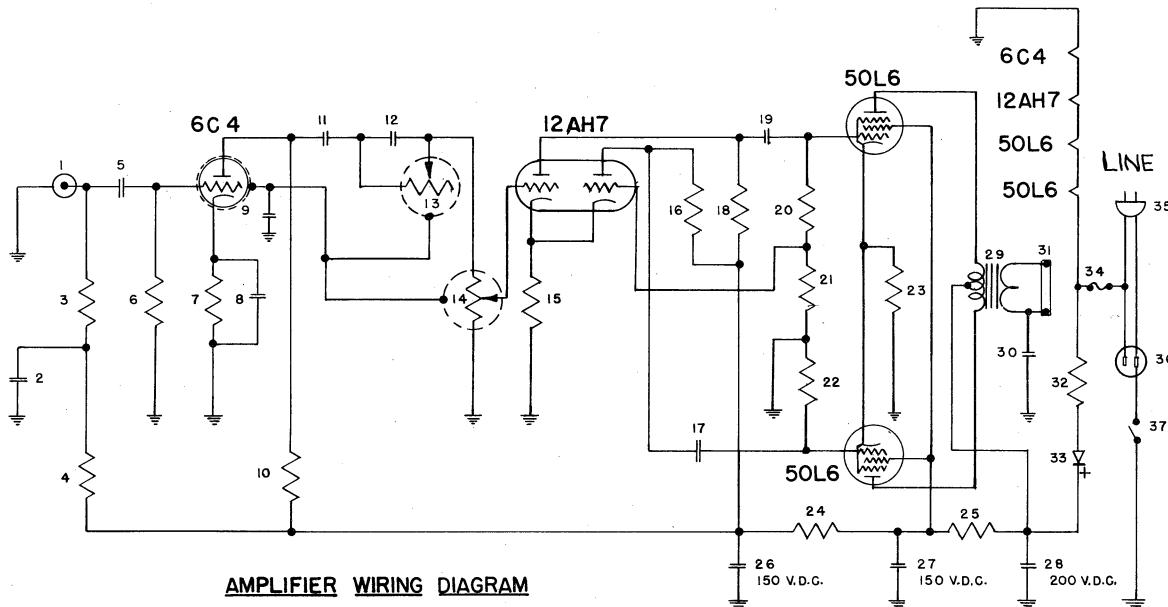


AMPLIFIER WIRING DIAGRAM

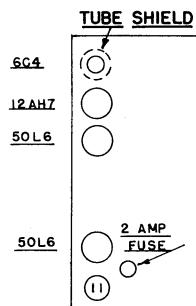

AMPLIFIER TUBE LAYOUT

NOTE : PROJECTOR MECHANISM TO BE GROUNDED
TO PROJECTOR CASE.

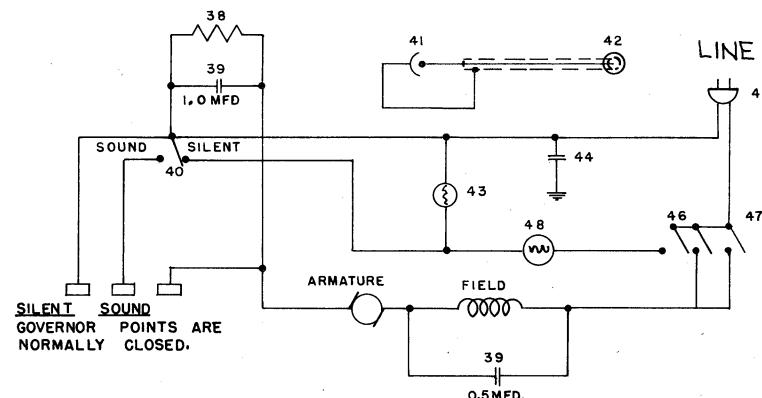


PROJECTOR WIRING DIAGRAM

PART NUMBER 26502 ISSUE 2		
DR. BY	DATE	CK. BY
HUCK 5-12-53		
CHANGE NO.	BY	DATE
10641	RB	2-14-43

1.	26562	P.E.CELL SOCKET
2.	18626	CAP. 0.1 MFD. 400 V.D.C.
3.	18620	RESISTOR 2 MEG. 1/2 WATT
4.	15069	RESISTOR 240K 1/2 WATT
5.	18631	CAP. 0.004 MFD. 600 V.D.C.
6.	18620	RESISTOR 2 MEG. 1/2 WATT
7.	19666	RESISTOR 5.1K 1/2 WATT
8.	25050	CAP. 10 MFD. 50W.V.D.C.
9.	18631	CAP. 0.004 MFD. 600 V.D.C.
10.	15069	RESISTOR 240K 1/2 WATT
11.	18628	CAP. 0.01 MFD. 450 V.D.C.
12.	23088	CAP. 0.0005 MFD. 600 V.D.C.
13.	18635	TONE CONTROL 1 MEG.
14.	18852	VOLUME CONTROL 500K
15.	18619	RESISTOR 3K 1/2 WATT
16.	15069	RESISTOR 240K 1/2 WATT
17.	18661	CAP. 0.02 MFD. 600 V.D.C.
18.	15069	RESISTOR 240K 1/2 WATT
19.	18661	CAP. 0.02 MFD. 600 V.D.C.
20.	15069	RESISTOR 240K 1/2 WATT
21.	26585	RESISTOR 22K 1/2 WATT
22.	15069	RESISTOR 240K 1/2 WATT
23.	23102	RESISTOR 75 OHM VIT. 10 WATT
24.	19936	RESISTOR 10K 1/2 W
25.	23115	RESISTOR 2K 5 WATT
26.		
27.	23103	CAP. 40-40-40 MFD./150-150-200 V.D.C.
28.		
29.	23282	OUTPUT TRANSFORMER
30.	18631	CAP. 0.004 MFD. 600 V.D.C.
31.	25030-2	SPEAKER SOCKET
32.	23114	RESISTOR 270HM 5 WATT
33.	23113	SELENIUM RECTIFIER 150 MA.
34.	19978	FUSE - 2 AMP.
35.	26641	LINE PLUG
36.	20169	A.C. SOCKET
37.		S.P.S.T SWITCH - PART OF ITEM # 14
38.	18685	RESISTOR 70 OHM 40 WATT
39.	265592	CAP. 1.0-0.5 MFD./200-200 V.D.C.
40.	26587	SWITCH, SOUND-SILENT
41.	19210	PHOTO ELECTRIC CELL
42.	19819	P.E.C. MALE CONNECTOR
43.	19299	EXCITER LAMP - 5 VOLT 6.5 AMP.
44.	18631	CAP. 0.004 MFD. 600 V.D.C.
45.	26613	PLUG, PROJECTOR
46.	23330	LAMP SWITCH
47.	18641	MOTOR SWITCH
48.		PROJECTION LAMP - 750 WATT

GENERAL TOLERANCES		MATERIAL SPECIFICATIONS		NAME WIRING DIAGRAM	
DEC. \pm	FRAC. \pm	ANGLES	<i>VE</i>	SCALE	MODEL
CONCENTRICITY WITHIN		T. I. R.	F-2-C-2		
RUNOUT LESS THAN		T. I. R. AT MAX. DIA.			
MAX. DEVIATION FROM STRAIGHT \pm					
TREATMENT & FINISH DATA					
TOLERANCE					
MFG. STANDARD TOL. & SPEC. TO APPLY TO ALL PURCHASED ITEMS & MATERIAL					
VICTOR ANIMATOGRAPH CORP.					
Date			Dwg.		
26502			NUMBER		
			ISSUE 2		

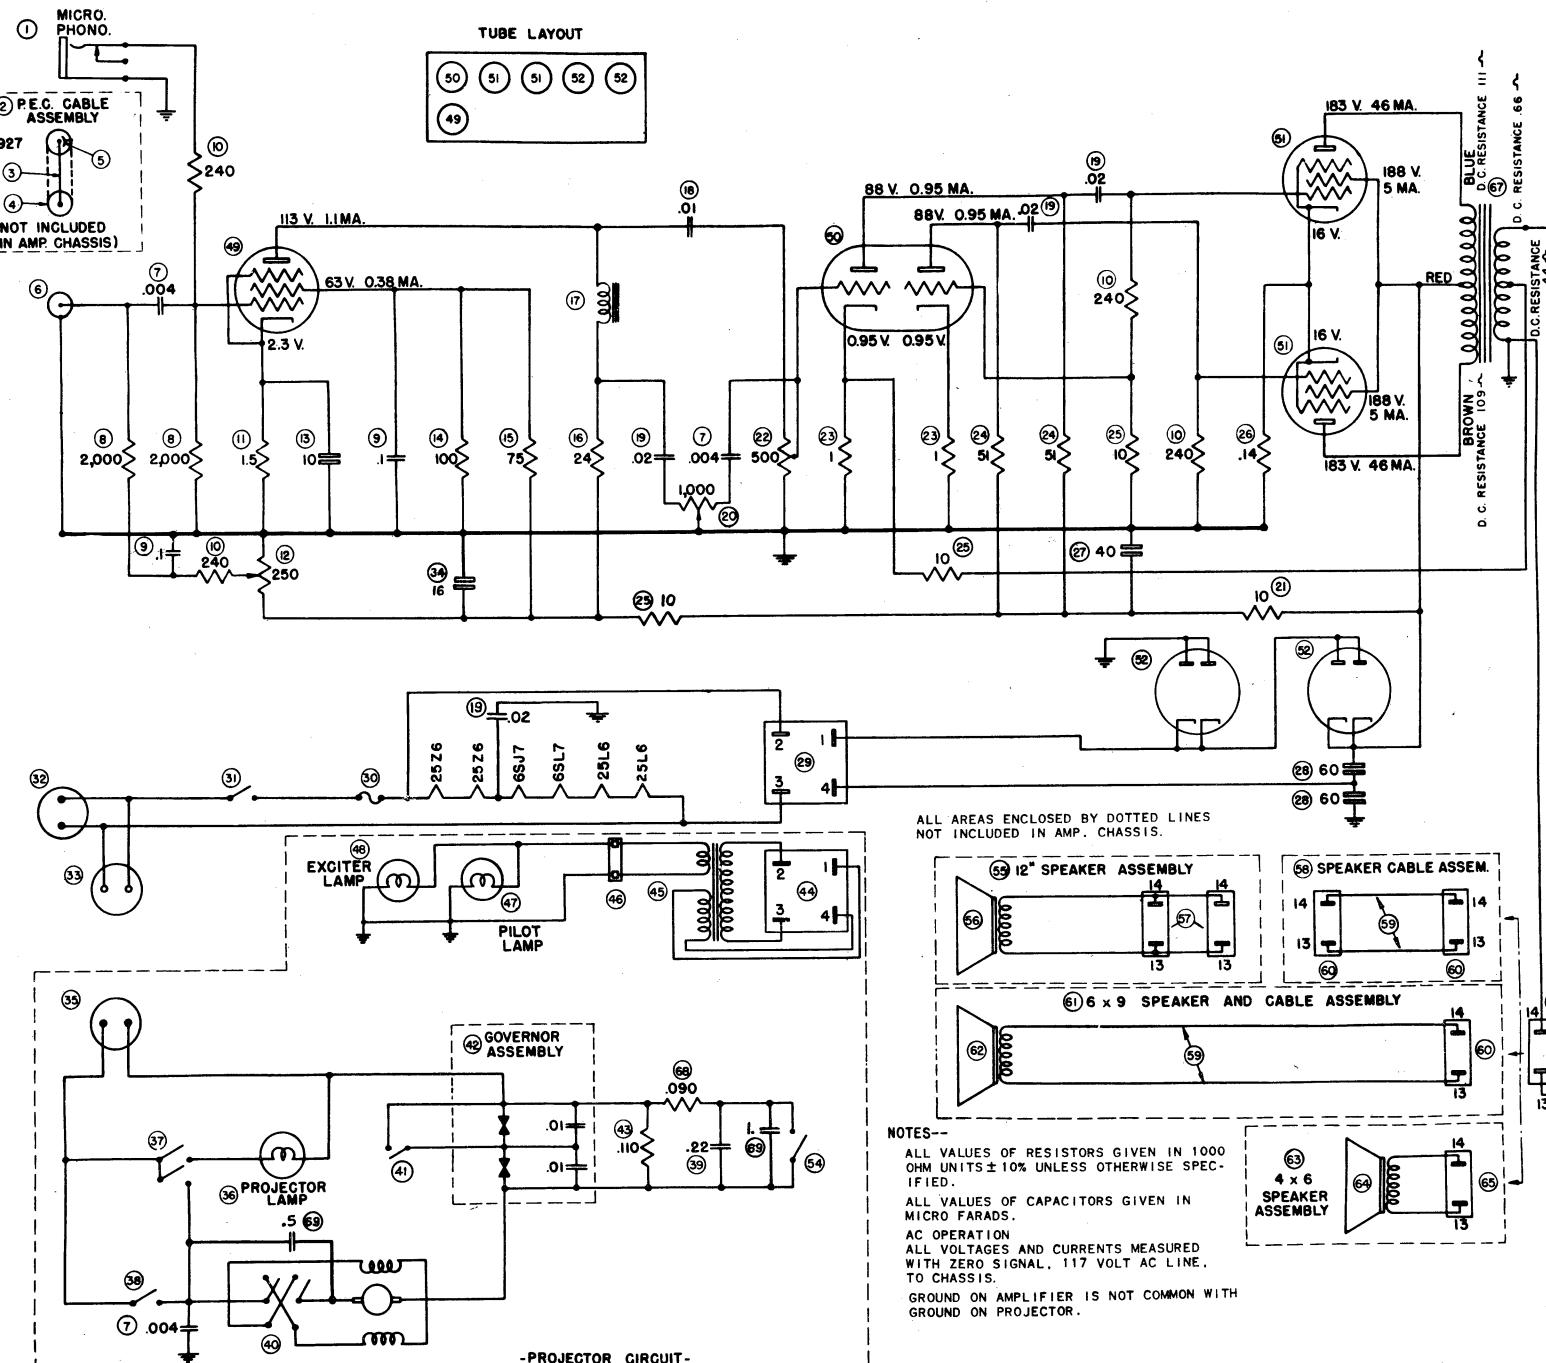

ITEM	V.A.C.	PART	ELECTRICAL RATING
1	18643	P.E.C. NOT INCLUDED	
2	20717-A	COAX. CABLE	
3	19218	90 VDC PHOTO CELL	
4	19819	600 VDC	
5	19210	1/2 WATT	
6	19818	1/2 WATT	
7	18631	18620	400 VDC
8	18626	1/2 WATT	
9	18620	15069	1/2 WATT
10	18626	18618	1/2 WATT
11	18618	18619	1/3 WATT
12	18619	25050	50 VDC
13	25050	18621	1/2 WATT
14	18621	18617	1/2 WATT
15	18617	18670	1/2 WATT
16	18670	22290	300 OHMS DC RESISTANCE
17	22290	18628	450 VDC
18	18628	18661	500 VDC
19	18661	18635	1/3 WATT
20	18635	25123	1 WATT
21	25123	18852	1/3 WATT
22	18852	19934	1/2 WATT
23	19934	18622	1/2 WATT
24	18622	19936	1/2 WATT
25	19936	19689	5 WATT $\pm 5\%$
26	19689	25121	250 VDC
27	25121	23259	150 VDC
28	23259	23297	...
29	23297	19978	2 AMP.
30	19978	PART OF 18852	3 AMP. 125 VOLT
31	PART OF 18852	19747	15 AMP. 125 VOLT
32	19747	25119	15 AMP. 125 VOLT
33	25119	23296	250 VDC
34	23296	17192	15 AMP. 125 VOLT
35	17192	750 WATT 110 VOLT	
36	PROJ. LAMP	23330	10 AMP. 125 VOLT
37	23330	18641	6 AMP. 125 VOLT
38	18641	25021	400 VDC
39	25021	11026	3 AMP. 125 VOLT
40	11026	18640	6 AMP. 125 VOLT
41	18640	26708-A	450 VDC
42	26708-A	26931	30 WATT
43	26931	23298	117 V. (PRI)
44	23298	23299	120 V. .12 AMP. (SEC. #1)
45	23299	5 V. 6.5 AMP. (SEC. #2)	
46	5 V. 6.5 AMP.	23295	5 VOLT .15 AMP.
47	28130	48	5 VOLT 6.5 AMP.
48	19299	49	...
49	65J7	50	65L7
50	65L7	51	25L6
51	25L6	52	25Z6
52	25Z6	53	25030-2
53	25030-2	54	26949
54	26949	55	26143-A
55	26143-A	56	15061
56	15061	57	25030
57	25030	58	25171-A
58	25171-A	59	25066
59	25066	60	25096
60	25096	61	26626-A
61	26626-A	62	26103
62	26103	63	23267-A
63	23267-A	64	23303
64	23303	65	23301
65	23301	66	23282
66	23282	67	(PRI) 4000 \sim P-P- (SEC.) 0-4-8 \sim
67	(PRI) 4000 \sim P-P- (SEC.) 0-4-8 \sim	68	20 WATT
68	20 WATT	69	25127
69	25127	70	200 V.D.C.


WIRING DIAGRAM MODEL 55-2

VICTOR ANIMATOGRAPH CORP.

Davenport, Iowa

PART NO. 30358

ISSUE |

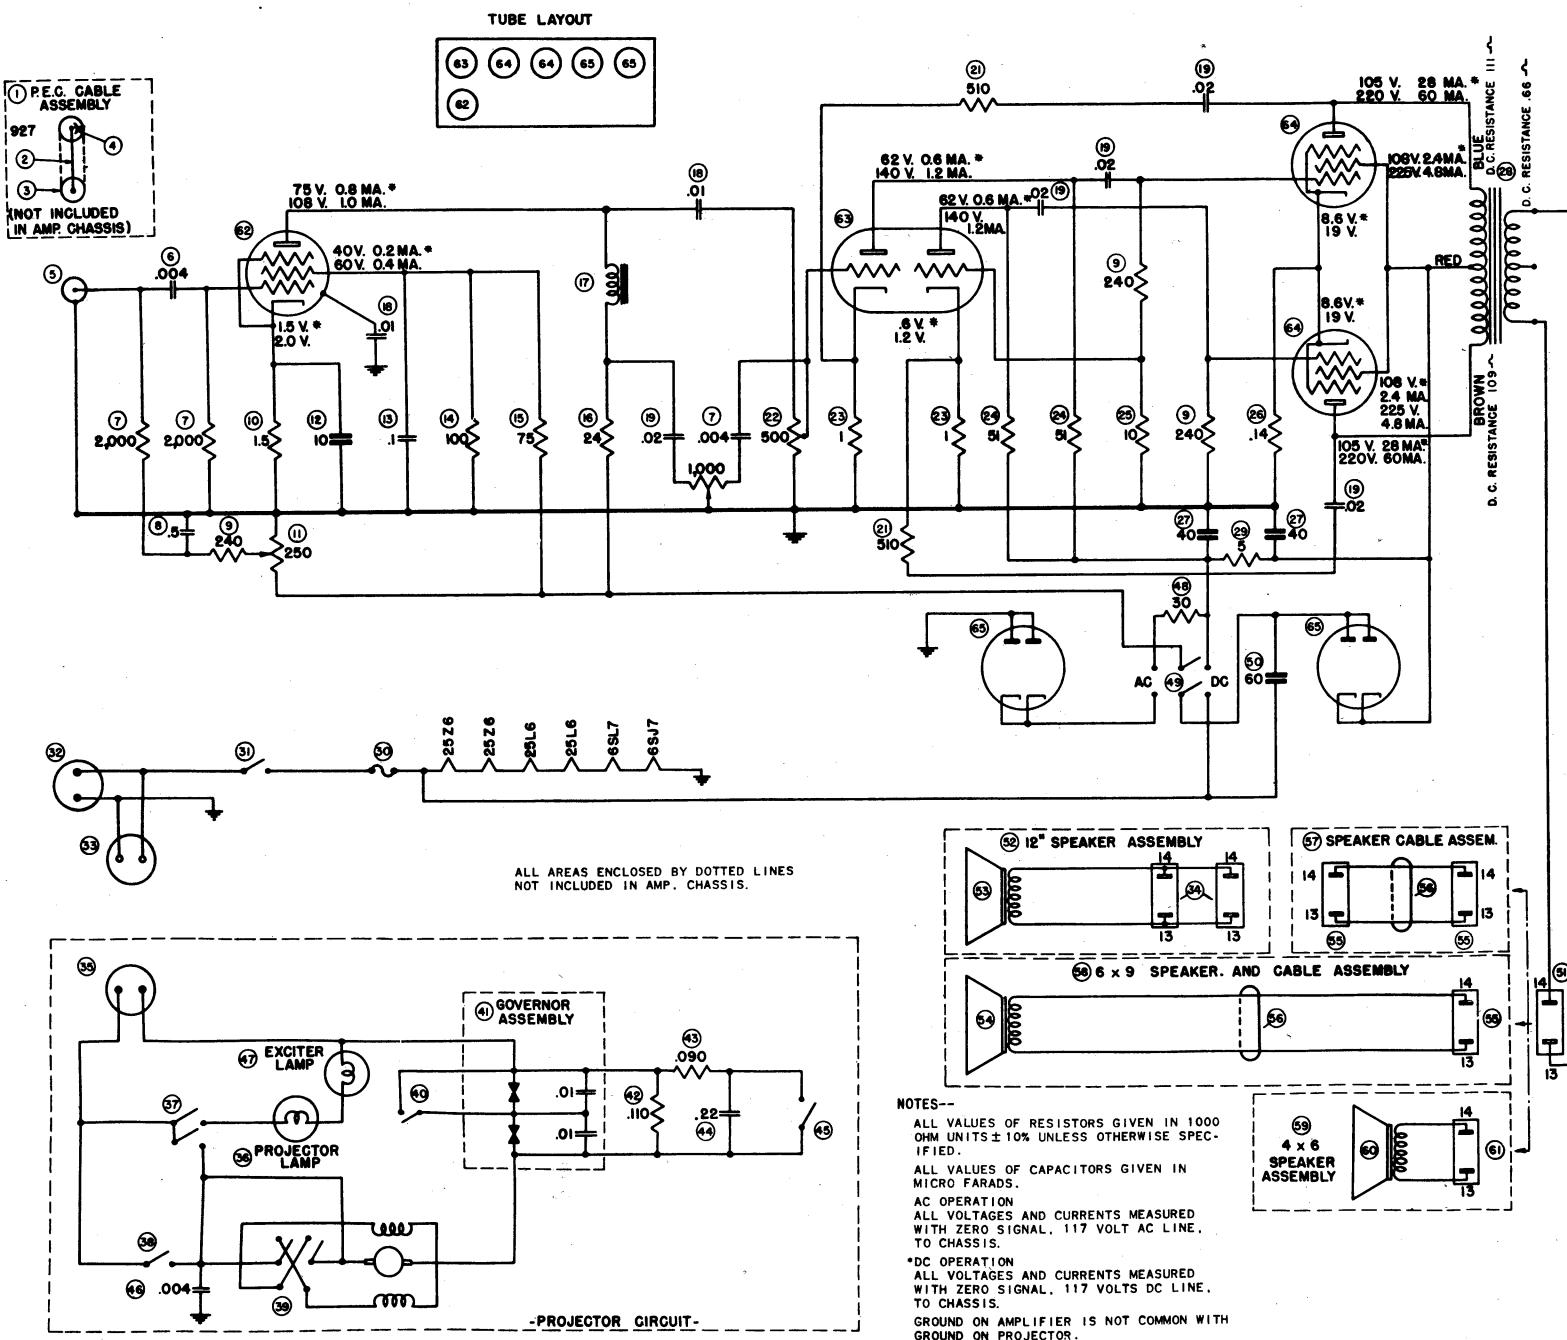

ITEM	V.A.C PART	ELECTRICAL RATING
1	20717-A	P.E.C. NOT INCLUDED
2	19218	COAX. CABLE
3	19819
4	19218	90 VDC PHOTO CELL
5	19818	600 VDC
6	18653	1/2 WATT
7	18620	200 VDC
8	18622	1/2 WATT
9	15069	1/2 WATT
10	18618	1/2 WATT
11	19719	1/3 WATT
12	25050	50 VDC
13	18626	400 VDC
14	18621	1/2 WATT
15	18617	1/2 WATT
16	18670	1/2 WATT
17	22290	300 D.C. RESISTANCE
18	18628	450 VDC
19	18661	600 VDC
20	18635	1/3 WATT
21	15068	1/2 WATT
22	18852	1/3 WATT
23	19934	1/2 WATT
24	18622	1/2 WATT
25	19936	1/2 WATT
26	19689	5 WATT 5%
27	25121	250 VDC
28	23262	4000 P TO P (PRI) 0-4-8 OHM (SEC)
29	25124	1 WATT
30	19978	2 AMP
31	PART OF 18852	3 AMP. 125 VOLT
32	19747	15 AMP. 125 VOLT
33	25118	15 AMP. 125 VOLT
34	25030	
35	19747 & 26523	15 AMP. 125 VOLT
36	PROJ. LAMP	750 WATT
37	23330	12 AMP. 125 VOLT
38	18641	MOTOR SWITCH
39	11026	3 AMP. 125 VOLT
40	18640	6 AMP. 125 VOLT
41	26708-A	450 VDC
42	26931	30 WATT
43	26930	20 WATT
44	25021	400 VDC
45	26949	10 AMP. 125 VOLT
46	26765	1200 VDC
47	19299	6.5 AMP. 5 VOLT
48	25122	1/2 WATT
49	11026	3 AMP. 125 VOLT
50	23259	175 VDC
51	25030-2	
52	26143-A	
53	15061	
54	26103	
55	25096	
56	25066	
57	25181-A	
58	26110-A	
59	26630-A	
60	23303	
61	23301	
62	65J7	
63	65L7 GT	
64	25L6 GT	
65	25Z6 GT	


WIRING DIAGRAM MODEL 55 C-2

VICTOR ANIMATOGRAPH CORP.


Davenport, Iowa

PART NO. 2338C ISSUE 1

PART NUMBER 26986	
ISSUE JK 5-11-53	
DATE	CK BY
CHANGE NO.	BY DATE

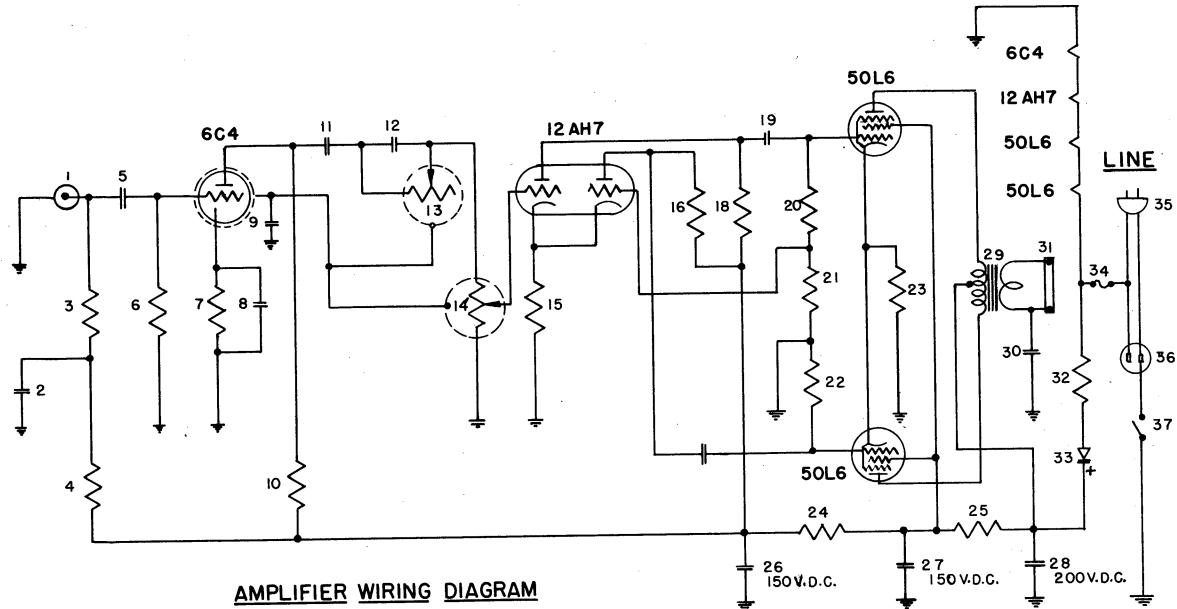

1. 26562 P.E.CELL SOCKET
2. 18626 CAP. O.I MFD. 400 V.D.C.
3. 18620 RESISTOR 2 MEG. 1/2 WATT
4. 15069 RESISTOR 240K. 1/2 WATT
5. 18631 CAP. 0.004 MFD. 600V.D.C.
6. 18620 RESISTOR 2 MEG. 1/2 WATT
7. 19666 RESISTOR 5.1 K 1/2 WATT
8. 25050 CAP. 10 MFD. 50W.V.D.C.
9. 18631 CAP. 0.004 MFD. 600 V.D.C.
10. 15069 RESISTOR 240 K. 1/2 WATT
11. 18628 CAP. O.I MFD. 600 V.D.C.
12. 23088 CAP. 0.0005 MFD. 600 V.D.C.
13. 18635 TONE CONTROL 1MEG.
14. 18852 VOLUME CONTROL 500K
15. 18619 RESISTOR 3K 1/2 WATT
16. 15069 RESISTOR 240K 1/2 WATT
17. 18661 CAP. 0.02 MFD. 600 V.D.C.
18. 15069 RESISTOR 240K. 1/2 WATT
19. 18661 CAP. 0.02 MFD. 600V.D.C.
20. 15069 RESISTOR 240K. 1/2 WATT
21. 26585 RESISTOR 22 K. 1/2 WATT
22. 15069 RESISTOR 240 K. 1/2 WATT
23. 23102 RESISTOR 75 OHM VIT. 10 WATT
24. 19936 RESISTOR 10K. 1/2 WATT
25. 23115 RESISTOR 2K. 5 WATT
26. 23103 CAP. 40-40-40 MFD/150-150-200 V.D.C.
27. 23282 OUTPUT TRANSFORMER
28. 18631 CAP. 0.004 MFD. 600 V.D.C.
29. 25030-2 SPEAKER SOCKET
30. 23114 RESISTOR 27 OHM 5 WATT
31. 23113 SELENIUM RECTIFIER 150 MA.
32. 19787 FUSE - 2 AMP.
33. 26641 LINE PLUG
34. 20169 A.C. SOCKET
35. 19685 S.P.S.T. SWITCH - PART OF ITEM #14
36. 26592 RESISTOR 70 OHM 40 WATT
37. 19685 CAP. 1.0-0.5 MFD./200-200 V.D.C.
38. 19685 SWITCH, SOUND-SILENT
39. 26587 PHOTO ELECTRIC-CELL
40. 26587 19210 P.E.C. MALE CONNECTOR
41. 19210 19819 EXCITER LAMP - 5 VOLT 6.5 AMP.
42. 19819 CAP. 0.004 MFD. 600 V.D.C.
43. 19299 44. 18631 45. 26613 46. 23330 47. 18641 PLUG, PROJECTOR LINE
44. 18631 LAMP SWITCH
45. 26613 MOTOR SWITCH
46. 23330 PROJECTION LAMP - 750 WATT
47. 18641

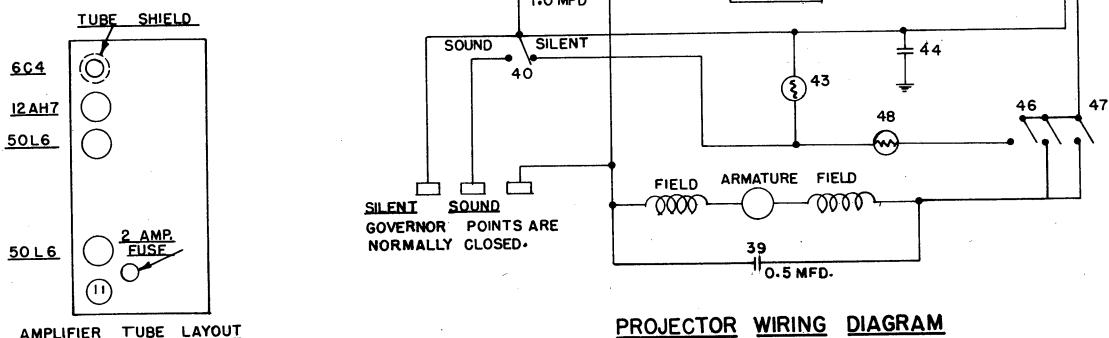



GENERAL TOLERANCES		
DEC. +	FRACT. \pm	ANGLE
CONCENTRICITY, WITHIN		
RUNOUT LESS THAN		
MAX. DEVIATION FROM STRAIGHT \pm		
TOLERANCE		

MATERIAL SPECIFICATIONS
MFG. STANDARD TOL. & SPEC. TO APPLY TO
ALL PURCHASED ITEMS & MATERIAL

SCALE NAME WIRING DIAGRAM
MODEL 56-C-3

VICTOR ANIMATOGRAPH CORP.
Davenport, Iowa

PART NUMBER
26986

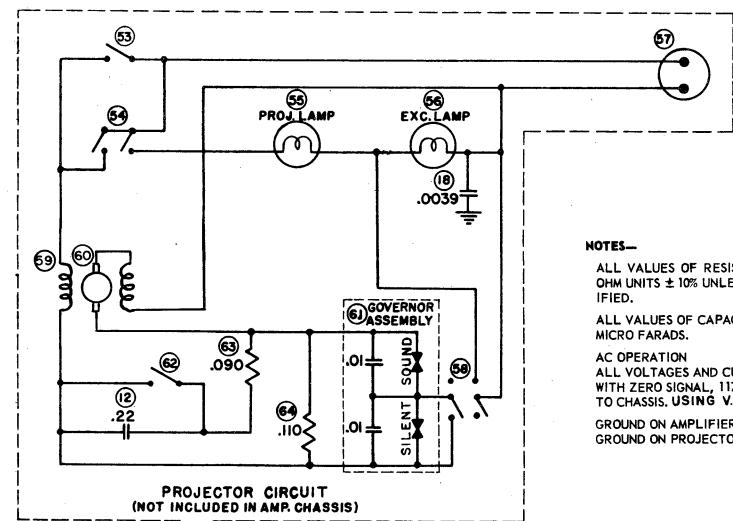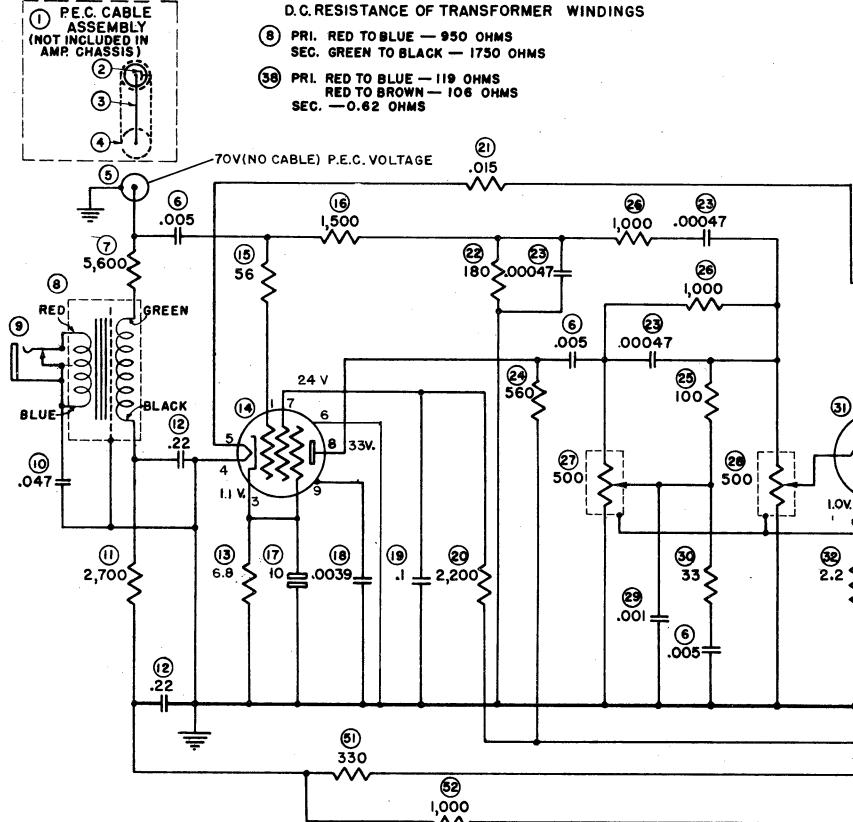




NOTES—

ALL VALUES OF RESISTORS GIVEN IN 1000 OHM UNITS $\pm 10\%$ UNLESS OTHERWISE SPECIFIED.

ALL VALUES OF CAPACITORS GIVEN IN
MICRO FARADS.

AC OPERATION
ALL VOLTAGES AND CURRENTS MEASURED
WITH ZERO SIGNAL, 117 VOLT AC LINE,
TO CHASSIS, USING V.T.V.M.

GROUND ON AMPLIFIER IS NOT COMMON WITH
GROUND ON PROJECTOR.

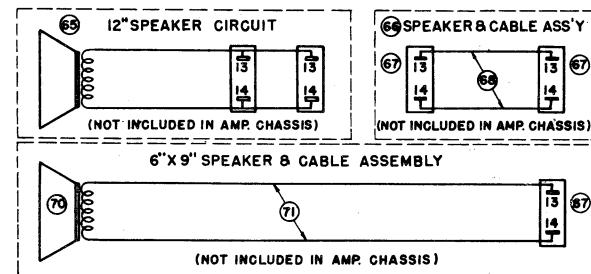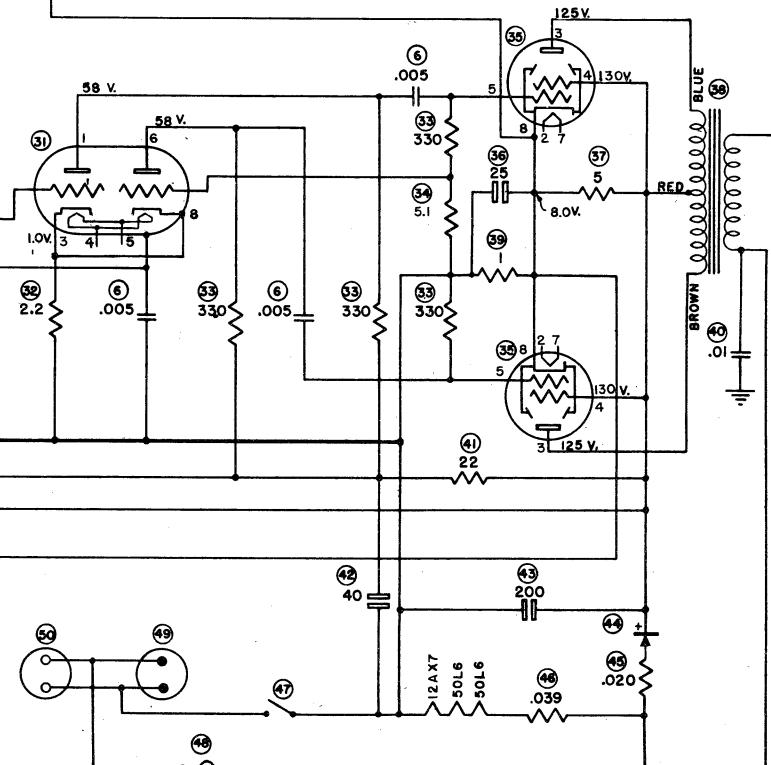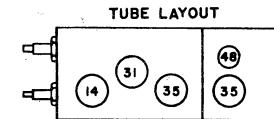

ITEM	V.A.C. PART	ELECTRICAL RATING
1	26759-A
2	19210	90 V.D.C. PHOTO CELL
3	19218	COAX CABLE
4	26561 & 26646	MALE CONNECTOR
5	26689	FEMALE CONNECTOR
6	36227	450 V.D.C.
7	36237	1/2 WATT
8	30504
9	18643
10	36232	400 V.D.C.
11	36230	1/2 WATT
12	36228	400 V.D.C.
13	36194	1/2 WATT
14	5879
15	36235	1/2 WATT
16	36222	1/2 WATT
17	25050	50 V.D.C.
18	18631	600 V.D.C.
19	18626	400 V.D.C.
20	36239	1/2 WATT
21	36240	1 WATT
22	36241	1/2 WATT
23	36276	500 V.D.C.
24	36234	1/2 WATT
25	18621	1/2 WATT
26	18616	1/2 WATT 5%
27	26934	1/4 WATT
28	26935	1/4 WATT
29	36242	500 V.D.C.
30	36181	1/2 WATT
31	12AX7
32	36197	1/2 WATT
33	36182	1/2 WATT 5%
34	36233	1/2 WATT 5%
35	50L6
36	36184	50 V.D.C.
37	36198	5 WATT
38	30502	(PRI.) 4000~ P.P. (SEC.) 0-8~
39	36166	2 WATT
40	18628	450 V.D.C.
41	36188	1 WATT
42	36189	150 V.D.C.
43	36190	150 V.D.C.
44	23113	150 M.A.
45	36199	5 WATT
46	36192	2 WATT
47	PART OF #26935	3 AMP. 125 V.
48	19978	2 AMP.
49	30541	15 AMP. 125 V.
50	20169	15 AMP. 125 V.
51	36182	1/2 WATT 5%
52	18616	1/2 WATT 5%
53	18641	6 AMP. 125 V.
54	23330	10 AMP. 125 V.
55	PROJ. LAMP	750 WATT 110 V.
56	19299	6.5 AMP. 5 V.
57	19747, 30559 & 30540	15 AMP. 125 V.
58	26587	6 AMP. 125 V.
59	30519
60	26841
61	26708-A	GOVERNOR ASSY.
62	26949	15 AMP. 125 V.
63	26930	20 WATT
64	26931	30 WATT
65	25166	8 OHM VOICE COIL
66	25181-A
67	25096
68	25066	75 FEET
69	25030-2
70	26103
71	25066	50 FEET

WIRING DIAGRAM MODEL 56-4

VICTOR ANIMATOGRAPH CORP.


DAVENPORT, IOWA

U. S. A.

PART NO. 30416

ISSUE 2

MODEL 40B AMPLIFIER WIRING DIAGRAM

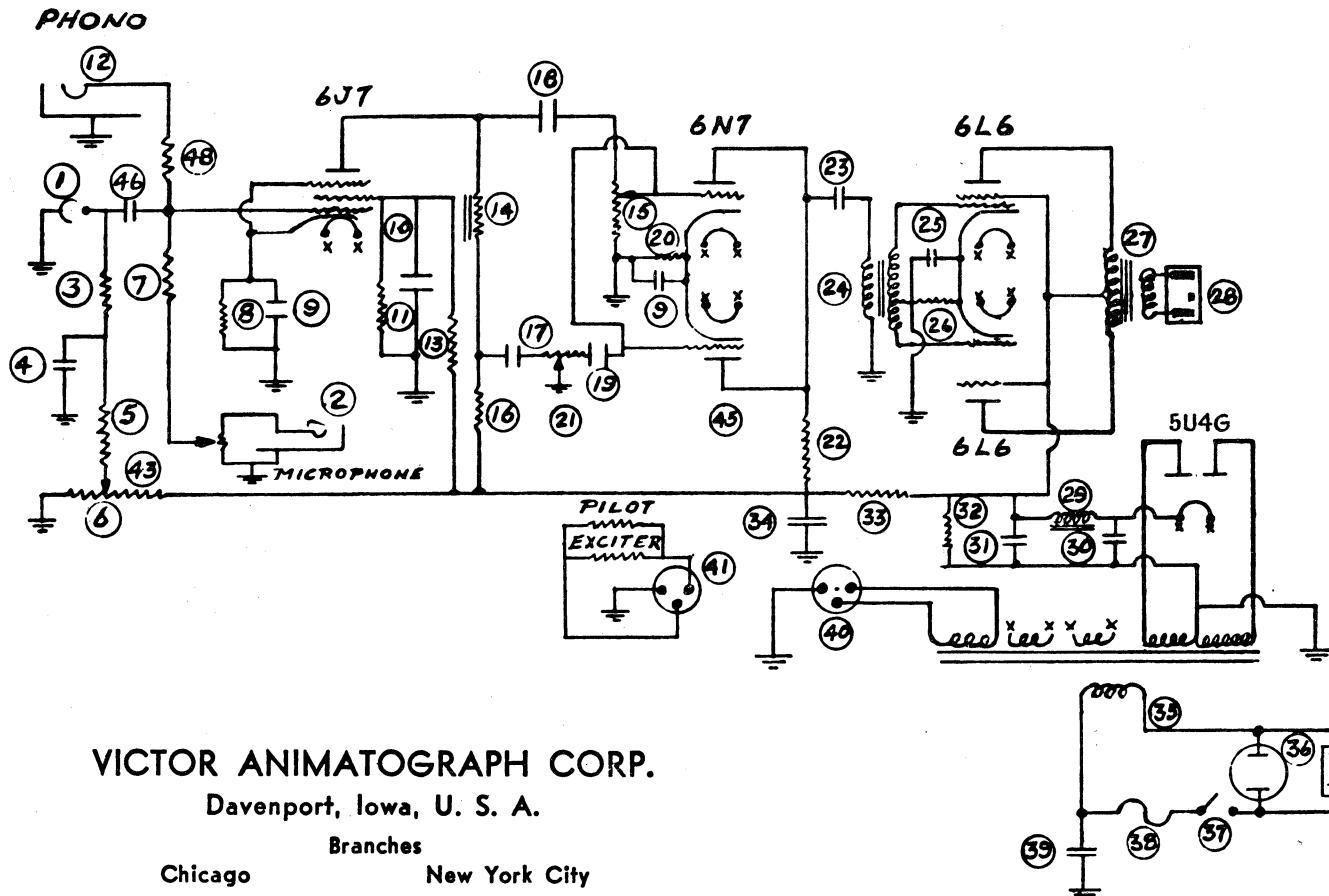

VICTOR ANIMATOGRAPH CORP.

Davenport, Iowa, U. S. A.


Branches

Chicago

New York City

1	19210	P. E. Cell
2	18643	Micro Jack
3	18615	Resistor 5.1 Meg $\frac{1}{2}$ Watt
4	18626	Condenser .1 Mfd 400 VDC.
5	18616	Resistor 1 Meg $\frac{1}{2}$ Watt
6	19719	P. E. Cell Control $\frac{1}{4}$ Meg
7	18620	Resistor 2 Meg $\frac{1}{2}$ Watt
8	18618	Resistor 1500 Ohms $\frac{1}{2}$ W.
9	25050	Condenser 10 Mfd 50 W.VDC.
10	18621	Resistor 100,000 Ohm $\frac{1}{2}$ W.
11	25021	Condenser .22 Mfd 400 W.VDC.
12	18643	Phono. Jack
13	15069	Resistor 240,000 Ohms $\frac{1}{2}$ W.
14	15076	Plate Choke
15	18852	Volume Control $\frac{1}{2}$ Meg
16	18617	Resistor 75,000 Ohms $\frac{1}{2}$ W.
17	25021	Condenser .22 Mfd 400 W.VDC.
18	18628	Condenser .01 Mfd
19	18631	Condenser .004 Mfd 600 W.VDC.
20	19934	Resistor 1,000 Ohms $\frac{1}{2}$ Watt
21	18635	Tone Control 1 Meg
22	18617	Resistor 75,000 Ohms $\frac{1}{2}$ Watt
23	18626	Condenser .1 Mfd 400 W.VDC.
24	15078	Input Transformer
25	25050	Condenser 10 Mfd 50 W.VDC.
26	19722	Resistor 200 Ohm 10 Watt
27	15120	Output Transformer
28	25030	Speaker Socket
29	18732	Filter Choke 200 Ohm
30	23277	Filter Condenser 16 Mfd 500 W. V.
31	23277	Filter Condenser 16 Mfd 500 W.V.
32	19635	Resistor 30,000 Ohms 10 Watt
33	19668	Resistor 10,000 Ohms 5 Watt
34	19675	Condenser 8 Mfd 450 W.VDC.
35	19845	Power Transformer
36	19747	AC Receptacle
37	18852	Power Switch Part Of
38	19978	Fuse 2 Amp.
39	18661	Condenser .02 Mfd 600 W.VDC.
40		Exciter Lamp Connector Socket
	19644	3 Contact Round
	20619	4 Contact Round
	20629	3 & 4 Contact Rectangular
41		Exciter Lamp Plug Attached to Proj.
	19643	3 Contact Round
	20618	4 Contact Round
	20628	3 & 4 Contact Rectangular
42		
43	18634	Microphone Control $\frac{1}{2}$ Meg
44		
45	18620	Resistor 2 Meg $\frac{1}{2}$ Watt
46	18628	Condenser .01 Mfd
47	20169	Projector Power Socket
48	18615	Resistor 5.1 Meg $\frac{1}{2}$ Watt

MODEL 40BX AMPLIFIER WIRING DIAGRAM

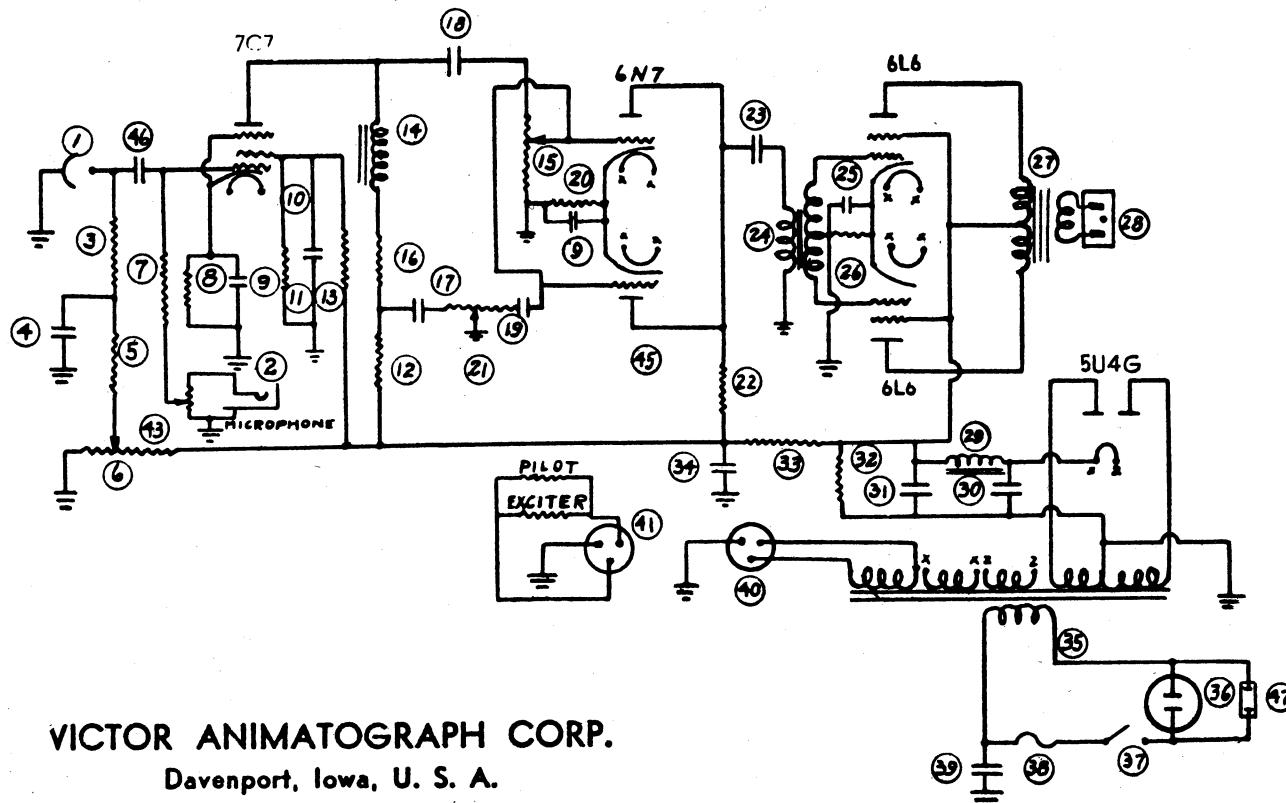


VICTOR ANIMATOGRAPH CORP.

Davenport, Iowa, U. S. A.

Branches
Chicago New York City

1	19210	P. E. Cell
2	18643	Micro Jack
3	18615	Resistor 5.1 Meg $\frac{1}{2}$ Watt
4	18626	Condenser .1 Mfd 400 VDC.
5	18616	Resistor 1 Meg $\frac{1}{2}$ Watt
6	19719	P. E. Cell Control $\frac{1}{4}$ Meg
7	18620	Resistor 2 Meg $\frac{1}{2}$ Watt
8	18618	Resistor 1500 Ohms $\frac{1}{2}$ W.
9	25050	Condenser 10 Mfd 50 W.VDC.
10	18621	Resistor 100,000 Ohm $\frac{1}{2}$ W.
11	25021	Condenser .22 Mfd 400 W.VDC.
12	18622	Resistor 51,000 Ohms $\frac{1}{2}$ Watt
13	18617	Resistor 75,000 Ohms $\frac{1}{2}$ Watt
14	15076	Plate Choke
15	18852	Volume Control $\frac{1}{2}$ Meg
16	18670	Resistor 24,000 Ohms $\frac{1}{2}$ Watt
17	25021	Condenser .22 Mfd 400 W.VDC.
18	18628	Condenser .01 Mfd
19	18631	Condenser .004 Mfd 600 W.VDC.
20	19934	Resistor 1,000 Ohms $\frac{1}{2}$ Watt
21	18635	Tone Control 1 Meg
22	18617	Resistor 75,000 Ohms $\frac{1}{2}$ Watt
23	18626	Condenser .1 Mfd 400 W.VDC.
24	15078	Input Transformer
25	25050	Condenser 10 Mfd 50 W.VDC.
26	19722	Resistor 200 Ohm 10 Watt
27	15120	Output Transformer
28	25030	Speaker Socket
29	18732	Filter Choke 200 Ohm
30	23277	Filter Condenser 16 Mfd 500 W. V.
31	23277	Filter Condenser 16 Mfd 500 W.V.
32	19635	Resistor 30,000 Ohms 10 Watt
33	19668	Resistor 10,000 Ohms 5 Watt
34	19675	Condenser 8 Mfd 450 W.VDC.
35	19845	Power Transformer
36	19747	AC Receptacle
37	18852	Power Switch Part Of
38	19978	Fuse 2 Amp.
39	18661	Condenser .02 Mfd 600 W.VDC.
40	19644	Exciter Lamp Connector Socket
	20619	3 Contact Round
	20629	4 Contact Round
41	20629	3 & 4 Contact Rectangular
	19643	Exciter Lamp Plug Attached to Proj.
	20618	3 Contact Round
	20628	4 Contact Round
	20628	3 & 4 Contact Rectangular
42	43	18634 Microphone Control $\frac{1}{2}$ Meg
44	45	18620 Resistor 2 Meg $\frac{1}{2}$ Watt
46	47	18628 Condenser .01 Mfd
47	48	20169 Projector Power Socket
	48	18615 Resistor 5.1 Meg $\frac{1}{2}$ W.

MODEL 40A AMPLIFIER WIRING DIAGRAM

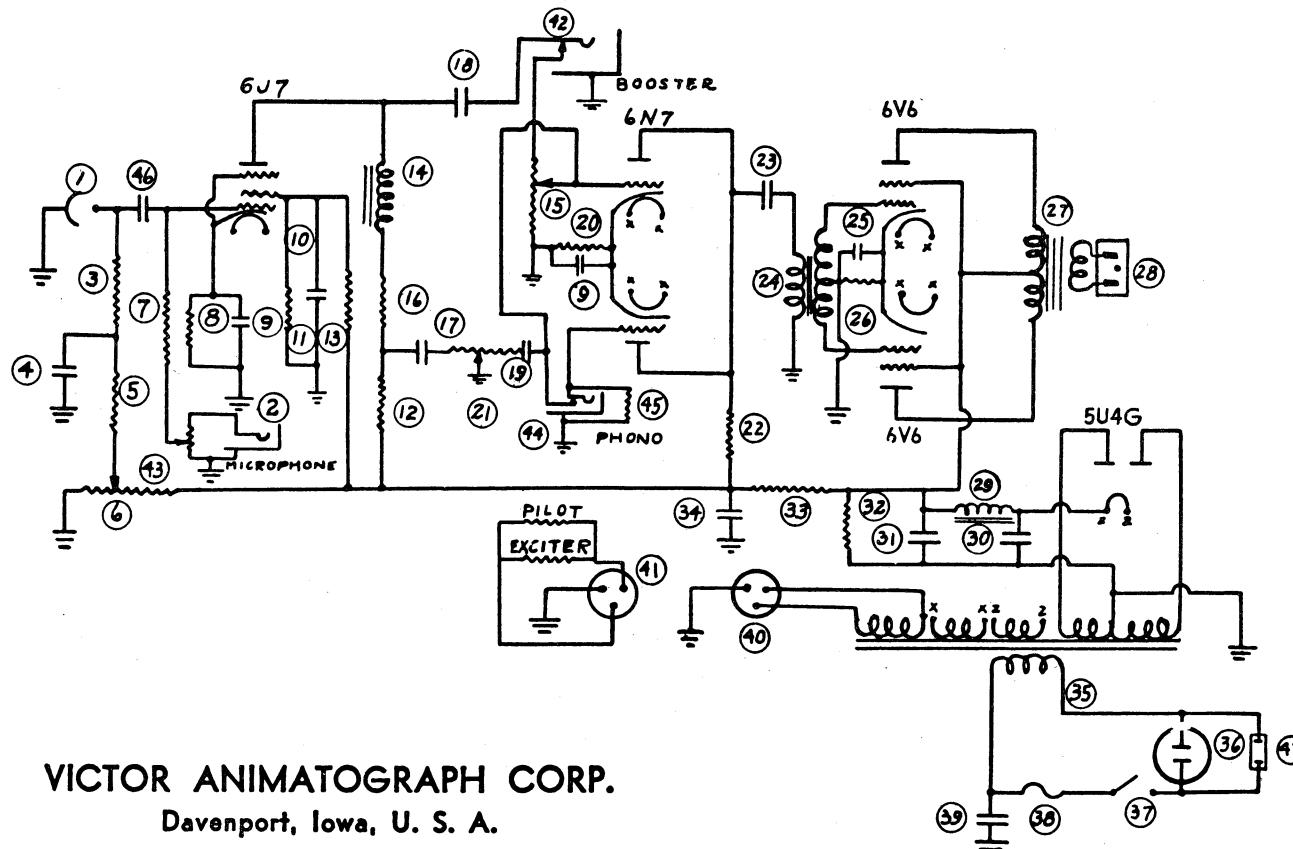

VICTOR ANIMATOGRAPH CORP.

Davenport, Iowa, U. S. A.

Branches
Chicago

New York City

1	19210	P. E. Cell
2	18643	Micro Jack
3	18615	Resistor 5.1 Meg 1/2 Watt
4	18626	Condenser .1 Mfd 400 VDC.
5	18616	Resistor 1 Meg 1/2 Watt
6	19719	P. E. Cell Control 1/4 Meg
7	18620	Resistor 2 Meg 1/2 Watt
8	18618	Resistor 1500 Ohms 1/2 W.
9	25050	Condenser 10 Mfd 50 W.VDC.
10	18621	Resistor 100,000 Ohm 1/2 W.
11	25021	Condenser .22 Mfd 400 W.VDC.
12	18622	Resistor 51,000 Ohms 1/2 Watt
13	18617	Resistor 75,000 Ohms 1/2 Watt
14	15076	Plate Choke
15	18852	Volume Control 1/2 Meg
16	18670	Resistor 24,000 Ohms 1/2 Watt
17	25021	Condenser .22 Mfd 400 W.VDC.
18	18628	Condenser .01 Mfd
19	18631	Condenser .004 Mfd 600 W.VDC.
20	19934	Resistor 1,000 Ohms 1/2 Watt
21	18635	Tone Control 1 Meg
22	18617	Resistor 75,000 Ohms 1/2 Watt
23	18626	Condenser .1 Mfd 400 W.VDC.
24	15078	Input Transformer
25	25050	Condenser 10 Mfd 50 W.VDC.
26	19722	Resistor 200 Ohm 10 Watt
27	15120	Output Transformer
28	25030	Speaker Socket
29	18732	Filter Choke 200 Ohm
30	23277	Filter Condenser 16 Mfd 500 W. V.
31	23277	Filter Condenser 16 Mfd 500 W.W.
32	19635	Resistor 30,000 Ohms 10 Watt
33	19668	Resistor 10,000 Ohms 5 Watt
34	19675	Condenser 8 Mfd 450 W.VDC.
35	19745	Power Transformer
36	19747	AC Receptacle
37	18852	Power Switch Part Of
38	19978	Fuse 2 Amp.
39	18661	Condenser .02 Mfd 600 W.VDC.
40	19644	Exciter Lamp Connector Socket
	20619	3 Contact Round
	20629	4 Contact Round
41	20629	3 & 4 Contact Rectangular
	19643	Exciter Lamp Plug Attached to Proj.
	19643	3 Contact Round
	20618	4 Contact Round
	20628	3 & 4 Contact Rectangular
42	18643	Booster Jack
43	18634	Microphone Control 1/2 Meg
44	18643	Microphone Jack
45	18620	Resistor 2 Meg 1/2 Watt
46	18628	Condenser .01 Mfd
47	20169	Projector Power Socket
48	18615	Resistor 5.1 Meg 1/2 Watt

**PROJECTOR
CASE
MODEL 60-25**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	23197	Case catch			2	2	2	2	2	2	2	2	2
2	36037	Case emblem					1	1	1	1	1	1	1
3	30402-A	Projector case less liftop*											1
4	36031-A	Liftop											1
5	26141	Handle					1	1	1	1	1	1	1

*No. 30402-A Metal case is interchangeable with 36033-A (below).

**PROJECTOR
CASE
WOOD
MODEL 60-25**

Not Available

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	36033-A	Projector case with liftop*									1	1	

*No. 1, 36033-A Wood case is replaced by 30402-A metal case.



**PROJECTOR
CASE AND
J4B
SPEAKER
CASE
MODELS 60-4
AND 60-10**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	36031-AT	Liftop									1	1	
2	26100-3-R	J4B speaker case					1	1		1	1	1	
3	36037	Case emblem					1	1	1	1	1	1	
4	30361-AT	Projector case assembly								1	1		
5	26141	Handle					1	1	1	1	1	1	

**PROJECTOR
CASE
MODEL 60-B**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26019-A	Case handle							1	1			
2	26021	Case handle post							2	2			
3	23190-5	Early Model 60-B without clips in door									1		

**PROJECTOR
CASE
MODEL 60-25**

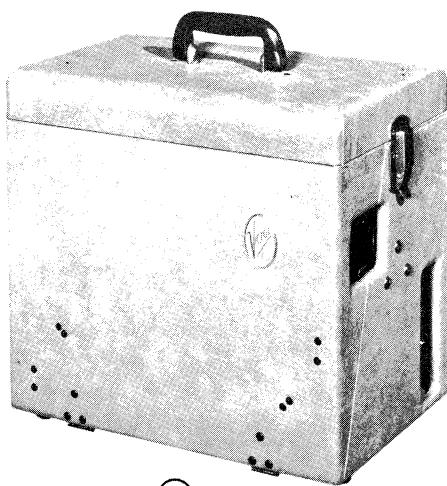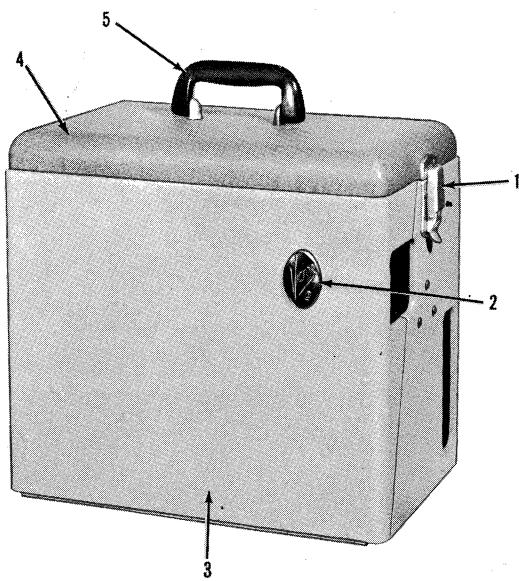



**PROJECTOR
CASE
WOOD
MODEL 60-25**

Not Available

①

**PROJECTOR
CASE AND
J4B
SPEAKER
CASE**

**MODELS 60-4
AND 60-10**

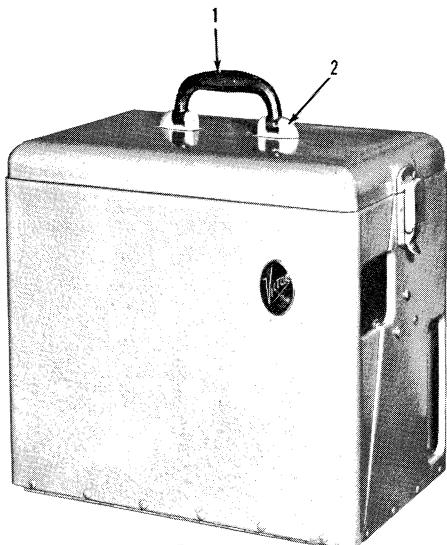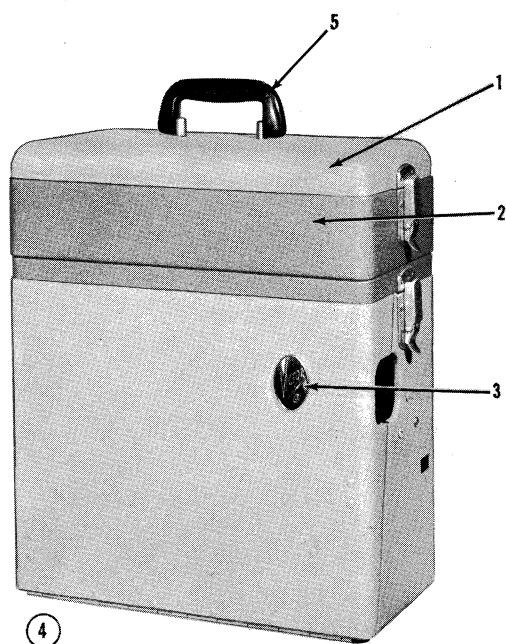

**PROJECTOR
CASE
MODEL 60-B**


③

**PROJECTOR
CASE
MODELS 60-2
AND 60-25**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	23196	Case release button					1	1	2	2	1	1	2
2	23367	Tube grille thumb screw							2	2			2
3	26939-AT	Tube grille							1				1
4	22332-A	Case tilt cup assembly					1	1	1	1	1	1	1
5	22338-55	Tilt spring*					1	1	1	1	1	1	1
6	22269-50A	Tilt foot assembly					1	1	1	1	1	1	1
7	23198	Case catch			2	2	2	2	2	2	2	2	2
8	23371	AC cord bracket					2	2	2	2	2	2	2
9	20632	12' AC cord					1	1	1	1	1	1	1
10	36030-A	Lifttop											1
11		8/32 x 3/4 T.H. mounting screw for amplifier					4	4	4	4	4	4	4
12		#8 shakeproof washer					4	4	4	4	4	4	4
13		8/32 x 1/2 Amplifier mounting screw							4	8			8
14	30356	Reel arm clip spring			2	2			2	2	2	2	2
14-A	30419-A	Bracket and clip spring assembly			1	1			1	1	1	1	1
14-B	30357-A	Bracket and clip spring assembly			1	1			1	1	1	1	1
15	30256	Reel arm holder			2	2			2	2	2	2	2
16	23143	Instruction card clip			1	1	1	1	1	1	1	1	1
17	23201-T	Lamp house grille			1	1	1	1	1	1	1	1	1
18	23200	Case door catch			1	1	2	2	1	1	1	2	
19	23197	Case catch			2	2	2	2	2	2	2	2	2
20	23208	Grille spacer					4	4	4	4	4	4	4
21	23199	Case foot nut					1	1	1	1	1	1	1
22	17189	Attachment plug (female)			1	1	1	1	1	1	1	1	1
23	17191	Attachment plug (male) (replacement)			1	1	1	1	1	1	1	1	1
	23111	Rubber foot screw (not shown)					2	2	2	2	2	2	2

*Tilt breakdown on page 123.

**PROJECTOR
CASE
MODELS 60-2
AND 60-25**

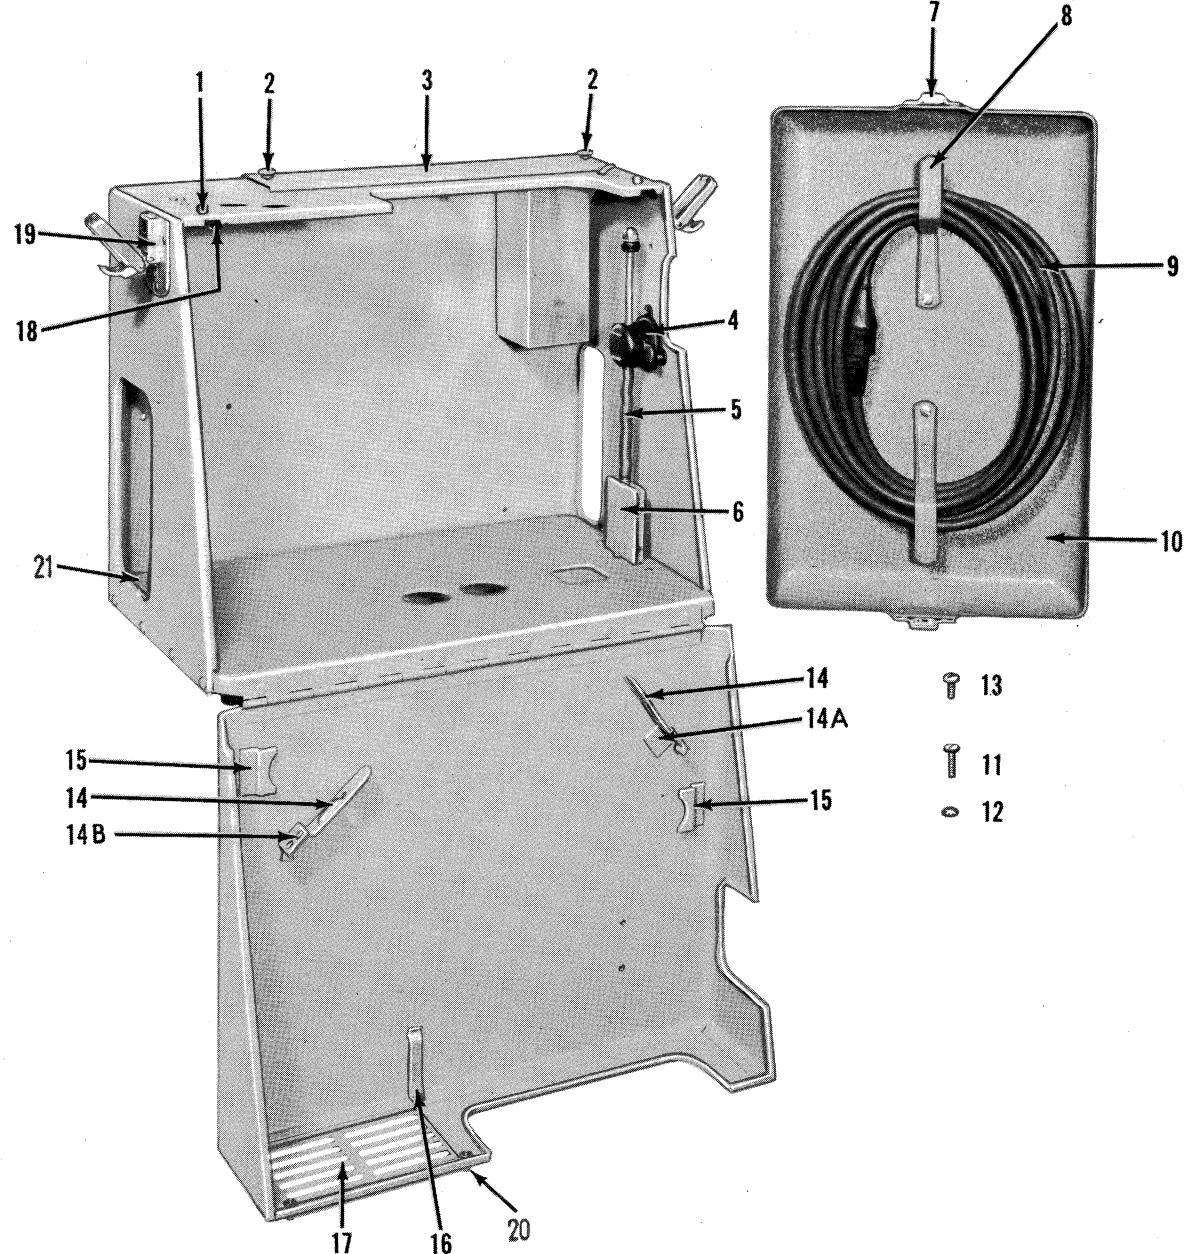


**PROJECTOR
CASE AND
LIFTOP
MODELS 60-4
AND 60-10,
55 AND 56**

No.	Part No.	Part Name	Page	USED ON MODELS								
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10
1	30361-AT	Case assembly*					1	1			1	1
2	1111	Case amplifier top plate grommet			2	2				2	2	
3	30533-T	Case amplifier top plate								1	1	
4	23200	Case door catch					1	1		1	1	
5	36031-AT	Case lifttop					1	1		1	1	
6		8/32 x 3/4 Oven H. projector head case mounting screw					4	4	4	4	4	4
7		#8 Projector head case mounting shakeproof lock washer					4	4	4	4	4	4
8	22269-50A	Tilt foot assembly					1	1	1	1	1	1
9	20632	Attachment cord					1	1	1	1	1	1
10	23205	Projector case door catches					1	1	2	2	1	1
11	17189	Attachment plug (female)					1	1	1	1	1	1
12	23198	Case catch			2	2	2	2	2	2	2	2
13	17191	Attachment plug (male) (replacement)					1	1	1	1	1	1
14	30386	Reel arm clip spring					2	2		2	2	2
15	30419-A	Bracket & clip spring assy.					1	1	1	1	1	1
16	30256	Reel arm holder					2	2		2	2	2
16-A	30357-A	Bracket & clip spring assy.					1	1		1	1	1
18	23208	Grille spacer					4	4	4	4	4	4
19	23143	Instruction card clip					1	1	1	1	1	1
20	23201-T	Lamp house grille					1	1	1	1	1	1
21	23197	Case catch		2	2	2	2	2	2	2	2	2
	23111	Rubber foot screw (not shown)			2	2	2	2	2	2	2	2

Tilt breakdown on page 123.

Reel arm holders on page 115.

*When ordering No. 1, 30361-AT, specify if for models 55 or 56.

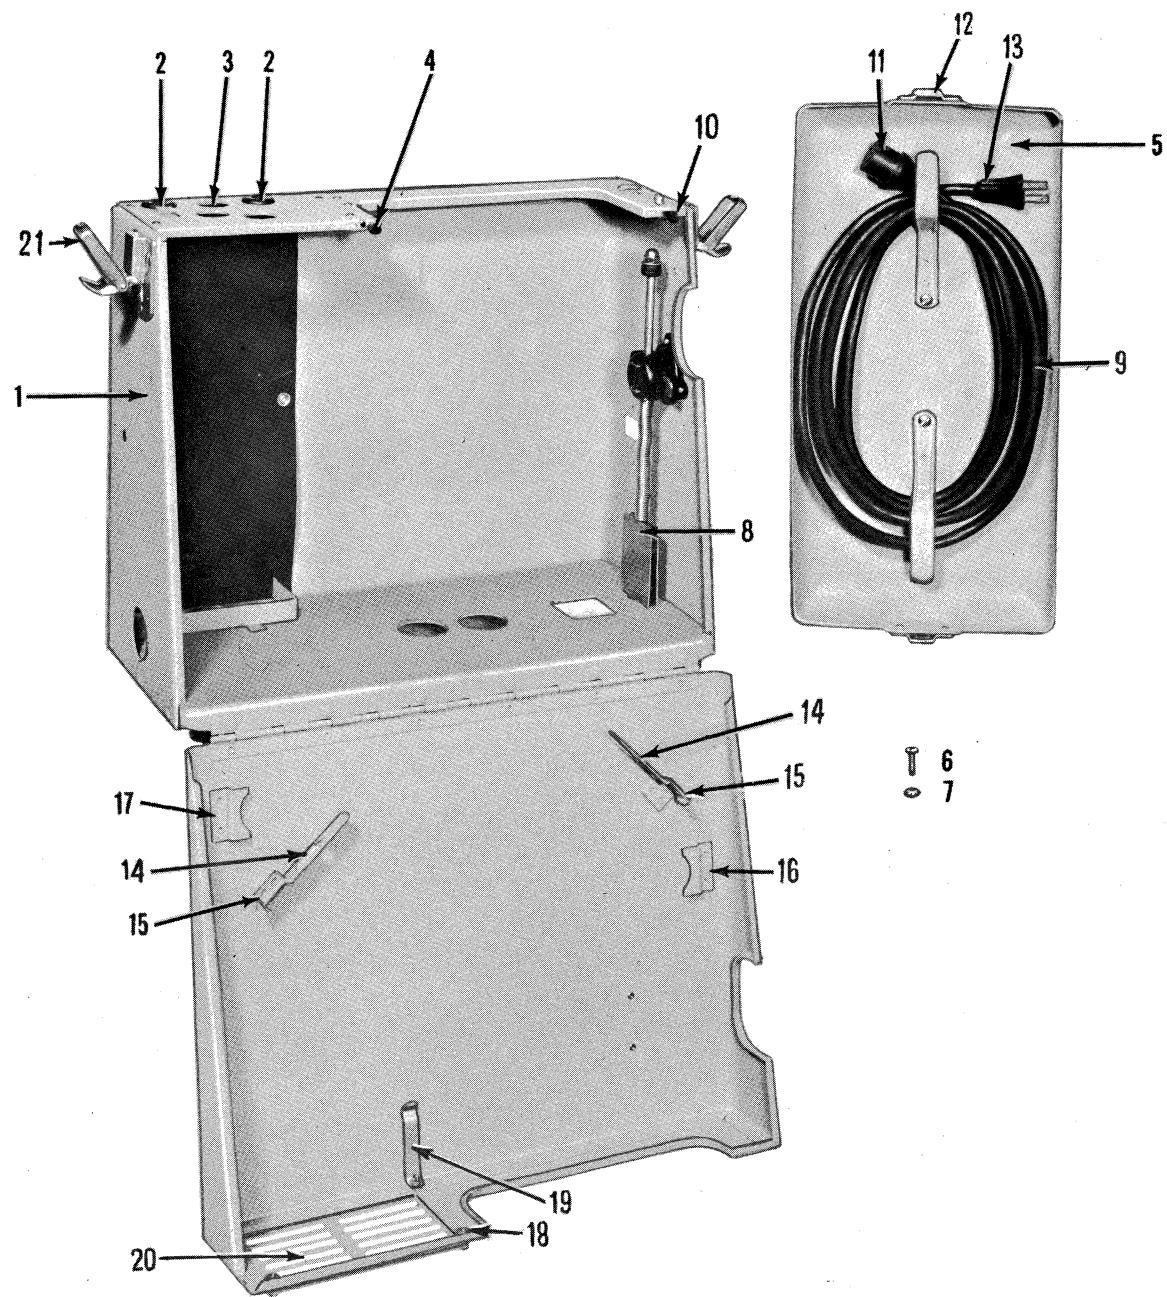


**PROJECTOR
CASE AND
LIFTOP
MODELS 60-4
AND 60-10**

**PROJECTOR
CASE
MODEL 60-B**

No.	Part No.	Part Name	Page	USED ON MODELS							
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	23190-5	Projector case								1	
2	23203	Tube grille retainer thumb screw								2	
3	23202	Tube cover grille								1	
4	23195-A	Case liftop								1	
5	20632	12' AC power cord (standard)								1	
6		8/32 x 3/4 Oven H. projector head case mounting screw							4	4	4
7		#8 Projector head case mounting shakeproof lock washer							4	4	4
8		8/32 x 1/2 Oven H. amplifier case mounting screw							6	8	8
9	23189	Case adjusting foot sleeve							1	1	
10	22269-50A	Tilt foot assembly							1	1	1
11	17189	Attachment plug (female)							1	1	1
12	17191	Attachment plug (male) (replacement)							1	1	1
13	23371	Power cord bracket for liftop							1	1	
14	23199	Case foot nut							1	1	1
15	23201-T	Lamp house grille							1	1	1
16	23143	Instruction card clip							1	1	1
17	23208	Grille spacer							4	4	4
18	23198	Case catch			2	2	2	2	2	2	2
19	23197	Case catch			2	2	2	2	2	2	2
	23111	Rubber foot screw (not shown)			2	2	2	2	2	2	2

Tilt breakdown on page 123.

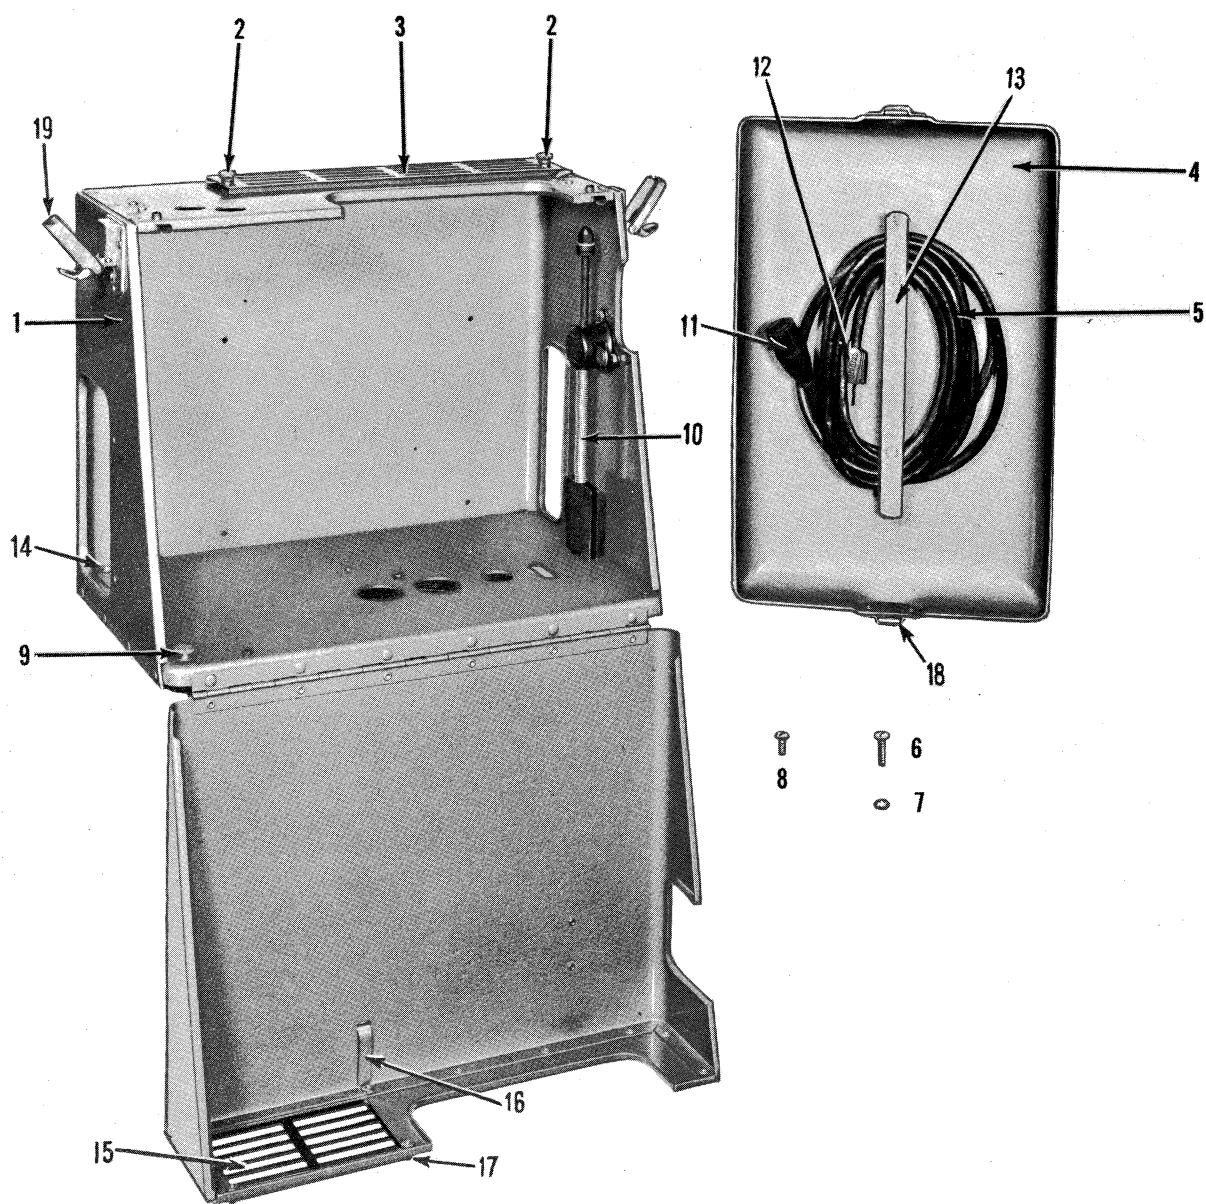


**PROJECTOR
CASE
MODEL 60-B**

**PROJECTOR
CASE
MODELS 40-A
AND 40-B**

No.	Part No.	Part Name	Page	G	USED ON MODELS						
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4
1	19554	Projector case			1	1					
2	23197	Case catch			2	2	2	2	2	2	2
3	20160-A	Rewind belt trap			1	1	1				
4	1001	Case catch (small)			1	1					
5	23198	Case catch			2	2	2	2	2	2	2
6	1002	Case handle holder			2	2					
7	1003	Leather case handle			1	1					
8	19555	Liftop			1	1					
9		8/32 x 1-1/4 F.H. mounting screw			4	4					
10		#8 Finishing washer			10	10					
11		8/32 Hex nut			2	2					
12		8/32 x 3/4 F.H. screw			6	6					
13	22269-50A	Tilt foot assembly					1	1	1	1	1
14	19860	Ventilator grille			1	1					
15	19858	Belt hooks			2	2					

Tilt breakdown on page 125.


**PROJECTOR
CASE
MODELS 40-A
AND 40-B**

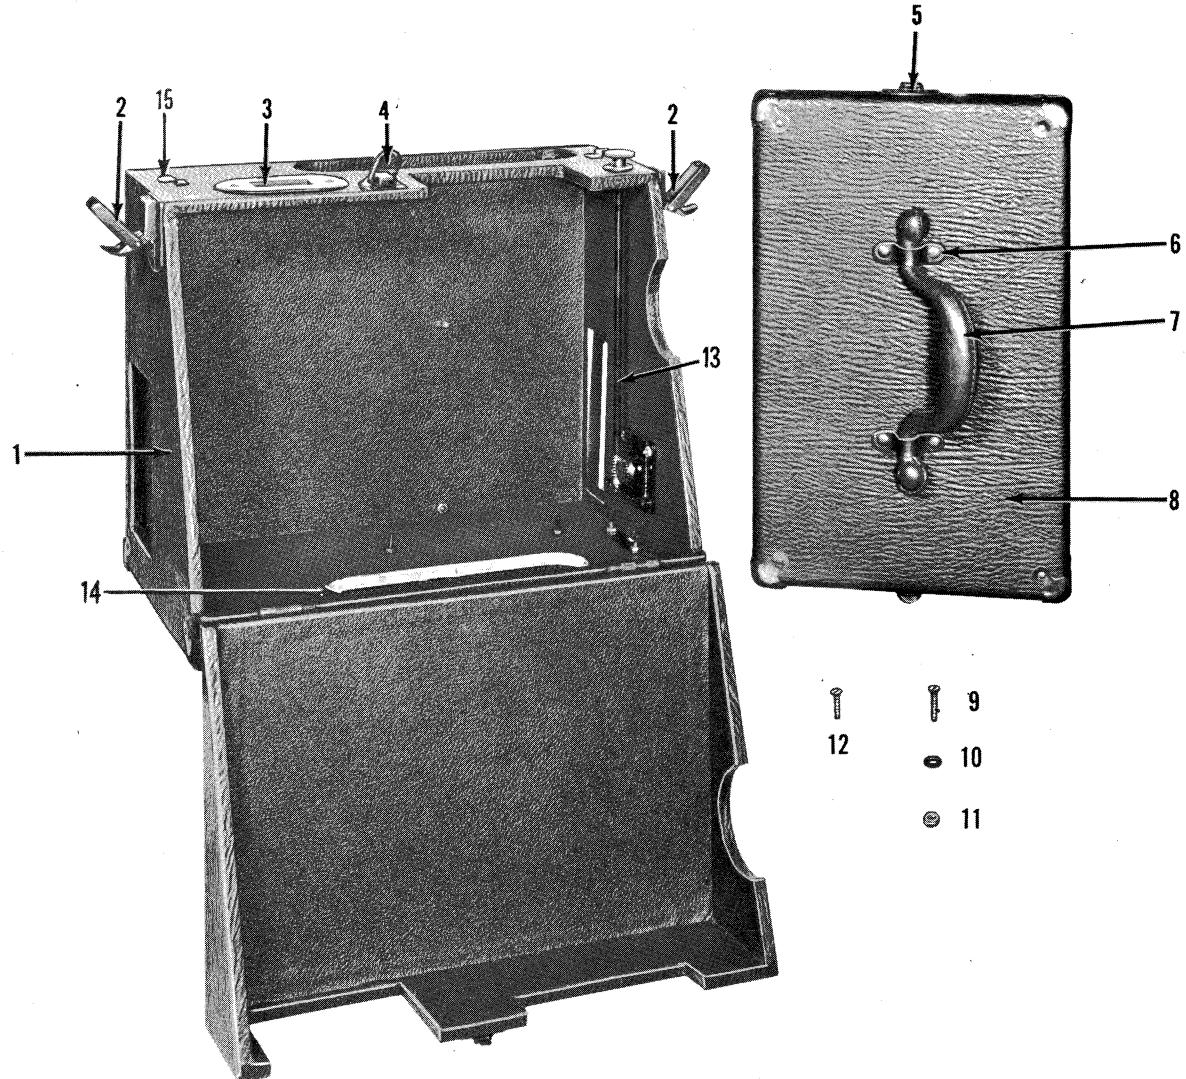

**TI
LT
ASSEMBLY
FOR ALL
METAL
PROJECTOR
CASES**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A 40-B	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	22332-A	Tilt cup assembly					1	1	1	1	1	1	1
2	22338-5	Tilt spring					1	1	1	1	1	1	1
3	22269-50A	Tilt foot assembly					1	1	1	1	1	1	1
4		1/4 cap retainer hex nut					1	1	1	1	1	1	1
5	22336	Tilt rod washer					1	1	1	1	1	1	1
6	19143	Rubber grommet					1	1	1	1	1	1	1
7	23187-50	Tilt foot bracket					1	1	1	1	1	1	1
8	22259	Tilt feet (case feet)					2	2	2	2	2	2	2
9	23141	Tubular rivet					2	2	2	2	2	2	2
10	22334	Tilt cup spring					2	2	2	2	2	2	2
11	23066	Tilt cup spring lever					1	1	1	1	1	1	1
12	22330	Tilt lock plate					2	2	2	2	2	2	2
13	22331	Tilt lever					1	1	1	1	1	1	1

**TILT
ASSEMBLY
FOR ALL
METAL
PROJECTOR
CASES**

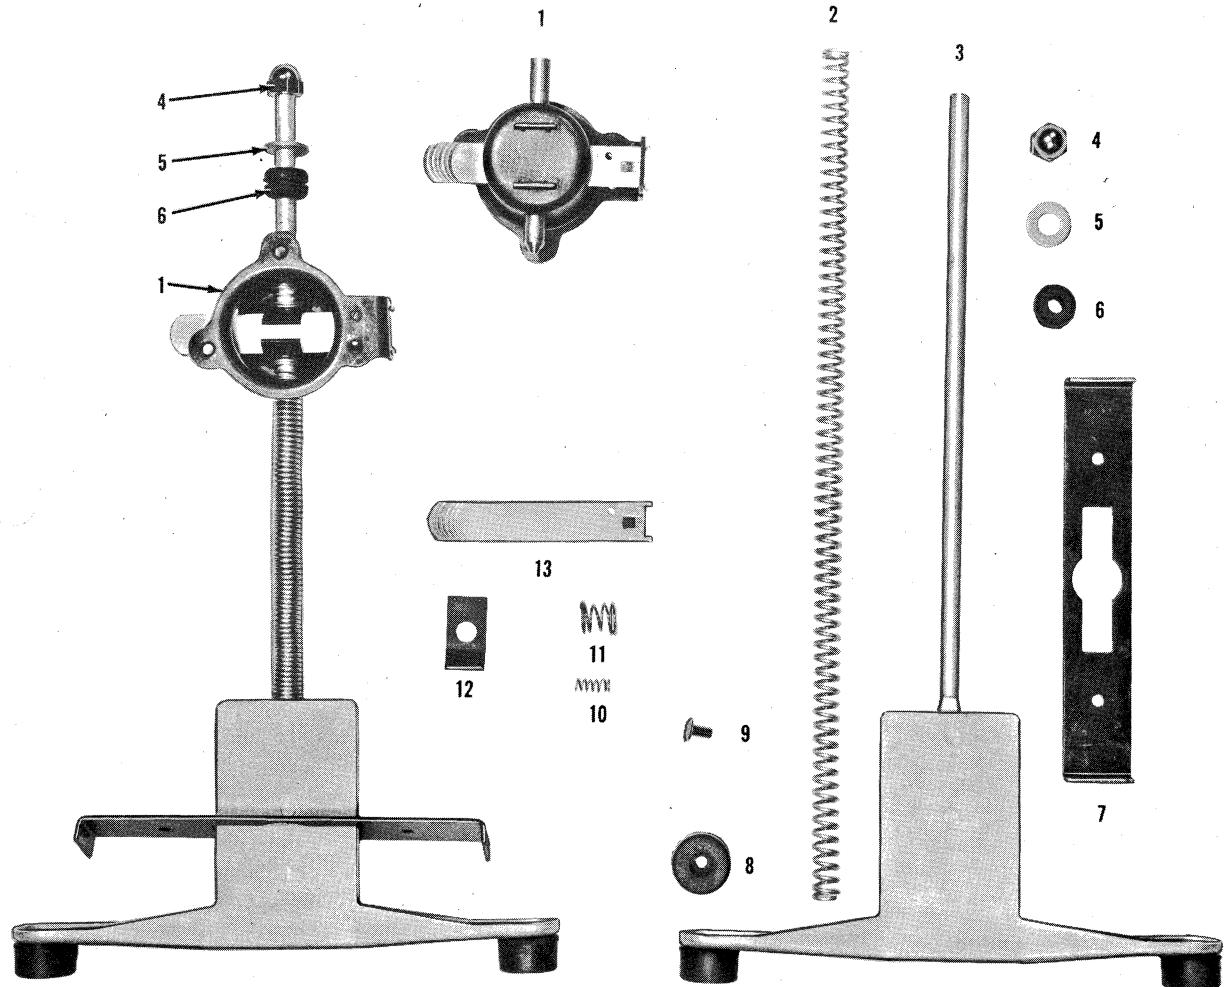


**TILT
ASSEMBLY
FOR
MODEL 40-B**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1		6/32 x 1 Tilt plate oval head retainer screw			6	6							
2	20146	Tilt plate (outside)				1							
3		#4 x 5/16 Wood screw				3							
4	20137	Tilt rod support				1							
5	20138	Tilt rack guide bar				1							
6	20140	Thrust washer				1							
7		6/32 Hex nut			6	6							
8	20143-A	Tilt plate (inside)				1							
9	20147-A	Tilt gear assembly				1							
10	20142-A	Tilt rod				1							
11	20714	Tilt foot			2	2							
12	20775	Rivet			2	2							
13	20148-A	Tilt rack assembly				1							
14	20139	Tilt knob				1							
15		5/40 x 1/8 Headless set screw				2							


**TILT
ASSEMBLY
FOR
MODEL 40-A**

USED ON MODELS													
No.	Part No.	Part Name	Page	G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	19792	Tilt plate (outside)				1							
2		6/32 x 1 Tilt plate oval head screw			6	6							
3	19790-A	Tilt plate (inside)				1							
4	19793-A	Tilt knob				1							
5	19794-A	Tilt gear				1							
6	20138	Tilt rack guide			1	1							
7		6/32 Tilt assembly retainer hex nut and belt trap retainer			8	8							
8		#6 Tilt flat washer			1	1							
9		#6 Case finishing washer			8	8							
10		6/32 x 3/4 Tilt plate guide oval head retainer screw			2	2							
11	20148-A	Tilt rack			1	1							
12	20714	Tilt foot			2	2							
13	20775	Tilt foot rivet			2	2							

**TILT
ASSEMBLY
FOR
MODEL 40-B**

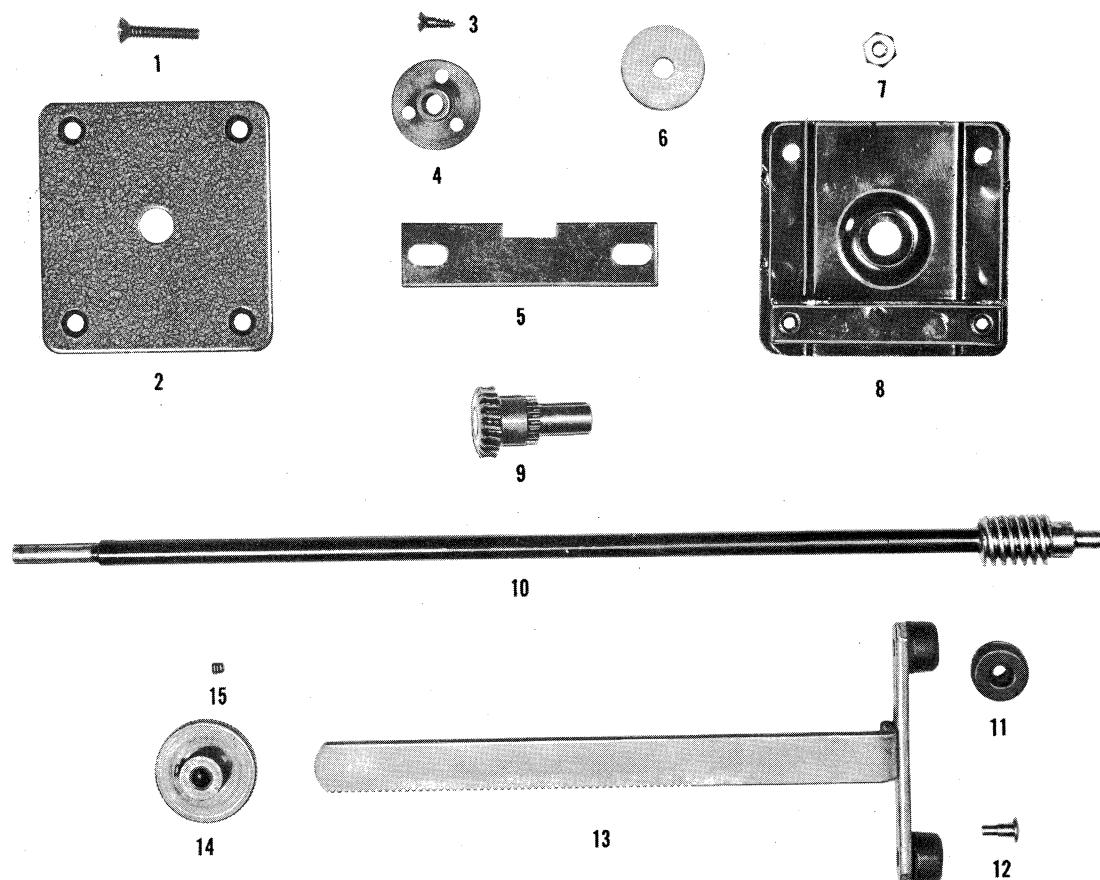

**TILT
ASSEMBLY
FOR
MODEL 40-A**

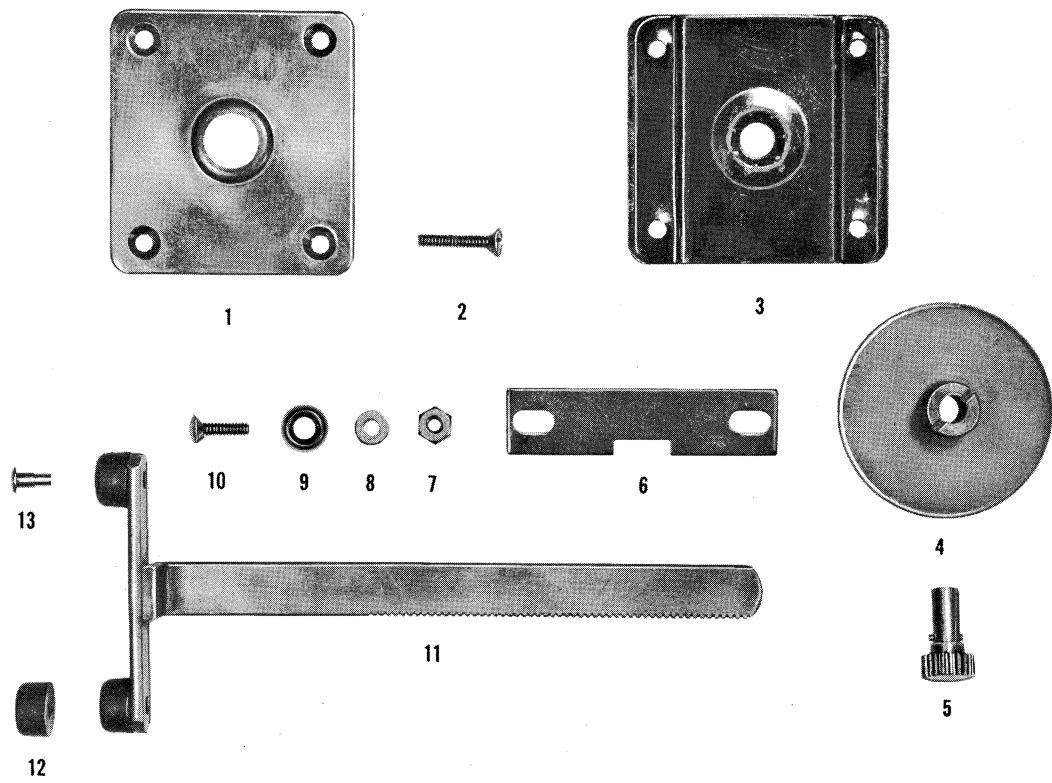

**SPEAKER
CASE
COMPLETE
LESS
SPEAKER
AND CORD**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	30353-2	J3A Speaker case, complete less speaker and cord					1	1	1	1	1	1	1
2	23175	Case catch			2	2	2	2	2	2	2	2	2
3	23174	Body catch					2	2					2

**SPEAKER
CASE
BODY AND
CORD
ASSEMBLY**

No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	26141	Case handle					1	1		1	1	1	1
2	36008	Case handle hinge				2	2		2	2	2	2	2
3	25166	12" P.M. speaker				1	1		1	1	1	1	1
4	30353-2	Speaker case assembly									1	1	1
5	25096	Speaker plug (male)*			2	2	1	1	2	2	1	1	2
6	26146-A	Speaker cord assembly			1	1	1	1	1	1	1	1	1
7	26146	Speaker cord rack				1	1	1	1	1	1	1	1



*No. 5, 25096, is interchangeable with 25054 (Page 139).

**J3A
SPEAKER
CASE
ASSEMBLY**


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	23175	Speaker door case catch					4	4	4	4	4	4	4
2	23172-A	Speaker case door (rear)									1	1	1
3	23179-A	Reel holder					1	1	1	1	1	1	1
4	23174	Case catch hook				4	4	4	4	4	4	4	4
5	22259	Case foot				4	4	4	4	4	4	4	4
6	30353-2	Speaker case complete, less speaker*									1	1	1
7	26649	Speaker grille J3A only									1	1	1
8	25195	Case emblem					1	1	1	1	1	1	1
9	23120	Case emblem					1	1	2	2	1	1	2
10	23172-50A	Speaker case front cover									1	1	1

*No. 6, 30353-2 Metal speaker case is interchangeable and replaces 36005-A wood speaker case (Page 129).
This case assembly can be used with Models 55, 56, 60-B and 60-2. The cases are the same except color.

**SPEAKER
CASE
COMPLETE
LESS
SPEAKER
AND CORD**

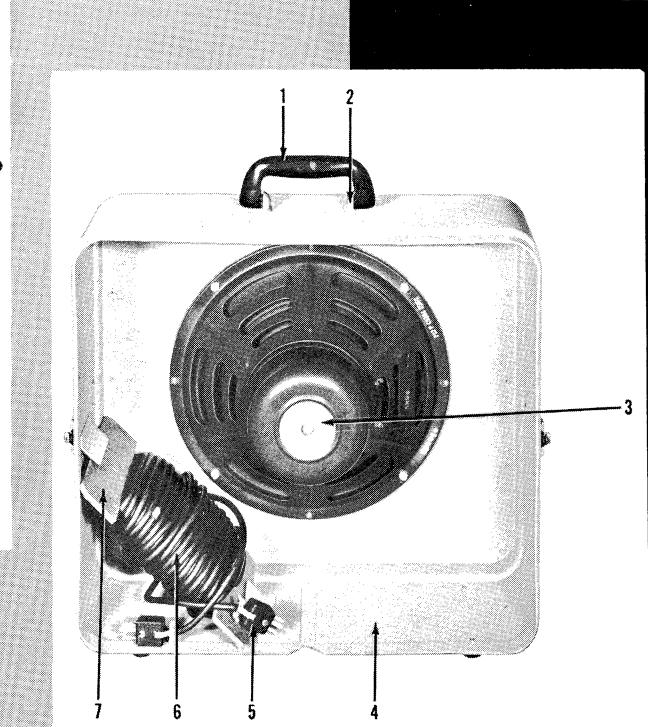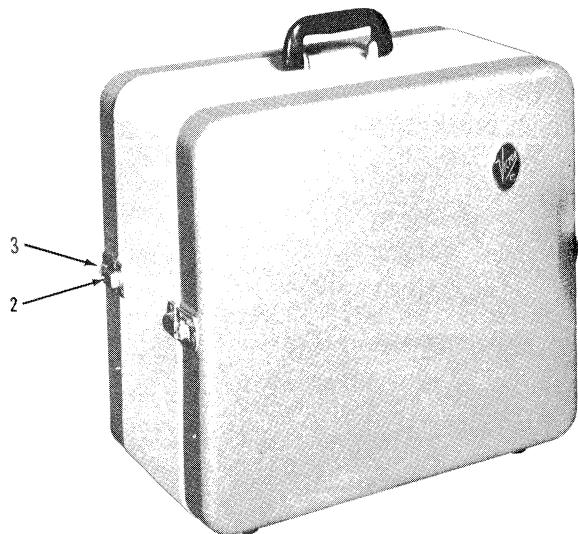

**SPEAKER
CASE
BODY AND
CORD
ASSEMBLY**

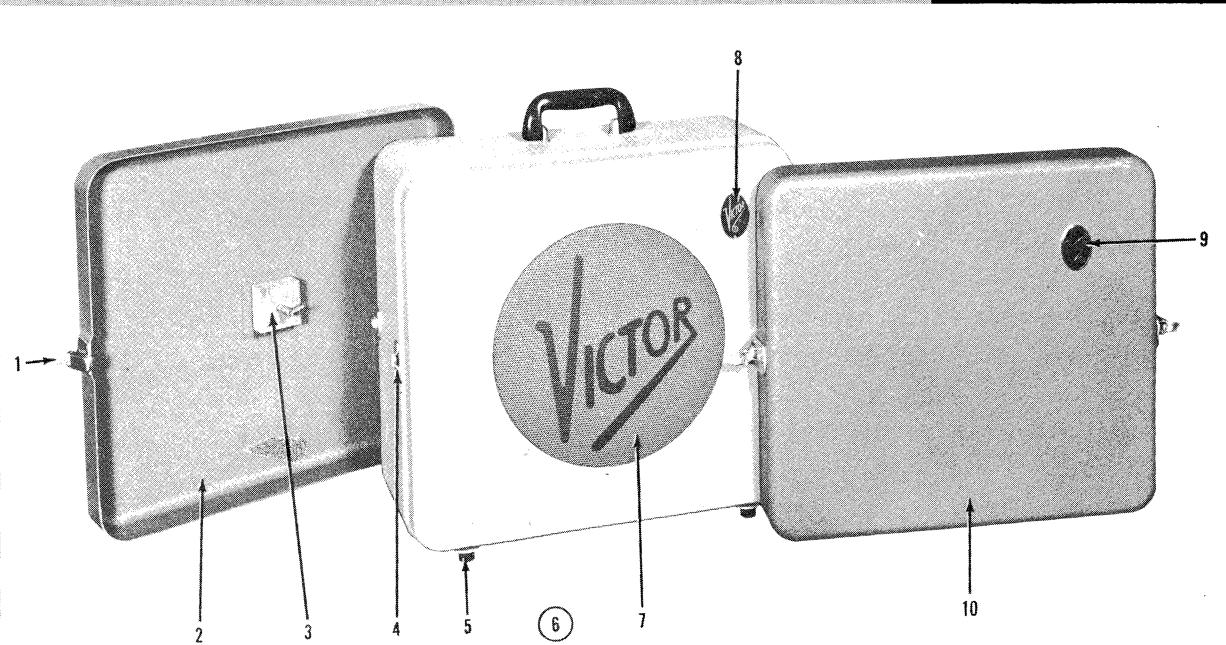

**J3A
SPEAKER
CASE
ASSEMBLY**

**SPEAKER
CASE
WOOD**

MODEL 60-25

Not Available

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	36005-A	Speaker case for 12" (wood)*											1
2	36032	Metal speaker grille											1



*Wood case is interchangeable with J3A metal case.

**SPEAKER
CASE
ASSEMBLY
J5 AND J4B**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	23267-A	J5 speaker assembly					1	1					
2	26100-AT	J4B top mount speaker*					1	1			1	1	
3	23197	Case catch	2	2	2	2	2	2	2	2	2	2	2
4	26104	Cord rack				2	2			2	2		
5	26100-3	J4L speaker (case only)				1	1			1	1		
6	25195	J4 case emblem				1	1	1	1	1	1	1	1
7	26626-A	J4E speaker complete*					1						
8	23198	Case catch	2	2	2	2	2	2	2	2	2	2	2
9	23197	Case catch	2	2	2	2	2	2	2	2	2	2	2
10	26103	9" Speaker				1	1			1	1		
11	25096	Speaker plug (male)†	2	2	1	1	2	2	1	1	2		
12	23198	Case catch	2	2	2	2	2	2	2	2	2	2	2
13	25171-A	J4 speaker cord assembly				1	1			1	1		


*No. 7, 26626-A J4E speaker assembly is interchangeable with No. 2, 26100-AT, except for color.

†No. 11, 25096 Speaker plug (male) is interchangeable with 25054 (Page 131).

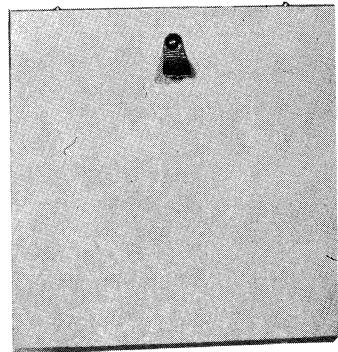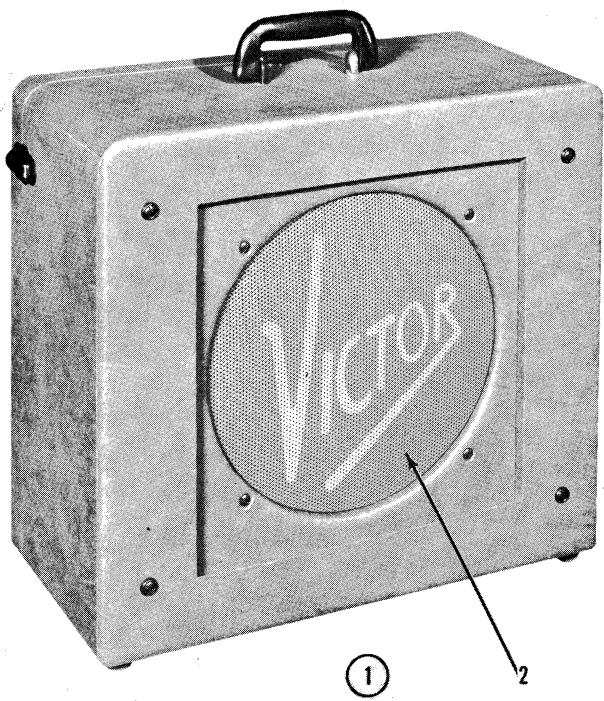

**SPEAKER
CASE
WOOD
MODEL 60-25**

Not Available

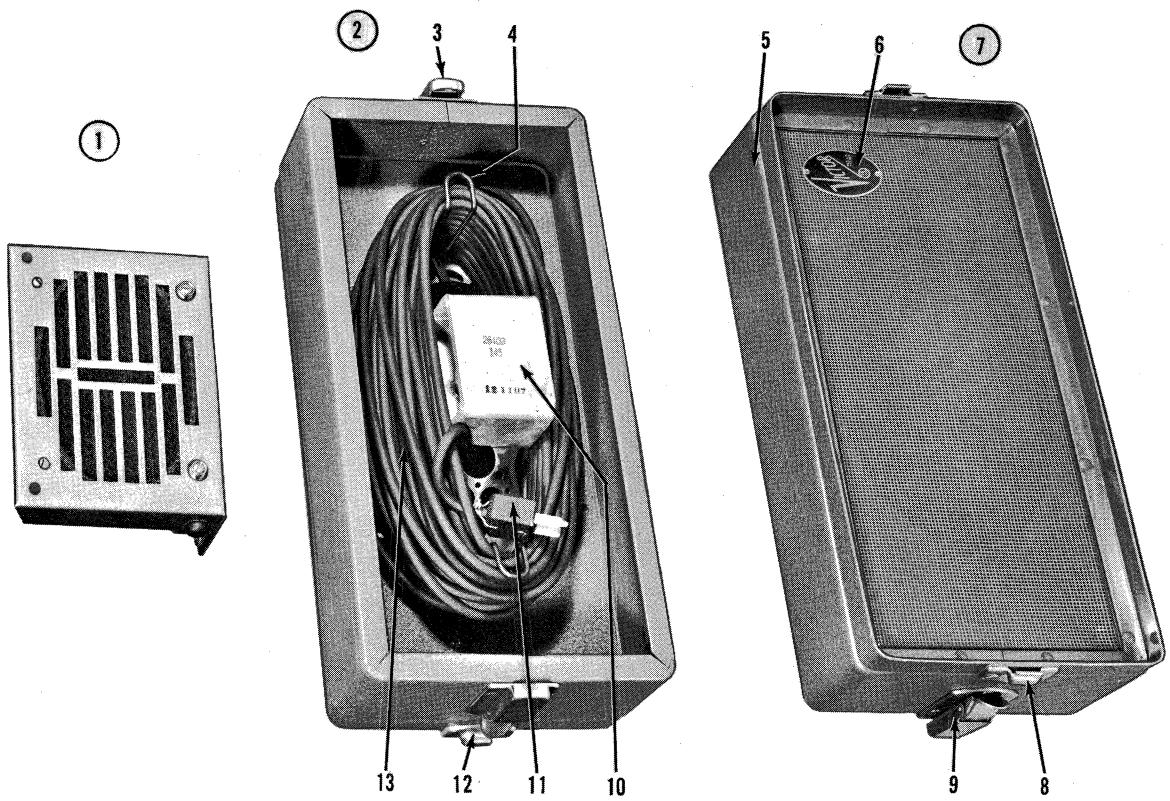

**SPEAKER
CASE
ASSEMBLY
J5 AND J4B**

**SPEAKER
CASE
MODELS 40-A
AND 40-B**


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	1003	Leather case handle			2	2							
2	1001	Case catch (small)			2	2							
3	20620	Speaker door turn button			2	2							
4	1113	Speaker door pull			1	1							
5	19778	Speaker grille			1	1							
6	18843-A	Speaker case, complete			1	1							
7	1018	Case corner			8	8							

**SPEAKER
CASE
ASSEMBLY
MODELS 40-A
AND 40-B**


No.	Part No.	Part Name	Page	G	USED ON MODELS								
					40-A	40-BX	55	56	60-B	60-2	60-4	60-10	60-25
1	25066-A	75' Speaker cord			1	1	1						
2	1002	Case handle holder			4	4							
3	1005	Split case hinge			2	2							
4	25056-A	Speaker terminal plate assembly			1	1							
4A	15064	Speaker transformer			1	1							
5	18843-A	Speaker case (wood)			1	1							
6	15061-A	12" P.M. Speaker with transformer			1	1							
7	25054	Speaker plug (male)*			2	2	2	1	1	2	2	1	1
8	25076	Speaker cord rack			1	1							

*25054 is interchangeable with 25096 (Page 97).

**SPEAKER
CASE
MODELS 40-A
AND 40-B**

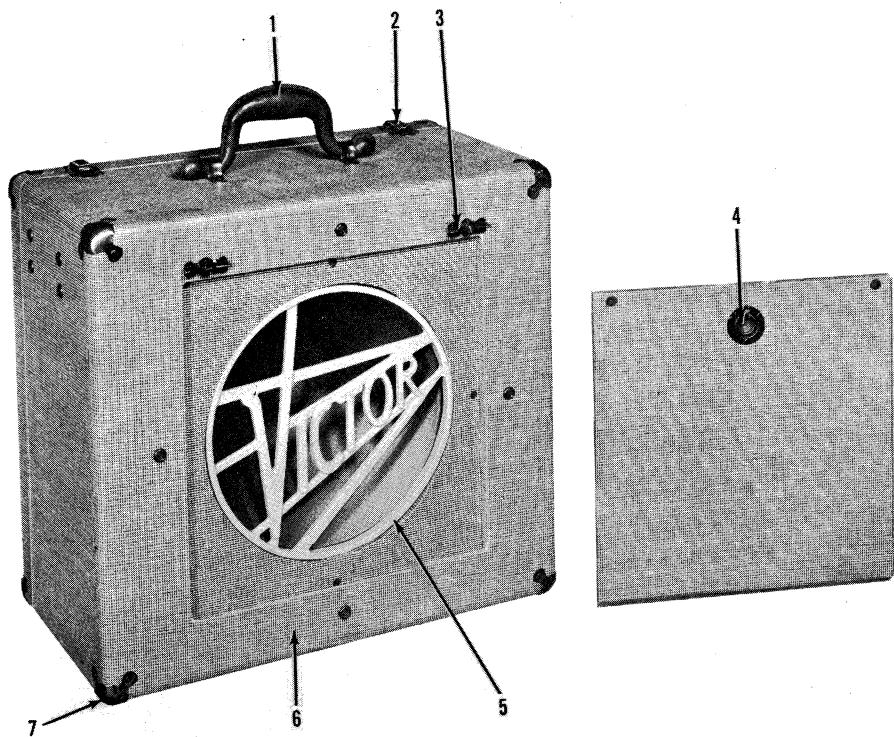

**SPEAKER
CASE
ASSEMBLY
MODELS 40-A
AND 40-B**

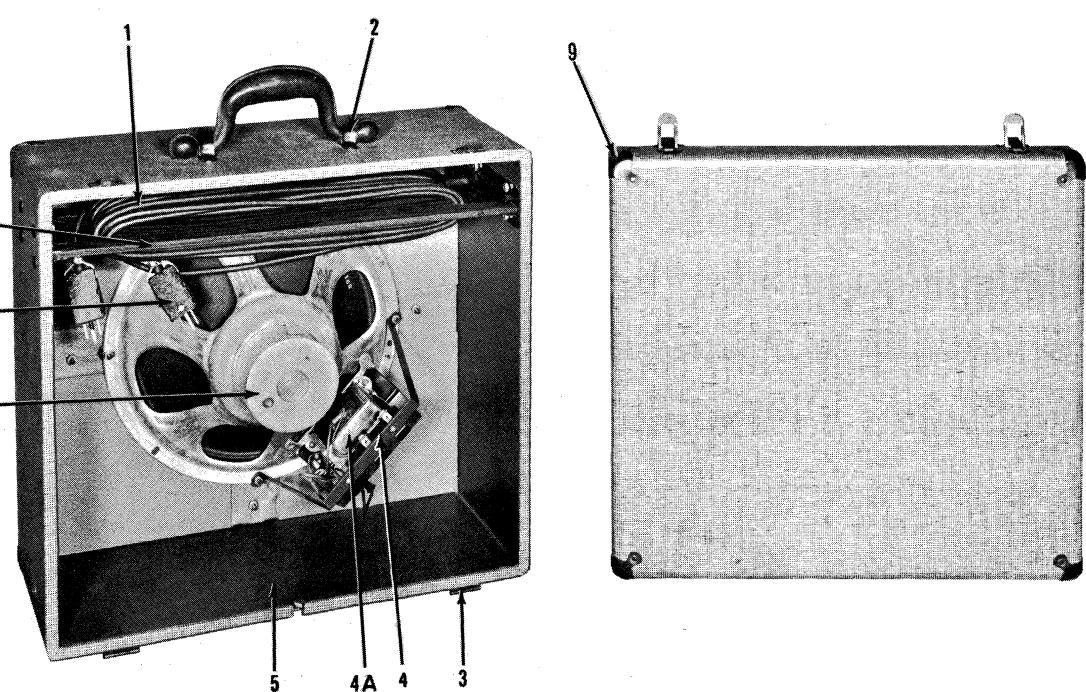

**SPEAKER
ASSEMBLY
FOR ALL
MODELS**

No.	Part No.	Part Name	Page	USED ON MODELS									
				G	40-A	40-BX 40-B	55	56	60-B	60-2	60-4	60-10	60-25
1	25166	12" P.M. Speaker 8 ohm					1	1		1	1	1	1
2	1010	12" Dust cover					1	1		1	1	1	1
3	15061-A	12" P.M. Speaker 500 ohm					1	1					
4	1011	12" Dust cover					1	1					
5	25056-A	Speaker terminal plate assembly					1	1					
6	23303	6" Oval P.M. speaker J-5						1	1				
7	26103	9" Oval P.M. speaker J-4						1	1		1	1	

**SPEAKER
ASSEMBLY
FOR ALL
MODELS**

