

BOLEX
INTERNATIONAL S.A.

CH-1450 STE - CROIX / SUISSE

SERVICE APRES-VENTE BOLEX

AFTER-SALES SERVICE

KUNDENDIENST

PIECES DE RECHANGE ET INSTRUCTIONS TECHNIQUES

ERSATZTEILE UND TECHNISCHE ANLEITUNGEN

SPARE PARTS AND SERVICE INSTRUCTIONS

CAMERAS

H16M-RX-SB 251 501 →


KAMERAS

H16EBM 300 401 →

CAMERAS



EDITION 1971

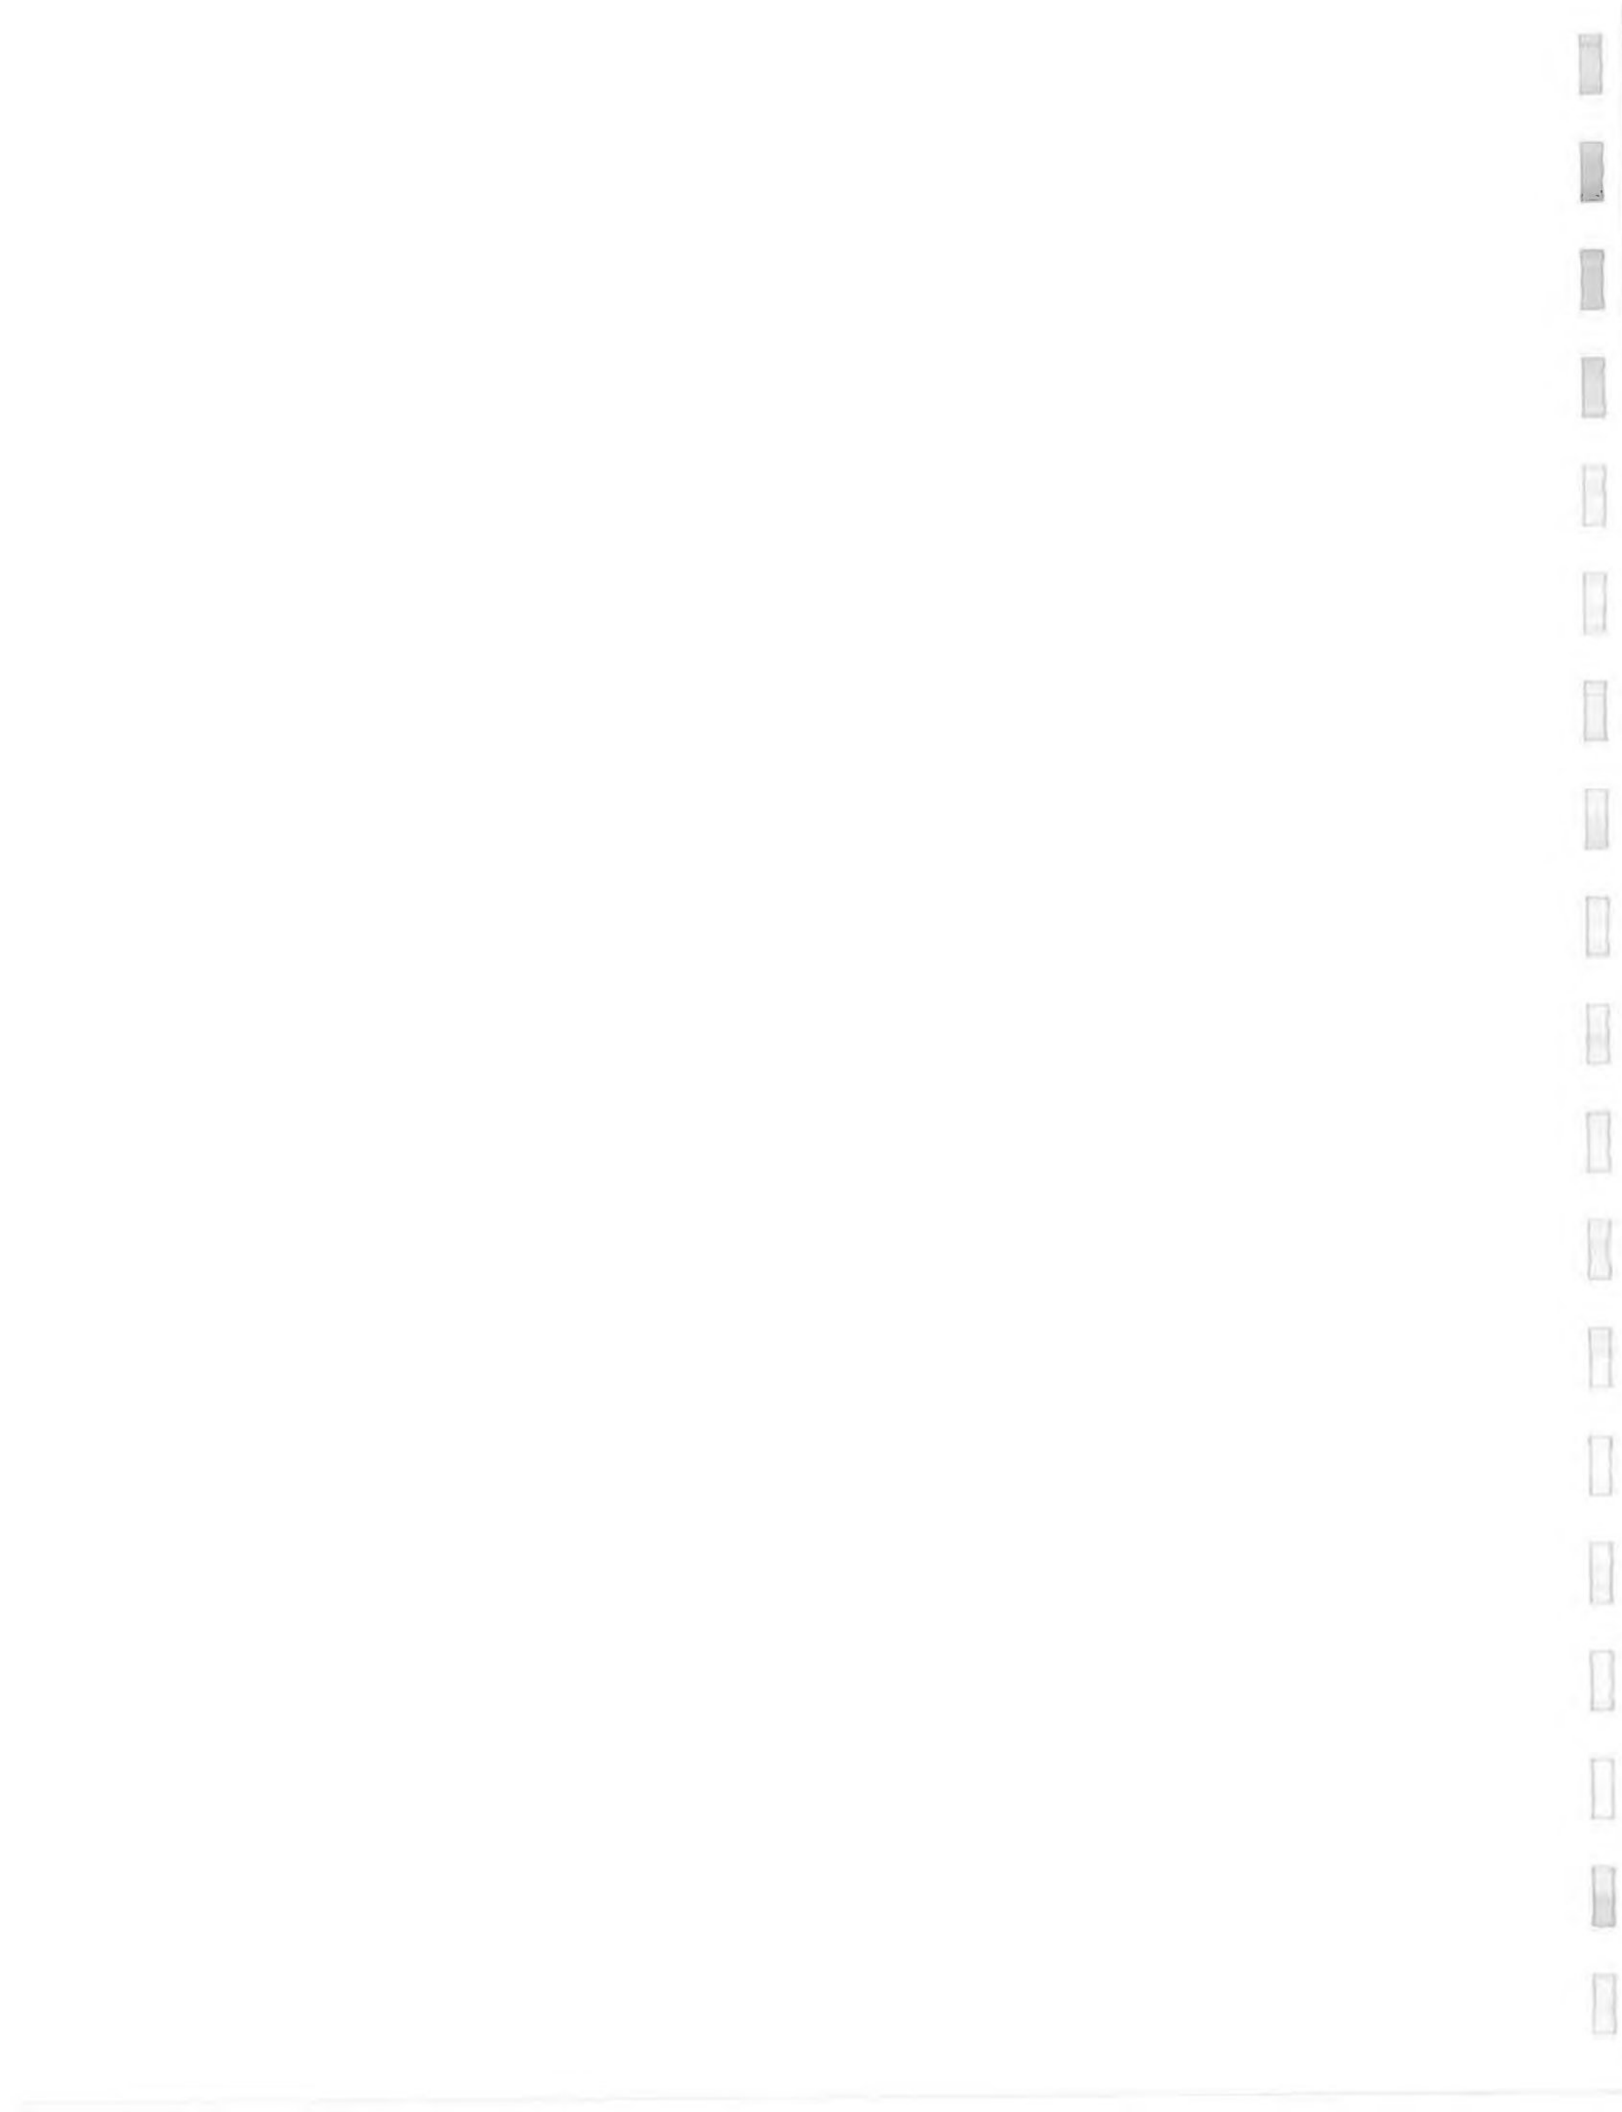

You are requested to file in this service manual all the corresponding printed matters which you will receive henceforward and to check the information contained therein whenever you wish to compile a spare parts order.

All technical documentation is supplied to your service department on a loan basis and must by no means be handed over to third parties.

BOLEX INTERNATIONAL S.A.
After-Sales Service

CH-1450 Ste-Croix / Switzerland

Every document of this catalogue is composed of numbered "boxes" respectively "columns" containing the following information :

Box No. 1 : The type of document, i.e.

TM = index : white paper

INTRODUCTION : white paper

PD = spare parts sheet : white paper

IT = technical instructions :

FM = modification sheet :

Filing order :

IT are filed after the corresponding spare parts sheets. If there are several versions of the same subject, additional PD may be issued. If no special IT are elaborated, the technical instructions belonging to the original PD are also valid for the additional PD.

FM are filed so as to face the corresponding PD or IT, according to the indication in box 9. **

Box No. 2 : The name of the subject treated.

Box No. 3 : The product to which the treated subject belongs.

Box No. 4 : The serial number indicating the introduction of the subject treated. (Approx.)

Box No. 5 : The trade mark of the manufacturer.

Box No. 6 : The name of the catalogue (see also label on back of folder).

Box No. 7 : The issuing date of the document.

Filing order :

- INTRODUCTION sheets : Of all the INTRODUCTION sheets bearing the same indications in boxes 1 - 6 - 11, only the sheet with the latest issuing date must be kept.

- TM, PD and IT : Of all the sheets bearing the same indications in boxes 1 - 6 - 10 - 11 (1 - 6 for TM), only the sheet with the latest issuing date must be kept.

ATTENTION : When discarding a superseded sheet, be sure that the corresponding FM are eliminated at the same time !

- FM : Of all the FM bearing the same indications in boxes 1 - 6 - 9 - 11, only the sheet with the latest issuing date must be kept.

Box No. 8 : The language in which the document is printed :

* = trilingual

F = French

D = German

E = English.

Box No. 9 : Space reserved for special indications.

On the FM, this space contains the specifications in box 1 - 10 - 11 - 7 of the PD or IT for which the FM is valid.

Box No. 10 : Letter of tab under which the PD and IT are filed.

On the IT this section is divided into two parts, the lower showing the page number of the PD whereafter the IT are filed.

Box No. 11 : The page number.

Filing order :

- TM, INTRODUCTION sheets, PD and FM : Arabic numerals in numerical order.

- IT : Roman numerals in numerical order.

Box No. 12 : - On INTRODUCTION sheets : miscellaneous

- On PD : "exploded view" drawings with part numbers

- On IT : text.

Box No. 13 : Sketches illustrating the technical instructions.

Column No. 15 : The number of the respective modification.

Column No. 16 : The old parts, valid before the introduction of the modification.

Column No. 17 : The new parts, valid after the introduction of the modification.

Column No. 18 : Explanatory notes.

******) On receipt of a FM, you should rectify immediately the corresponding document.

SignSignification

As a rule, compound parts which have only one or no symbol at all, cannot be dismantled. Their components are, consequently, not available separately.



Design available.

(.....)

Part not available.

(.....†)


Superseded design. Available as stock lasts.

(.....✕)

Faulty parts, to be returned for exchange. Cheap parts may be destroyed.
Moreover, this sign constrains the repairman to fit the new version on any apparatus equipped with the old one, no matter for which reason the apparatus is submitted to him.

(.....) *

Available for fully equipped service stations.



Parts appearing in the dotted field are available as an assembly.
The respective reference is to be found in a corner of the field.

...X 

Quantity of identical parts going with the assembly.

○ 

○ = numbering of the designs (to designate interchangeability).

○  I 2/1 & 3

Part interchangeable.
Design ② may be fitted instead of ① and ③.

○  NI 1/2

Part not interchangeable.
Design ① cannot be mounted instead of ②.

○  NI 2/1;
I 2/3

Design ② is not interchangeable with ① but with ③.

 d=...
e=...

Mechanical characteristics (thickness, diameter, size, length, appearance, colour, etc...) enabling you to distinguish the old version from the new one.



The bracketed parts make the new version interchangeable with the former one.



Number of teeth of a gear.



Parts to be mounted according to need (for adjustment).



Design valid up to serial number.



Design valid from serial number.



Symbol of grease to be applied.



Symbol of oil to be applied.



Symbol of glue to be used.



Symbol of paint to be applied.



Symbol of mastic to be applied.



Symbol of thinner to be applied.



Symbol of solid lubricant to be applied.



Part shown on another page or in another catalogue.



Part not available.
If shown in a screened area it will be included in the corresponding assembly.

The above mentioned signs do not belong to the spare parts number and may, therefore, be omitted when placing an order.

- F) Code de couleurs des fils électriques et gaines isolantes.
D) Farbcode für elektrische Drähte und Isolierhüllen.
E) Colour code for electric wires and insulating tubing.

<u>Code</u>	<u>Couleur / Farbe / Colour</u>
(a)	Jaune / Gelb / Yellow
(b)	Noir / Schwarz / Black
(c)	Rouge / Rot / Red
(d)	Vert / Grün / Green
(e)	Blanc / Weiss / White
(f)	Bleu / Blau / Blue
(g)	Orange / Orange / Orange
(h)	Beige / Beige / Beige
(j)	Rose / Rosa / Pink
(k)	Violet / Violett / Purple
(l)	Brun / Braun / Brown
(m)	Gris / Grau / Grey
(n)	Non isolé Nicht isoliert Not insulated
(o)	Aluminium (gainage transparent) Aluminium (durchsichtige Isolation) Aluminium (transparent insulation)
(p)	Cuivre (gainage transparent) Kupfer (durchsichtige Isolation) Copper (transparent insulation)

- F) Afin d'en faciliter la lecture, nous vous recommandons de retracer sur les plans de câblage les fils avec leur couleur correspondante.
D) Wir empfehlen Ihnen, zwecks besserer Lesbarkeit die Drähte auf den Verdrahtungsschema mit den entsprechenden Farben nachzuziehen.
E) For better intelligibility it is recommended to trace the wires on the wiring diagrams with their respective colours.



M**Table des matières
Inhaltsverzeichnis
Index****BOLEX**

Porte-objectif	Objektivhalter	Lens Holder
Viseur réflexe	Reflex Sucher	Reflex Viewfinder
Boîtier	Kameragehäuse	Camera body
Couvercle-Manivelles	Deckel-Aufzugskurbel	Lid-Rewinding handel
Platine supérieure	Obere Werkplatte	Upper base plate
Griffe - Volet presseur	Greifer-Filmandruckplatte	Claw Pressure pad
Mécanisme	Mechanismus	Mechanism
Platine inférieure	Untere Werkplatte	Lower base plate
Gaînages	Beledering	Leathering
Accessoires	Zubehör	Accessories
Cotes	Masse	Dimensions

13

01.71

*

1



Porte objectif
Objektivhalter
Lens Holder

H16SB	
H16SBM	
300 201	•
300 001	•

Exploded view diagram of a mechanical assembly. Components are labeled with part numbers and specifications:

- BCF 2915
- BCF 2921
- BC 2990
- 3X 110.20.141 KP
- AX 3325
- 2X 303.21.11 OK (N) e=0,4
150X e=0,3
- BC 3566 M3
- BC 3567H e=0,10 (N)
J e=0,15
B e=0,20
- 2X BC 3568H x=1,5 (N)
J x=1,7
- 2955.7
- BC 3478
- BC 3514 M3
- BC 3737 M3
- 3X 362.12.11
- 310.20.12 M1
- BC 3498
- BC 3739
- BC 3562
- 303.21.13 OK e=0,2
- BCN 3490x1
- BCN 3503x1 M1
- BJ1039
- 4X BC 3512
- 3X 150.20.15 OK
- BCD 3587 M1
- 3X BC 3512
- 2X 100.30.20 OK
- BC 3513 M1
- BC 3468 M2
- 2X 121.20.20 OK
- 17.81.91.11
- BCS 2900 A

Additional specifications and dimensions shown in the diagram:

- a=6,45 (N)
- a=6,55
- a=6,65
- a=6,75
- b=0,10 (N)
- b=0,15
- 02 OK (N) e=0,5
- 03 OK e=0,2
- 04 OK e=0,1
- 05 OK e=0,3
- 06 OK e=0,05
- M2
- 6.8

Printed in Switzerland. All rights reserved.

H 3

11.70

*

(F) Flirage m6canique
(D) Mechanisches Auflagema6 = $2(,46 \pm 0,02$
(E) Mechanical flange local distance
(f) * Peut varier suivant l'6paisseur du prisme
(D) * Kann je nach dicke des Prismas variieren
(E) * May differ, depending on the thickness of the prism

A

1

FM

Porte-objectif
Objektivhalter
Lens Holder

H16 SB - SBM

BOLEX


300 001 →

Anciennes pièces
Alte Teile
Former parts

Nouvelles pièces
Neue Teile
New parts

Observations
Bemerkungen
Remarks

(BJ 1569 †)

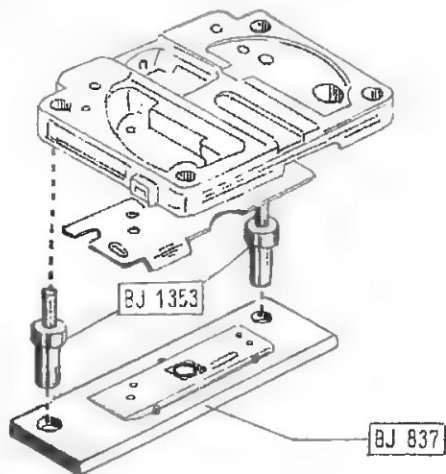

- F) Le gabarit de centrage BJ-1569 est mis hors-cours. Pour positionner le support de centrage du couloir BJ-837 sur le porte-objectif, planter 2 guides cylindriques BJ-1353 dans les 2 trous situés de part et d'autre du couloir.
- D) Die Zentrierlehre BJ-1569 ist nicht mehr verfügbar. Zur Einstellung der Filmbühne-Zentriervorrichtung BJ-837 auf dem Objektivhalter werden 2 Zylinderführungen BJ-1353 in die beiden Löcher der Filmbühne eingeführt.
- E) Centering gauge BJ-1569 is no longer available. In order to position the film gate centering device BJ-837 on the lens holder, introduce the 2 cylindric guides BJ-1353 into the 2 holes of the film gate.

04.75

H3

04.76

*

IT - A 1 - I - 03.71

1

1. Lens holder

Use support BJ 133 for all mounting proceedings of the lens holder.

Important : All lens elements, the prism and their seatings must be cleaned scrupulously, as the slightest particle of dust or finger prints appear greatly magnified in the viewfinder.

1.1 Collecting lenses (fig. 1)

Using BJ 579, carefully lift up lenses (a) at their base and remove with BJ 114. In case of lens replacements, calibre with BJ 583 the diameter of the nylon wedges to be used for a correct fastening in the seatings.

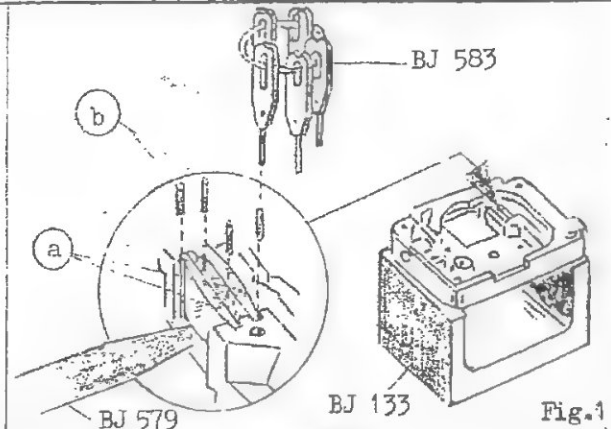


Fig. 1

1.2 Film gate (fig. 2)

For the mounting and the centering of both film gate and wedge onto the lens holder, use support BJ 1569 with gauge BJ 837 at its top. Film gate (c) is positioned through the 3 pins (g) and centered by the window on cylinder (f). Set wedge (d) and lens holder (e) guided by the 4 pins of gauge and support; tighten the 4 screws (h). The outer edges of wedge (d) must come flush with the bearing surface of the film gate.

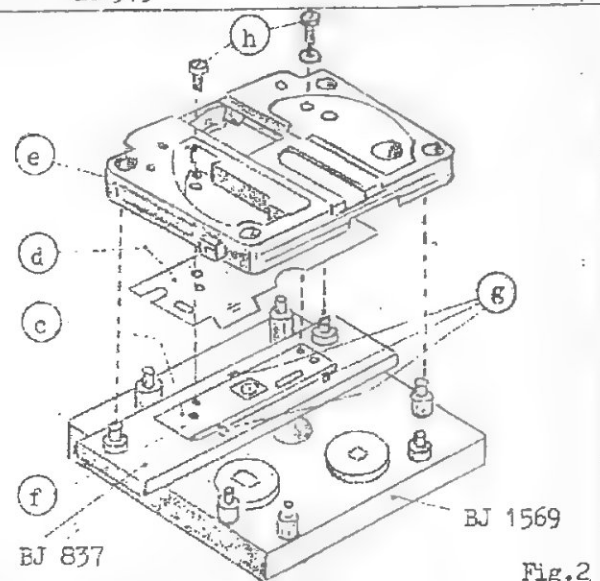


Fig. 2

1.3 Transport prism (fig. 3)

Introduce prism (j) in its seating with the chamfered edge above and select wedges (k) and (l) which must provide no play at the fixing. If the thickest wedges are still insufficient, stick a small piece of black self-adhesive tape at the place marked by the arrow. Use tool BJ 114 for driving out the wedges.

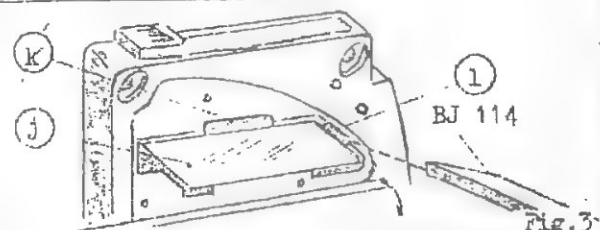


Fig. 3

1.4 Reflex prism (fig. 4)

The mounting and dismantling of the reflex prism (m) may be effected when the lower plate (o) has been removed, since the space available to carry out such works is very limited.

Lift up prism (m), engage the retaining wedge BJ 581 and close the prism against BJ 581.

Carefully introduce prism assembly (m) without scratching same.

Put up prism (m) and remove BJ 581.

Shift the lower plate (o) under the hinge plate (n) and screw the 4 screws (p) without tightening.

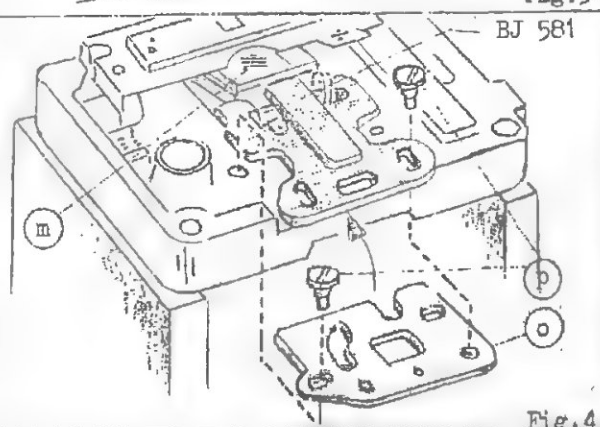


Fig. 4

2. Optical flange focal distance

State of the lens holder as per fig. 5 with gate (a), a shim plate (b) of medium thickness (for instance $e = 0,30 \text{ mm}$), a spacer (k) of medium thickness and the reflex prism (c) mounted.

2.1 Preparation as per fig. 6

Fit the lens holder onto support BJ 811 with the 2 screws and nuts BJ 811 E. Place mirror BJ 1597 opposite the gate window and retain it with spring (d). Switch on the autocollimator to position 1 (min. light intensity). Center the gate window with respect to the autocollimator axis. Slide the autocollimator lens to about 25 cm from the lens holder, adjusting the vernier scale to 0.

Horizontal adjustment : Adjust the angular position of support BJ 811 so that the luminous line appears diametrically in the eyepiece, fig. 7.1, position A.

Vertical adjustment : Loosen screw (f) and turn screw (e) with a view to bringing the lens holder into its vertical plane

2.2 Parallel adjustment of the prism

Put up the reflex prism and remove mirror BJ 1597. Loosen screw (h) and set the prism parallel with respect to the gate by acting on screw (j) and on the 2 screws (l). The position of the prism is correct once the luminous line is visible in the eyepiece as per position A, but positions B and C, fig. 7.2, are still acceptable.

These adjustments precede the adjustment of the flange focal distance and may be rectified while adjusting the flange focal distance of the ground glass screen of the prism.

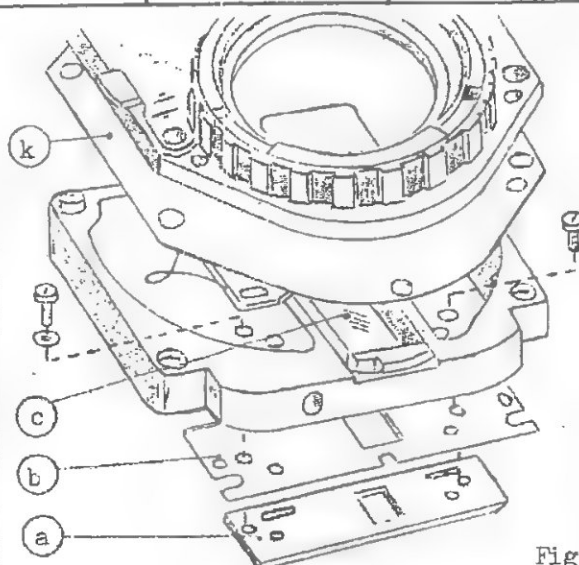


Fig. 5

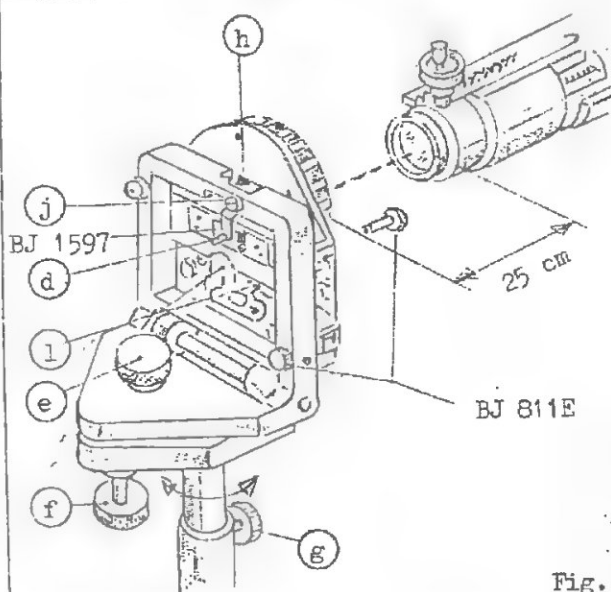


Fig. 6

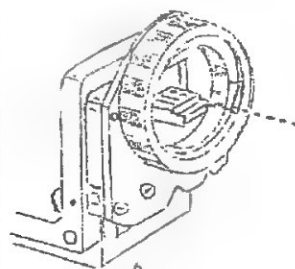


Fig. 7.1

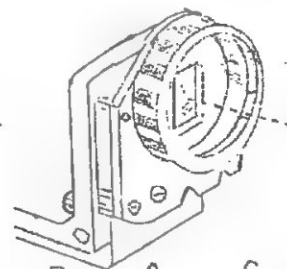


Fig. 7.2

Fig. 7

2.3 Adjusting the optical flange focal distance

Preparation as per fig. 8.

Fit the calibration lens BJ 151 and the bayonet support BJ 1310 to the lens holder. Switch on the autocollimator to position 1 (min. light intensity). Slide the autocollimator tube so that the line seen in the eyepiece has the maximum of contrast, illustration D. Note the difference with respect to the zero of the vernier. This figure, read in mm on the vernier, indicates the value in 0.01 mm by which the thickness of the shims previously used must be varied, so as to obtain the following readings on the vernier scale :

$$0 \pm 2 \text{ divisions} = \pm 0.02 \text{ mm}$$

2.4 Adjusting the flange focal distance of the ground glass prism

Remove mirror BJ 1597 and switch on the autocollimator to position 2 (max. light intensity).

Act in reverse order on screw (j) and on screws (l) so as to maintain the parallelism of the prism and to bring the flange focal distance of the ground glass to

$$\pm 2 \text{ divisions} = \pm 0.02 \text{ mm}$$

of the reading noted under paragraph 2.3.

Screws (l) to be screwed and (j) blocked through tightening of screw (h).

2.5 Framing

Preparation as per fig. 9, light source at (m).

Focus the magnifying glass BJ 810 on the edges of the prism aperture.

Center the white rectangle in the red one.

To carry out the horizontal adjustment, slightly loosen screws (n) and act with the eccentric screwdriver BJ 1594 in (o).

To carry out the vertical adjustment, slightly loosen screws (p) and act with BJ 1594 in (r). Afterwards tighten (n) and (p).

Should a small parallel defect appear between the 2 apertures, slightly loosen screw (s) and align the ground glass mask (t).

2.6 Film guide (fig. 10)

Gauge BJ 1500x1 must slide in the film guide, but without play. The pressure exerted by spring leaf (u) must be of :

$$50 \pm 5 \text{ g}$$

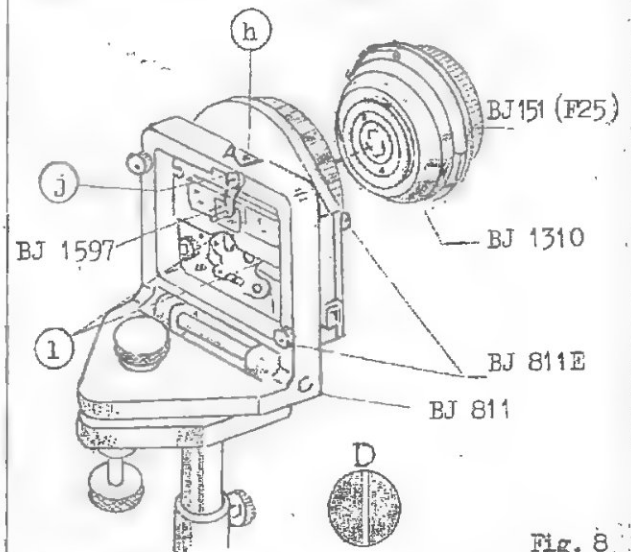


Fig. 8

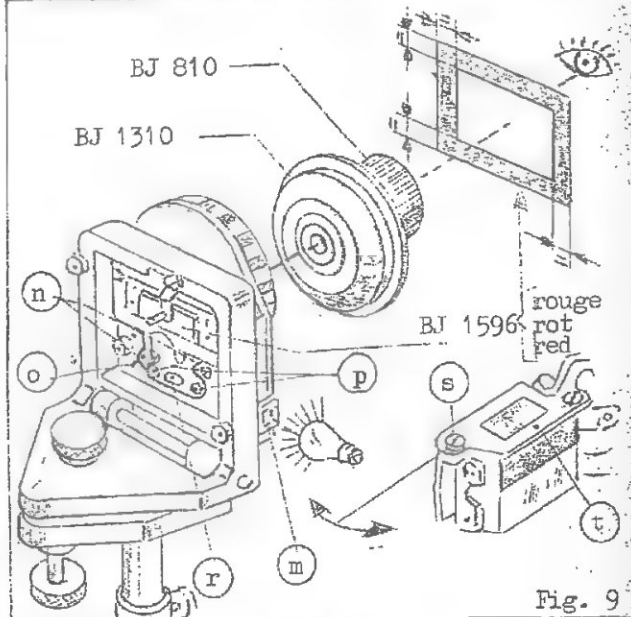


Fig. 9

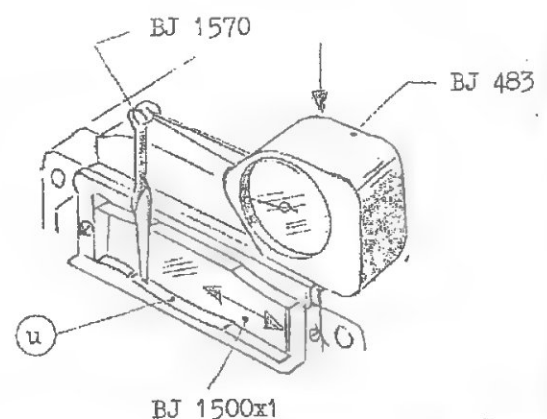


Fig. 10

3. Variable shutter (fig. 11)

Mount the variable shutter assembly (a) on the lens holder.

Select the necessary shims and spacers so that :

- 1) lever (b) slides freely and smoothly
- 2) the pile does not protrude in (c).

3.1 Adjustments

Put control lever (b) in open shutter position (red mark).

On point (x) bring the 2 shutter blades in superposition, however so that the fixed sector is retracted by 1 mm under the upper movable sector. Maintain both sectors and catch the play of the shutter control mechanism by turning the axle in the direction of the arrow. With the 4 screws, fasten the fixed shutter blade to its axle.

3.2 Adjusting the lens holder on the housing

Place pinion (d) on the VS axle as shown in fig. 12. Fasten pinion very slightly on its axle by means of one single screw.

Mount lens holder on camera, the mechanism of which being stopped as per fig. 13.

The pinion (d) to be used must allow a slight play in the transmission.

When operating the camera frame by frame in position I and by maintaining the button on P, the shutter must stop as per fig. 14.

Remove the lens holder and tighten the 3 screws of pinion (d).

Before mounting the lens holder definitely as previously described, bring the shutter in the position shown in fig. 15. Pinion (d) turns the shutter automatically in the right position as per fig. 14. Check the free movement of the mechanism by means of the handcrank for the backward motion.

Make sure that the shutter is adequately fastened as per fig. 14, the mechanism being stopped according to fig. 13.

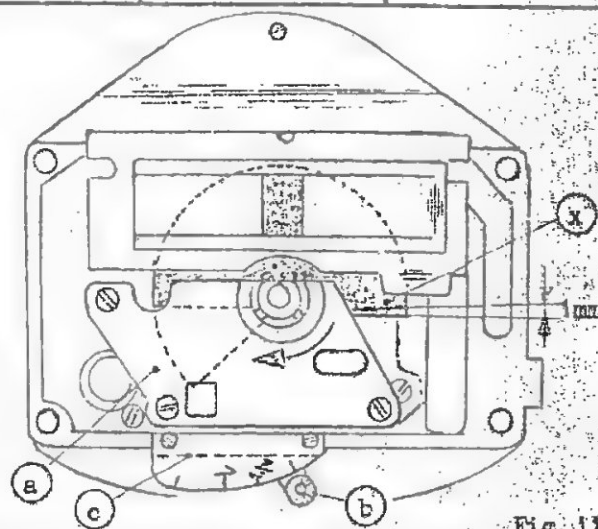


Fig. 11

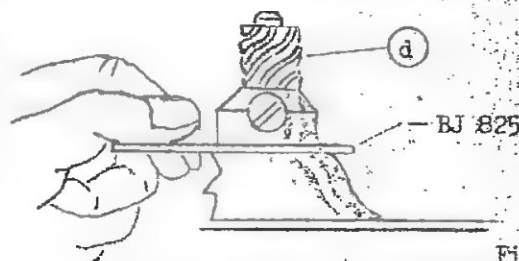


Fig. 12


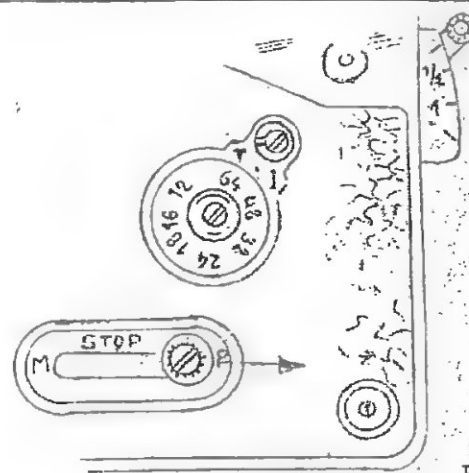


Fig. 13

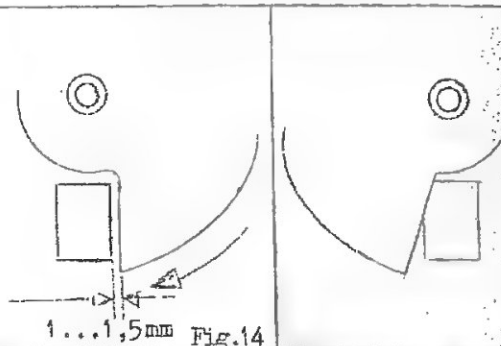

1...1,5mm Fig. 14

Fig. 15

FMPorte-objectif
Objektivhalter
Lens Holder

H16SB / SBH

300 001 →

BOLEX15
Anciennes pièces
Alte Teile
Former parts16
Nouvelles pièces
Neue Teile
New parts17
Observations
Bemerkungen
Remarks

18

1

BCD 3509 M a=6,05 (N)


(F) Engrenage supplémentaire d'un taillage plus grand.
(D) Zusätzliches Zahnrad mit größerer Zahnform.
(E) Additional gear wheel with bigger tooth formation.
05.71

2

① (BCM 3419x1 M2 †)

② BCD 3419x1

300 251 →

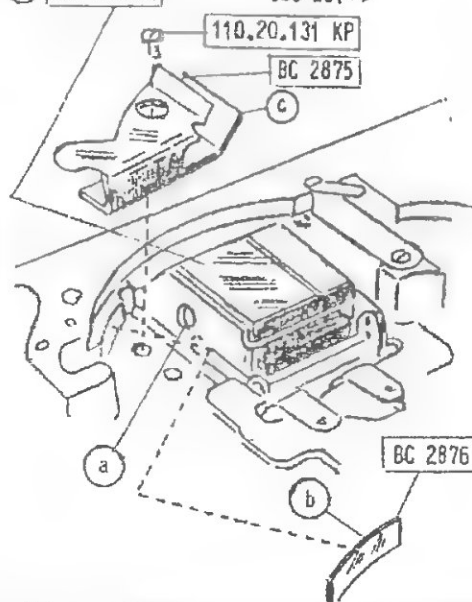

(F) Le trou de lumière sur le porte-prisme en (a) est supprimé, retour à l'ancien prisme.
Introduction d'un réflecteur auto-scellant (b) et d'un réflecteur guide-lumière (c).
(D) Die Lichtöffnung an (a) auf der Prismenfassung ist aufgehoben, daher die Verwendung des älteren Prismas.
Einführung eines selbstklebenden Reflektors (b) sowie eines Lichtführungs-Reflektors (c).
(E) The light aperture (a) on the prism mount is eliminated, hence the use of the old prism.
Introduction of a self-sealing reflector (b) as well as of a light guiding reflector (c).
05.71

05.71

3

3X (110.20.141 KP †)

3X 110.20.131 KP

(F) Nomenclature modifiée
(D) Teilnummernänderung
(E) Part-number modification
05.71

05.71

4

(BC 2907 Ax) †
(" Bx) †
(" Cx) †

BC 2907 F (N) e= 0,44
G e= 0,46
H e= 0,48

(F) Nouvelles variantes de caches et suppression de 3 variantes.
(D) Einführung von neuen Gleitfiltern und Wegfall von 3 Ausführungen.
(E) Introduction of new filter holders and suppression of 3 versions.
11.71

11.71

5

(BCE 2925 †)
2X (100.20.170 OX †)

BCE 2925 M2
2X 120.20.161 H1

(F) Fixation du support claquette modifiée pour éviter un court-circuit avec les contacts.
Vis à tête conique remplacée vis à tête plate.
(D) Änderung in der Befestigung des Startmarkierungshalters zur Vermeidung eines Kurzschlusses mit den Kontakten.
Die Flachkopfschraube wird durch eine Zylinderschraube ersetzt.
(E) Modification of the clapper support fixing to avoid a short-circuit with the contacts.
The flat head screw is replaced by another one with cylinder head.
11.71

11.71

H3

11.71

*

PD - A - 1 - 11.70

1

FM

Porte-objectif
Objektivhalter
Lens Holder

H 16 SB-SBM



1 ^a Anciennes pièces Alte Teile Former parts	1 ^a Nouvelles pièces Neue Teile New parts	1 ^a Observations Bemerkungen Remarks
1 (BC 2907 Ax1 +) { " 8x1 +) { " Cx1 +)	BC 2907 F (H) e= 0,44 G e= 0,46 H e= 0,48	(F) Nouvelles variantes de caches et suppression de - 3 variantes. (D) Einführung von neuen Gleitfiltern und Wegfall von 3 Ausführungen. (E) Introduction of new filter holders and suppression of 3 versions. 11.71
2 (BCE 2925+) XXXXXXXXXXXXXXXXXXXX 2X (100.20.171 0X+)	BCE 2925 M2 2X (120.20.161 M1)	(F) Fixation du support claquette modifiée pour éviter un court-circuit avec les contacts. Vis à tête conique remplace vis à tête plate. (D) Änderung in der Befestigung des Startmarkierungshalters zur Vermeidung eines Kurzschlusses mit den Kontakten. Die Flachkopfschraube wird durch eine Zylinderschraube ersetzt. (E) Modification of the clapper support fixing to avoid a short-circuit with the contacts. The flat head screw is replaced by another one with cylinder head. 11.71

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117
118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167
168
169
170
171
172
173
174
175
176
177
178
179
180
181
182
183
184
185
186
187
188
189
190
191
192
193
194
195
196
197
198
199
200
201
202
203
204
205
206
207
208
209
210
211
212
213
214
215
216
217
218
219
220
221
222
223
224
225
226
227
228
229
230
231
232
233
234
235
236
237
238
239
240
241
242
243
244
245
246
247
248
249
250
251
252
253
254
255
256
257
258
259
260
261
262
263
264
265
266
267
268
269
270
271
272
273
274
275
276
277
278
279
280
281
282
283
284
285
286
287
288
289
290
291
292
293
294
295
296
297
298
299
300
301
302
303
304
305
306
307
308
309
310
311
312
313
314
315
316
317
318
319
320
321
322
323
324
325
326
327
328
329
330
331
332
333
334
335
336
337
338
339
340
341
342
343
344
345
346
347
348
349
350
351
352
353
354
355
356
357
358
359
360
361
362
363
364
365
366
367
368
369
370
371
372
373
374
375
376
377
378
379
380
381
382
383
384
385
386
387
388
389
390
391
392
393
394
395
396
397
398
399
400
401
402
403
404
405
406
407
408
409
410
411
412
413
414
415
416
417
418
419
420
421
422
423
424
425
426
427
428
429
430
431
432
433
434
435
436
437
438
439
440
441
442
443
444
445
446
447
448
449
450
451
452
453
454
455
456
457
458
459
460
461
462
463
464
465
466
467
468
469
470
471
472
473
474
475
476
477
478
479
480
481
482
483
484
485
486
487
488
489
490
491
492
493
494
495
496
497
498
499
500
501
502
503
504
505
506
507
508
509
510
511
512
513
514
515
516
517
518
519
520
521
522
523
524
525
526
527
528
529
530
531
532
533
534
535
536
537
538
539
540
541
542
543
544
545
546
547
548
549
550
551
552
553
554
555
556
557
558
559
560
561
562
563
564
565
566
567
568
569
570
571
572
573
574
575
576
577
578
579
580
581
582
583
584
585
586
587
588
589
590
591
592
593
594
595
596
597
598
599
600
601
602
603
604
605
606
607
608
609
610
611
612
613
614
615
616
617
618
619
620
621
622
623
624
625
626
627
628
629
630
631
632
633
634
635
636
637
638
639
640
641
642
643
644
645
646
647
648
649
650
651
652
653
654
655
656
657
658
659
660
661
662
663
664
665
666
667
668
669
670
671
672
673
674
675
676
677
678
679
680
681
682
683
684
685
686
687
688
689
690
691
692
693
694
695
696
697
698
699
700
701
702
703
704
705
706
707
708
709
710
711
712
713
714
715
716
717
718
719
720
721
722
723
724
725
726
727
728
729
730
731
732
733
734
735
736
737
738
739
740
741
742
743
744
745
746
747
748
749
750
751
752
753
754
755
756
757
758
759
760
761
762
763
764
765
766
767
768
769
770
771
772
773
774
775
776
777
778
779
780
781
782
783
784
785
786
787
788
789
790
791
792
793
794
795
796
797
798
799
800
801
802
803
804
805
806
807
808
809
810
811
812
813
814
815
816
817
818
819
820
821
822
823
824
825
826
827
828
829
830
831
832
833
834
835
836
837
838
839
840
841
842
843
844
845
846
847
848
849
850
851
852
853
854
855
856
857
858
859
860
861
862
863
864
865
866
867
868
869
870
871
872
873
874
875
876
877
878
879
880
881
882
883
884
885
886
887
888
889
890
891
892
893
894
895
896
897
898
899
900
901
902
903
904
905
906
907
908
909
910
911
912
913
914
915
916
917
918
919
920
921
922
923
924
925
926
927
928
929
930
931
932
933
934
935
936
937
938
939
940
941
942
943
944
945
946
947
948
949
950
951
952
953
954
955
956
957
958
959
960
961
962
963
964
965
966
967
968
969
970
971
972
973
974
975
976
977
978
979
980
981
982
983
984
985
986
987
988
989
990
991
992
993
994
995
996
997
998
999
1000


PD

Porte objectif Objektivhalter Lens Holder

H16SB
H16SBM

BOLEX

302 110 →
302 692 →

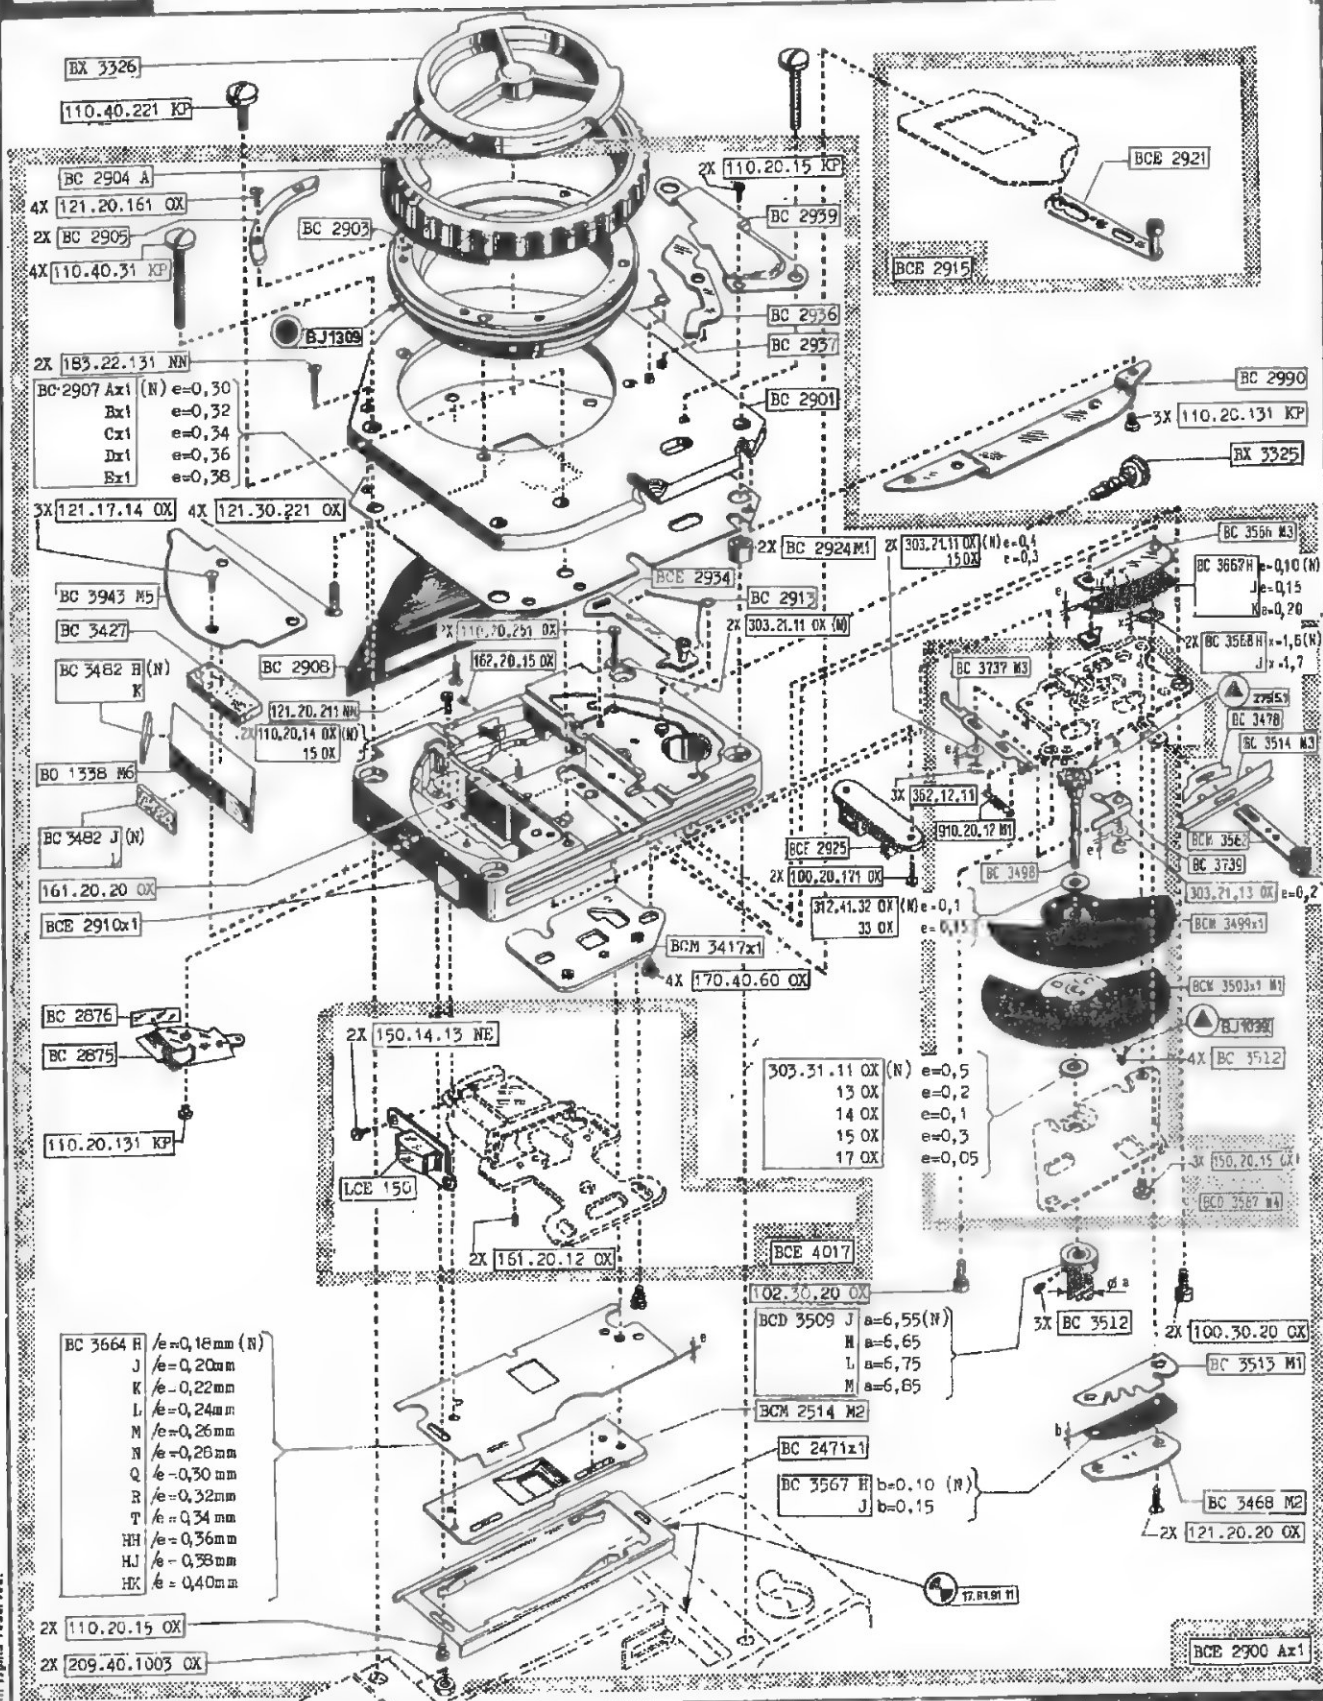

Printed in Switzerland All rights reserved.

H3

09.71

*

(I) : tirage mécanique
(II) : Mechanisches Auflagenmass
(III) : Mechanical flange focal distance
(IV) : * Peut varier suivant l'épaisseur du prisme
(V) : * Kann je nach Dicke des Prismas variieren
(VI) : * May differ, depending on the thickness of the prism

A

1.1


PD

Porte objectif Objektivhalter Lens Holder

H16SBM

BOLEX

350 001 →

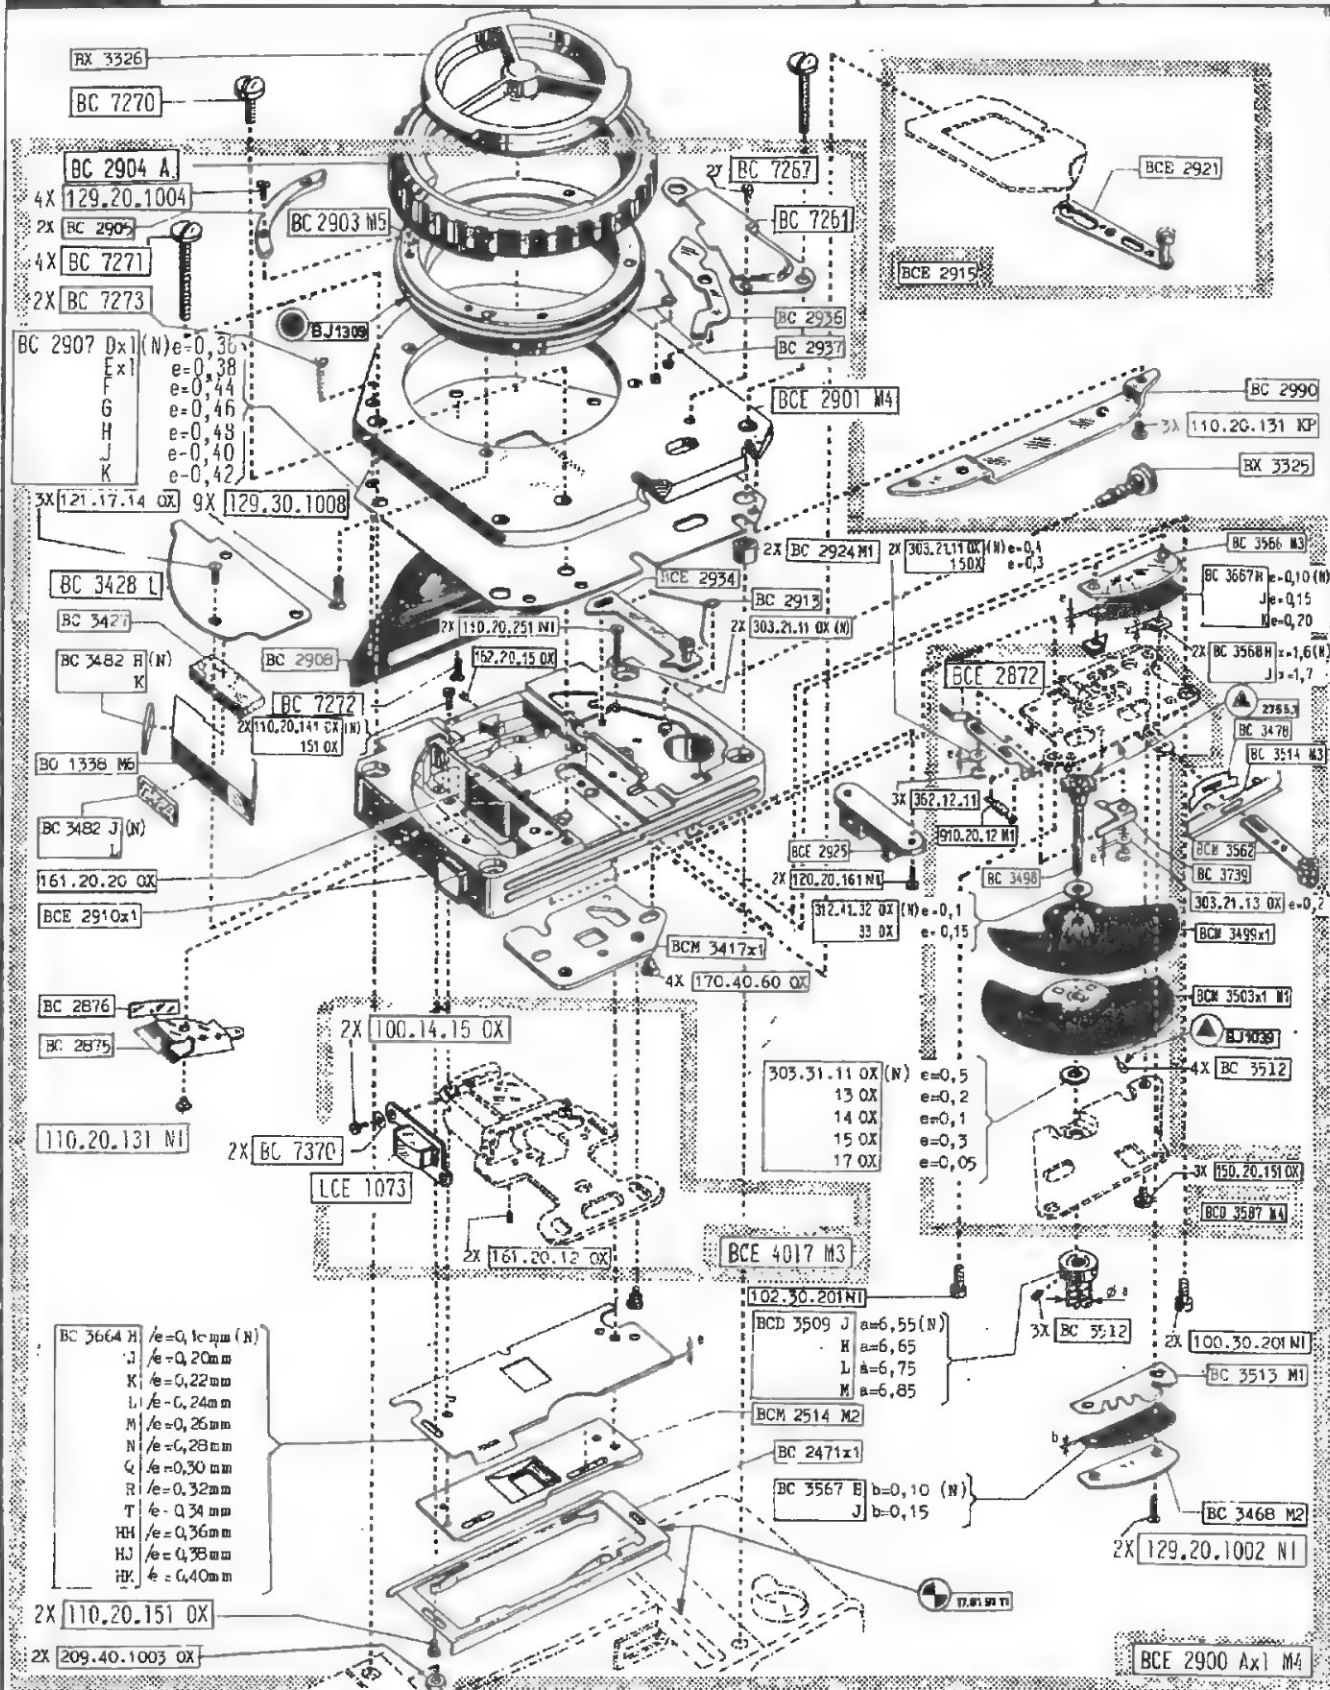

H3

12.77

*

- (f) Tirage mécanique
(D) Mechanisches Auflagewass
(E) Mechanical flange focal distance
(F) * Peut varier suivant l'épaisseur du prisme
(D) * Kann je nach Dicke des Prismas variieren
(E) * May differ, depending on the thickness of the prism

A


1.2

Porte objectif
Objektivhalter
Lens Holder

H16RX

253 020

BOLEX

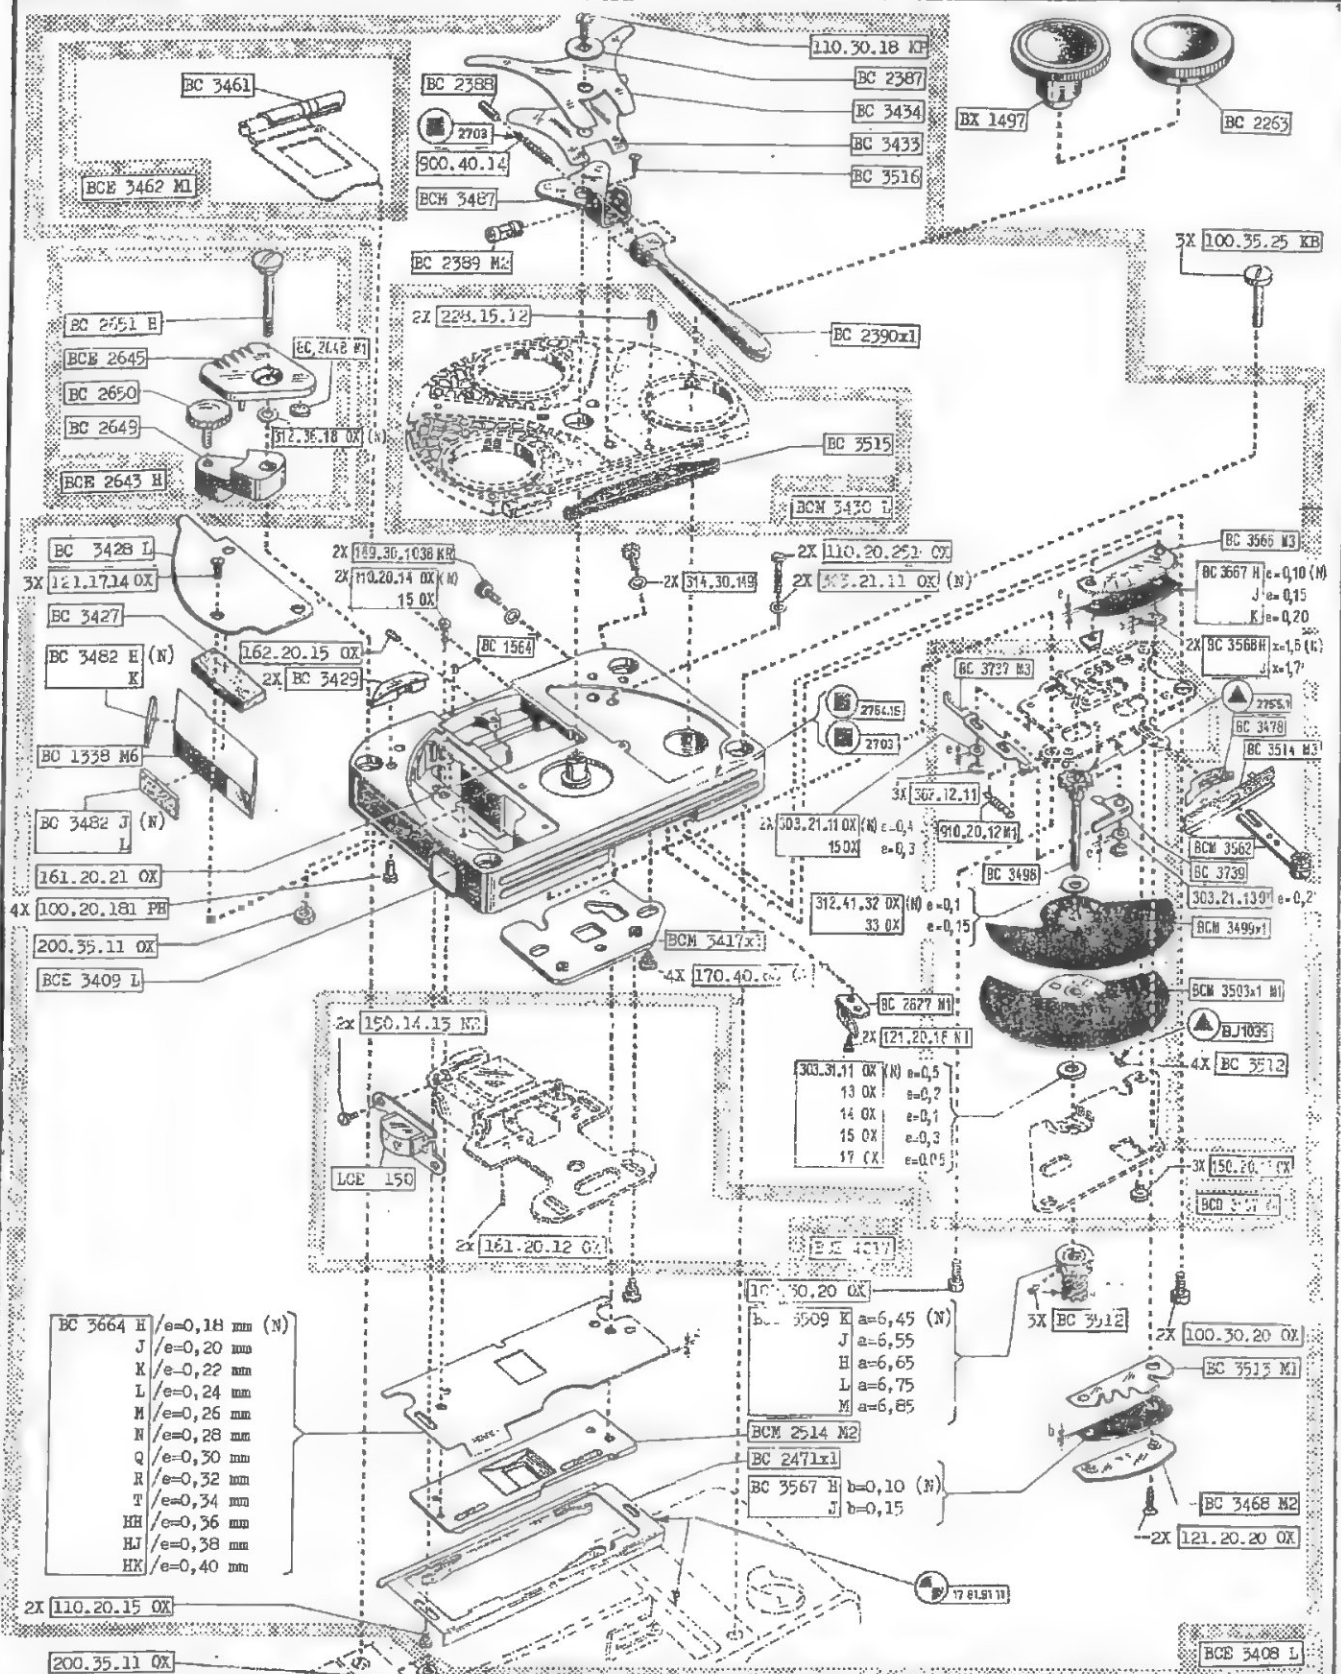

Printed in Switzerland. All rights reserved.

H 3

09.71

(F) Tirage mécanique
(D) Mechanisches Auflagemass $\approx 20,76 \pm 0,02$
(C) Mechanical flange focal distance
(f) * Peut varier suivant l'épaisseur du prisme
(d) * Kann je nach Stärke des Prismas variieren
(F) * May differ, depending on the thickness of the prism

A

2.1


PD

Porte objectif Objektivhalter Lens Holder

H16RX4 / RX5

251 501 →

BOLEX

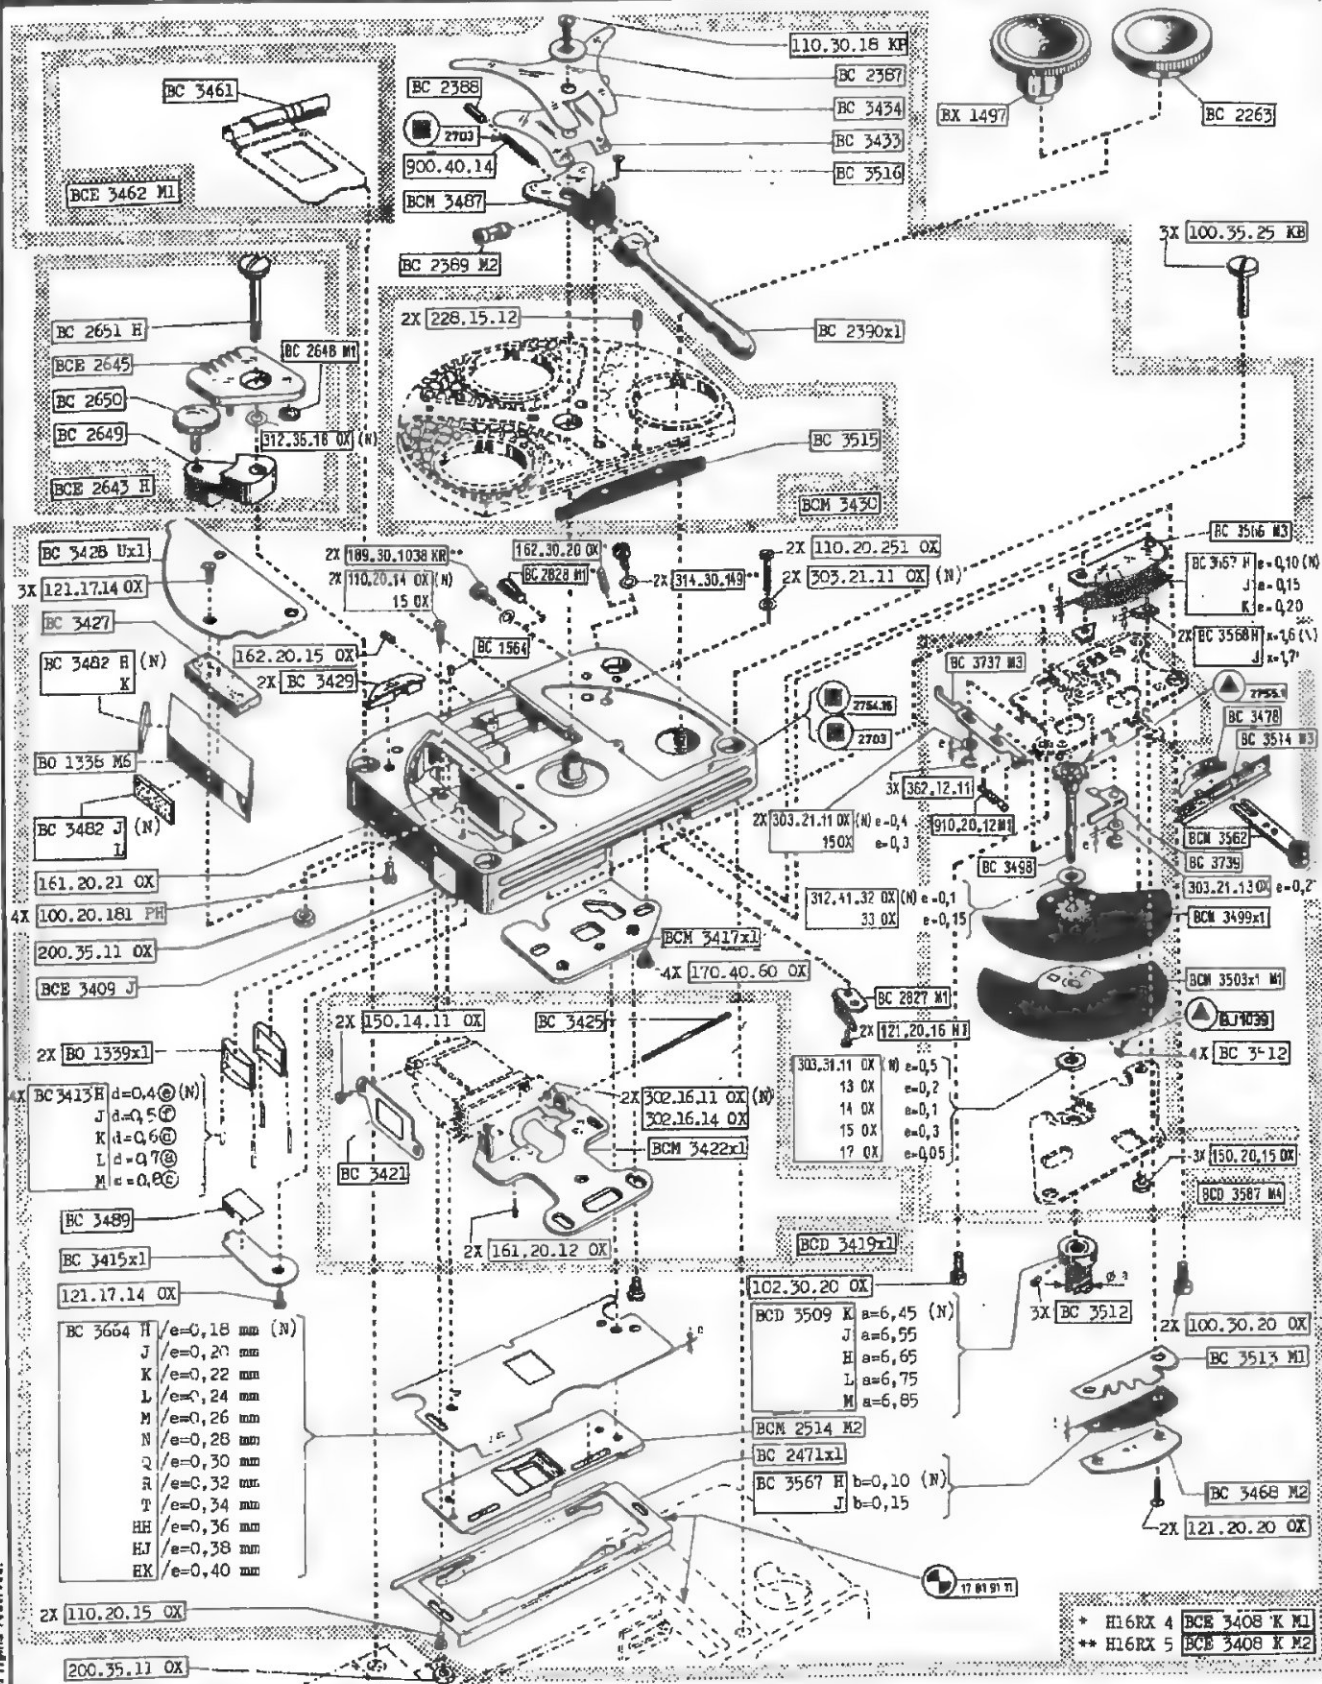

Printed in Switzerland. All rights reserved.

H3

01.71

*

(F) Tirage mécanique
(D) Mechanisches Auflagemass
(E) Mechanical flange focal distance
(F) * Peut varier suivant l'épaisseur du prisme
(D) * Kann je nach Dicke des Prismas variieren
(E) * May differ, depending on the thickness of the prism

A

2

Porte objectif
Objektivhalter
Lens Holder

350 001

Two types of light bulbs are shown. The one on the left is labeled BX 1497 and the one on the right is labeled BC 2263.



12.77

*

- (F) Tirage mécanique
- (D) Mechanisches Auflagemass = $20,76 \pm 0,02$
- (C) Mechanical flange focal distance
- (F) * Peut varier suivant l'épaisseur du prisme
- (D) * Kann je nach dicke des Prismas variieren
- (C) * May differ, depending on the thickness of the prism

2.2


PD

Porte objectif Objektivhalter Lens Holder

H16M5

BOLEX

251 501 →

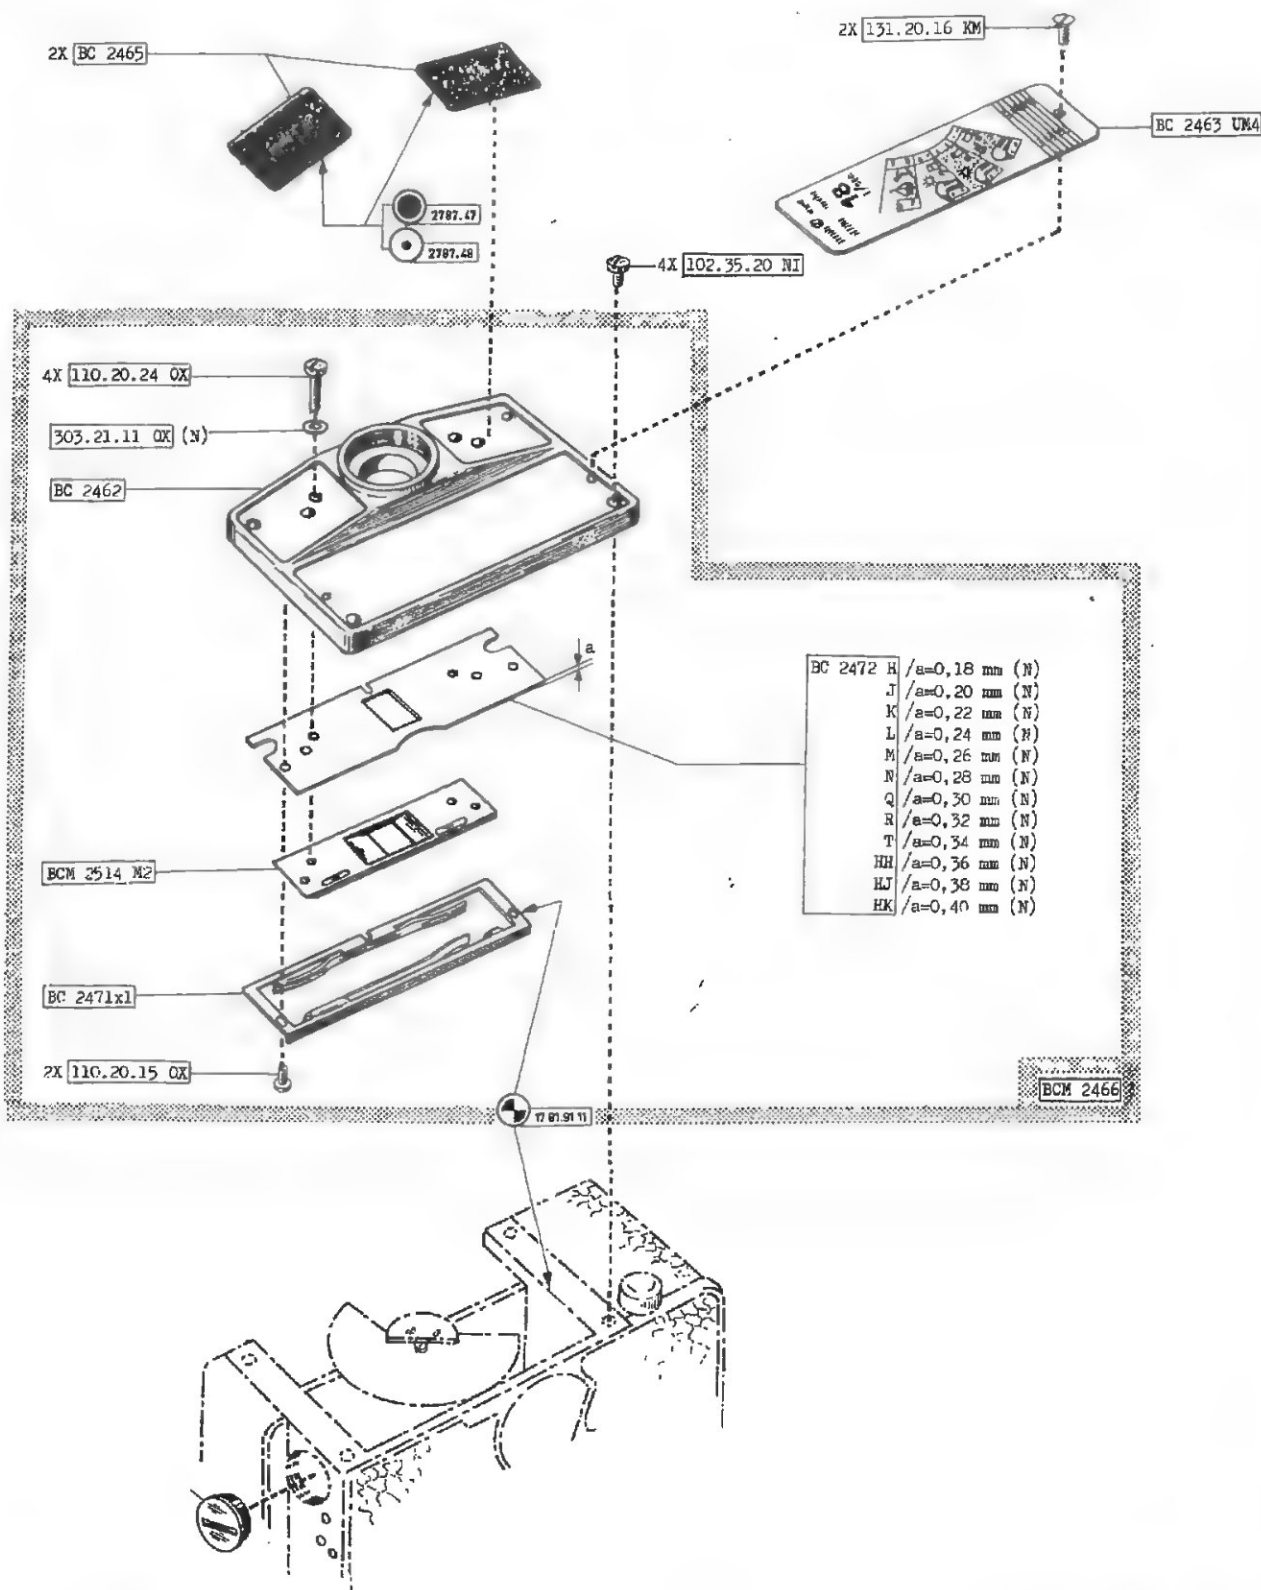

Printed in Switzerland. All rights reserved.

H3

01.71

*

(F) Tirage mécanique
(D) Mechanisches Aufklemmuss
(E) Mechanical flange focal distance

= 17,52 ± 0,02

A

3


PD

Viseur reflexe
Reflex-Sucher
Reflex-Viewfinder

H16

BOLEX

251.501 →

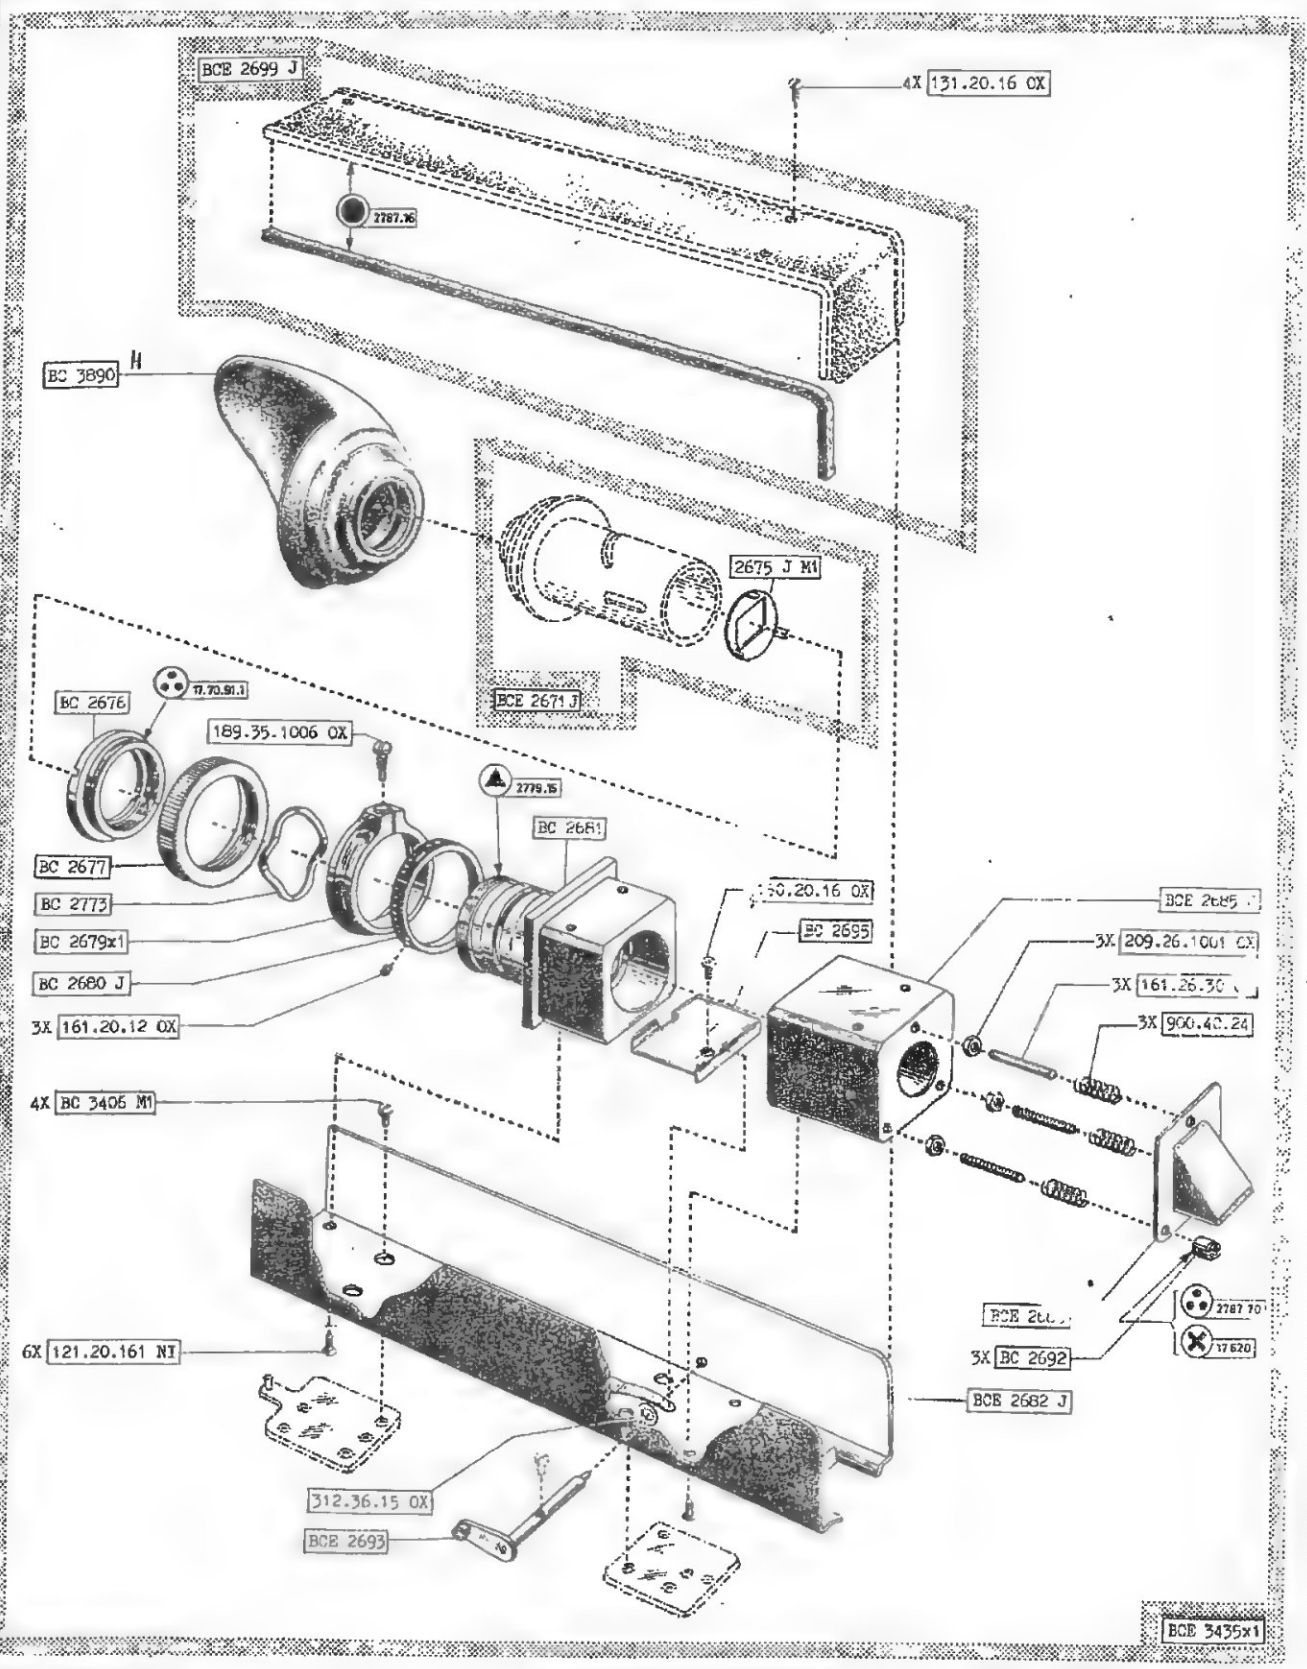

Printed in Switzerland. All rights reserved.

H3

01.71

*

B

1

1. Reflex viewfinder (fig. 1)

1.1 While adjusting the reflex viewfinder onto the camera housing, pin (b) must engage in the slot (a) of the eyepiece. Introduce the beak of screw (c) in the helicoidal slot of the eyepiece (a) and screw without tightening.

Center the mask inside eyepiece (a) with tool BJ 1043. Align front prism (d) (fig. 2) by acting on the 3 screws (c) until the image reflected by the prism coincides with the mask of the eyepiece, still by maintaining a distance of 9 mm. Mount the lid.

1.2 Adjusting the eyepiece (fig. 1)

Equip the camera with a standard lens and project a beam of parallel light rays through the lens (e.g. via a projector). Sight the eyepiece with a dioptic tube BJ 1016 which must be adequately aligned and set to infinity. Subsequently turn adjusting ring (h) until the grain of the ground glass screen appears perfectly sharp.

Turn the graduated collar (g) until the line +1 coincides with the mark of adjusting ring (h). Tighten screws (j).

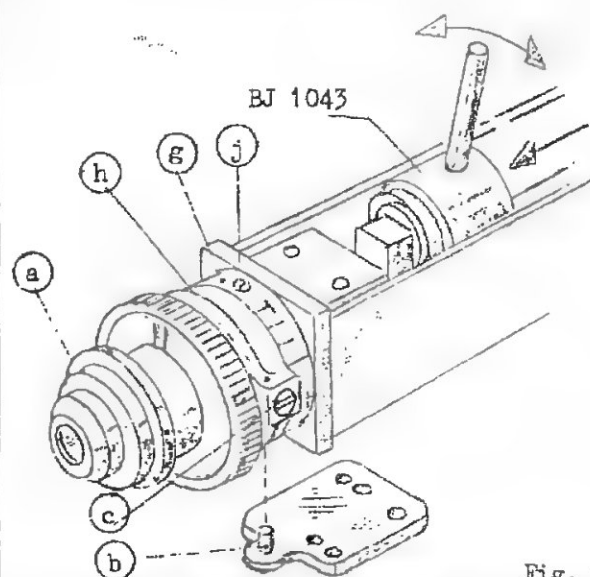


Fig. 1

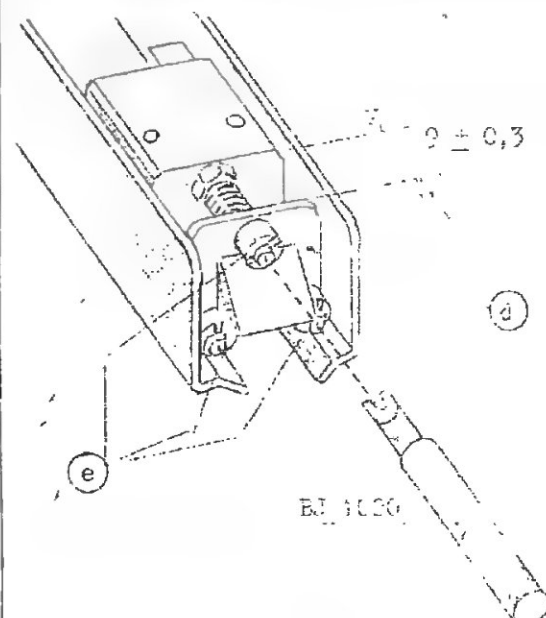


Fig. 2

24

24

FMViseur reflexe
Reflex-Sucher
Reflex-Viewfinder

H16 SB - SBM - RX

BOLEX

15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1 BCE 1000 B	LCE 1000 B	F) Erreur d'impression D) Druckfehler E) Misprint 03.72
2 2x (110.35.161 NI+)	2x 109.35.1009 NI	F) Nomenclature modifiée D) Teilnummernänderung E) Part-number modification 03.72
H3	03.72	* PD - B - 1.1 - 09.71 9



PD

Viseur reflexe
Reflex-Sucher
Reflex-Viewfinder

H16SB-SBM
H16RX

302 110 → / 302 692 →
253 020 →

BOLEX

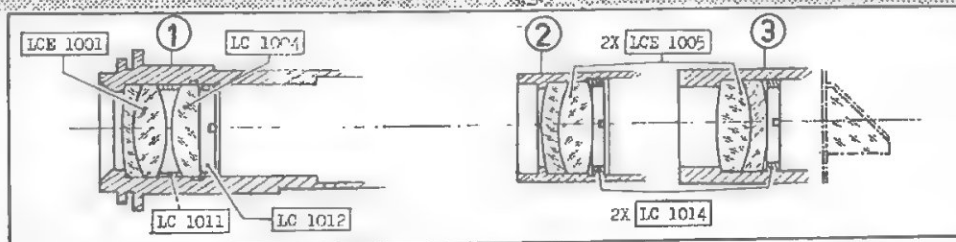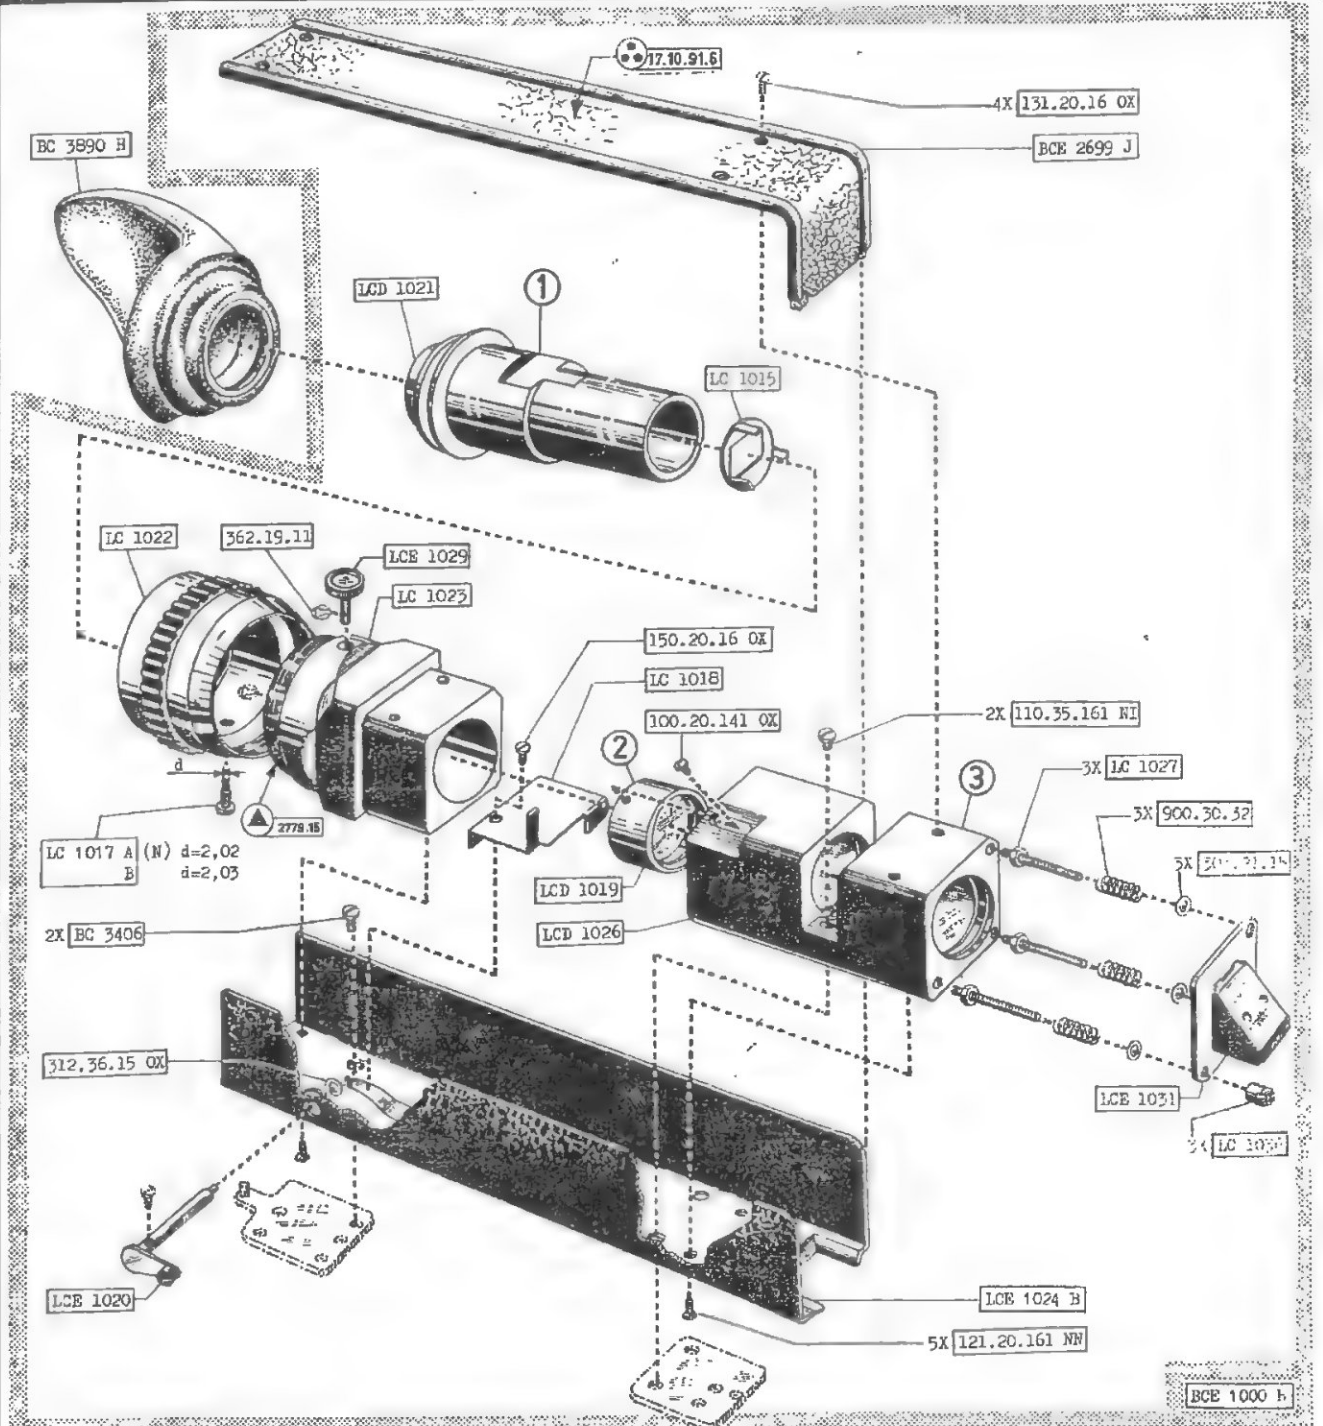

Printed in Switzerland. All rights reserved.

H3

09.71

*

B

1.1

1. Reflex Viewfinder (Fig. 1)

1.1 While adjusting the reflex viewfinder on to the camera housing, pin (b) must engage in the slot (a) of the eyepiece. Center the mask inside eyepiece (a). Align front prism (d) (Fig. 2) by acting on the 3 screws (c) until the image reflected by the prism coincides with the mask of the eyepiece, whereby a distance of 5.8 mm must be maintained.

1.2 Adjusting the eyepiece (Fig. 1)

Equip the camera with a standard lens and project a beam of parallel light rays through the lens (e.g. via a projector). Sight the eyepiece with a dioptric tube BJ 1016 which must be adequately aligned and set to infinity. Subsequently, turn optical assembly 2 until the grain of the ground glass screw appears perfectly sharp, when line + 1 of the graduated ring is opposite the mark.

Tighten screw (j).

Mount the lid.

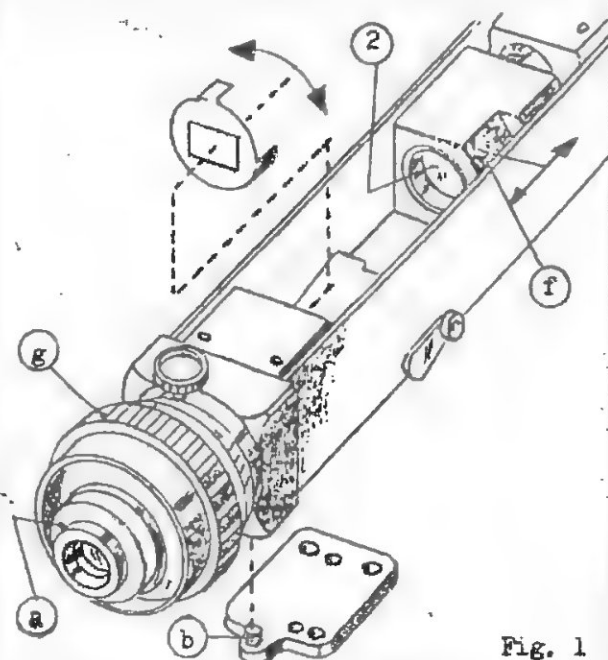


Fig. 1

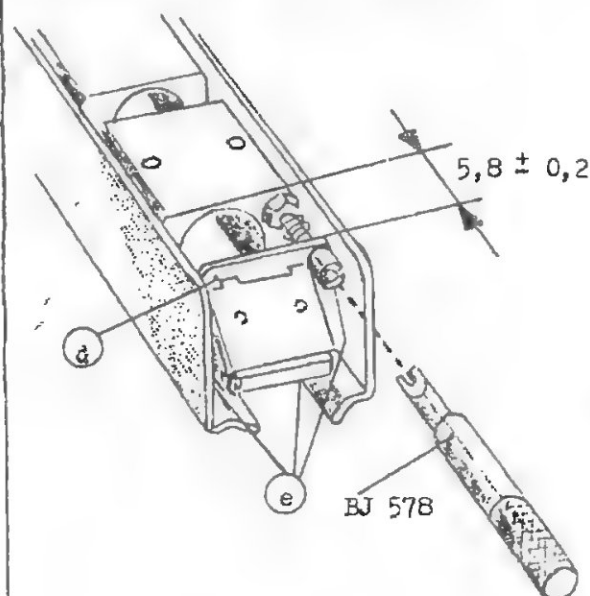


Fig. 2



PD

Visueur reflex
Reflex- Sucher
Reflex Viewfinder

H16SBM
H16RX

350 001 →

BOLEX

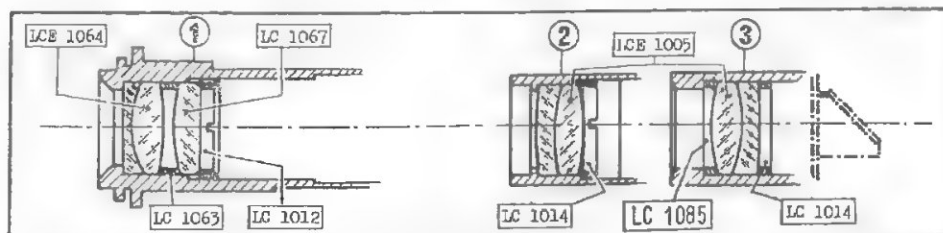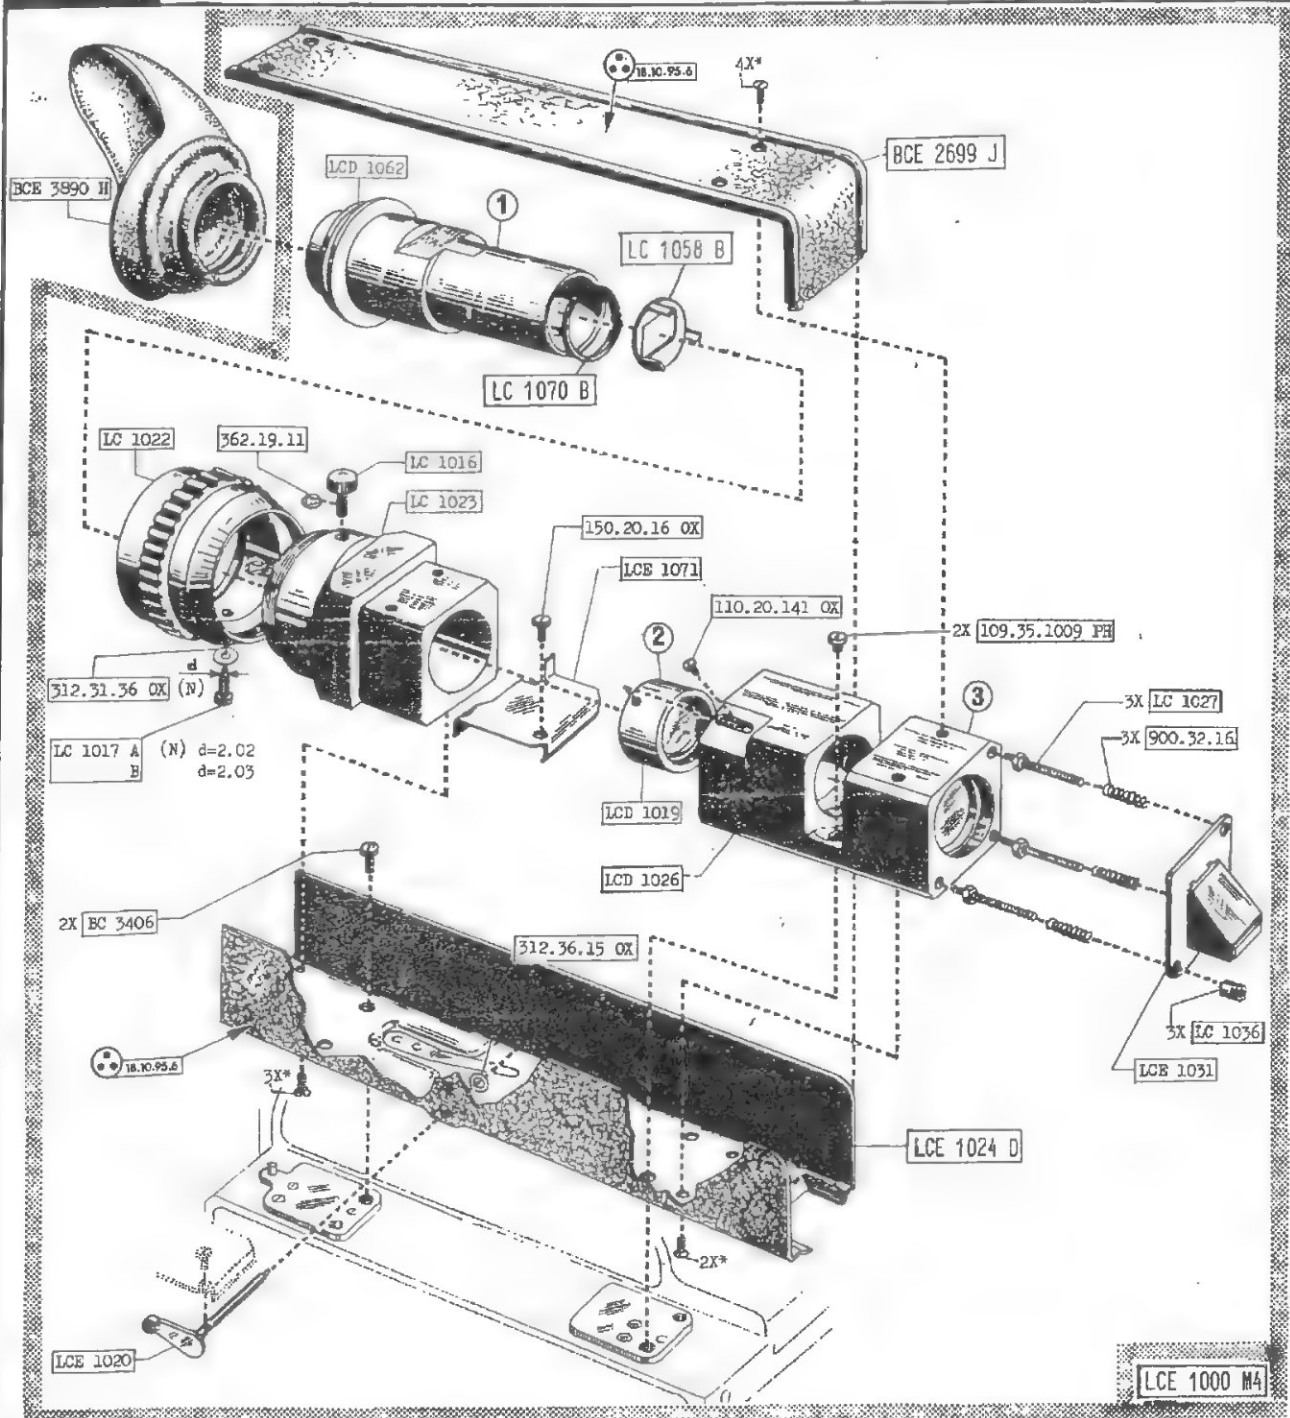

Printed in Switzerland

H3

12.77

*

* 9X 129.20.1004 NN


B

1.2

Boîtier
Kameragehäuse
Camera body

H16RX4 / H16SB

BOLEX

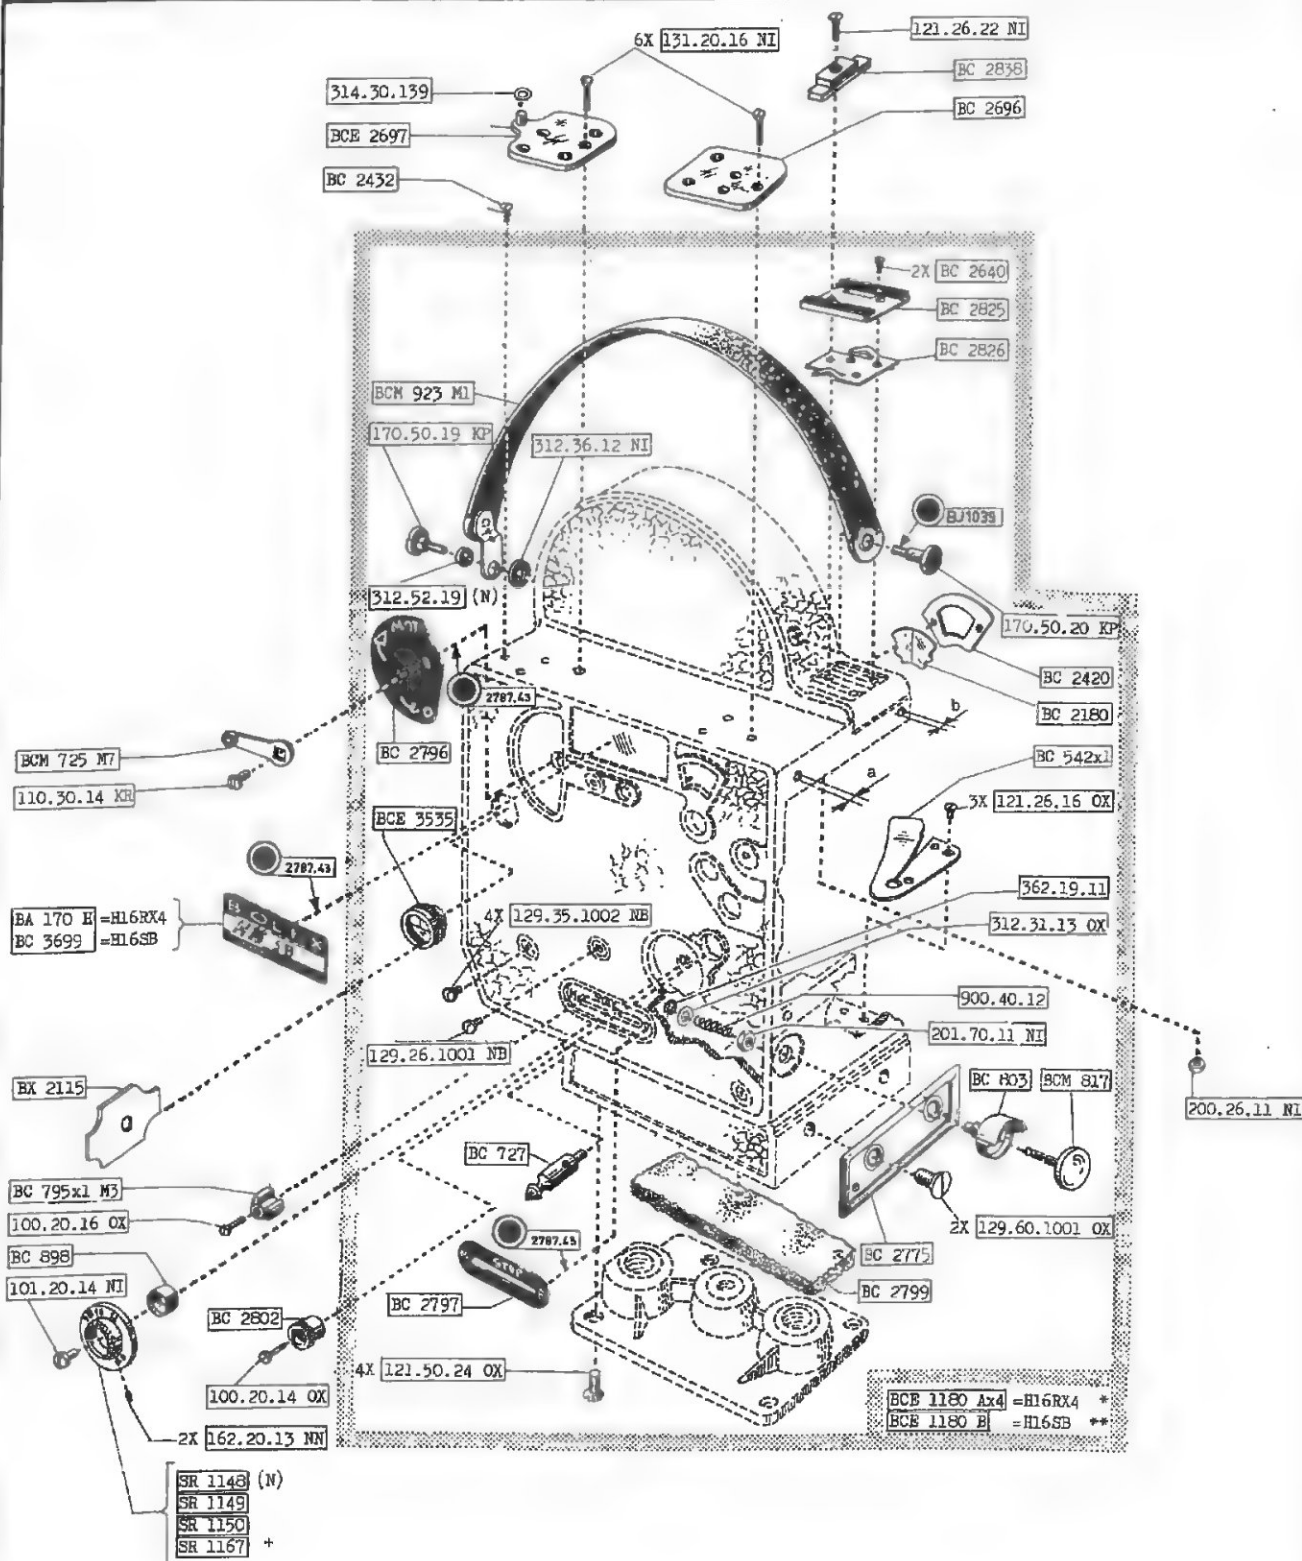251 501 

Printed in Switzerland. All rights reserved.

НЗ

01.71

✱

non gravé
+ nicht graviert
not engraved

$$\begin{array}{rcl} * & 2x(a) + 2x(b) & = M_{3,5} \\ ** & 2x(a) & = M_4 \\ & 2x(b) & = 4,3 \text{ mm} \end{array}$$

C

FMBoitier
Kameragehäuse
Camera body

H 16 RX 5/M 5 /SBM

251501 →

BOLEX

15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1 3x (121.26.16 OX†)	3x 129.26.1003 OX	F/ Nomenclature modifiée D/ Teilnummernänderung E/ Part-number modification 09.71
2 ① (BC 2696†) NI 1/2	② BC 2696x1 1 2/1 H16 RX 5 - 253 020 → H16 SBM - 302.110 →	F/ L'introduction du nouveau viseur reflex nécessite une plaque modifiée. D/ Die Einführung des neuen Reflex-Suchers erfordert eine abgeänderte Platte. E/ Modified plate further to the introduction of the new reflex viewfinder. 09.71 [
		[
H3	09.71	* PD - C - 2-01.71
1		

Boîtier
Kameragehäuse
Camera body

BOLEX

251.501



*

$$\frac{2x(a) + 2x(b) = 13,5}{2x(a) = 14}$$

2

FMBottler
Kameragehäuse
Camera body

H 16 RX 5/M 5 /SBM

251501 →

BOLEX

15	Anciennes pièces Alte Teile Former parts	16	Nouvelles pièces Neue Teile New parts	17	Observations Bemerkungen Remarks
1	3x (121.26.16 OX†)	3x	129.26.1003 OX		F/ Nomenclature modifiée D/ Teilnummernänderung E/ Part-number modification 09.71
2	① (BC 2696†) NI 1/2	② BC 2696x1 H16 RX 5 - 253 020 → H16 SBM - 302.110 →	1 2/1		F/ L'introduction du nouveau viseur reflex nécessite une plaque modifiée. D/ Die Einführung des neuen Reflex-Suchers erfordert eine abgeänderte Platte. E/ Modified plate further to the introduction of the new reflex viewfinder. 09.71 [
3	110.30.14 KR 3x 129.26.1003 OX 129.26.1001 KR 1x 110.30.211 KP BCE 2817	109.20.1023 3x 129.25.1003 OX 129.25.1001 KR 5x BC 7265 BCE 2847	350 001 →		F/ Nomenclature modifiée. D/ Teilnummernänderung. E/ Part-number modification. 12.77
					[

H 3

12.77

*

PD - C - 1 - 01.71


1

PD

Couvercle - Manivelle
 Deckel - Aufzugskurbel
 Lid - Rewinding handle

H16

251501 →

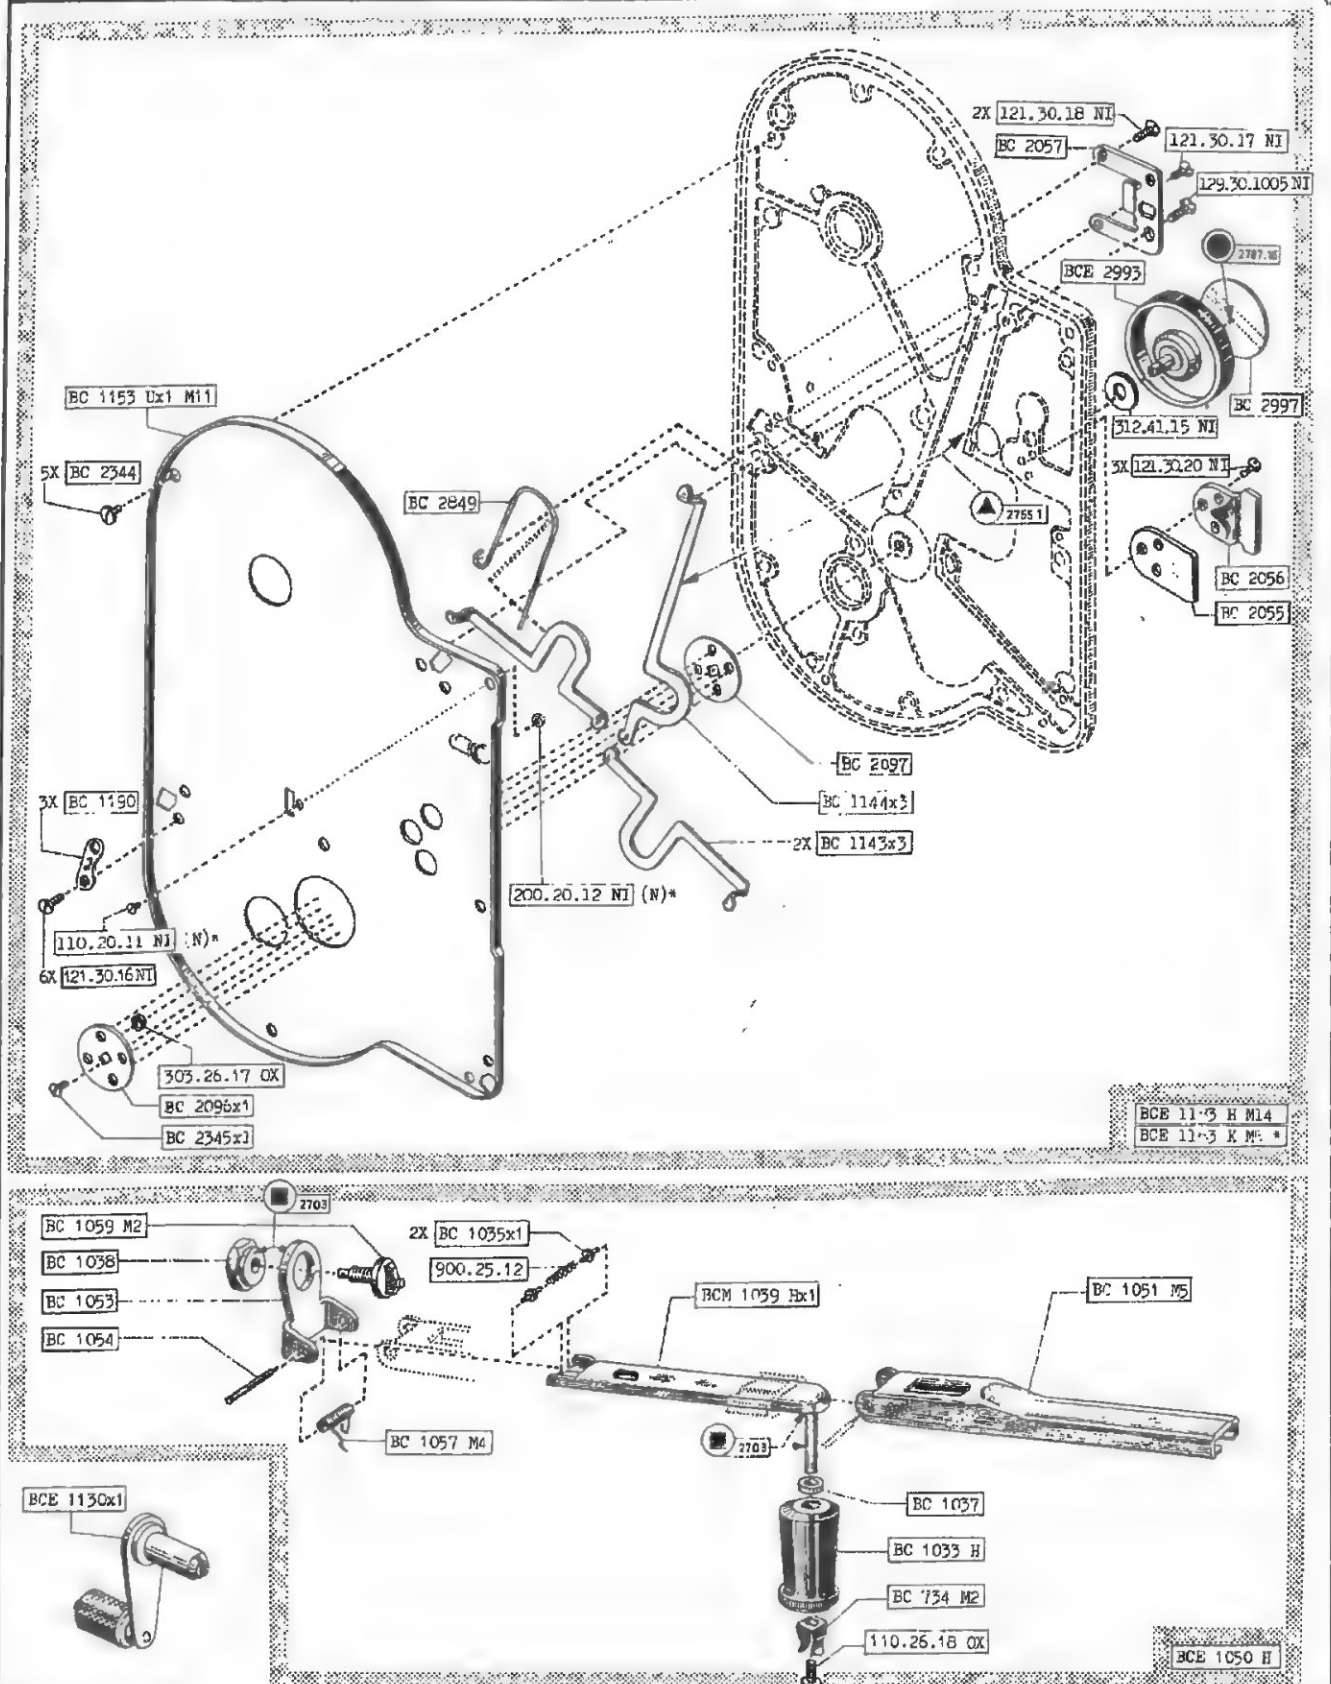BOLEX

Printed in Switzerland. All rights reserved.

H3

01.71



*

*(F) Pour caméras avec support pour magasin 120 m

*(D) Für Kameras mit Ansatzstück zur Verwendung der 120 m Kasse. 11

*(E) For cameras with support for the 400 ft magazine

D**1**

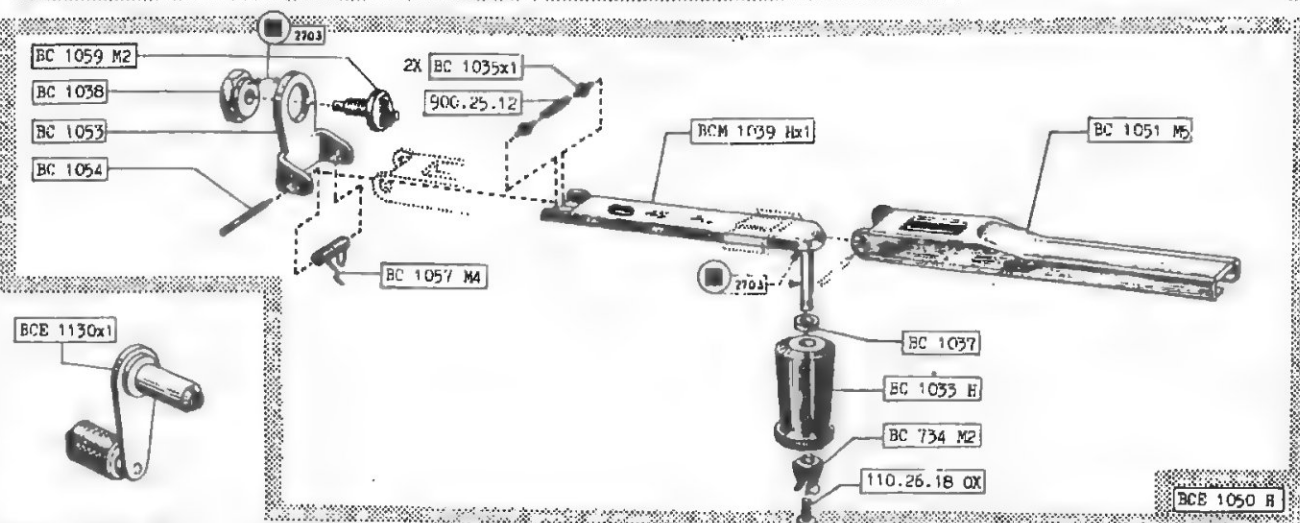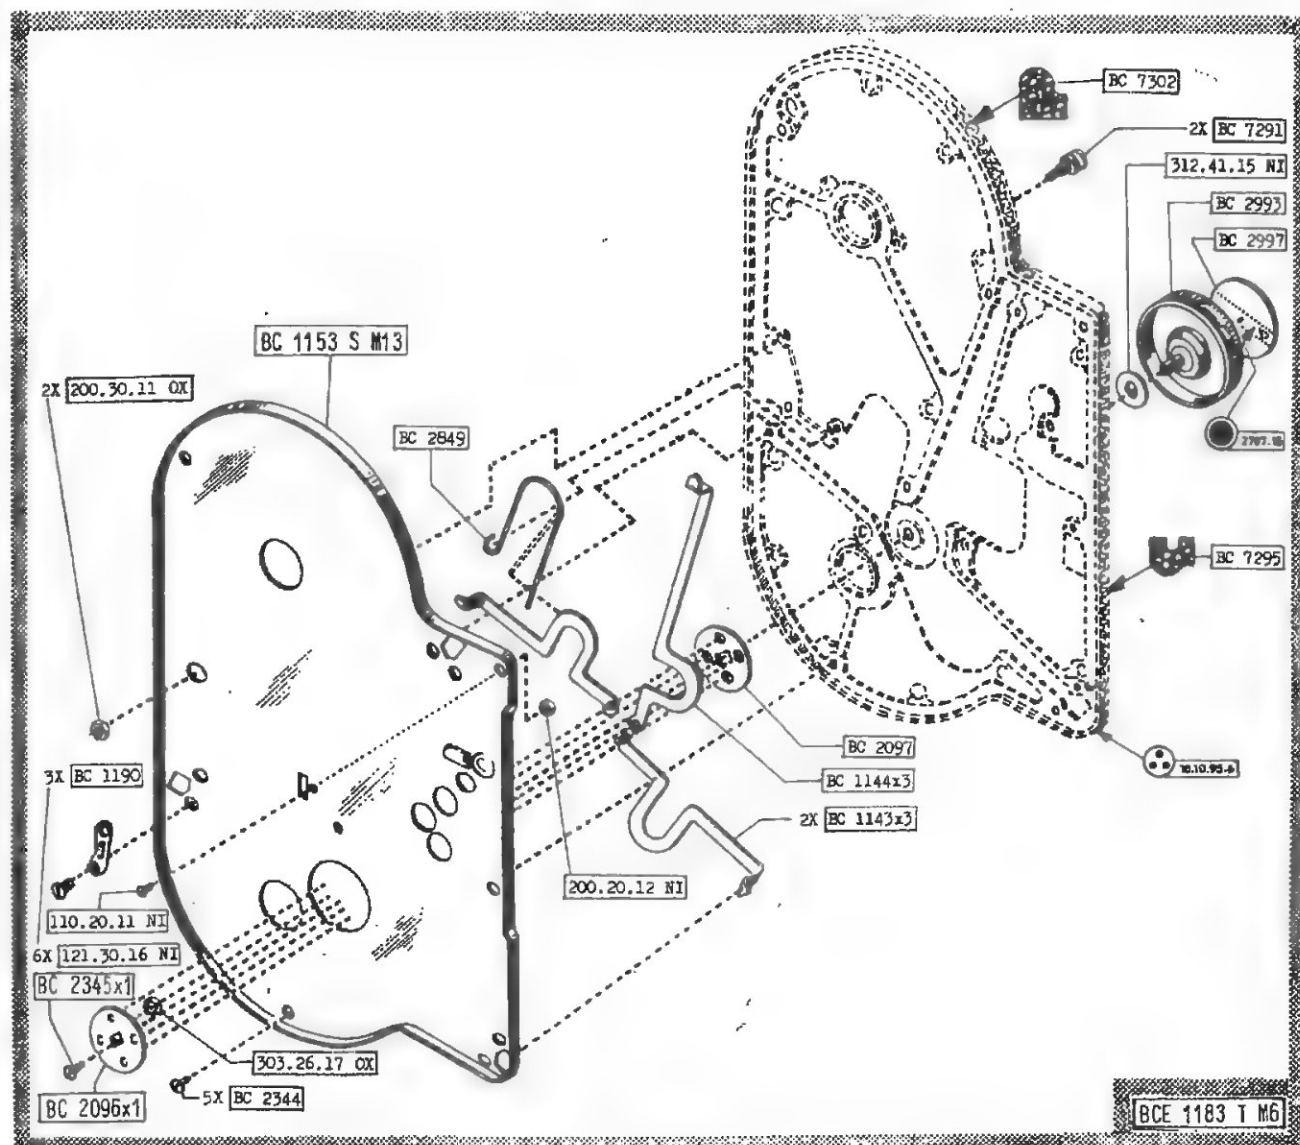


НЗ

12.77




 (F) Gaininges
 (D) Beladerung
 (E) Leathering



D

1.1

Platine supérieure
Obere Werkplatte
Upper base plate

BOLEX

251.501



*

* 5X 129.23.1001 0X

FM

Platine supérieure
Obere Werkplatte
Upper base plate

H16 RX4/H16 SB

251 501 →


BOLEX

Anciennes pièces
Alte Teile
Former parts


Nouvelles pièces
Neue Teile
New parts

Observations
Bemerkungen
Remarks

① (BCE 1186 Kx5 M4 +)

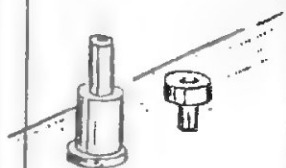

② BCE 1186 Kx5 M5 1 2/1 [BC 1566]

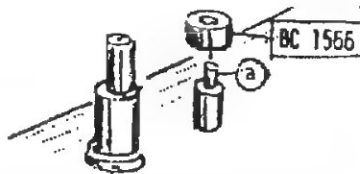

F) La colonne (a) butée de la griffe marche avant
comporte un canon amovible.
D) Die Hülse des Anschlagstiftes (a) des vorderen
Greifers kann abgenommen werden.
E) Separable sleeve on the stop (a) of the forward
motion claw.

05.72

2 4X 303.36.16 0X

4X 303.36.16 0X (N)e=0,2
14 0X e=0,3

F) Rondelle supplémentaire à choix.
D) Zusätzliche Scheibe.
E) Supplementary washer.

05.72

H3

05.72

*

PD - E - 1 - 01.71

1

1. Upper working plate

1.1 Sprockets (fig. 1)

Place sprockets (a) in raised position by means of tool BJ 1503 and slightly tighten one screw (b) in view of the adjustment of the automatic loading.

1.2 Loop formers (fig. 1)

Loosen the 2 screws (d) and bring lever (c) in open position of the loop formers. Position and let the lower loop former (e) rest against the film gate and place the upper loop former (g) at short distance of the inclined plane of the film gate. Tighten screws (d).

1.3 Automatic loading (fig. 2)

Preparation as per fig. 2, camera mounted. Disengage the motor clutch, set the lateral release button on R.

Operate the mechanism with the handcrank.

Load on a length of film previously cut with the built-in cutter.

The film must be guided by the loop former into a longitudinal position, so that the claw easily enters the film perforation. Adjust if necessary by modifying the angular position of the upper sprocket.

When guided by the lower loop former, the film must engage freely with the sprocket teeth without displacing the sprocket guide. Adjust if necessary by modifying the angular position of the lower sprocket. Carry out several test loadings at a speed of 18 f./s. The film must feed through the camera freely without jamming nor catching.

When the loop formers are open, the loops must keep their original shape, no matter whether the camera is operated in forward or reverse motion.

1.4 Sprocket guides (fig. 3)

Act with tool BJ 824 on the column of each sprocket guide so as to obtain a space of 2 film plies from the sprocket.

1.5 Spool axle (fig. 4)

The torque at the lower spool take-up spindle measured in forward motion at 18 f./s and of the upper spool axle measured in reverse motion on pulley BJ 1703 must be of :

$$\begin{array}{r} 100 + 20 \\ - 40 \text{ g} \end{array}$$

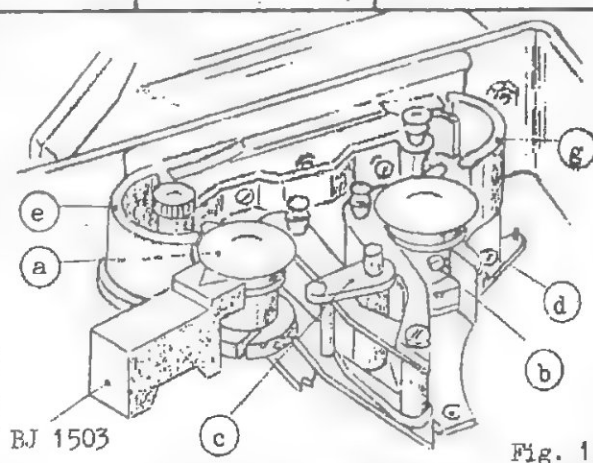


Fig. 1

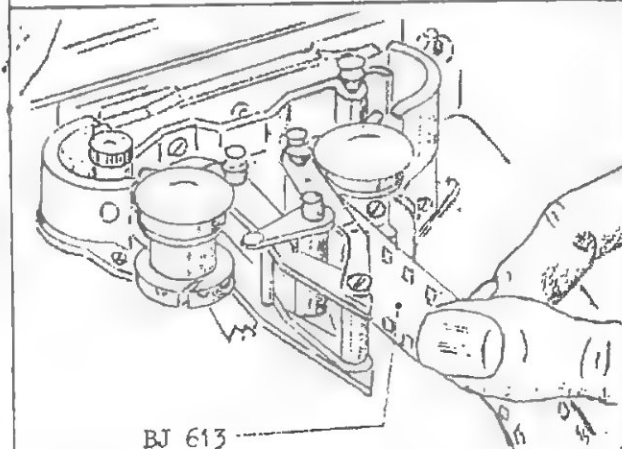


Fig. 2

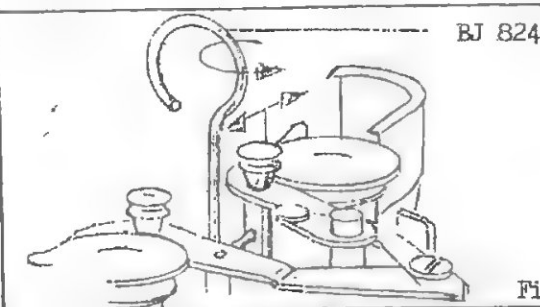


Fig. 3

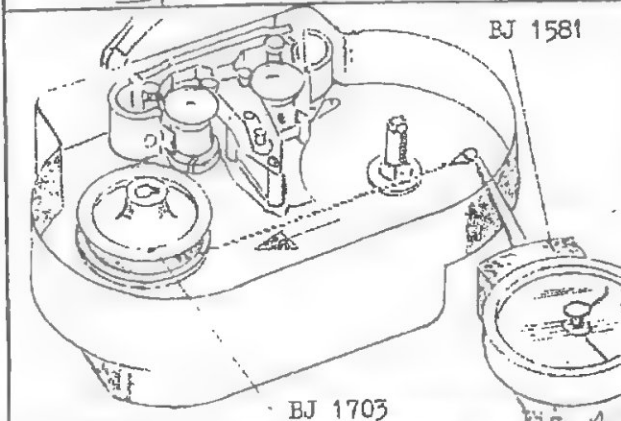


Fig. 4




FM

Platine supérieure
Obere Werkplatte
Upper base plate

H.C.R.X./M5/GBM

251 501

BOLEX

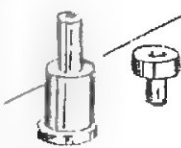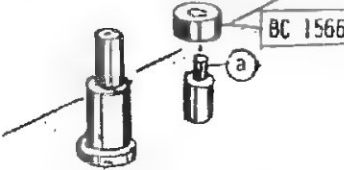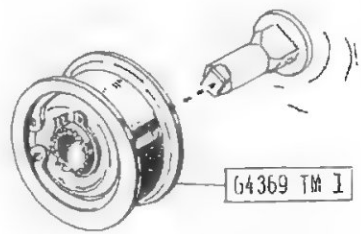15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1 ① (BCE 1186 Kx5 M4 +) 	② (BCE 1186 Kx5 M5) 1 2/1 [BC 1566] 	F) La colonne (a) butée de la griffe marche avant comporte un canon amovible. D) Die Hülse des Anschlagstiftes (a) des vorderen Greifers kann abgenommen werden. E) Separable sleeve on the stop (a) of the forward motion claw. 05.72
2 4X [303.36.16 0X]	4X [303.36.16 0X] (N)e=0,2 14 0X e=0,3	F) Rondelle supplémentaire à choix. D) Zusätzliche Scheibe. E) Supplementary washer. 05.72 [
3		F) Galet de centrage pour l'utilisation avec le magasin 120 m. D) Zentrierrolle für die 120 m Kassette. E) Centering roller for the 400 fl. magazine. 12.77
4 [BC 2874]	[BC 2784]	F) Erreur d'impression. D) Druckfehler. E) Misprint. 12.77 [


H 3

12.77

*

PD - E - 2 - 01.71

1

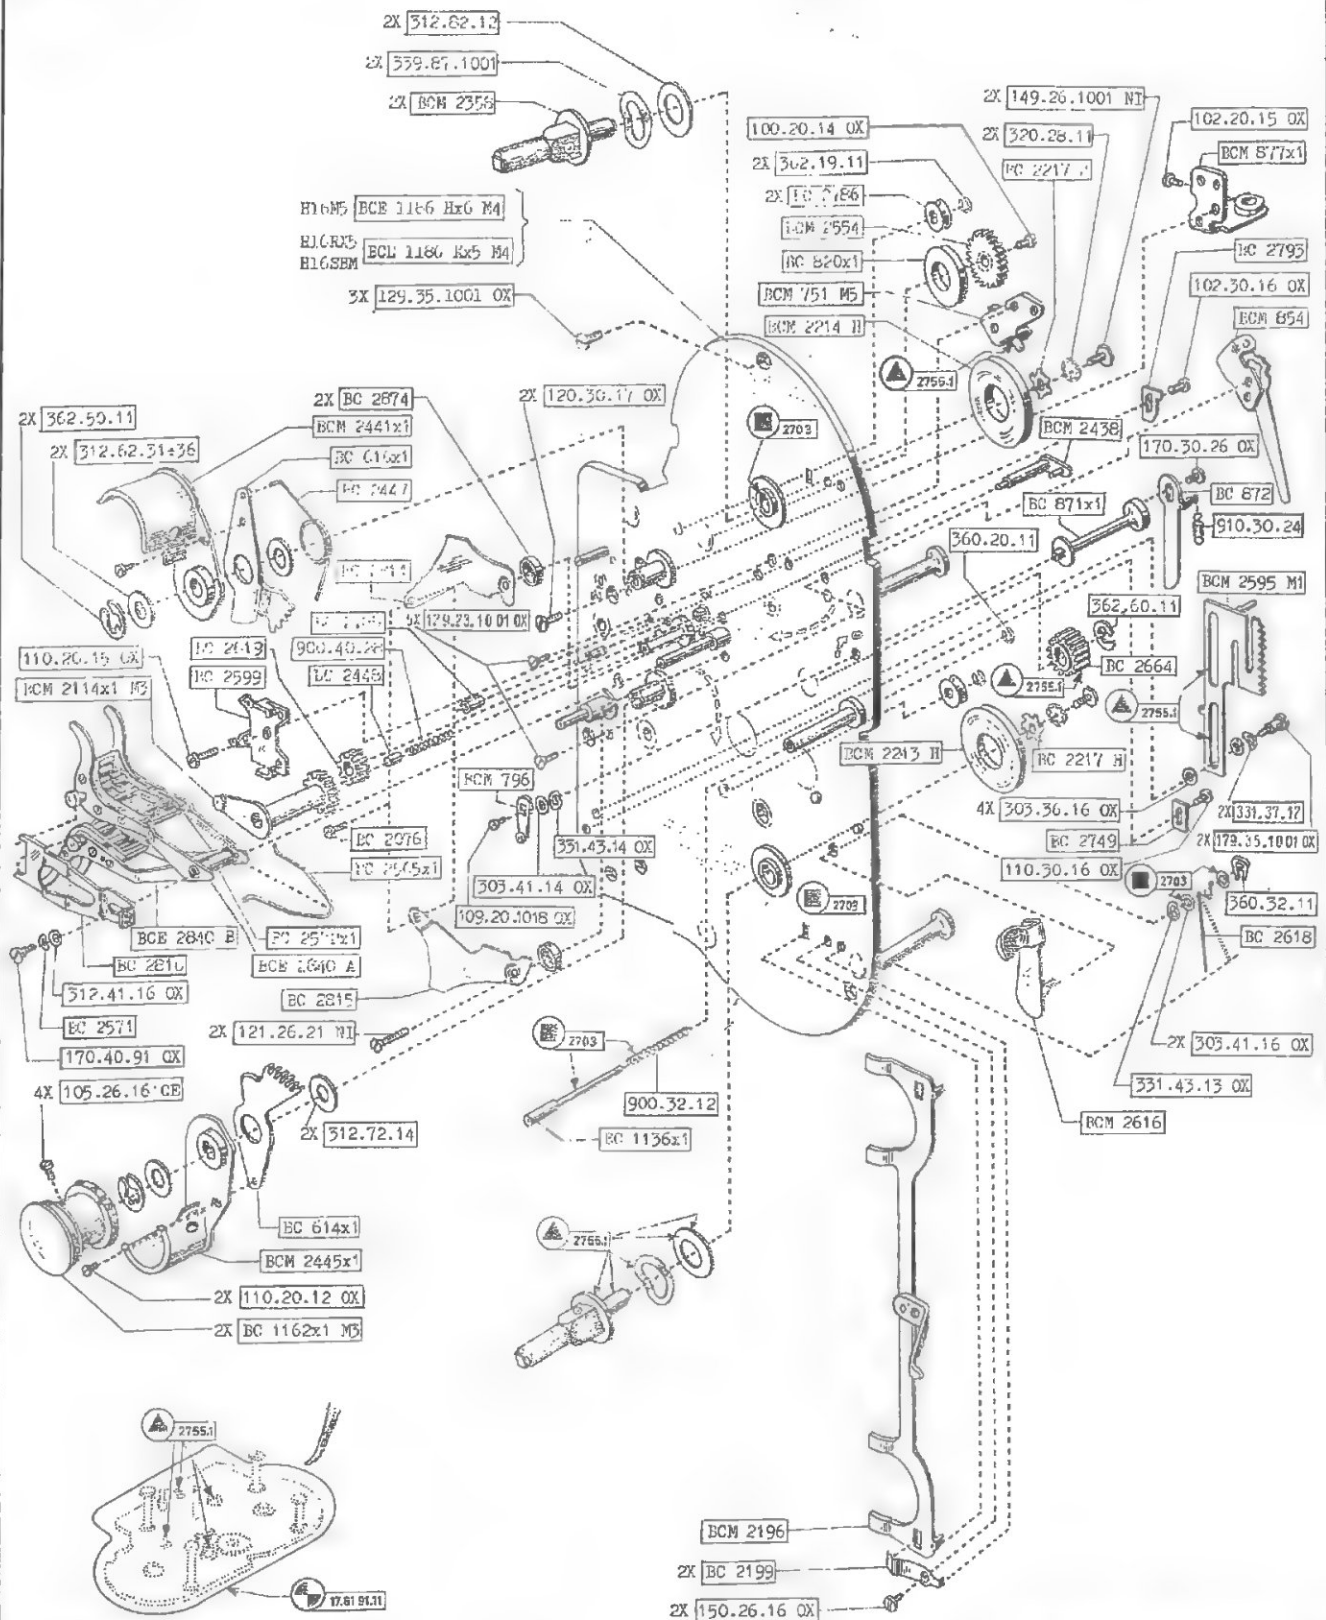




PD

Griffe Volet presseur
Greifer Filmandruckplatte
Claw Pressure pad

H16**BOLEX**

251 501 →

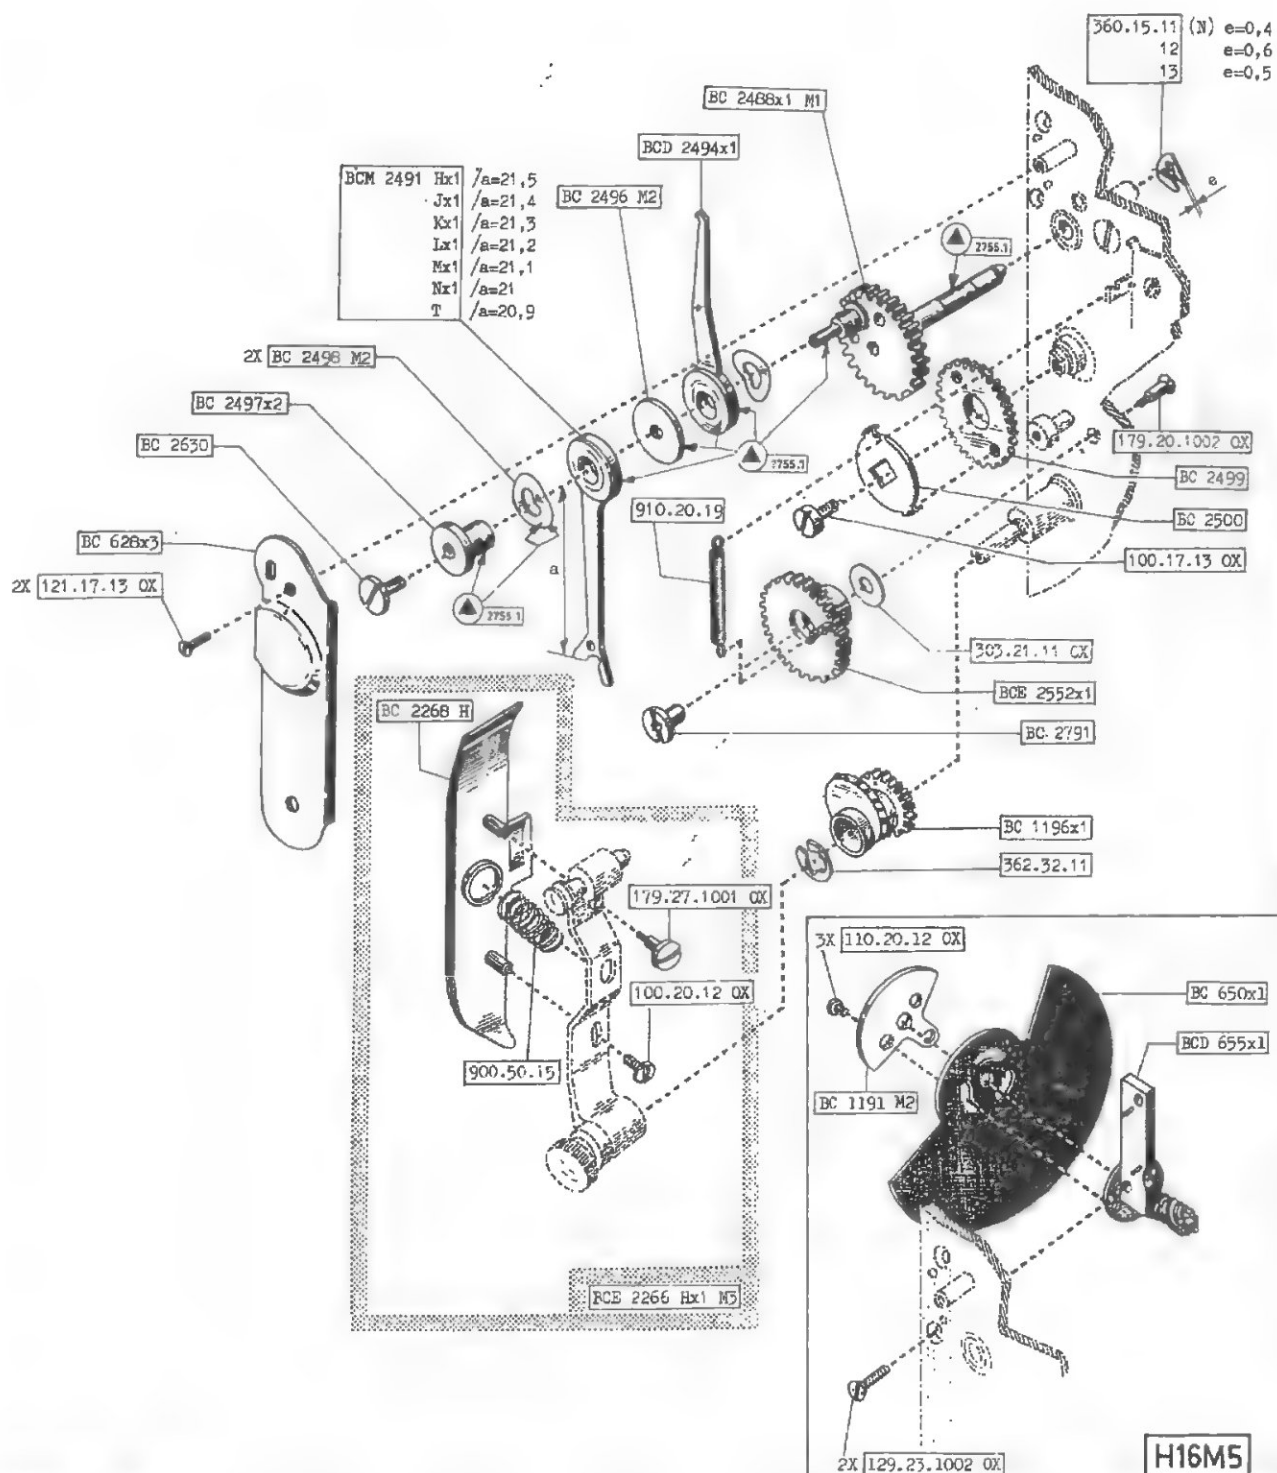

Printed in Switzerland. All rights reserved.

H3

01.71

*

F**1**

FM

Griffe volet presseur
Greifer Filmandruckplatte
Claw Pressure pad

H16


251 501 →

BOLEX

15 Anciennes pièces
Alte Teile
Former parts

16 Nouvelles pièces
Neue Teile
New parts

17 Observations
Bemerkungen
Remarks



2755.1



2703

Nr. 251 001 →

(F) Modification du graissage des frictions des griffes marche avant et arrière, la graisse 2755.1 est remplacée par l'huile 2703.
(D) Änderung des Schmiermittels für den Vorder- bzw. Rückwärtsgräfer. Fett 2755.1 wird durch Öl 2703 ersetzt.
(E) Lubrification of forward and backward motion claws modified : grease 2755.1 replaced by oil 2703.

06.71

[

[

H3

06.71

*

PD - F - 1 - 01.71

1

1. Claw

1.1 Adjusting the framing (fig. 1)

Insert the test pressure pad BJ 1514x1 in place of the normal pad.

Load the camera with a length of test film.

Light up the taking aperture from the outside.

Seen from the inside, the edges of the aperture must lie at equal distance from the middle of the perforation when the claw retracts.

In case of need, select the correct claw in order to achieve the adjustment.

1.2 Friction torque of the claws on the film (fig. 2)

While refitting the claw assembly onto the eccentric axle, adjust the friction torque on the film by means of the spring washers and run in the assembly by operating the camera for about 10 times of the spring motor capacity.

Place the claw assembly on platform H16 of tool BJ 1572 M1.

Rotate the disk in the direction of the red or white arrow, depending on which of the forward or backward motion claw is checked, on which occasion these must rest against the feeler of the dynamometer.

The friction torque shown by the dynamometer must be of

$$11 \pm 2 \text{ g}$$

- for the forward motion claw, and

$$7 \pm 1 \text{ g}$$

- for the backward motion one.

This checking may also be carried out when the camera is mounted. For this purpose, remove the claw protection.

Disengage the mechanism so as to operate the camera with the handcrank for reverse motion.

Place tool BJ 1572 M1 onto the camera as per fig. 3, so that the feeler of the dynamometer lies:

- opposite the forward motion claw (a)
- opposite the backward motion claw (b).

This checking may be effected by simply rotating the dynamometer, so that the claw moves freely in front of the film gate.

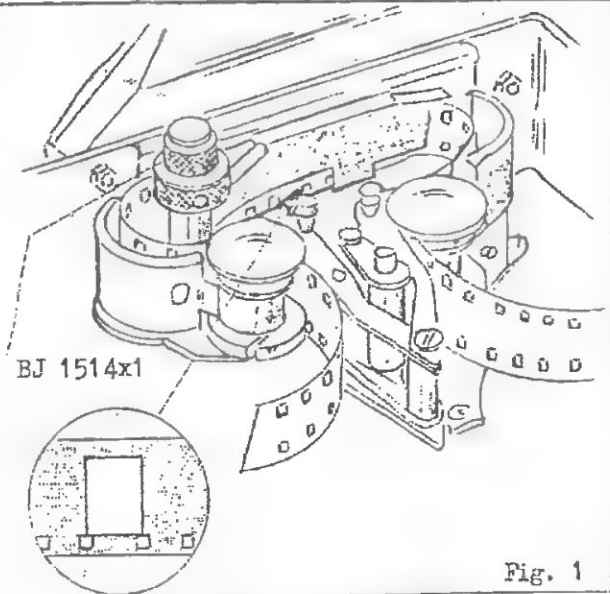


Fig. 1

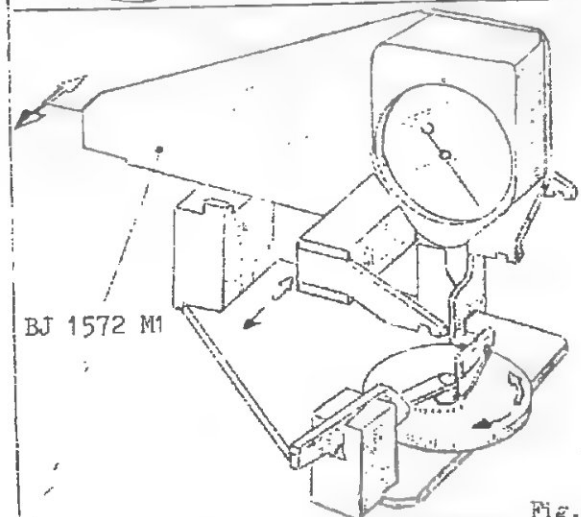


Fig. 2

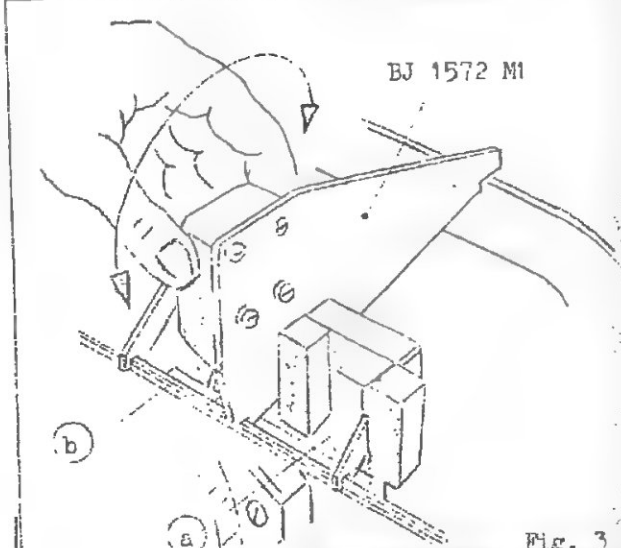


Fig. 3

1.3 Fastening the forward motion claw (fig. 4)

Install the eccentric shaft (c) and adjust the axial play to 0.05 mm.

Wind the spring motor a few turns and operate the camera through the frontal release knob.

Fit the nylon gear (a) and the washer with the square-shaped hole (b), making sure that the eccentric (c) is inclined as per sketch.

The angle displacement (d) must be of 1 tooth.

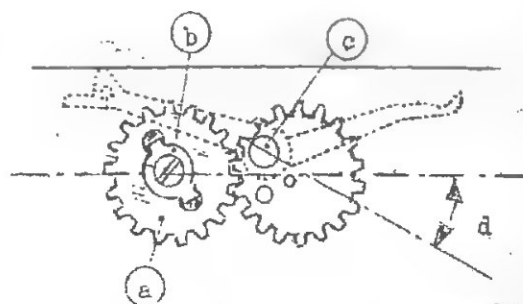


Fig. 4

1.4 Lateral centering of the claws (fig. 5)

Slide of the camera as above.

Move screw (a) by means of a screwdriver until the eccentric axle gets in extreme right hand position.

Pull both claws backwards.

Insert gauge BJ 1121 between the lateral film guides into gate, so that edge (k) lies opposite the housing seam.

Center the tip of the forward motion claw by slightly twisting with tool BJ 1129, so that it runs for a full cycle in the calibrated slot (c) between points (e) and (f).

Similar centering of the backward motion claw between points (g) and (h) of calibrated slot (d).

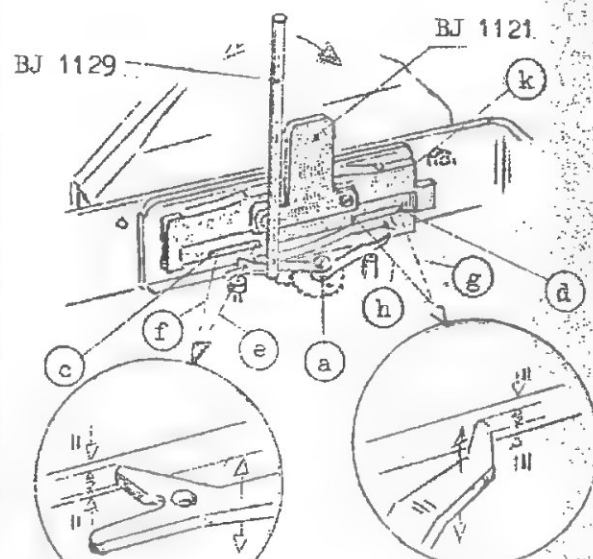


Fig. 5.1

Fig. 5.2

Fig. 5

1.5 Loop catcher (fig. 6)

Wind the spring motor a few turns and operate the camera through the frontal release knob.

Set loop former (l) on toothed wheel (m) at an angle of $15...45^\circ$ which corresponds to 1 to 3 teeth of the toothing.

The loop catcher must move freely and reform a loop after 2 lost images.

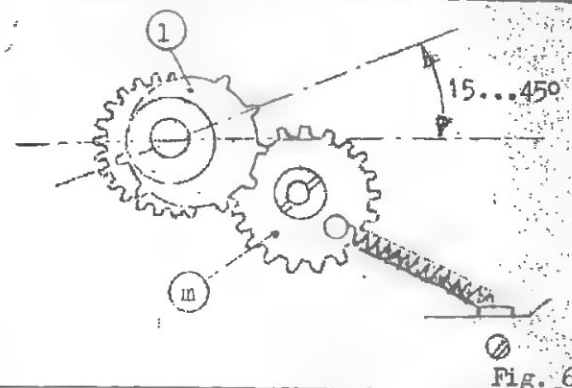



Fig. 6

PD

Mečanisme Mechanismus Mechanism

H16

251 501 →

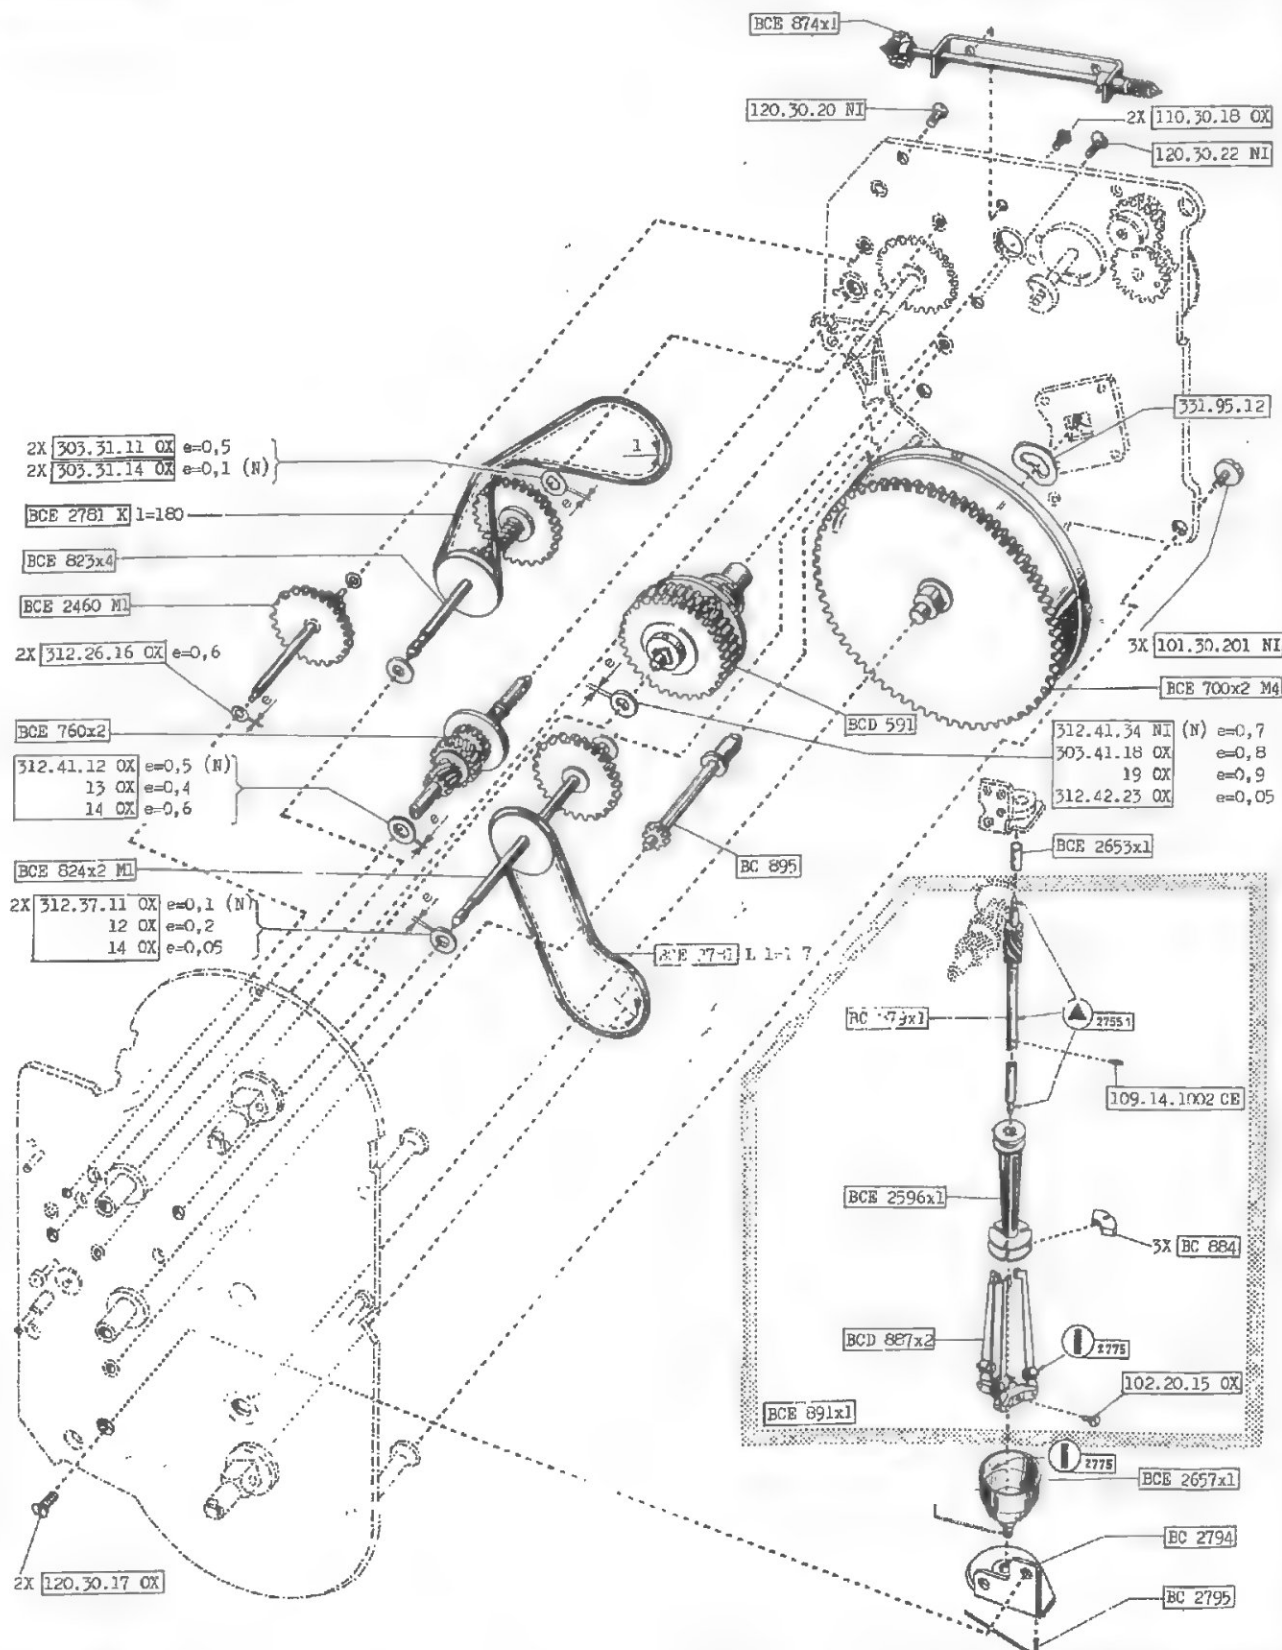BOLEX

Printed in Switzerland. All rights reserved.


H3

01.71



(f) Tous les engrenages et pivots sont graissés avec
 (D) Fetten aller Zahnräder und Stifte mit
 (E) Grease all gears and pins with

**G****1**

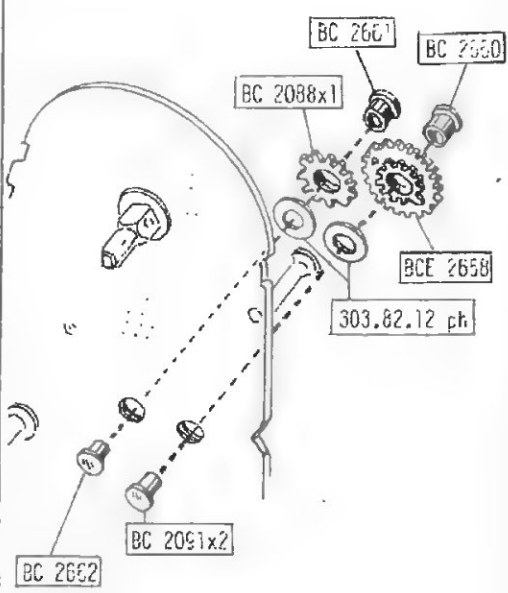15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1		F) Les 2 engrenages accouplés, faisant office de butée pour limiter le déroulement du barillet sont dorénavant livrables avec axes, moyeux et rondelles à fixer par rivetage sur la platine supérieure. D) Die 2 als Anschlag für die Federabwicklung dienenden, gekoppelten Zahnräder können zukünftig separat bestellt werden. Zwecks vermietung dersellen auf der oberen Werkplatte werden auch die dazu passenden Wellen, Naben und Scheiben geliefert. E) The 2 coupled gears serving as a stop for the unwinding of the spring are available separately with the corresponding shafts, hubs and washers to be riveted on the upper working plate. 04.76

FM

Mécanisme
Mechanismus
Mecanismo

H16

251 501 →

BOLEX

15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1	H16 RX 4 240 815 → 250 801 H16 RX 5 241 369 → 252 150 H16 M 5 251 800 → 253 387 H16 SB 300 201 → 300 901 H16 SBM 300 001 → 300 072	F) Un barillet légèrement plus faible a été monté sur une série de caméras dont les Nos se trouvent indiqués dans la colonne ci-contre. Nous vous recommandons d'effectuer un calage renforcé selon <u>chapitre 3</u>. Redescendre de <u>1/2 tour</u> et non de <u>1 tour</u>. D) Auf eine gewisse Serie von Kameras, deren Seriennummern nebenstehend angeführt sind, wurde ein leicht schwächeres Federwerk montiert. Wir empfehlen Ihnen, die Einkellung laut Kapitel 3 zu verstärken. Eine <u>halbe</u> statt eine ganze Umdrehung ablaufen lassen. E) A slightly weaker spring motor has been mounted on certain cameras, the serial numbers of which are indicated in the margin. We recommend that you reinforce the quoin as per chapter 3. Let the spring unwind only <u>one half</u> and not one complete revolution. 11.71
		[

H3

11.71

*

IT - G - 1 - I - 03.71

1

1. Separating the working plates

Prior to this operation, let the motor spring run down completely after having disengaged pinion (a) (fig. 3) which connects the spring motor to gear wheel (b).

2. Assembling the working plates

The various components of the complete drive mechanism are held in place by the upper and lower working plates. For the assembling, prepare :

- The upper working plate as per fig. 1, without speed governor.
- The lower working plate as per fig. 2, without the control axle of footage counter.
- Adjust the axial play to 0.05 mm by means of the necessary washers.
- Use hook BJ 1521 to connect the belt of the lower sprocket axle to the pulley of the lower spool axle.

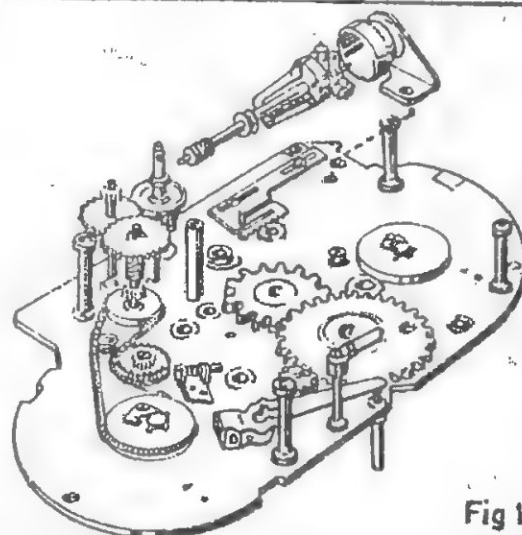


Fig 1

3. Aligning the spring motor (fig. 3)

For this alignment, the mechanism must be completely assembled.

- Separate pinion (a) from gear wheel (b).
- Fully wind the spring motor and let it run down just one revolution.
- Hold the mechanism via the stopping axle.
- Turn gear wheel (b) fully home to the stop, direction as per arrow.
- Engage pinion (a) into gear wheel (b) and insert clip (d).
- Free the mechanism and check that the spring motor makes

8 revolutions

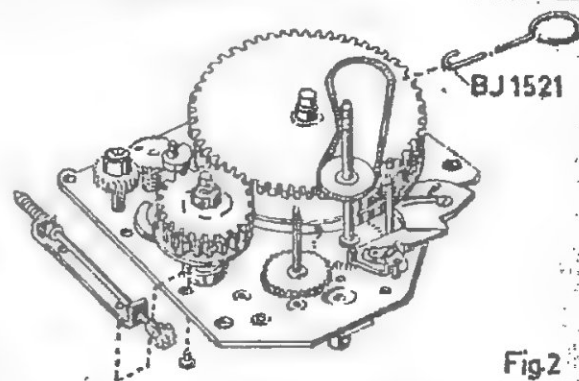


Fig 2

4. Clutch mechanism (fig. 4)

In the "engaged" position, the fork must be able to swivel freely.

In "disengaged" position, teeth (g) must separate completely from teeth (h).

Adjustment is to be done by slightly bending fork (e) in the appropriate direction by means of twister BJ 1502.

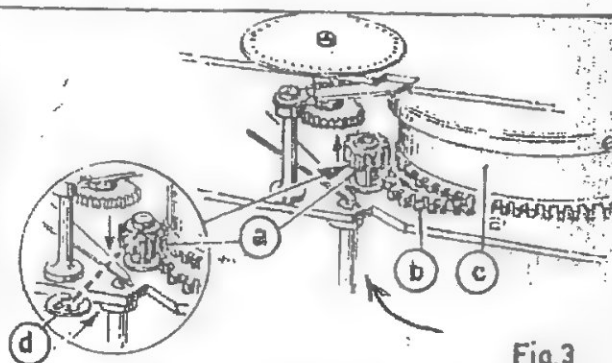


Fig 3

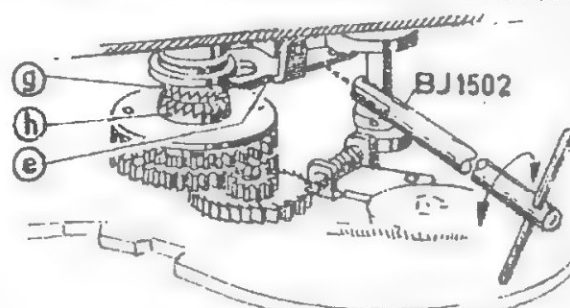


Fig 4

5. Resistant torque of the mechanism (fig. 5)

This measurement is to be carried out by means of pulley BJ 1508x1 placed on the handcrank axle with dynamometer BJ 703, as well as the claws retaining plate BJ 1568.

The maximum values accepted are as follows :

- mechanism complete without claw = 130 g
- mechanism complete with claw = 320 g
- camera complete = 320 g

6. Adjusting the speed

Preparation of the mechanism as per chapter 2, outside of the housing. To carry out the operation, adjust the governor drags in high position so as to reach the speed of 64 f./s on the stroboscop disk mounted on the handcrank axle, as per fig. 8.

Use tool BJ 1579 M1 for the adjustment with the file or with machine BJ 1109 which provides for the adjustment through dynamic milling.

See the corresponding IT sheet in catalogue DU.

Fig. 6

At the beginning of the adjustment, apply a very thin layer of molykote powder BJ 1058 with a small brush on the drags at (g), as well as at the annular surface (h) of the bell.

Fit the governor into the camera, wind the spring motor fully and let it run down completely.

Repeat this 3 times at the highest camera speed. Having completed the adjustment of the running speed of 64 f./s, remove the governor and clean the annular surface of the bell at (h) with a soft cloth.

The Molykote powder must remain on the drags at (g).

Caution : The governors dry-lubricated with Molykote powder must on no account be oiled.

Fig. 7

Fit the governor into the camera.

- Adjust the speed 64 f./s with stop (o).
- Adjust the speed 12 f./s with stop (m).

7. Calibrating the speed setting knob (fig. 9)

On the complete camera loaded with a test film, place the respective stroboscop disk comprising both a minimum and a maximum scale, allowing the adjustment of the speed setting knob.

There are 3 engraved and 1 virgin speed knobs.

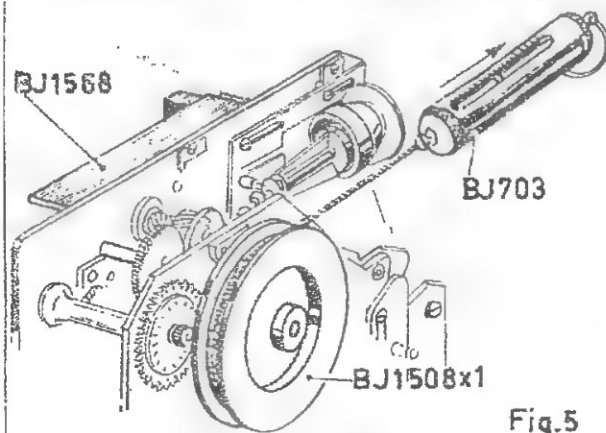


Fig. 5

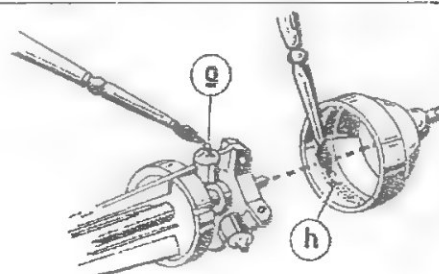


Fig. 6


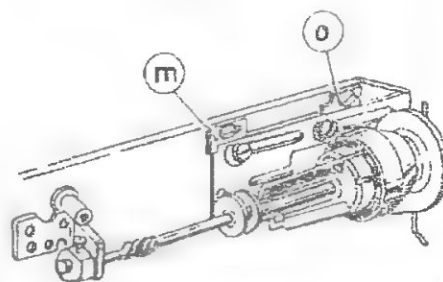


Fig. 7

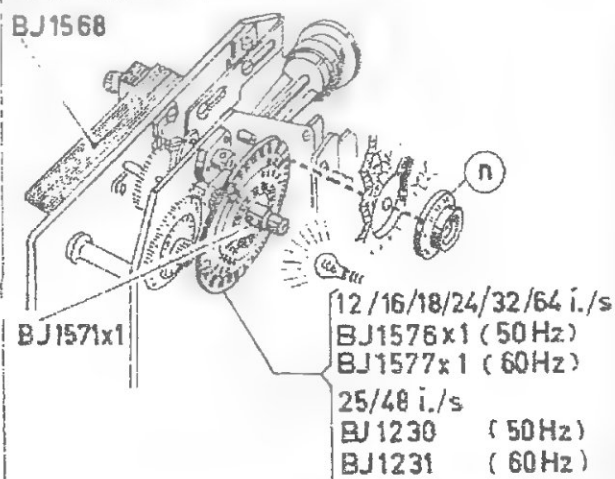


Platine inférieure
Untere Werkplatte
Lower base plate

H 16

251 501

BOLEX

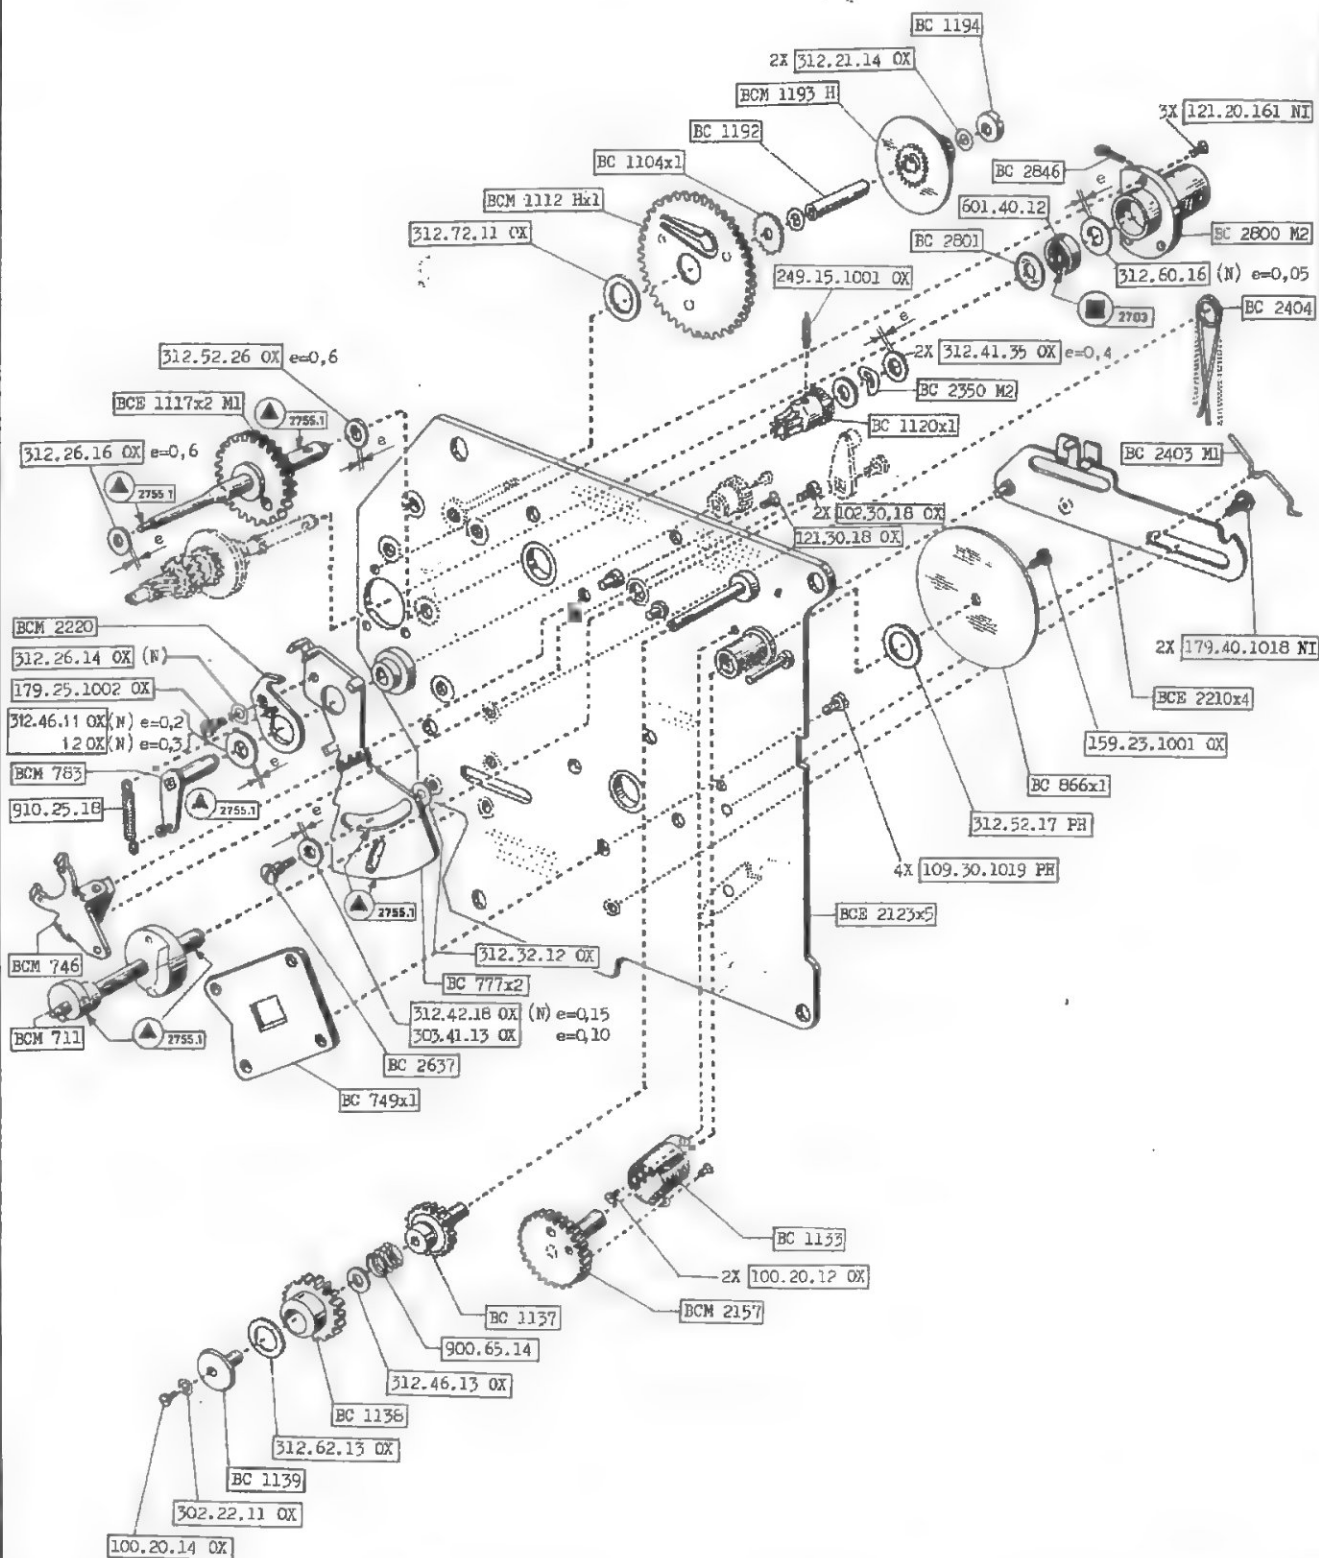

Printed in Switzerland All rights reserved.

H3

01.71

*

H


FM

Flatine inférieure
Untere Werkplatte
Lower base plate

H16

BOLEX

251 501 →

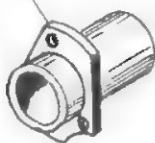15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1 1 (BC-2800 M2) H1 1/2	② BC 2800 M6 1 2/1 	F) Extérieur de la pièce modifié, pour emploi sur toutes les caméras. D) Abgeänderte Aussenseite des Teils zur verwendung auf allen Kameras. E) Modified exterior enabling the use of the part on all cameras. 12.77
2 (312.52.17 PH↑) e= 0,5	312.52.31 PH e= 0,6	f) Nomenclature modifiée. D) Teilnummernänderung. E) Part-number modification. 12.77

H3

12.77

*

PD - H - 1 - 01.71

1

1. Counter (fig. 1)

1.1 The footage counter is driven by the upper sprocket axle via the clutch control spindle (a).
Leave a slight play between the gears.
Load the counter recall spring by about one turn.
The counter automatically returns to zero when the camera is opened, and the m or ft mark must coincide with the line of the dial window.

1.2 The sound counter functions when arm (c) beats the screws of spring motor when lever (d) is positioned as shown on the sketch.

1.3 On the frame counter, the 100s disk (f) must be driven regularly and advance by one 50 frames mark for one turn of the unit disk (e), in whichever direction.

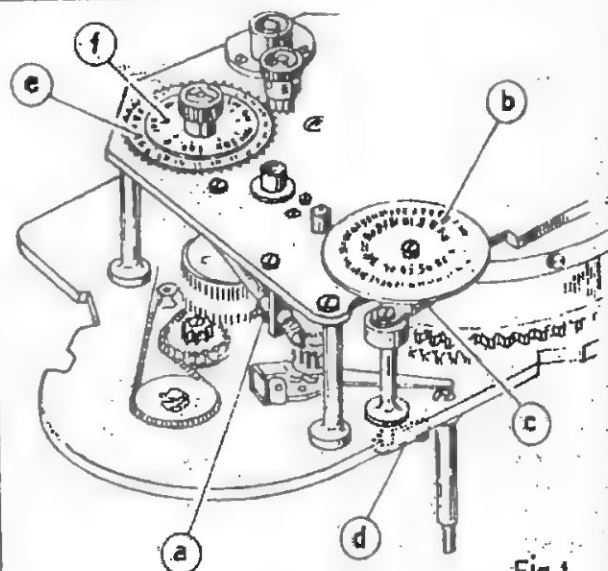


Fig. 1

2. Release system

The release system controls :

- the intermittent operation
- the continuous running
- the frame-by-frame operation, snapshot and time exposures.

Check the functioning :

- of the front release button which must return to its original position as soon as finger pressure is relaxed
- of the lateral release button which remain caught in when it is set to position "M" and return to its original position when finger pressure is relaxed, when set to position "P".

3. Driving axles (fig. 2)

Use pincers BJ 1240 which matches with the shaft end into which the pin has to be fitted and allows the latter to be engaged without exerting any force on the 8:1 and 1:1 shafts.

- Pusher A for driving out the pins
- Pusher B for driving in the pins
- Pusher C for fitting and positioning the asymmetric pin on the 1:1 drive shaft.

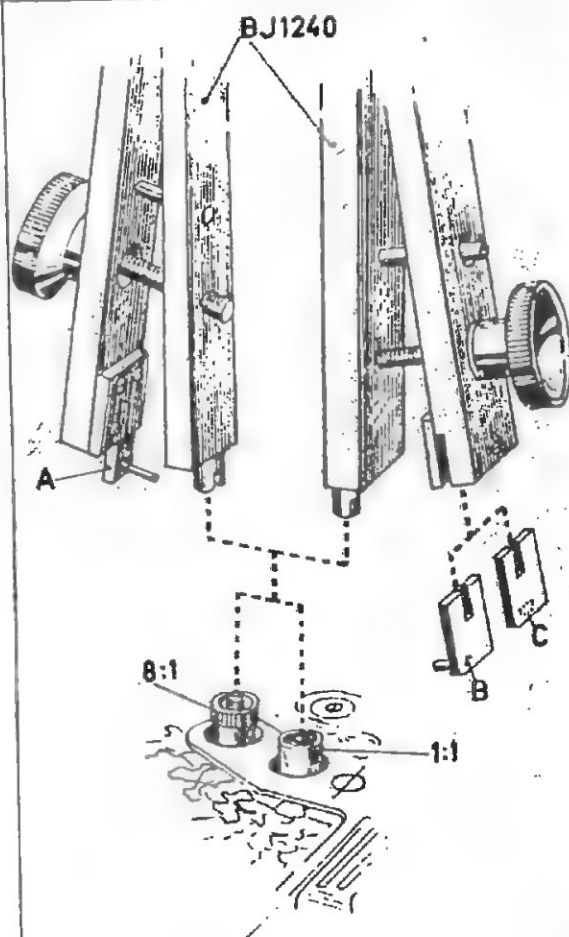


Fig. 2

PD

Gainages
Beledering
Leathering


H16

BOLEX

251 501 →



BC 2820 **

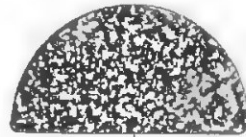

BC 2138 M2




2787.47


2787.48




BC 2819 **

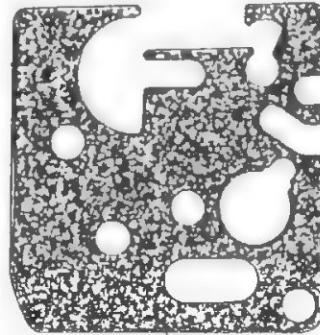

BC 1126x6



BC 2140x1

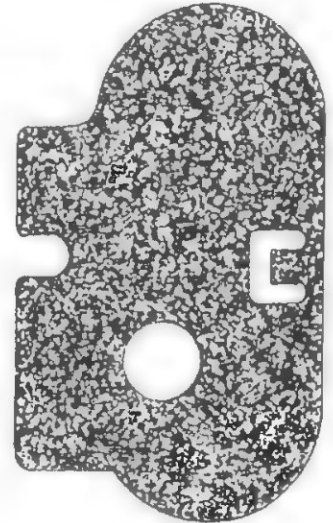

BC 116.7x2



BC 2814 **



BC 2139x3 *



BC 2141x1



BC 2776



BC 2740

Viseur
Sucher
Wiewfinder

BC 2006 M3



BC 2060x1 M1



BC 2059 M2



BC 2007 M3



BC 2006 M2



Printed in Switzerland. All rights reserved.

H3


01.71

*

(F) Pour caméras } H16RX4 SB *
(D) Für Kameras } H16RX5 M3 SBM **
(E) For cameras }

J

1

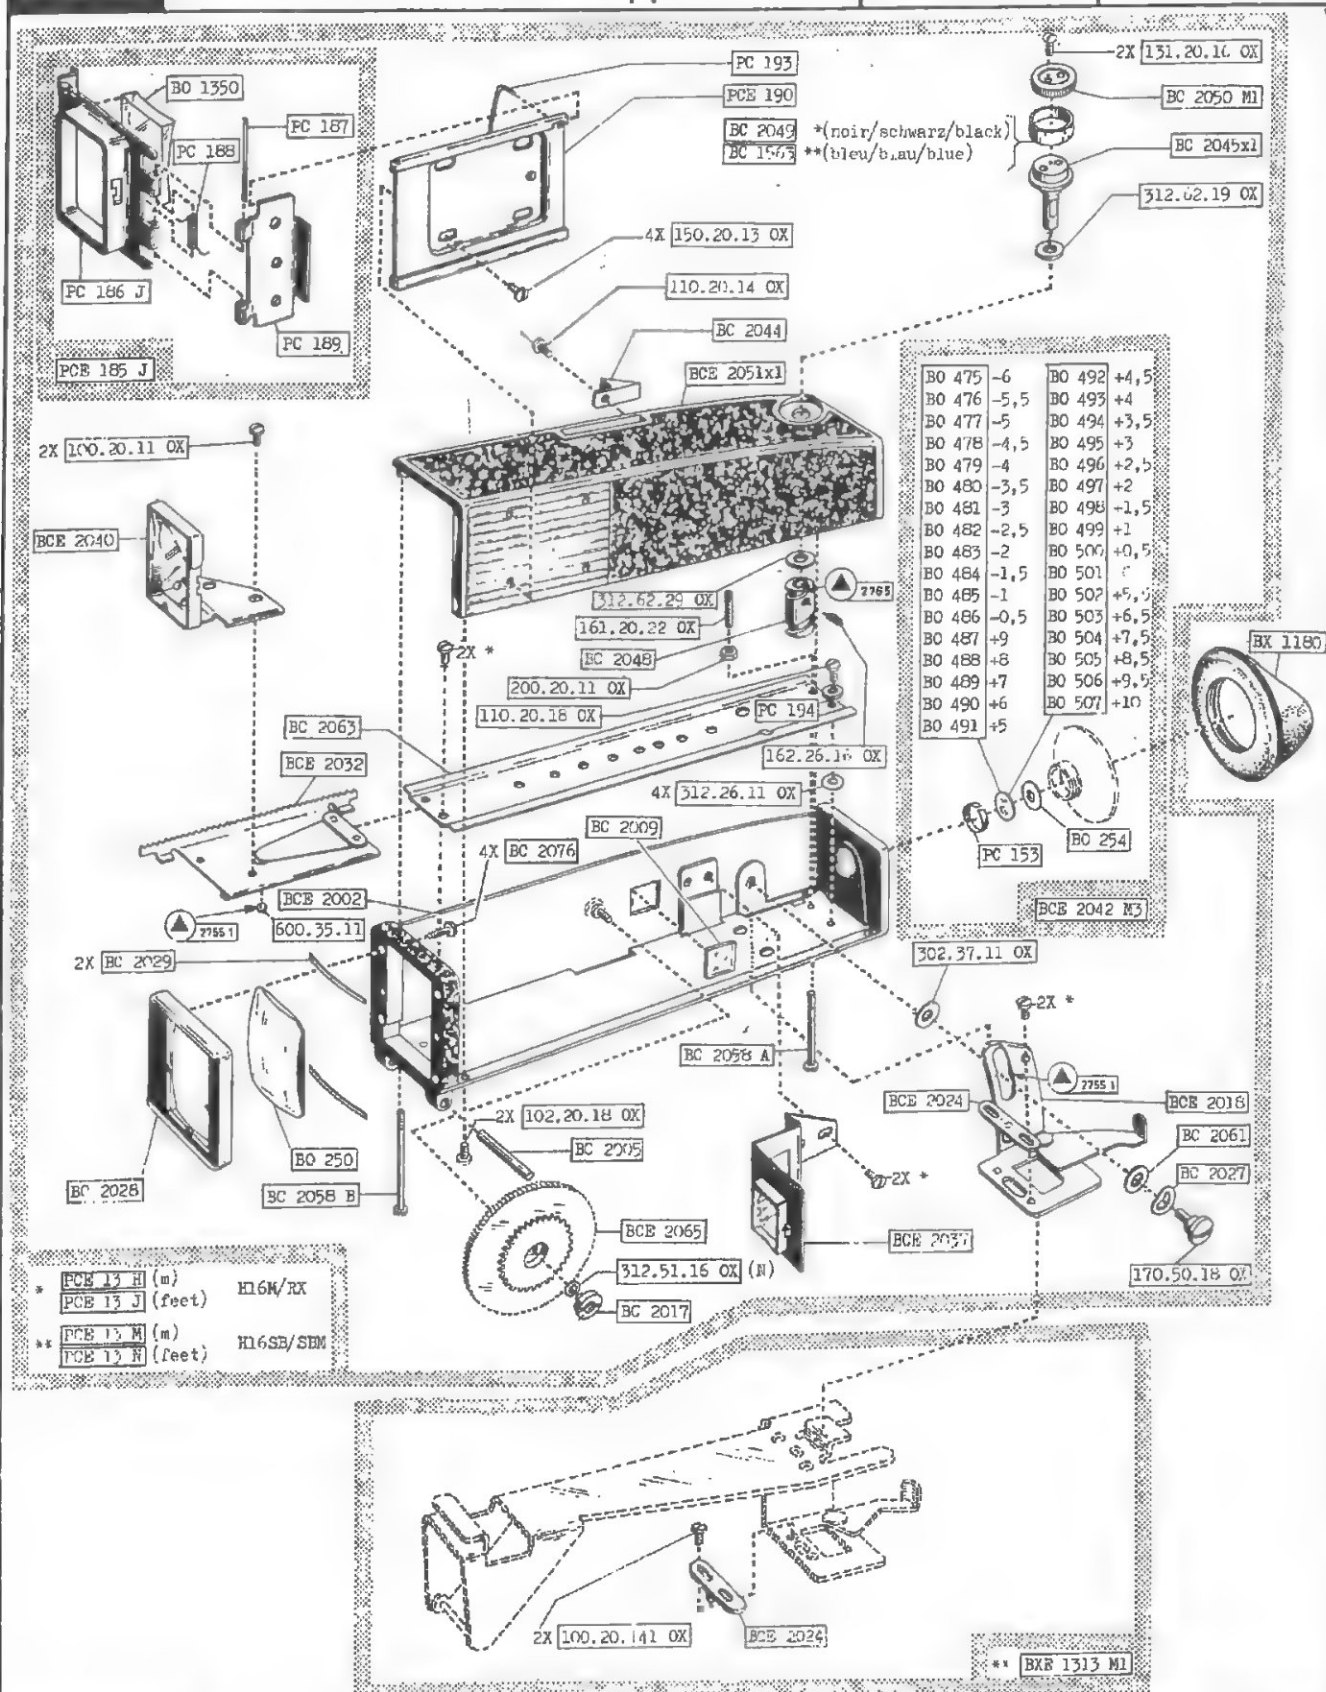

1. Assembling the viewfinder

1.1 Fitting the guide rail (fig. 1)

When mounted on the viewfinder, disk (a) must be aligned so that number 50 becomes visible and has a central position which may be obtained by displacing guide rail (b). Tighten screws (c).

1.2 Fitting the fixed lens element (fig. 2)

Place tool BJ 1607 and the long gauge into guide rail (b) with a view to positioning the fixed lens element (d) and its support with respect to the front lens element (e).

Progressively tighten screws (g) and precautionously maintain lens element (d) against the gauge.

1.3 Fitting the mobile lens element (fig. 3)

Turn disk (a) to position 50.

Place tool BJ 1607 and the short gauge H16 onto guide rail (b) with a view to positioning the mobile lens element (h) and its support with respect to the front lens element (e).

Progressively tighten screws (g) and precautionously maintain lens element (d) against the gauge.

2. Adjusting the viewfinder on the camera (fig. 4)

- Mount the camera on a steady support in front of a test chart, for instance BJ 159, at a distance of 1,50 m from the film plane.
- Equip the camera with a 75 mm tele lens and focus on the chart.
- Center the taking aperture axis with respect to an horizontal axis which must be at a distance of :

$X = 41 \text{ mm}$ for cameras with turret holder

$X = 73 \text{ mm}$ for cameras with bayonet mount

On the right-hand side from the viewfinder axis for the adaptation of the multifocal viewfinder on cameras with bayonet mount, the special intermediary support should be used in consequence of the dimension of the lens holder.

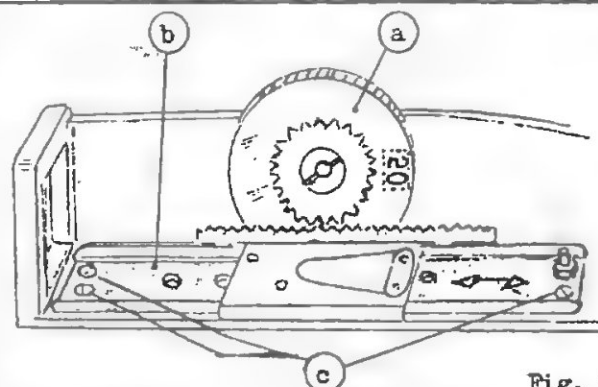


Fig. 1

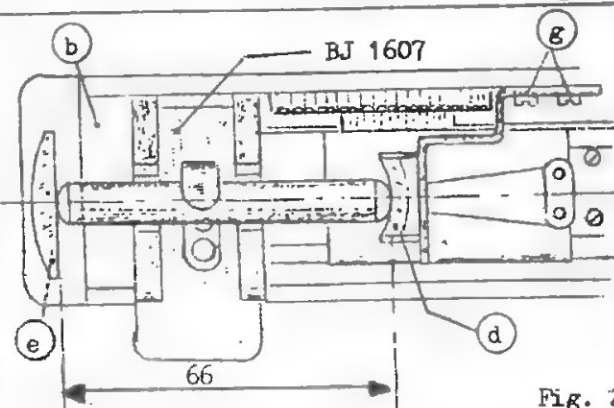


Fig. 2

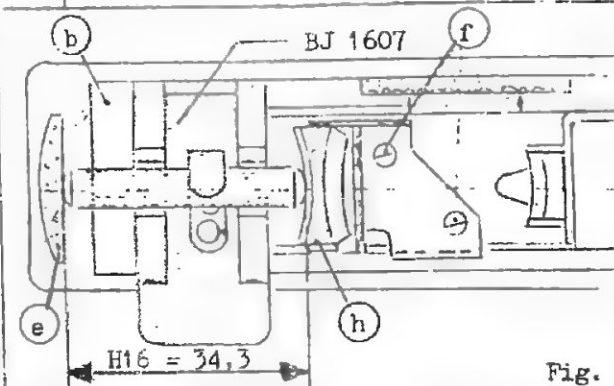


Fig. 3

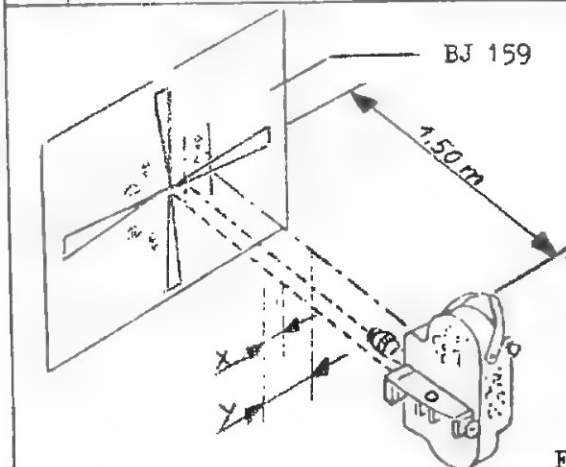


Fig. 4

2.1 Vertical adjustment (fig. 5)

Set disk (a) of the viewfinder to focal length 75 mm. By slightly loosening screws (k), which can be attained through the 2 holes in the guide rail, the rear part of the viewfinder may be moved vertically so that the horizontal marks (l) visible in the viewfinder coincide with the horizontal axis. Yellow horizontal axis on test chart BJ 159.

Check the alignment at the various focal lengths of the viewfinder.

2.2 Horizontal adjustment (fig. 6)

The inclination of the viewfinder with respect to the horizontal plane consists in setting the viewfinder on infinity, position given by screw (n) resting against rivet (o).

Loosen the locking nut and turn screw (n) with tool BJ 1517 so as to obtain the correct centering of the vertical marks (m) visible in the viewfinder with respect to the vertical axis. Yellow vertical axis on test chart BJ 159.

Check the alignment at the various focal lengths of the viewfinder.

2.3 Adjusting the parallax correcting ring (fig. 7)

Fit the viewfinder cover.

Mount the viewfinder on the camera lid, turn the milled knob (r) fully to the right-hand side and align the graduated ring (s), the infinity mark being opposite the line engraved on the lid.

When the viewfinder is fitted to the camera by means of the intermediary support, use the corresponding graduated ring (blue).

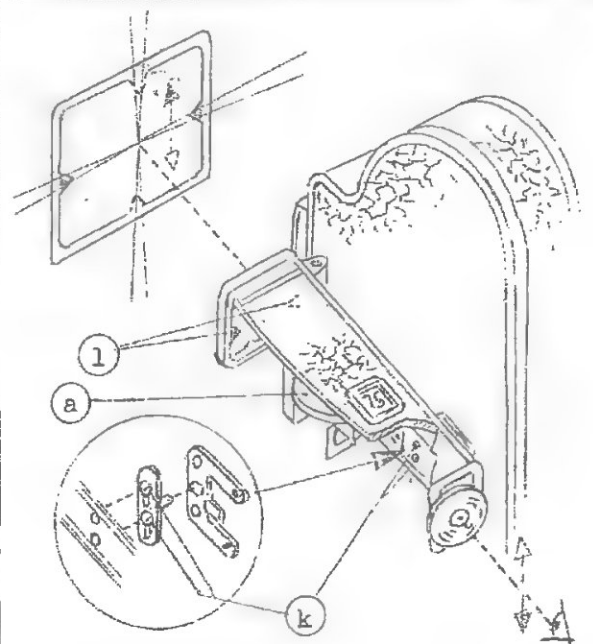


Fig. 5

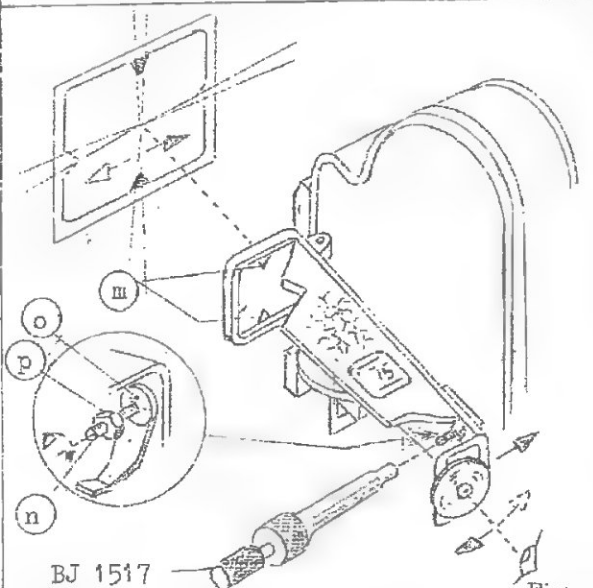


Fig. 6

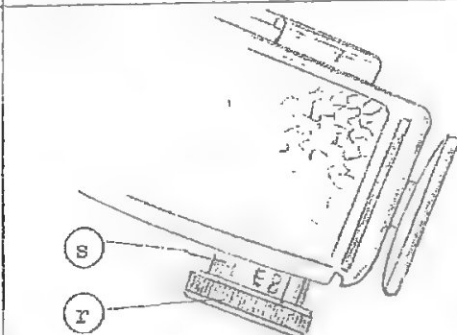


Fig. 7



PD

Cotes
Masse
Dimensions

H16 SB



BOLEX

26,46**

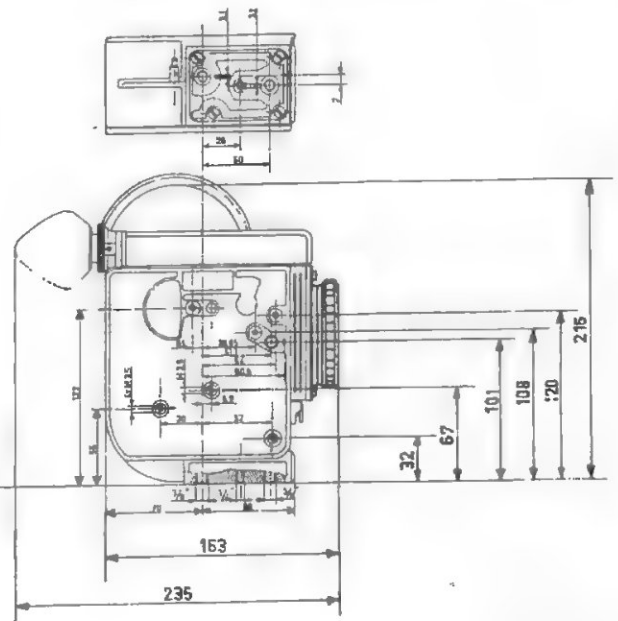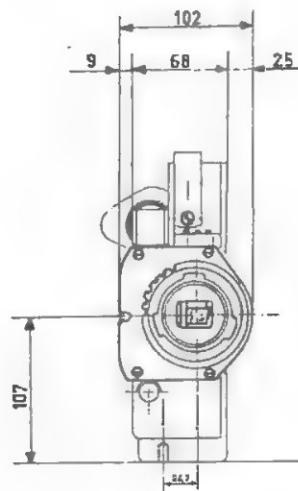

H16SB

26,46**

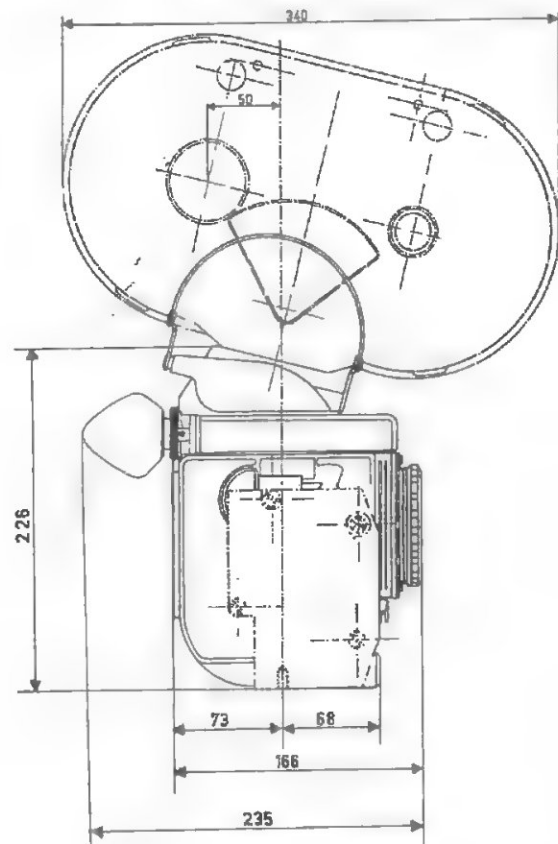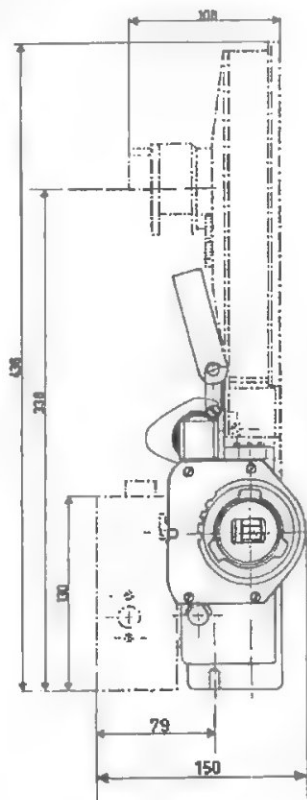

H16SBM

H3

01.71

*

** Tirage
Auflagemass
Flange focal distance

L

1

TM**Table des matières**
Inhaltsverzeichnis
Index**BOLEX**

A	Porte-objectif	Objektivhalter	Lens Holder
B	Viseur réflexe	Reflex Sucher	Reflex Viewfinder
C	Boîtier - gainage	Kameragehäuse-Belederung	Camera body-Leathering
D	Couvercle-gainage Manivelle	Deckel-Belederung Aufzugskurbel	Lid-Leathering Rewinding handel
E	Platine supérieure	Obere Werkplatte	Upper base plate
F	Griffe-volet presseur Obturbateur	Greifer-Filmandruckplatte Sektorenblende	Claw-Pressure pad Rotary shutter
G	Mécanisme-moteur	Mechanismus-Motor	Mechanism-Motor
H	Circuits électroniques	Elektronische Schaltungen	Electronic circuits
J	Poignée	Handgriff	Grip
K	Schéma électrique	Elektrisches-Schema	Electric diagram
L	Plan de câblage	Verdrahtungsschema	Wiring diagram
M	Accessoires	Zubehör	Accessories
N	Cotes	Masse	Dimensions

H3
EBM

06.71

*

1**H16EBM**
↑
300 401


PD

Porte- objectif Objektivhalter Lens Holder

H16EBM

BOLEX

300 401 →

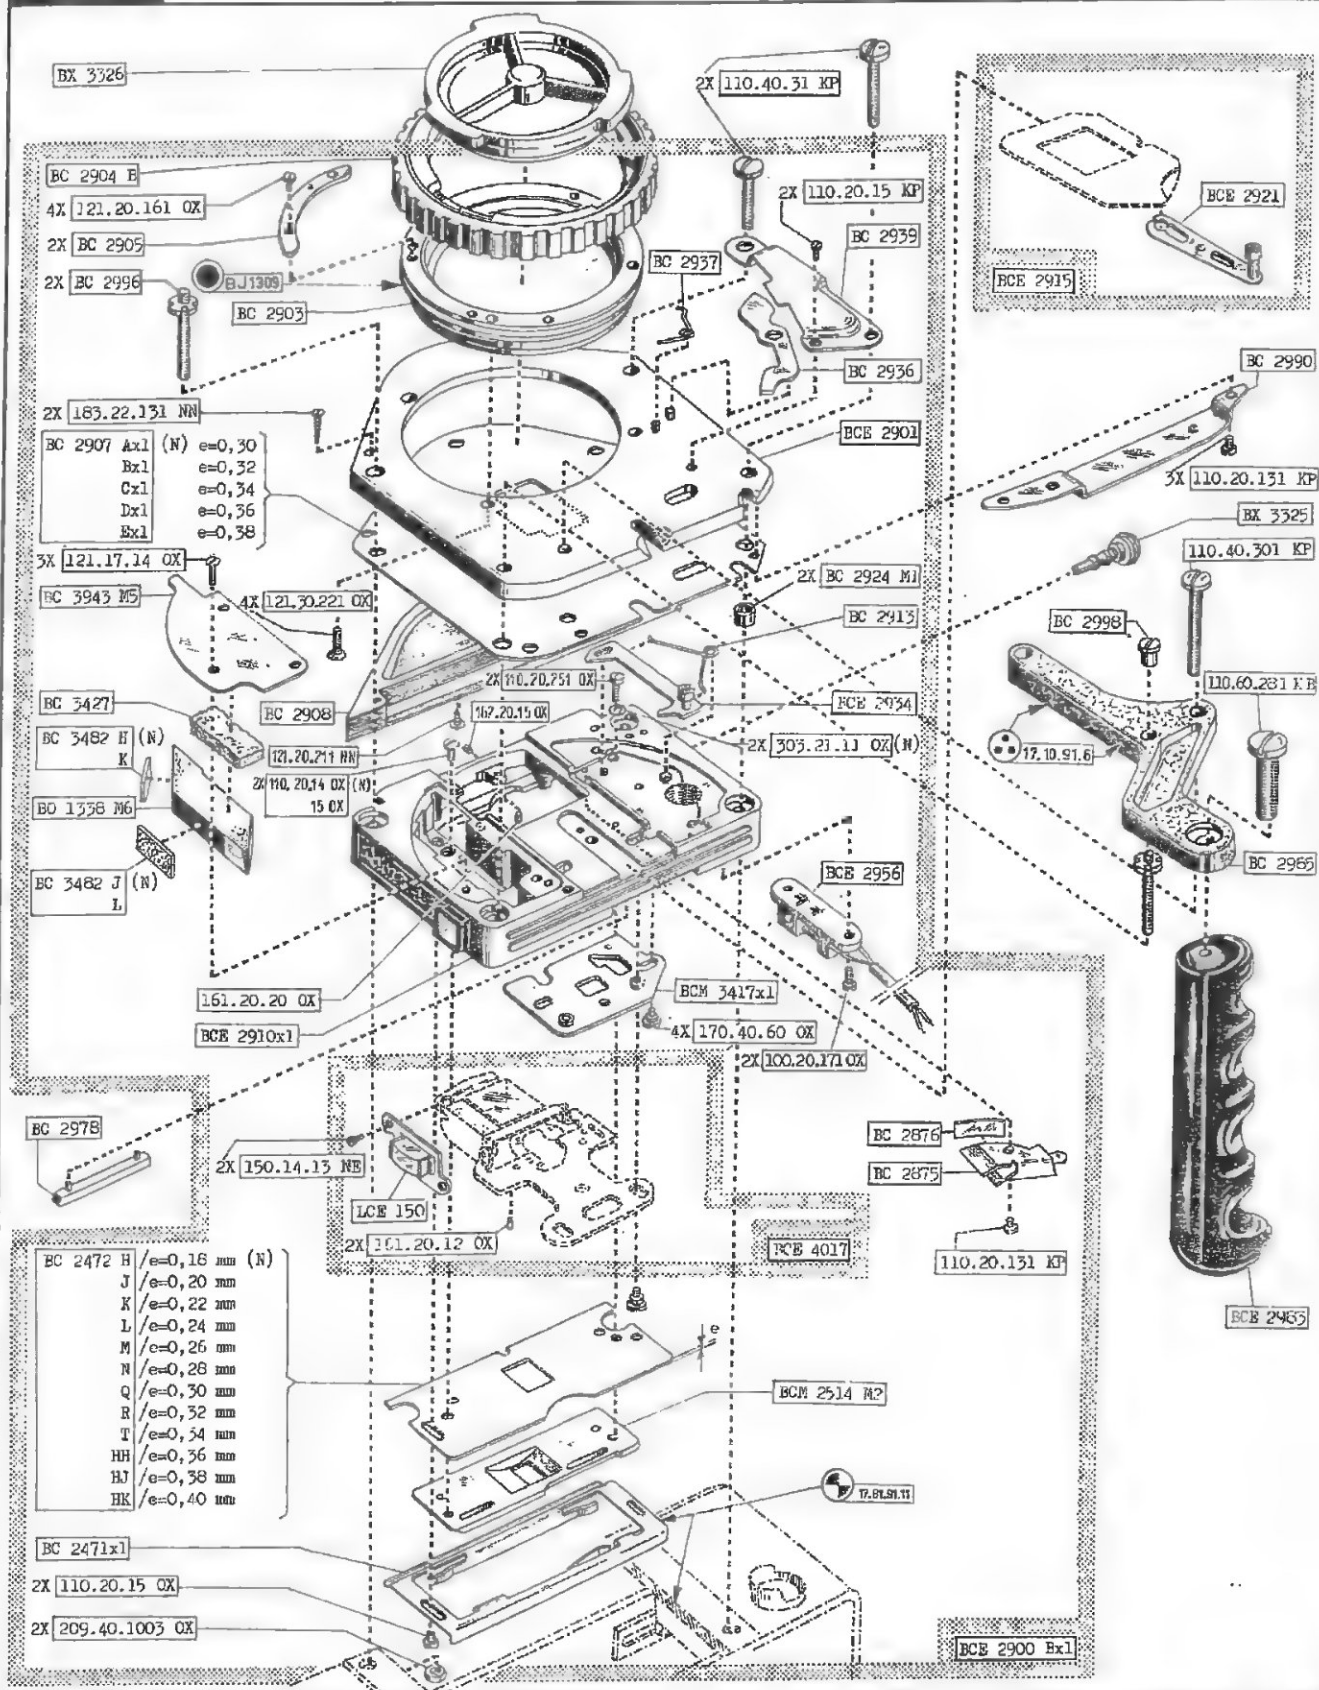

Printed in Switzerland. All rights reserved.

H3
EBM

06.71

*

A

1

FMTorte-objectif
Objektivhalter
Lens holder

H16 EBR

300 401 →

BOLEX

15 Anciennes pièces Alte Teile Former parts	16 Nouvelles pièces Neue Teile New parts	17 Observations Bemerkungen Remarks
1 (BC 2907 Ax1 +) (Bx1 +) (Cx1 +)	BC 2907 F (N) e=0,44 G e=0,46 H e=0,48	F) nouvelles variantes de caches et suppression de 3 variantes. D) Einführung von neuen Gleitfiltern und Wegfall von 3 Ausführungen. E) Introduction of new filter holders and suppression of 3 versions. 11.71
2 (BCE 2956 +) 2X (100.20.171 0X +)	BCE 2956 M4 2X 120.20.161 H1	F) Fixation du support claquette modifiée, pour éviter un court-circuit avec les contacts. Vis à tête conique remplace vis à tête plate. D) Änderung in der Befestigung des Startmarkierungshalters zur Vermeidung eines Kurzschlusses mit den Kontakten. Die flachkopfschraube wird durch eine Zylinderschraube ersetzt. E) Modification of the clapper support fixing to avoid a short-circuit with the contacts. The flat head screw is replaced by another one with cylinder head. 11.71

H3
EBM

11.71



PD - A - 1 - 06.71

1



PD

Viseur reflexe
Reflex- Sucher
Reflex- Viewfinder

H16EBM

BOLEX

300 401 →

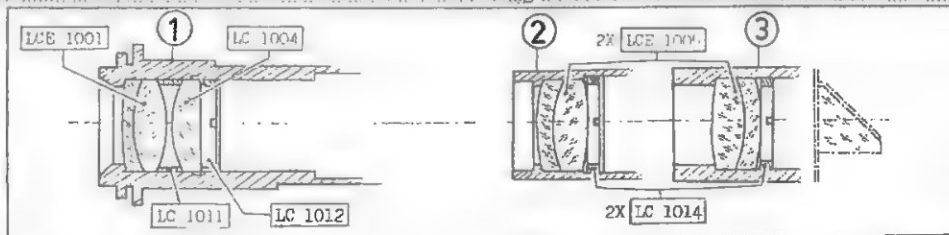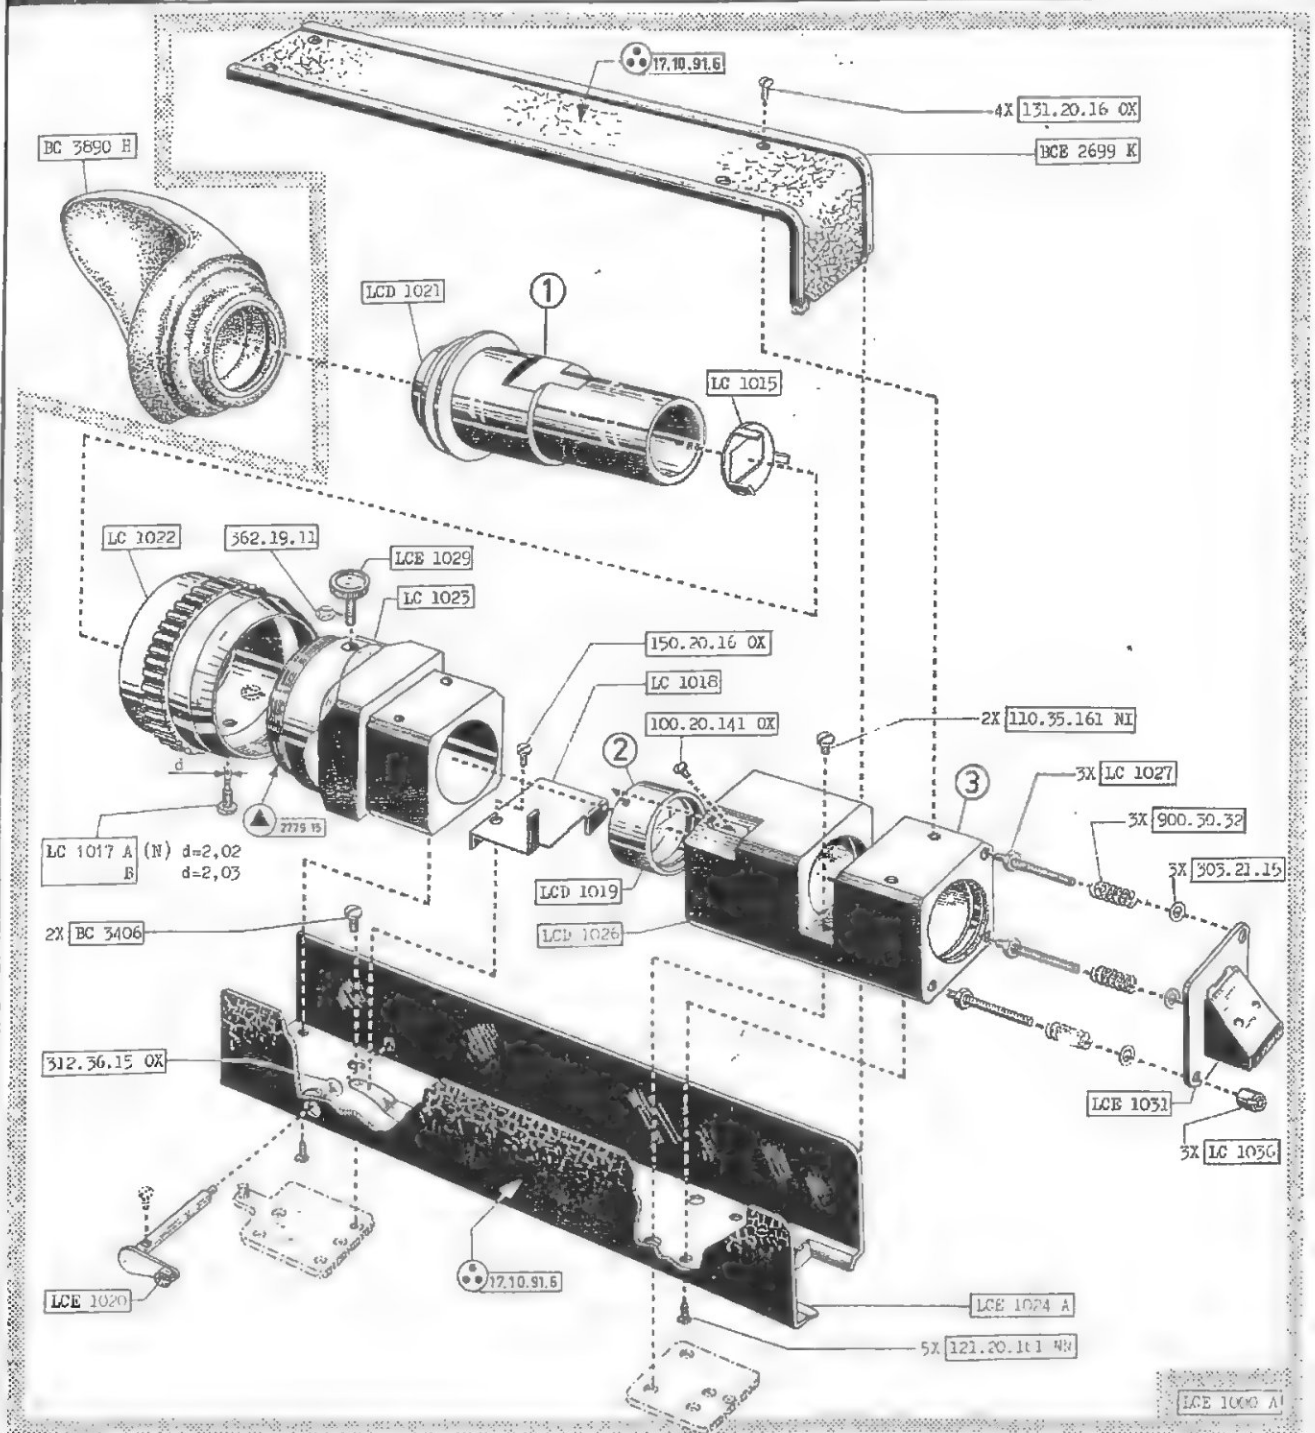

Printed in Switzerland. All rights reserved.

H3
EBM

06.71

*

B


1

Boîtier
Kameragehäuse
Camera body

H16EBM

300 401

BOLEX

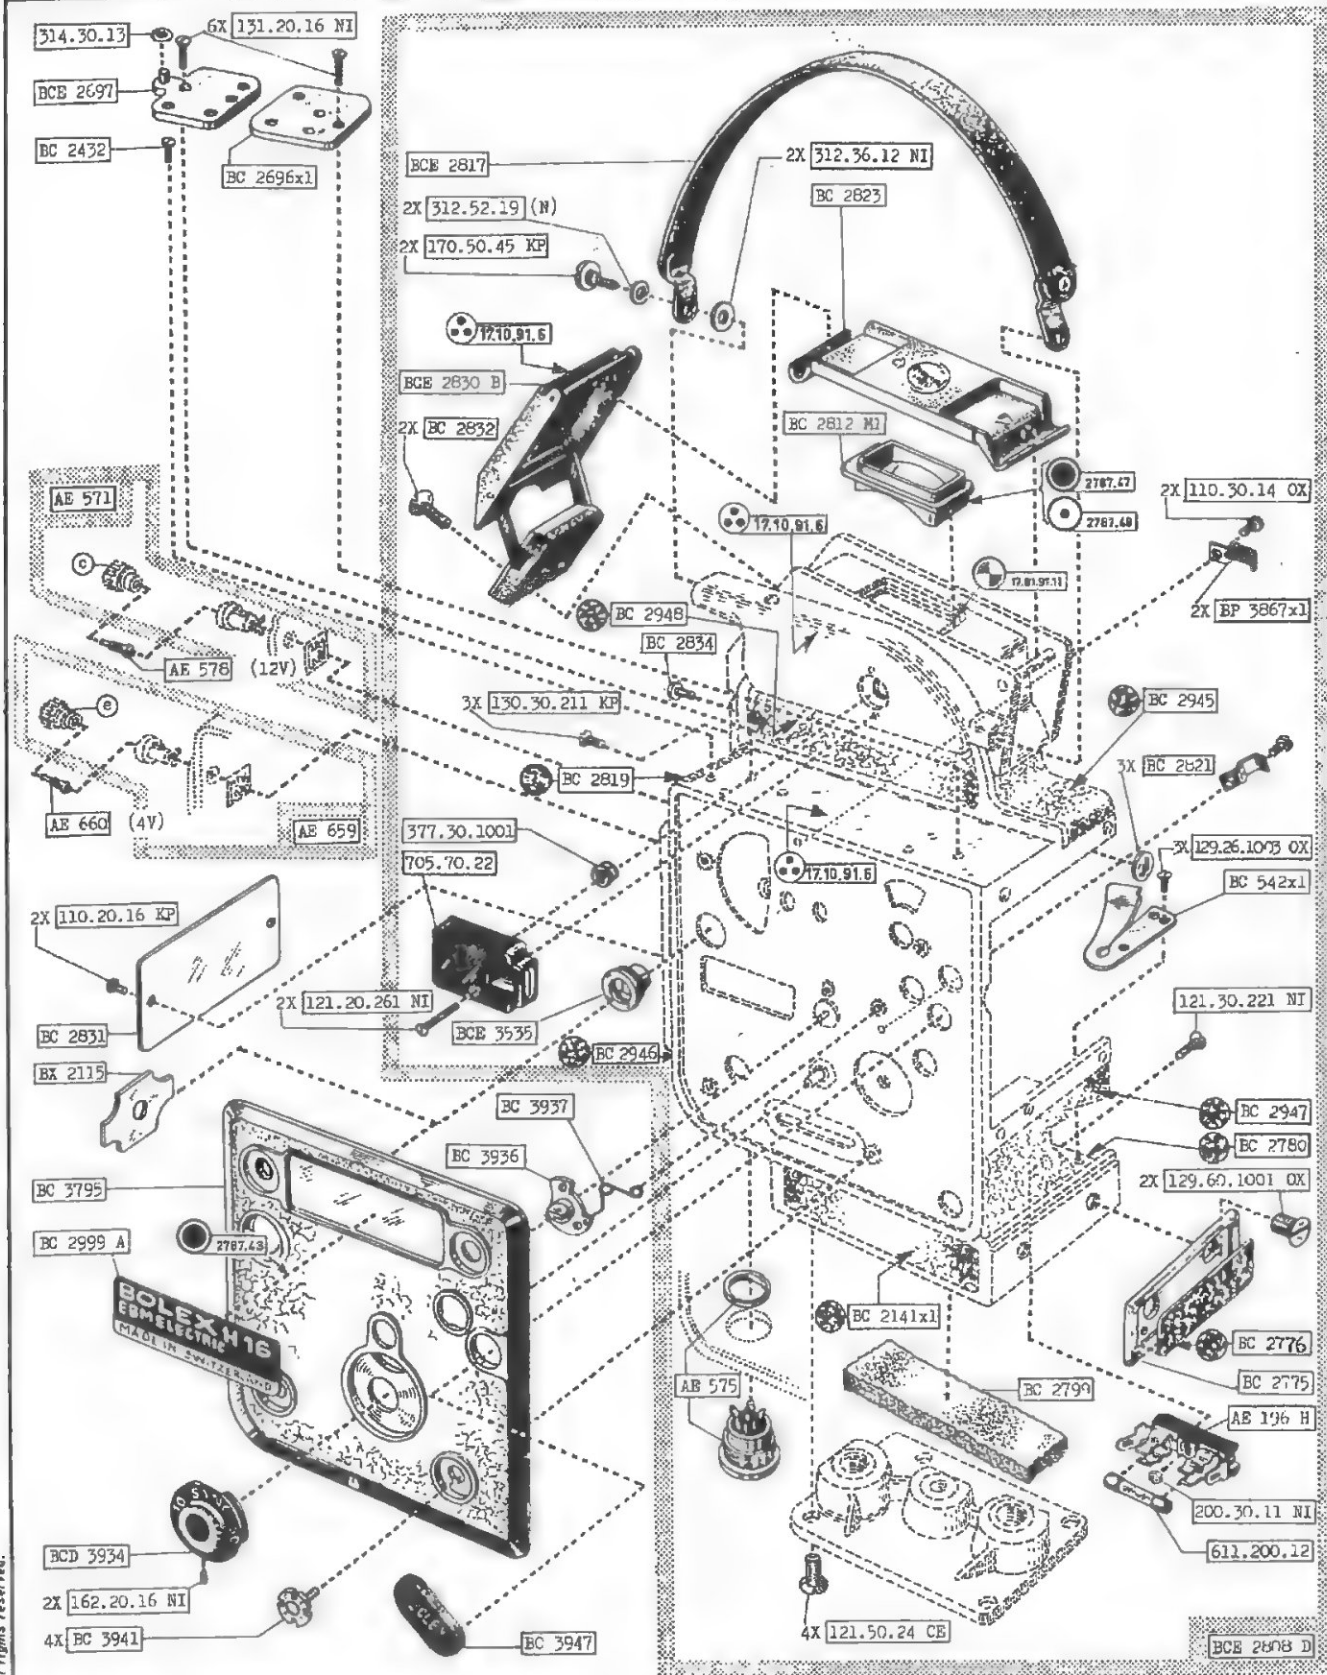

Printed in Switzerland. All rights reserved.

H3

EBM

06.71



 { (F) Gaiages
(D) Beledering
(E) Leathering



C



PD

Couvercle - Manivelle
Deckel - Aufzugskurbel
Lid - Rewinding handle

H16EBM

300 401 →

BOLEX

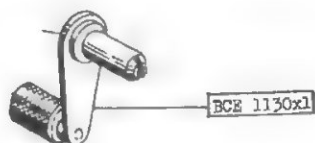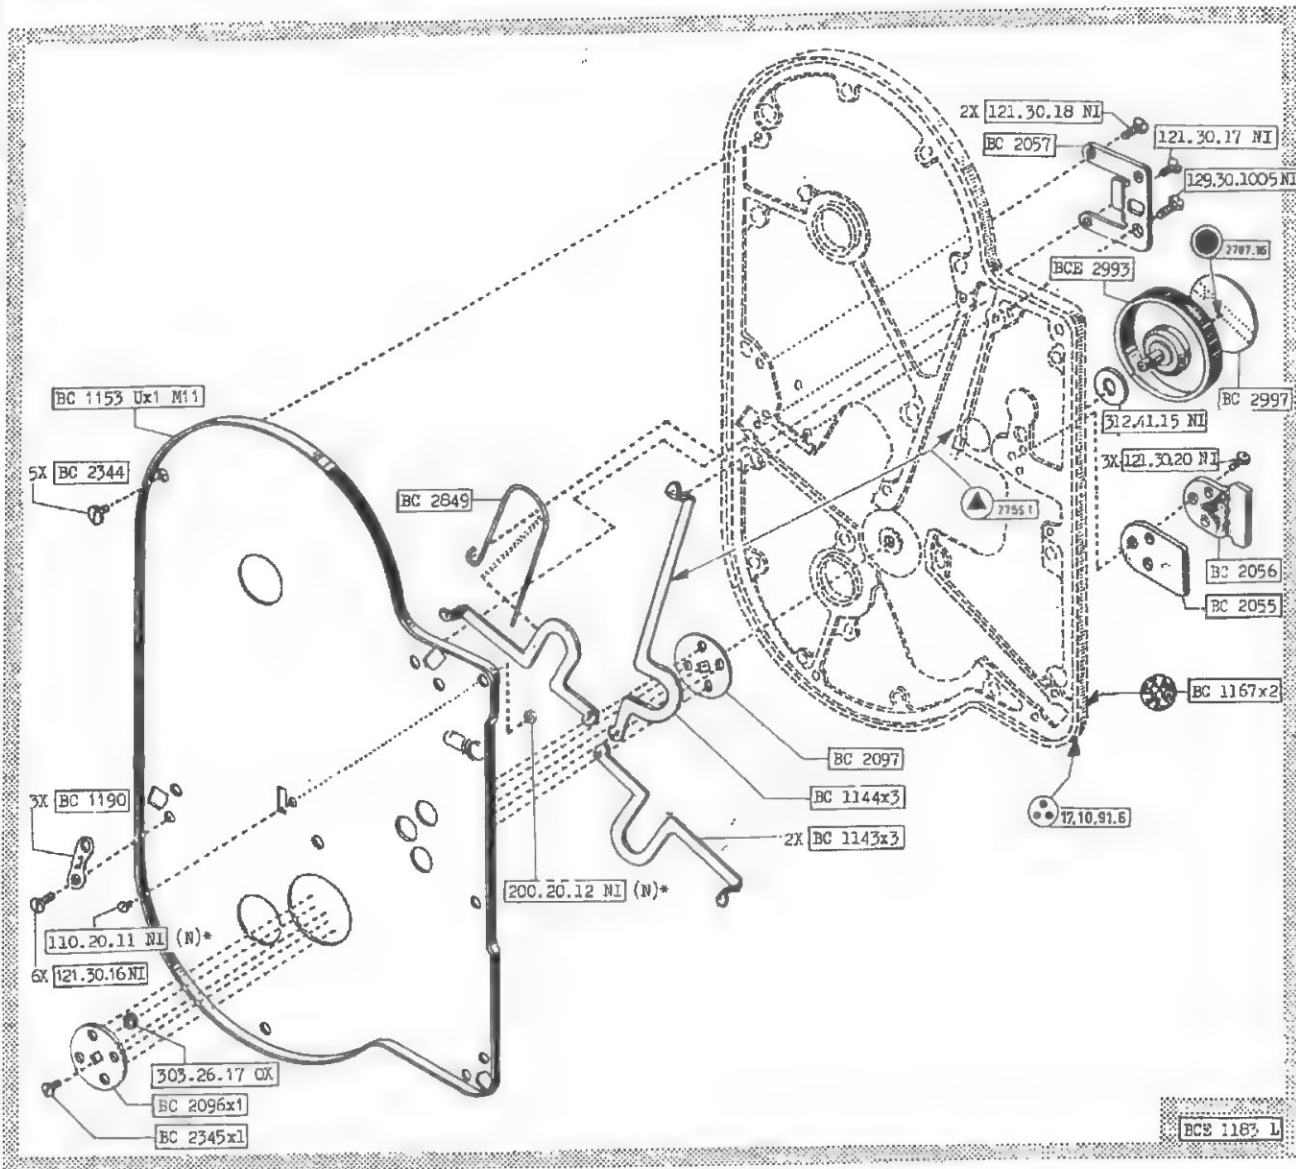

Printed in Switzerland. All rights reserved.

H3
EBM

06.71

*

(F) Gaines
(D) Belederung
(E) Leathering




D

1

Platine supérieure
Obere Werkplatte
Upper base plate

BOLEX

300 401 →

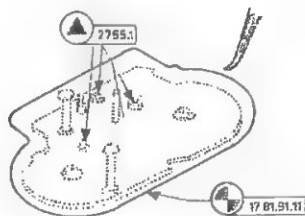

*


1

PD

Griffe Volet presseur
Greifer Filmmandruckplatte
Claw Pressure pad

H16EBM**BOLEX**

300 401 →

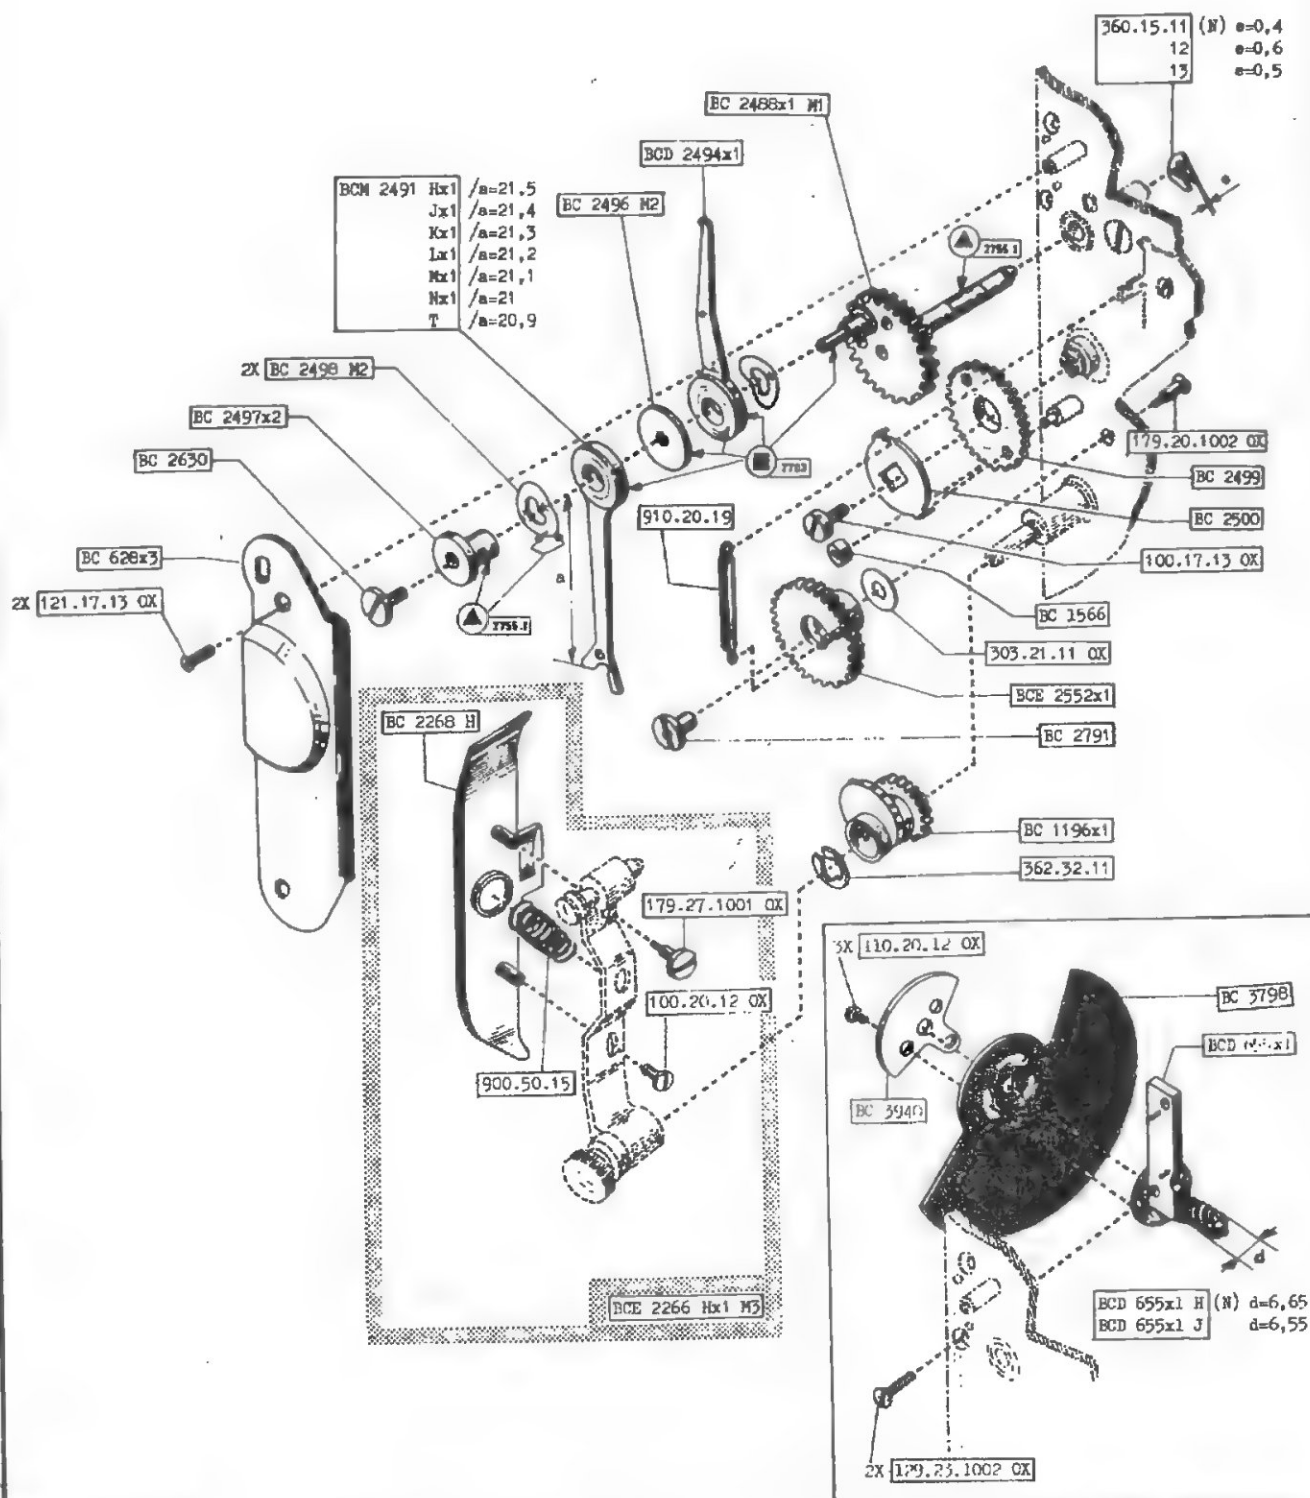


Infid in Switzerland. All rights reserved.

H3
EBM

06.71

*

F**1**


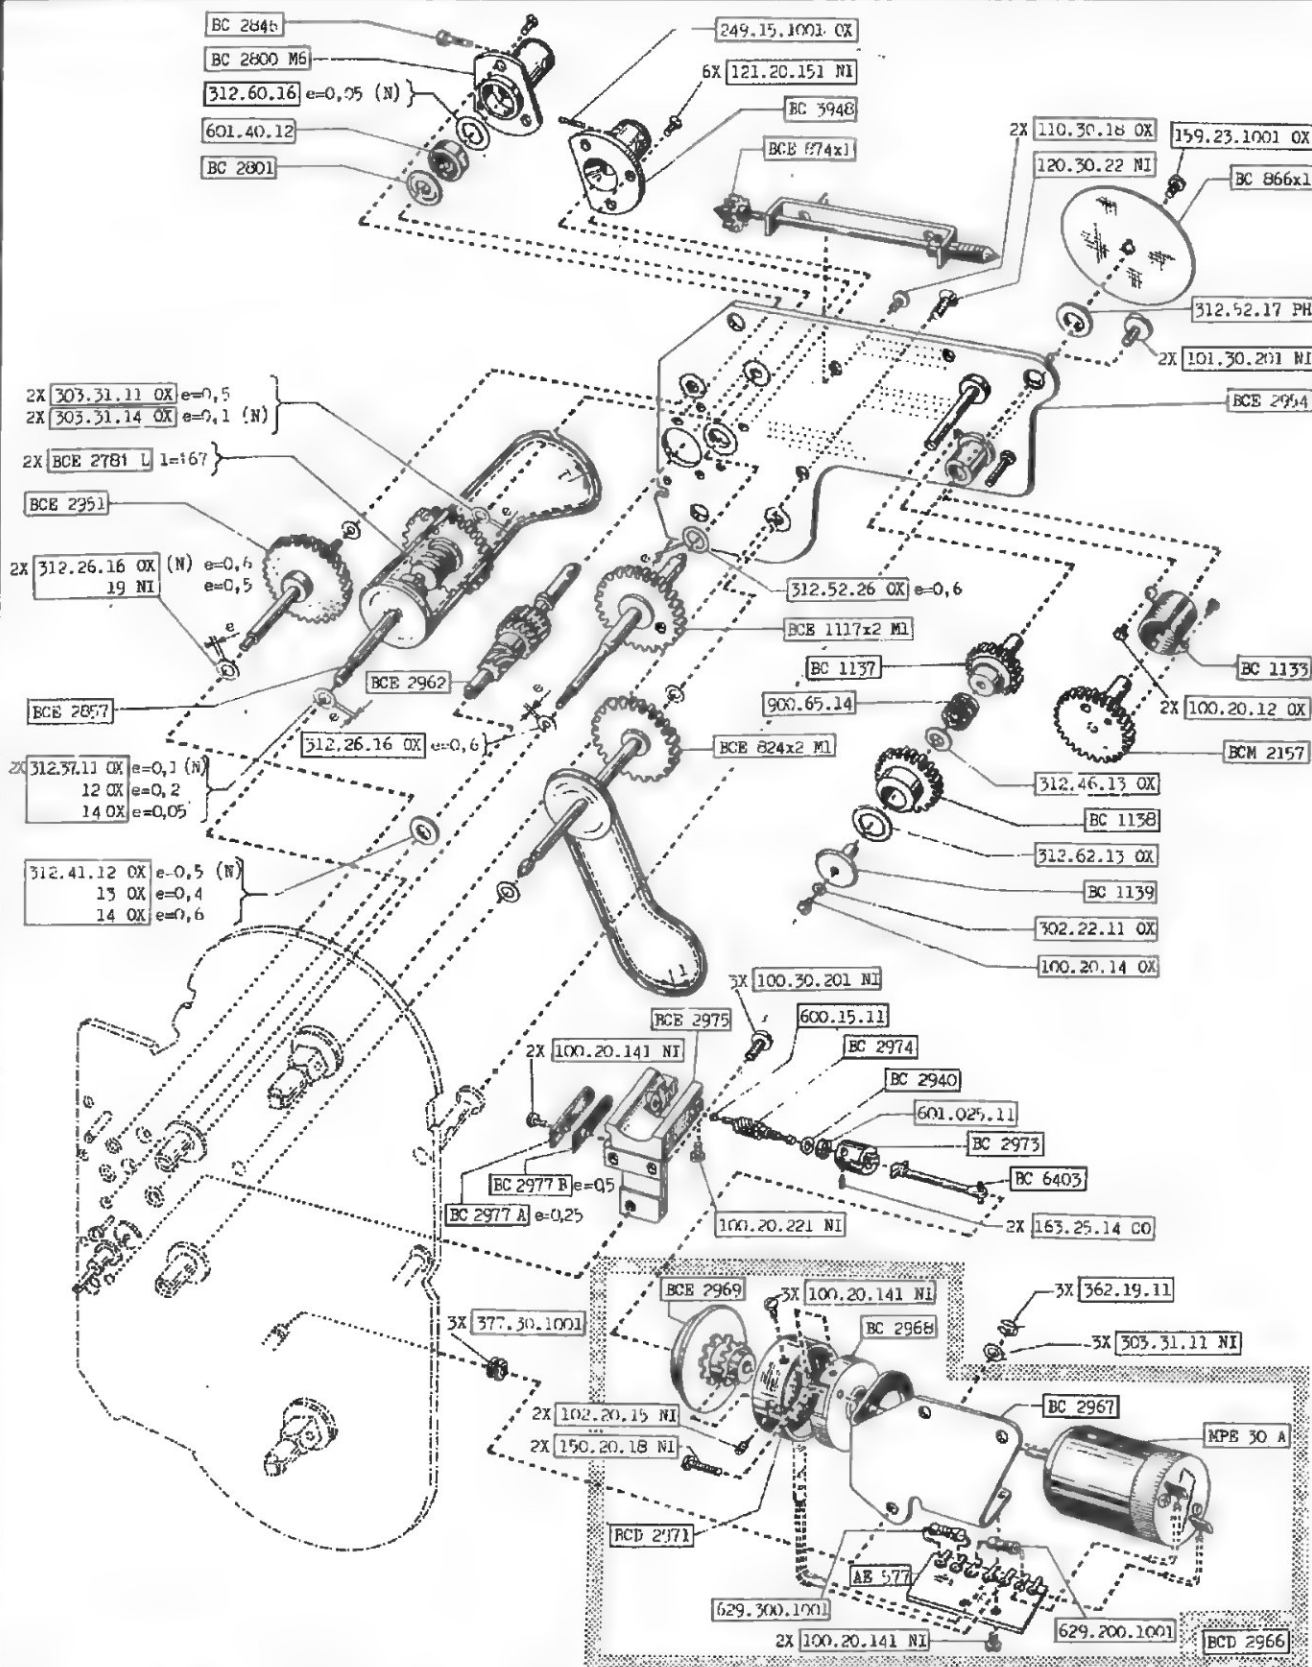


FM

Mécanisme - Moteur
 Mechanismus - Motor
 Mechanism = Motor

H16EBM

BOLEX

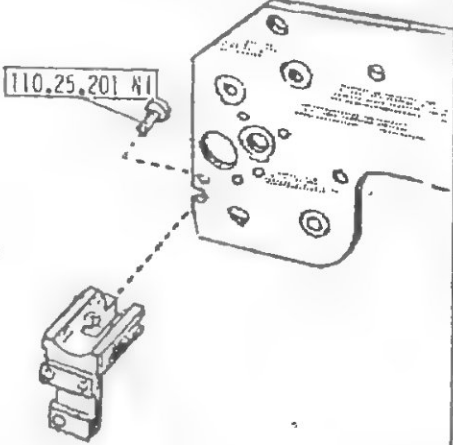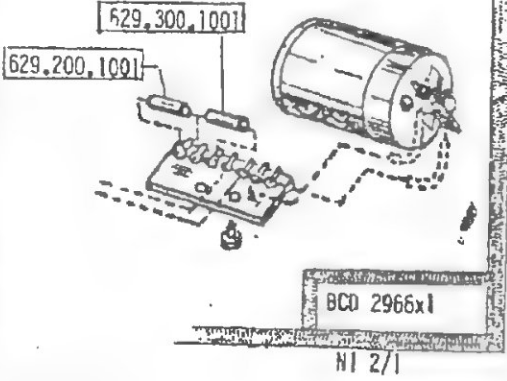15) Anciennes pièces Alte Teile Former parts	16) Nouvelles pièces Neue Teile New parts	17) Observations Bemerkungen Remarks
1		F) Indication du symbole manquant. D) Nachtrag der fehlenden Teilnummer. E) Indication of missing part number. 07.72
2	(312.52.17 PH†) e=0, 2X (303.31.11 OX†) e=0, 2X (102.20.15 NI†) <u>312.52.31</u> PH e=0,6 2X <u>303.31.20</u> OX e=0,4 2X <u>102.20.131</u> PH	F) Nomenclature modifiée. D) Teilnummernänderung. E) Part-number modification. 07.72
3	① → 305 688 ② 305 689 →  BCD 2966 NI 1/2 BCD 2966x1 NI 2/1	F) Modification de la plaque, suite à l'introduction du freinage par court-circuit d'inducteur. D) Änderung der Platte infolge der Einführung der Ankerkurzschlussbremsung. E) Modification of connecting plate following the introduction of braking by short-circuiting armature. 07.72
4	(629.200.1001 †) 20 Ω (629.300.1001 †) 30 Ω <u>625.200.12</u> 22 Ω <u>625.270.12</u> 27 Ω	F) Valeur des résistances et symboles modifiée. D) Wert der Widerstände und Teilnummer geändert. E) Value of the resistances and part number modified. 01.74

H3
EBM

01.74

*

PD - G - 1 - 06.71

1

Mechanism and optical part - General

Considering that the film transport mechanism and the optical system are absolutely similar as for cameras with spring motor, please refer to the instructions already available regarding mounting and adjustments.

Specifications of the electric cameras1. Driving shaft (fig.1)

Adjust the axial play to the minimum by positioning bearing (a), tighten screw (b), whereas the ball must rest against stop plates (c).

The play between pinions (d) and (e) must be reduced to the minimum with a view lessening the noise of the mechanism. Unhook the belts of the spool axle pulleys to check the free movement of the mechanism by means of the rewinding handcrank on shaft 8:1.

2. Electric motor (fig.2)

On mounting the supporting square plate and the pulse generator, the rotor is positioned at a distance of 1 mm.

Check the function of the motor before mounting.

Power supply 12 V=.

3. Claw

To align the claw shaft etc., position the mechanism with tool BJ 1319 (fig.3)

4. Shutter (fig.3)

Set the bearing on to upper working plate and reduce the play of the pinions to the minimum.

Position the mechanism with tool BJ 1319. Set the shutter with its edge opposite the mark of the tool and rectify the play in the gears as per arrow.

5. Mounting the mechanism into the housing

Check and arrange the cables in the housing, especially in the upper section, as little space is available between the extremity of the plate.

Solder the cables on to the clamps of the motor bow as per wiring diagram L1.

Check the electric function, power supply 12 V= (for instance T3A) on plug 7P.

While dismantling the mechanism, do not unsolder the cables from the bow clamps but cut them, so as to protect the insulation. The cables may be taken apart 4 times; afterwards the length is no longer sufficient.

6. Mounting the lens holder on to the housing

Use special key BJ 1316 to tighten the threaded axles/grip supports.

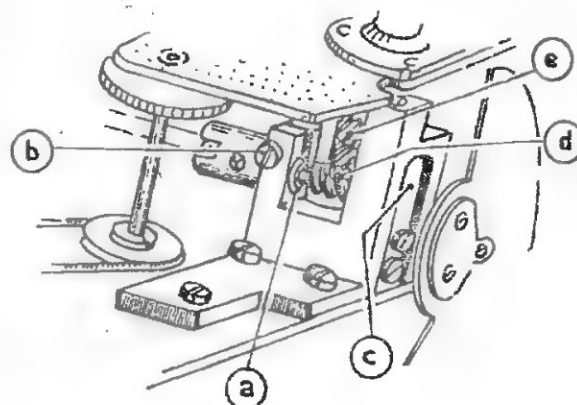


Fig.1

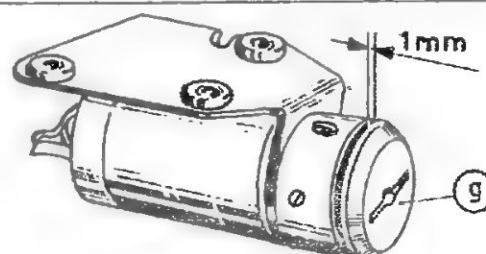


Fig.2

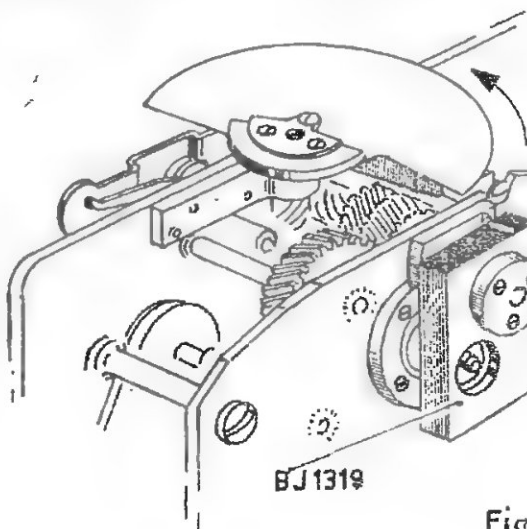



Fig.3

PD

Circuits électroniques
Elektronische Schaltungen
Electronic circuits

H16EBM**BOLEX**

300 401 →

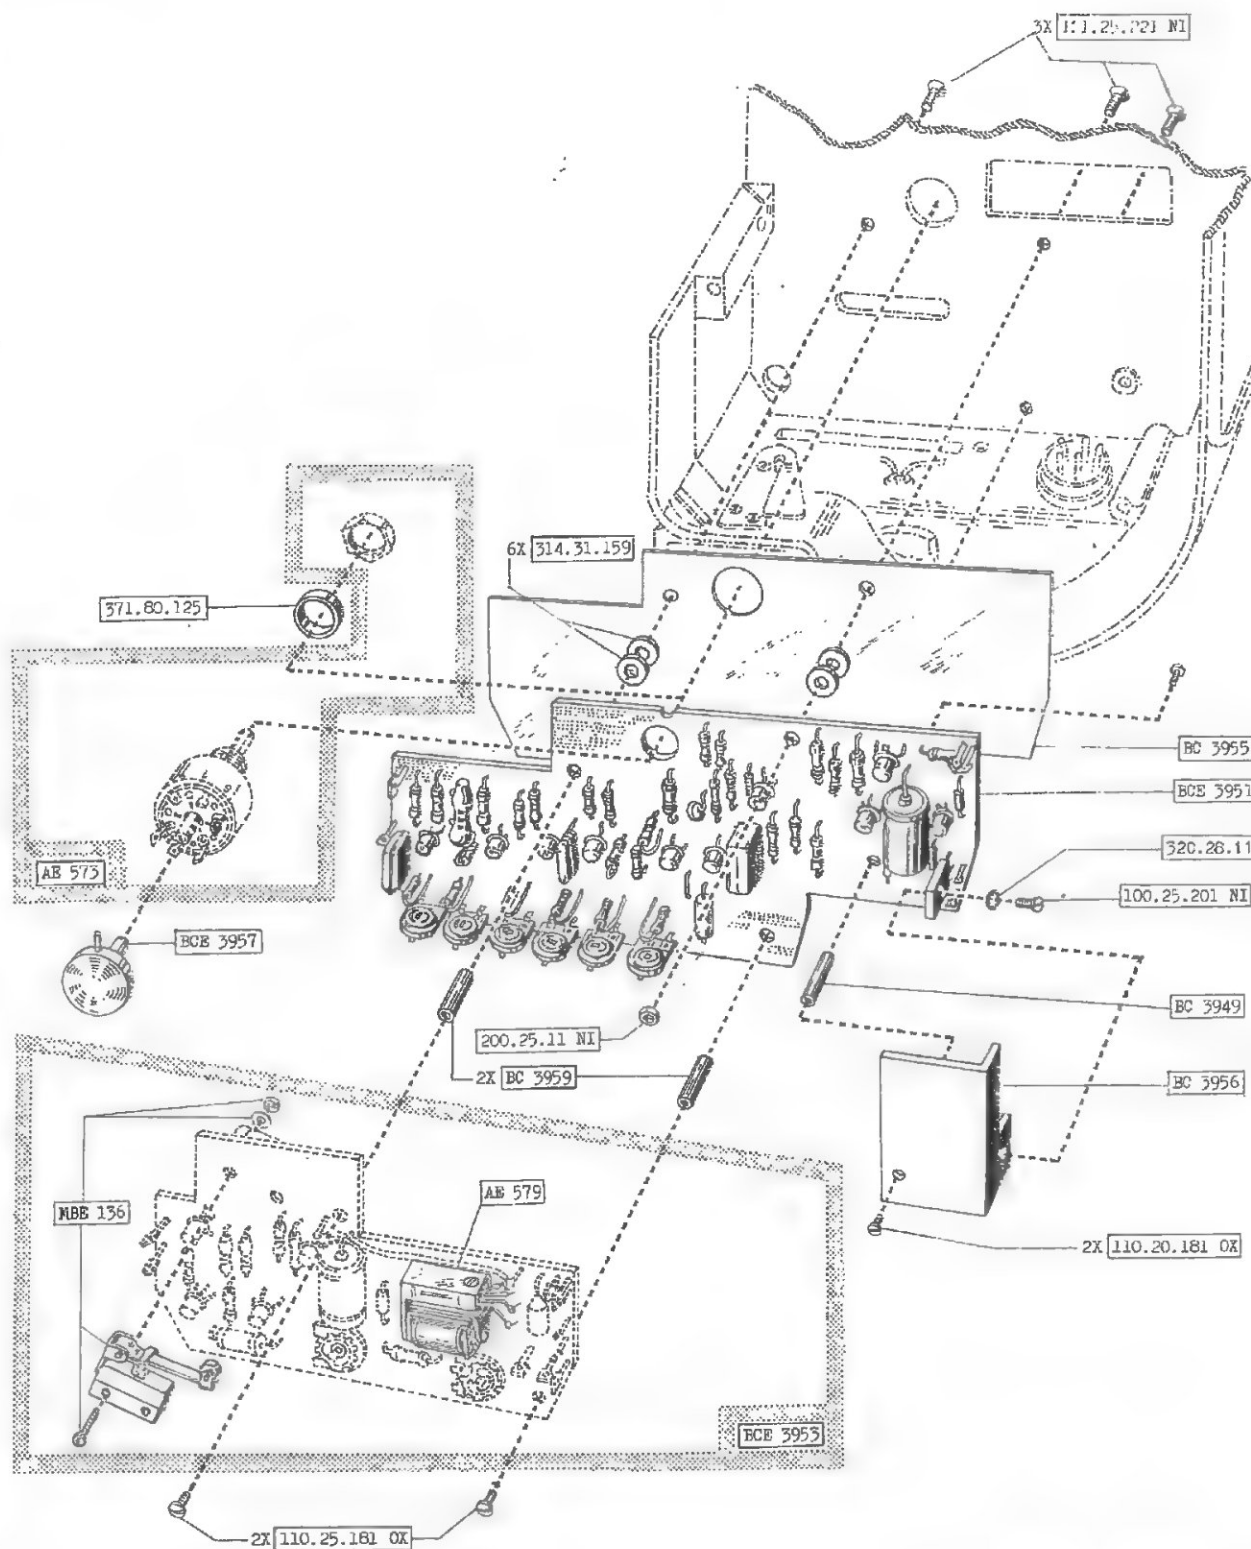

Printed in Switzerland. All rights reserved.

H3
EBM

06.71

*

H**1**

Mechanism and optical part - General

Considering that the film transport mechanism and the optical system are absolutely similar as for cameras with spring motor, please refer to the instructions already available regarding mounting and adjustments.

Specifications of the electric cameras1. Driving shaft (fig.1)

Adjust the axial play to the minimum by positioning bearing (a), tighten screw (b), whereas the ball must rest against stop plates (c).

The play between pinions (d) and (e) must be reduced to the minimum with a view lessening the noise of the mechanism. Unhook the belts of the spool axle pulleys to check the free movement of the mechanism by means of the rewinding handcrank on shaft 8:1.

2. Electric motor (fig.2)

On mounting the supporting square plate and the pulse generator, the rotor is positioned at a distance of 1 mm.

Check the function of the motor before mounting.

Power supply 12 V-.

3. Claw

To align the claw shaft etc., position the mechanism with tool BJ 1319 (fig.3)

4. Shutter (fig.3)

Set the bearing on to upper working plate and reduce the play of the pinions to the minimum.

Position the mechanism with tool BJ 1319. Set the shutter with its edge opposite the mark of the tool and rectify the play in the gears as per arrow.

5. Mounting the mechanism into the housing

Check and arrange the cables in the housing, especially in the upper section, as little space is available between the extremity of the plate.

Solder the cables on to the clamps of the motor bow as per wiring diagram L1.

Check the electric function, power supply 12 V- (for instance T3A) on plug 7P.

While dismantling the mechanism, do not unsolder the cables from the bow clamps but cut them, so as to protect the insulation. The cables may be taken apart 4 times; afterwards the length is no longer sufficient.

6. Mounting the lens holder on to the housing

Use special key BJ 1316 to tighten the threaded axes/grip supports.

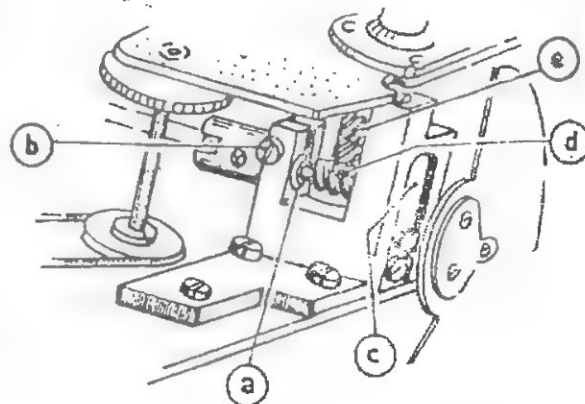


Fig.1

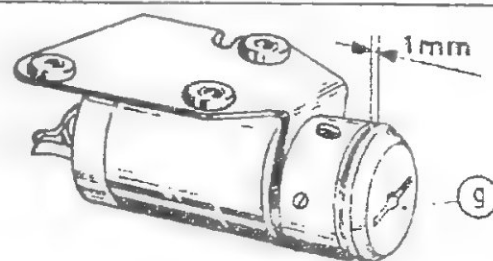


Fig.2

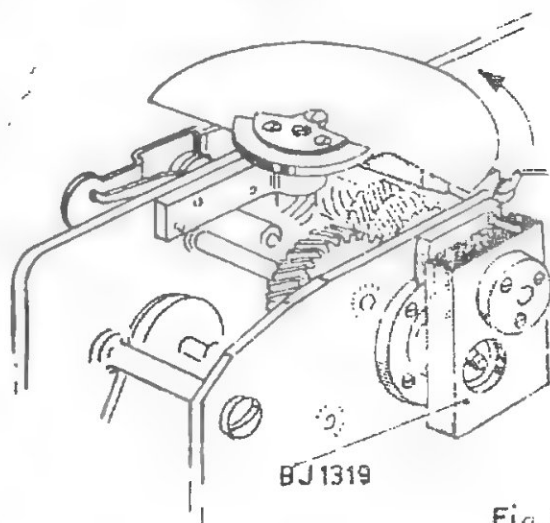


Fig.3

Electronic circuits

FD-6 FBM

300 401 →



7

H3
EBM

01.72



IT - EL - II - 11.71

Printed in Switzerland All rights reserved.

3. Indicator of discharge

Red warning lamp on the camera.

The lamp must switch on when the voltage drops down to:

$$11 \pm 0.1 \text{ V}$$

Act on potentiometer 7P accessible through the upper working plate (Fig. 4)

4. Duration of claptick

White lamp on the camera.

The lamp must switch on at each start of the camera during

$$300 \dots 400 \text{ ms}$$

Preparation as per Fig. 5

Speed on 25 f.p.s.

Camera loaded.

Oscilloscope adjusted: vertical 5 V/cm
time base 50 ms/cm

Oscilloscope connected with connecting box BJ 1320
to terminals 6 (green) and 4 (black).
connect terminals 6 (green) and 7 (blue) together.

Act on potentiometer P8 accessible through the upper working plate (Fig. 4) to descent the curve values from 300 to 400 ms on the oscilloscope screen (Fig. 5)

5. Checking the signal of the pulse generator

Preparation as per Fig. 5

Speed on 25 f.p.s.

Camera loaded

Oscilloscope adjusted: Vertical 1 V/cm
time base 0.5 ms/cm

Oscilloscope connected with connecting box BJ 1320
to terminal 5 (yellow) and 4 (black)

The curve must equal Fig. 6a

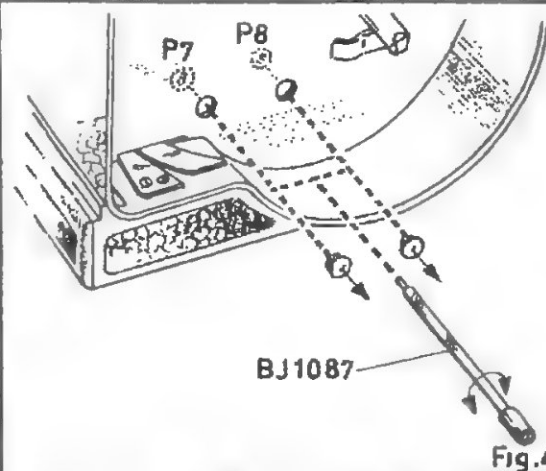


Fig. 4

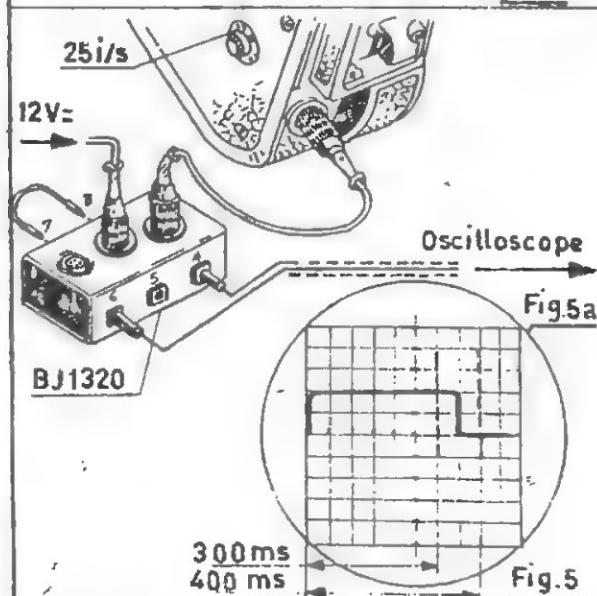


Fig. 5

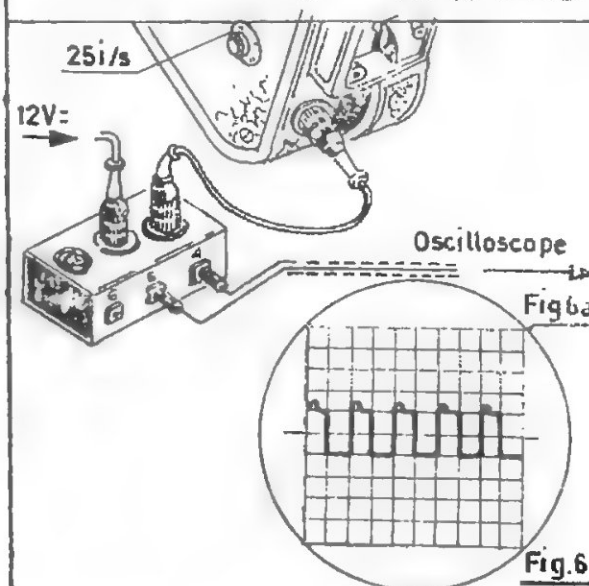


Fig. 6



PD

Circuits électroniques
Elektronische Schaltungen
Electronic circuits

H16EBM

BOLEX

300 401 →

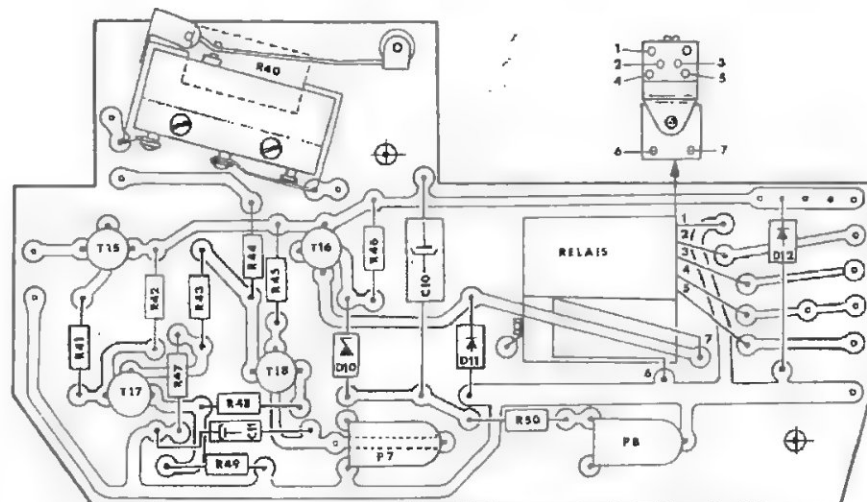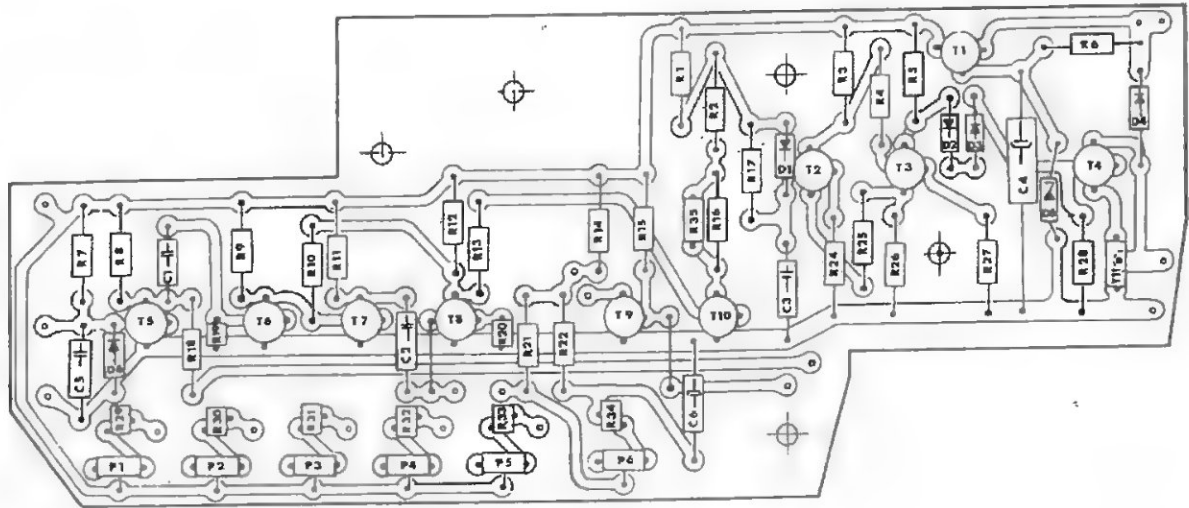

PD

Circuits électroniques
Elektronische Schaltungen
Electronic circuits

H 16 EBM

300 401 →

BOLEX

Composants électriques : Résistances
Elektrische Bestandteile : Widerstände
Electrical components : Resistors

Tolérance générale :
Allgemeine Toleranz :
General tolerance :

± 5 %

* ± 10 %

Valeur Wert Value [Ω]	Puissance Leistung Power [W]	No. de commande Ersatzteil-Nr. Part-No.	No. Nr. No.
18	5,5	631.180.11 *	R 40
150	0,25	623.151.15	R 49
150	"	639.151.1001	R 35
270	"	623.271.15	R 25-26-50
680	"	623.681.15	R 6
820	"	623.821.15	R 48
1 K	"	623.102.15	R 2-3-5-11-14-28
1,5 K	"	623.151.15	R 46
2,2 K	"	623.222.15	R 23
2,7 K	"	623.272.15	R 27-47
3,3 K	"	623.332.15	R 4
3,9 K	"	623.392.15	R 42-43-44
4,7 K	"	623.472.15	R 9-12-16
5,6 K	"	623.562.15	R 17
6,8 K	"	623.682.15	R 8
8,2 K	"	623.822.15	R 1
15 K	"	623.153.15	R 22-41
22 K	"	623.223.15	R 13-45
27 K	"	623.273.15	R 7-18
33 K	"	623.333.15	R 29
82 K	"	623.823.15 *	R 20
100 K	"	623.104.15	R 19-24-30-31
120 K	"	623.124.15	R 34
150 K	"	623.154.15	R 32
220 K	"	623.224.15	R 10-21
330 K	"	623.334.15	R 15-33
2,2 K	-	681.15.11	P 8
4,7 K	-	681.15.12	P 7
25 K	-	681.18.11	P 1-2-3
50 K	-	681.18.12	P 4-5-6

H3
EBM

06.71

*

H 3

PD

Circuits électroniques
Elektronische Schaltungen
Electronic circuits

H 16 EBM

300 401 →

BOLEX

Condensateurs - Kondensatoren - Capacitors

Valeur Wert Value [F]	Tension de service Betriebsspannung Operating voltage [V]	No. de commande Ersatzteil-Nr. Part-No.	No. Nr. No.	Tolérances Toleranzen Tolerances
2,2 n	500	651.222.500	C1	+ 20 %
10 n	250	649.103.1001	C2	+ 10 %
220 n		648.224.11	C5	
680 n	63	648.684.12	C3	+ 20 %
6,8 µ	6	653.685.06	C6	+ 20 %
20 µ	16	661.206.016	C11	+50 -10 %
200 µ	10	661.207.010	C4 - 10	+50 -10 %

Diodes/Transistors - Dioden/Transistoren - Diodes/Transistors


Type Typ Type	No. de commande Ersatzteil-Nr. Part-No.	No. Nr. No.
1 N 4148	693.001.106	D 1-2-3-6
1 N 4003	693.002.101	D 4-11
20 A 1	693.002.107	D 12
ZF 6,2	693.003.107	D 10
ZF 6,8	693.003.124	D 5
BC 108 B	693.015.118	T 1-2-3-4-6-7-9-10-17-18
BC 109 B	693.015.108	T 5-8
BC 179 B	693.015.117	T 15-16
2 N 5190	693.016.104	T 11

H3
EBM

06.71

*

H**4**

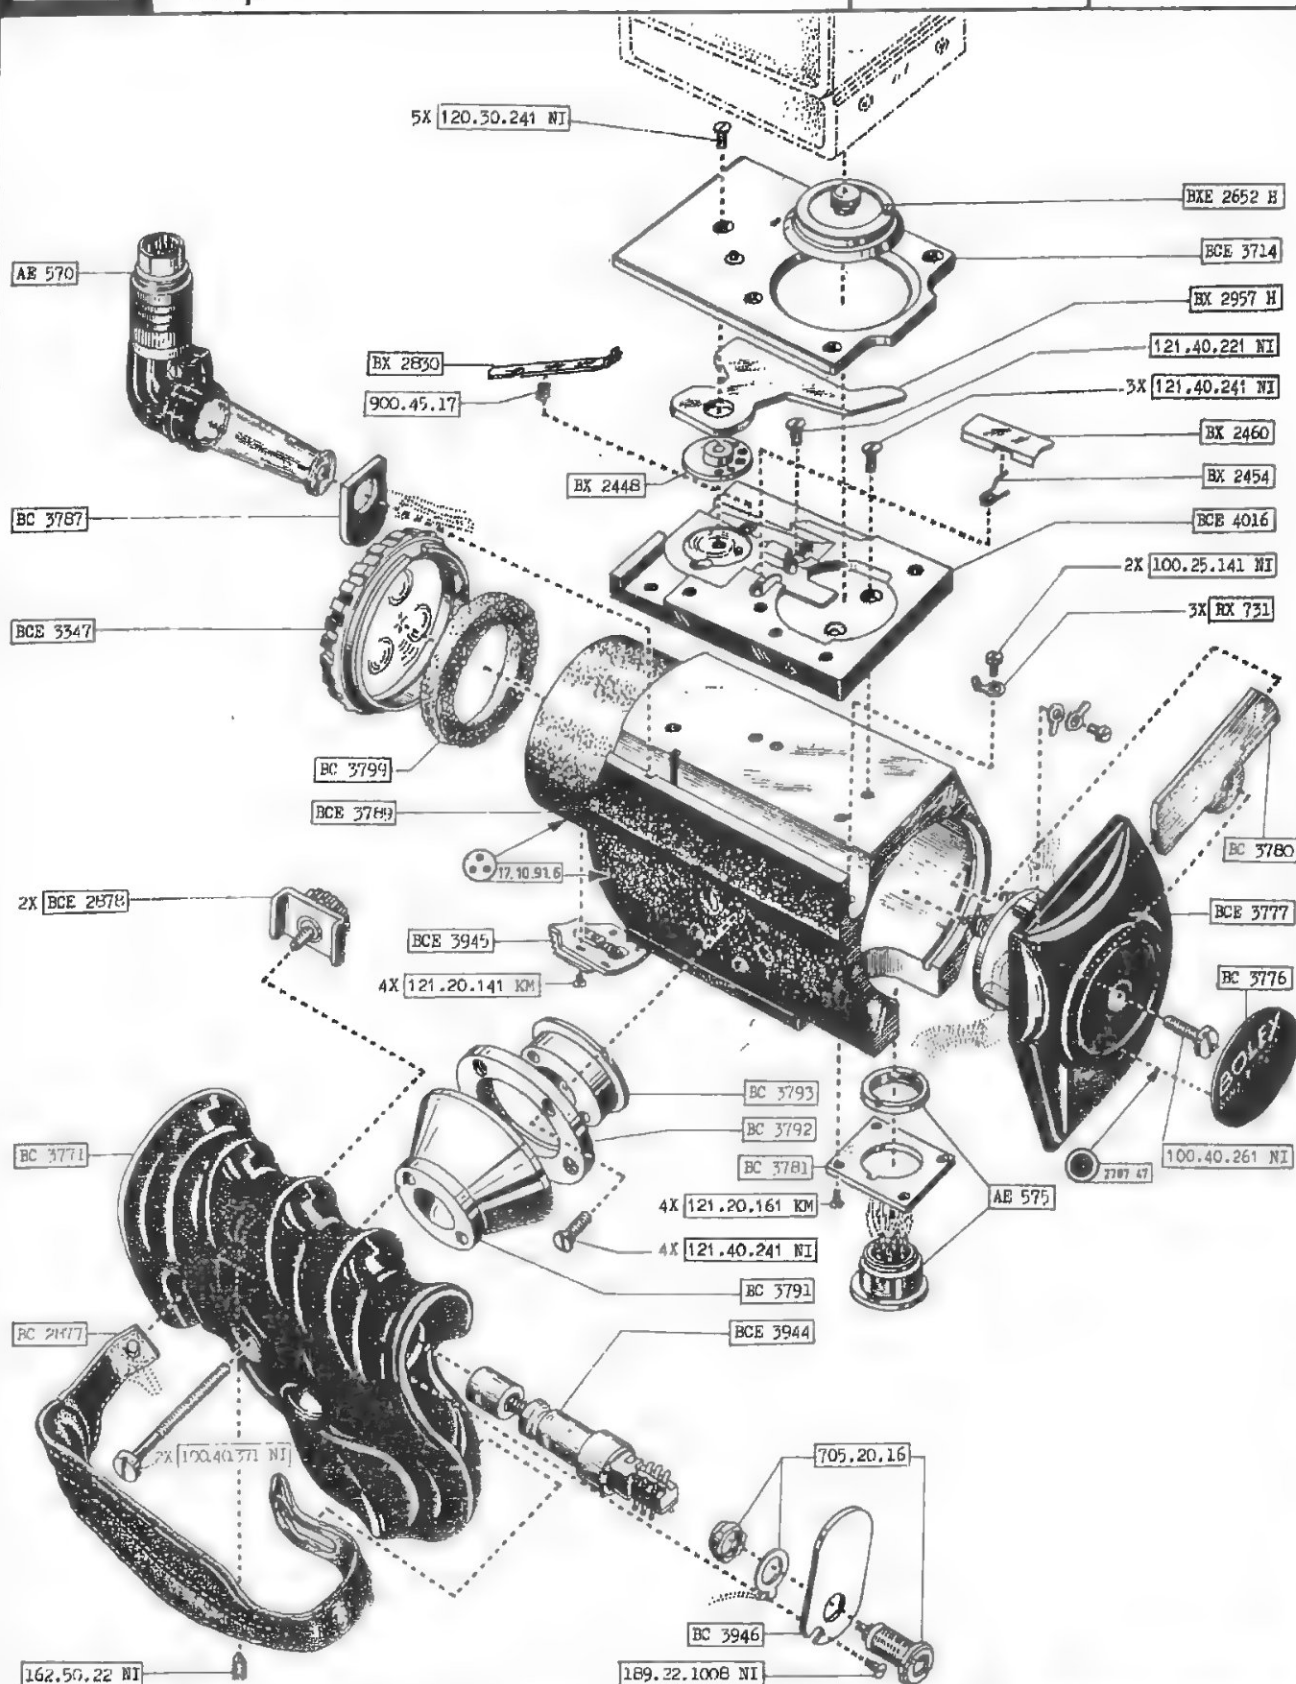

Assembling

While dismantling or assembling the container lid (a), remove the rapid attachment to take off the cables and plug 7P. On assembling, insert fixing plate (b) (Fig.1) between the 3 supporting columns of the spring contacts, screw (c) being only slightly engaged. Align lid (a) so as to allow plate (b) to engage into the slot of the grip housing. Turn the whole assembly to the final position of lid (a) and fix it with screw (c).

CAUTION : The cables must pass freely between the 3 columns under the plate with the 3 spring contacts. Mount plug 7P and the rapid attachment; align excenter (d) (drive pin of the locking lever) correctly, so that the lever ensures a good fixing of the camera when it is in closed position. Electrical connections, see wiring diagram L1. Check the electrical supply to the camera via handgrip prior to carrying out the adjustments.


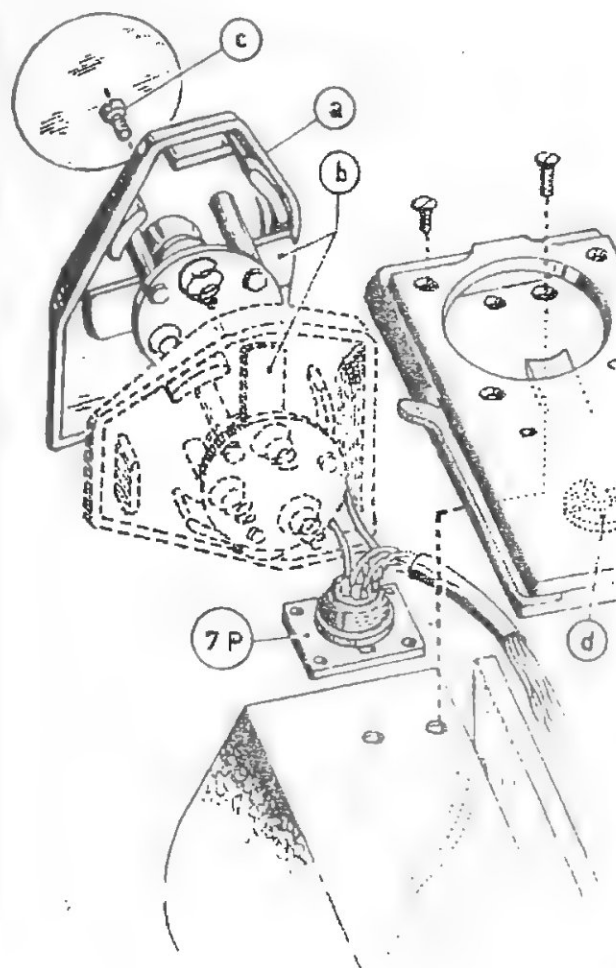


Fig 1

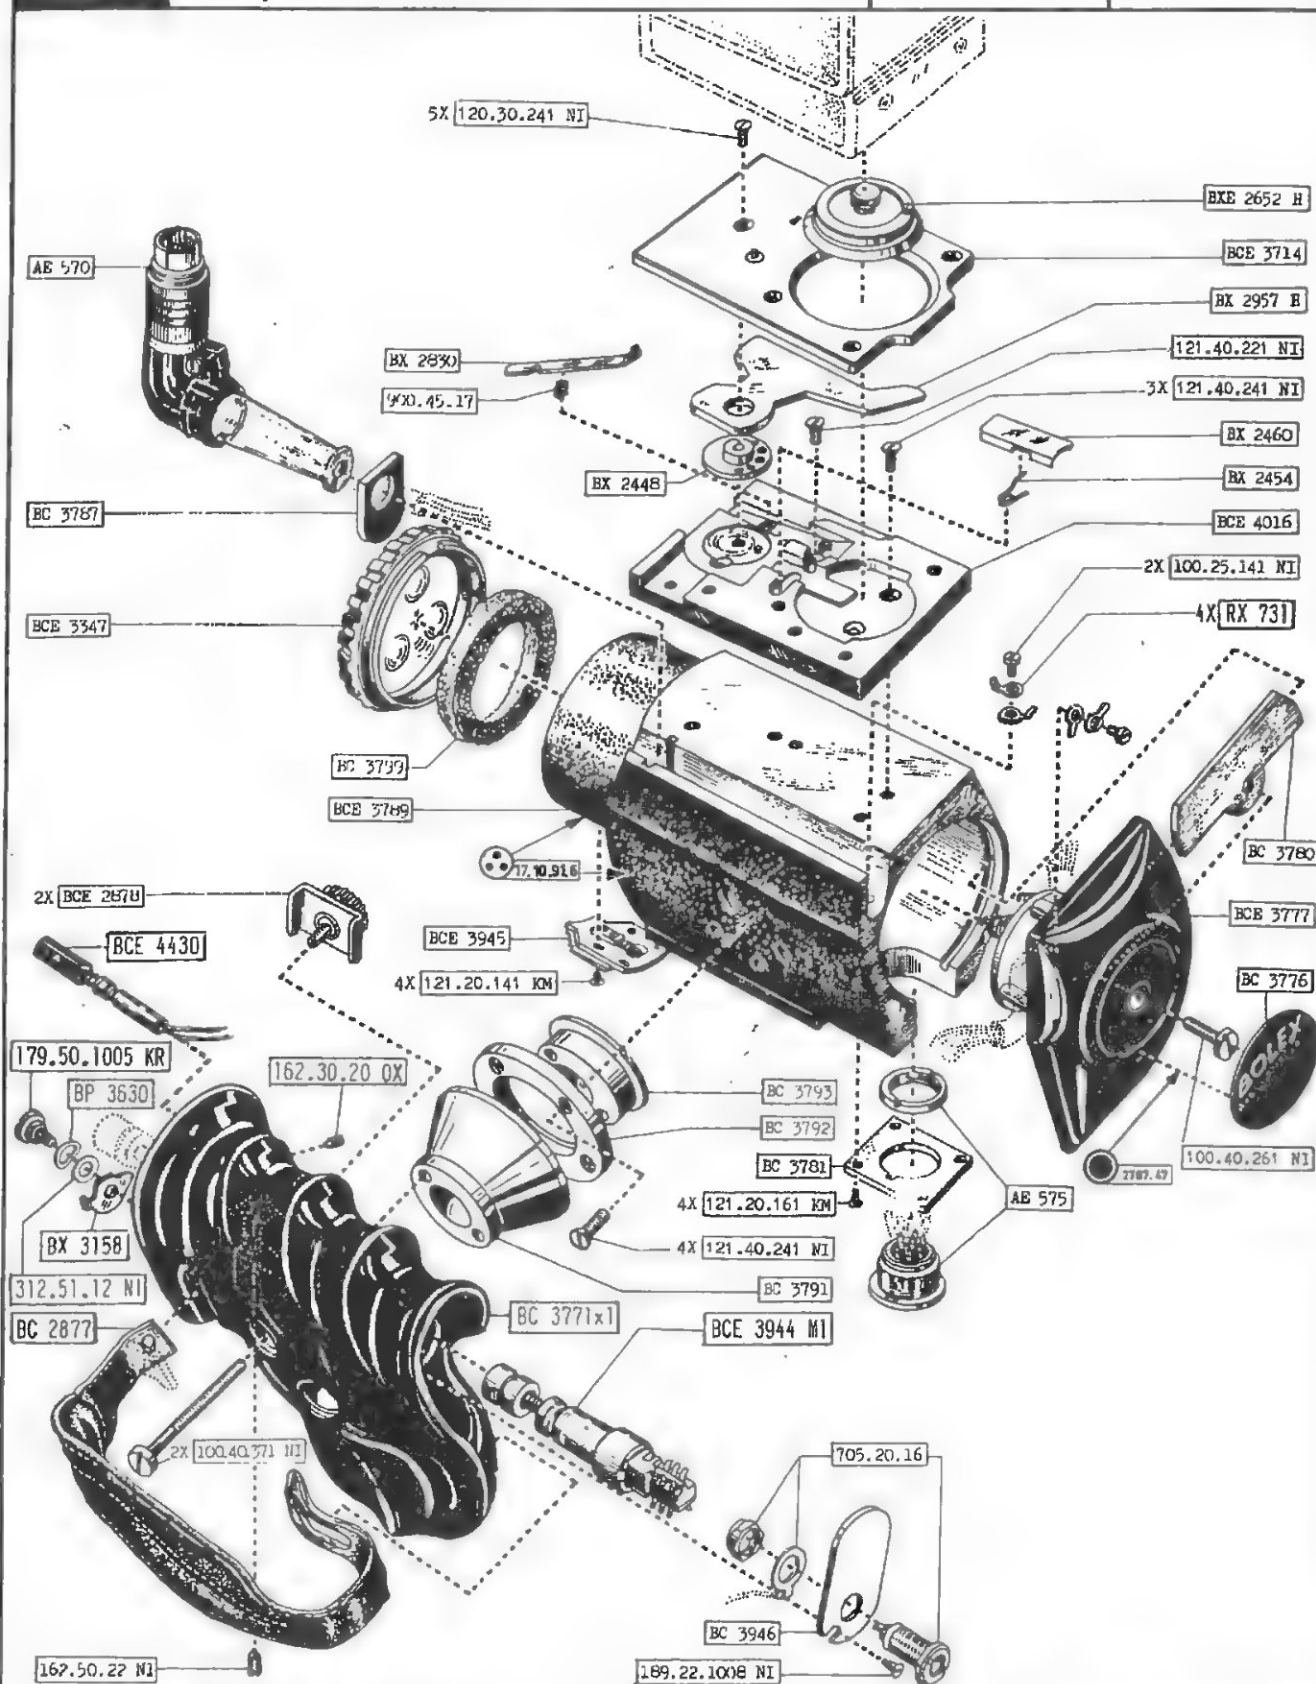

三
國
志

卷之四

魏書

一

二

三

四

五

六

七

八

九

十

十一

十二

十三

十四

十五

十六

十七

十八

十九

二十

二十一

二十二

二十三

二十四

二十五

二十六

二十七

二十八

二十九

三十

三十一

三十二

三十三

三十四

三十五

三十六

三十七

三十八

三十九

四十

四十一

四十二

四十三

四十四

四十五

四十六

四十七

四十八

四十九

五十

五十一

五十二

五十三

五十四

五十五

五十六

五十七

五十八

五十九

六十

六十一

六十二

六十三

六十四

六十五

六十六

六十七

六十八

六十九

七十

七十一

七十二

七十三

七十四

七十五

七十六

七十七

七十八

七十九

八十

八十一

八十二

八十三

八十四

八十五

八十六

八十七

八十八

八十九

九十

九十一

九十二

九十三

九十四

九十五

九十六

九十七

九十八

九十九

一百


PD

Schéma électrique
Elektrisches Schema
Electric diagram

H16EBM

300 401

BOLEX

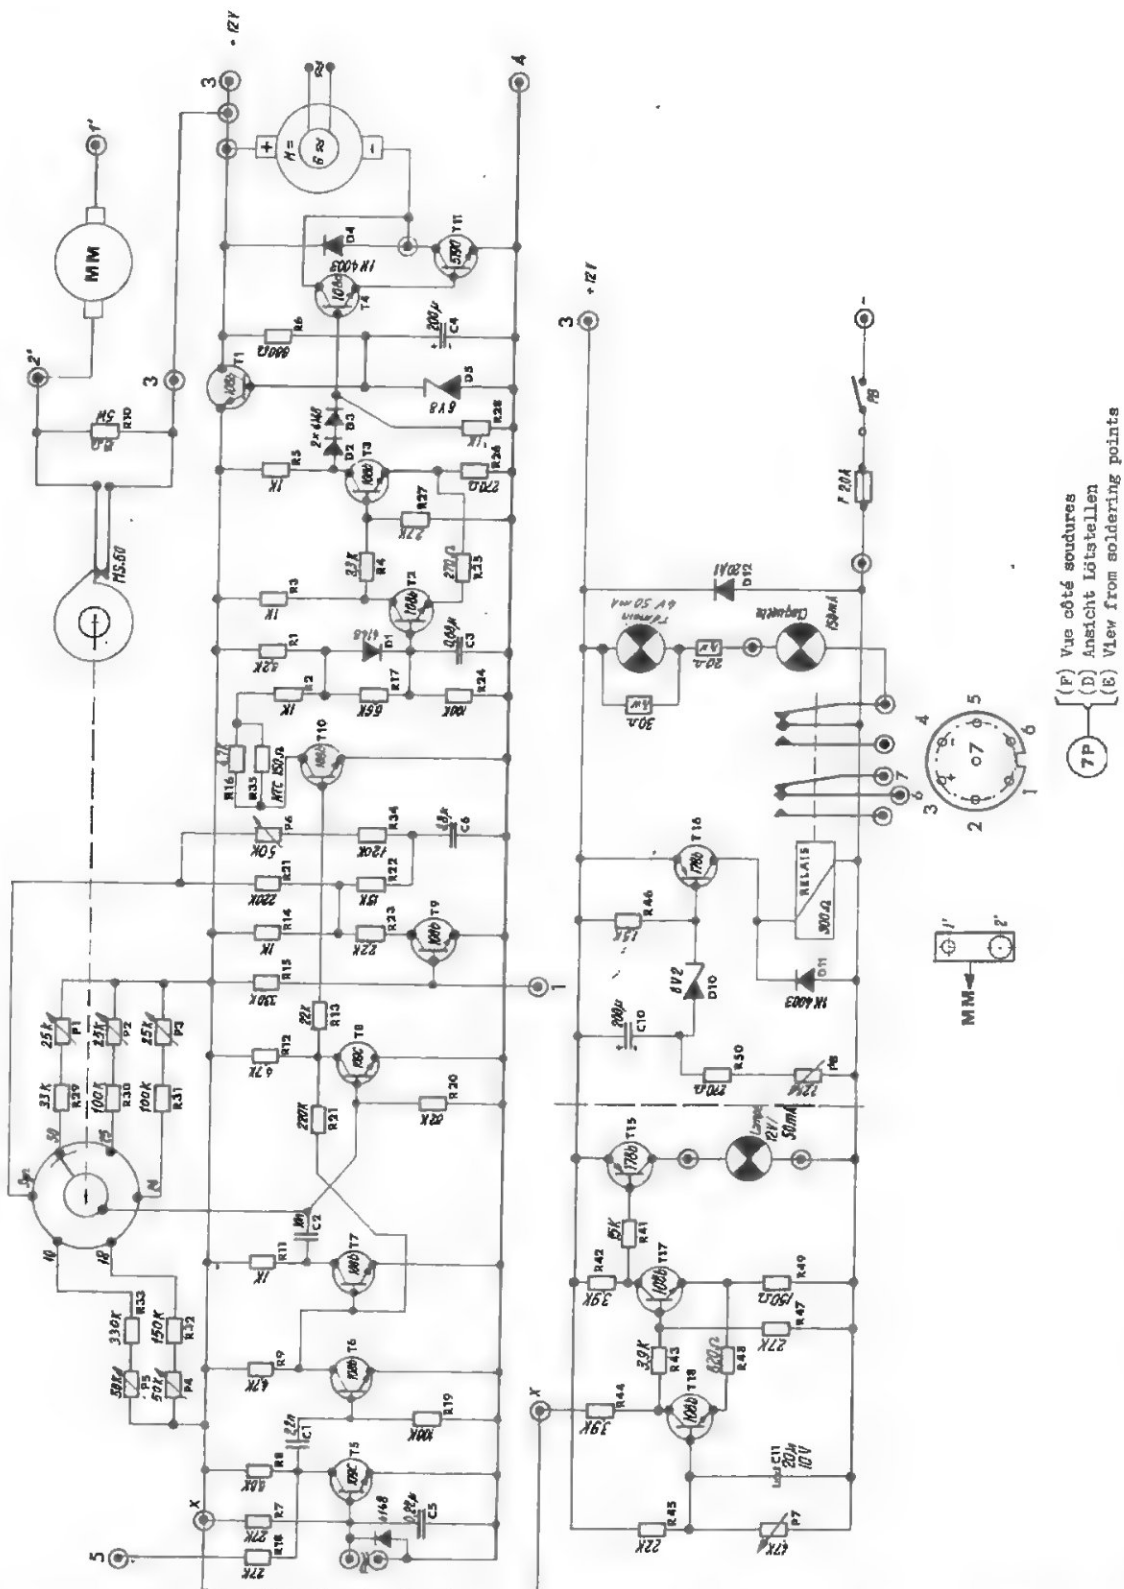

H3
EBM

06.71

*

K

1

	Anciennes pièces Alte Teile Former parts	Nouvelles pièces Neue Teile New parts	Observations Bemerkungen Remarks
I	20 Ω 1/2 W 20 Ω 1/2 W	22 Ω 1/2 W 27 Ω 1/2 W	F) Changement de valeur des résistances. Ü) Änderung des Widerstandswertes. E) Change of the resistances value.
			01.74



PD

Schéma électrique
Elektrisches Schema
Electric diagram

H16EBM

305 689

BOLEX

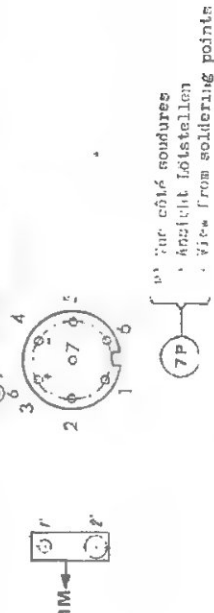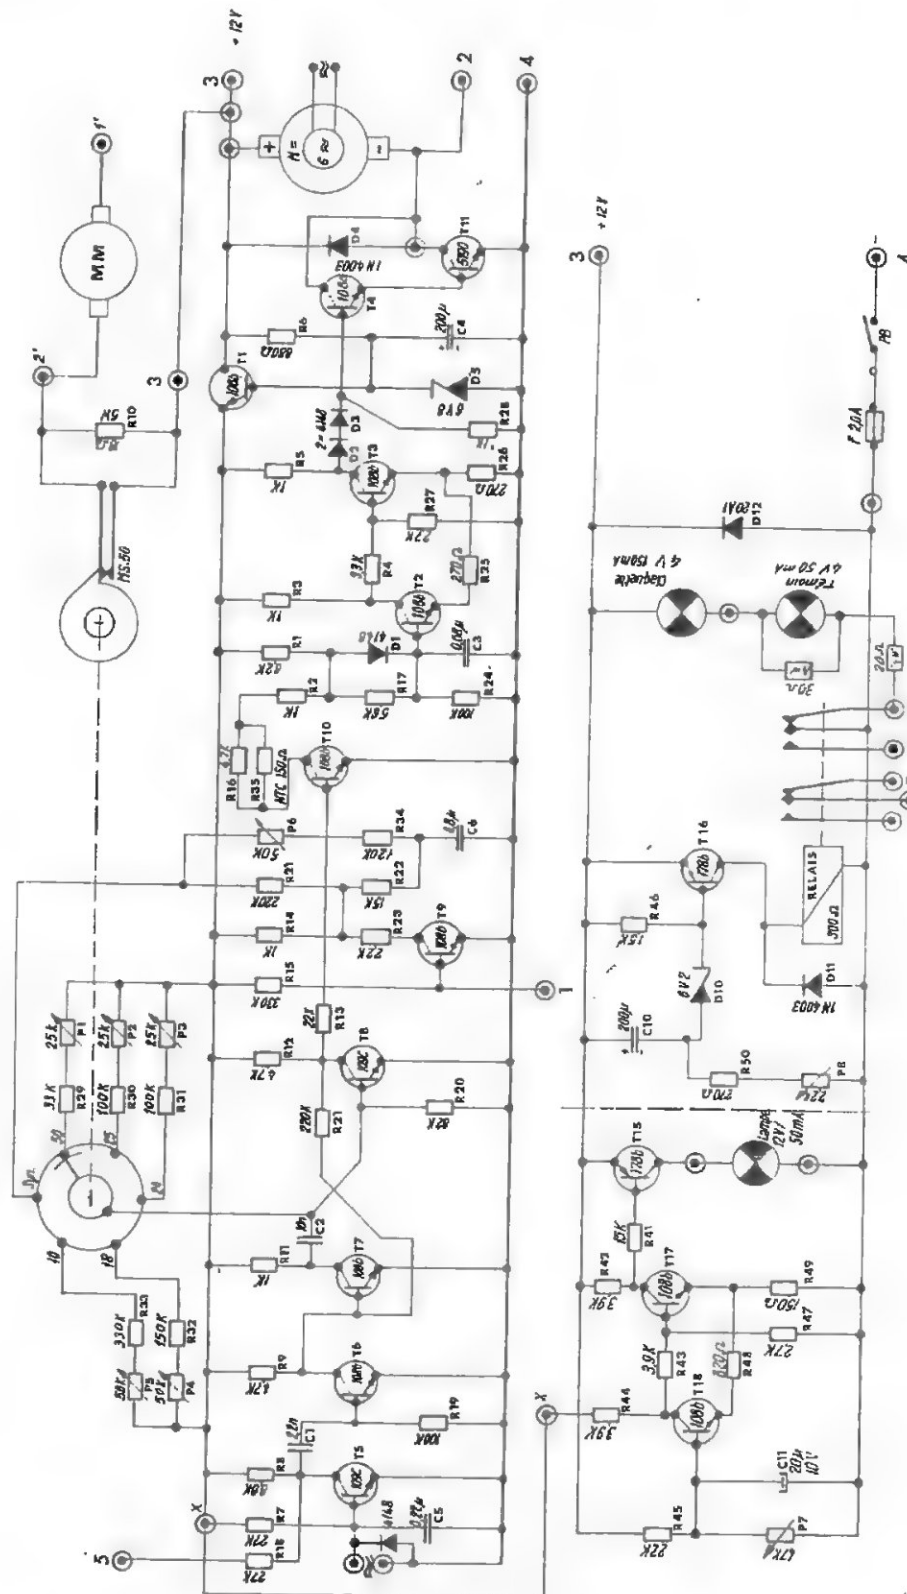

Printed in Switzerland. All rights reserved.

H3
EBM

06.72

*

K

1.1



PD

Plan de câblage
Verdrahtungsschema
Wiring Diagram

H16EBM

BOLEX

300 401 →

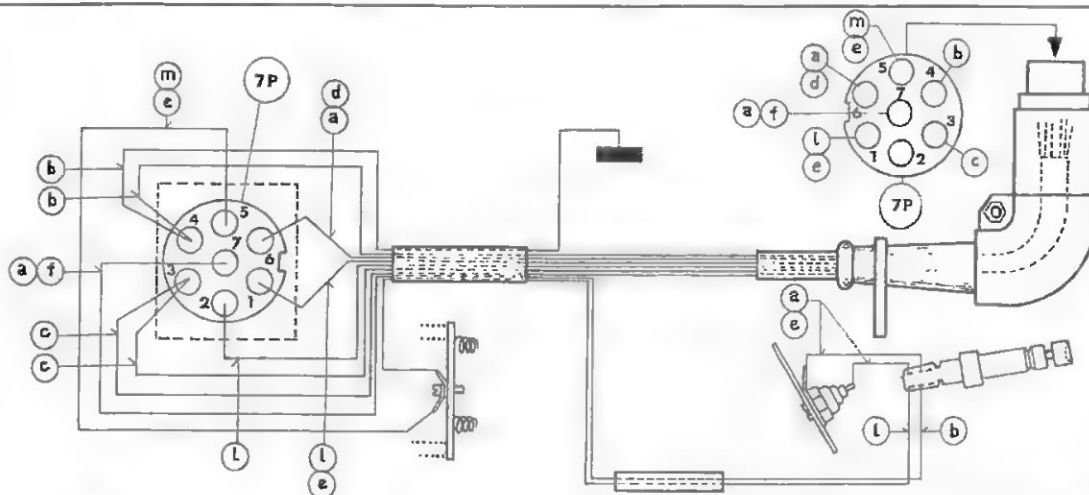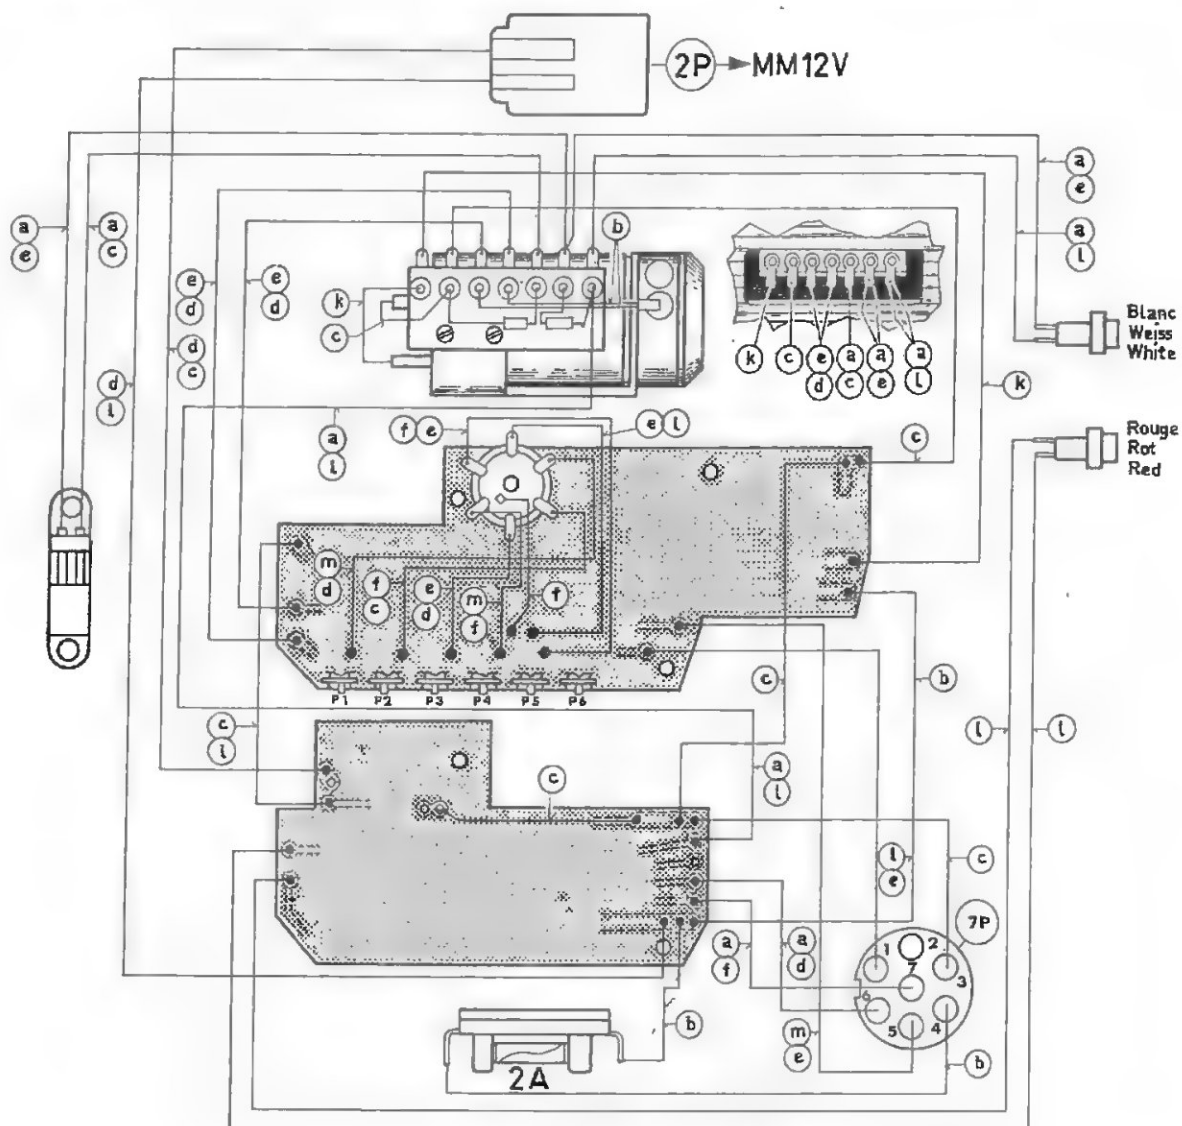

Printed in Switzerland. All rights reserved.

H3
EBM

06.71

*

7P

(1) Vue côté soudures
(L) Ansicht Lötstellen
(K) View from soldering points

L



1

PD

Plan de câblage
Verdrahtungsschema
Wiring Diagram

H16EBM

305 689 →

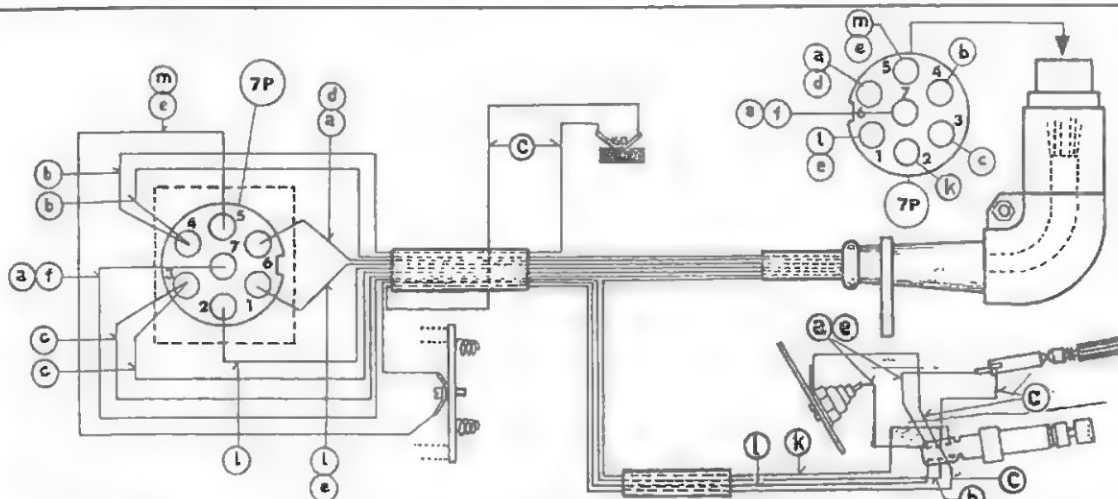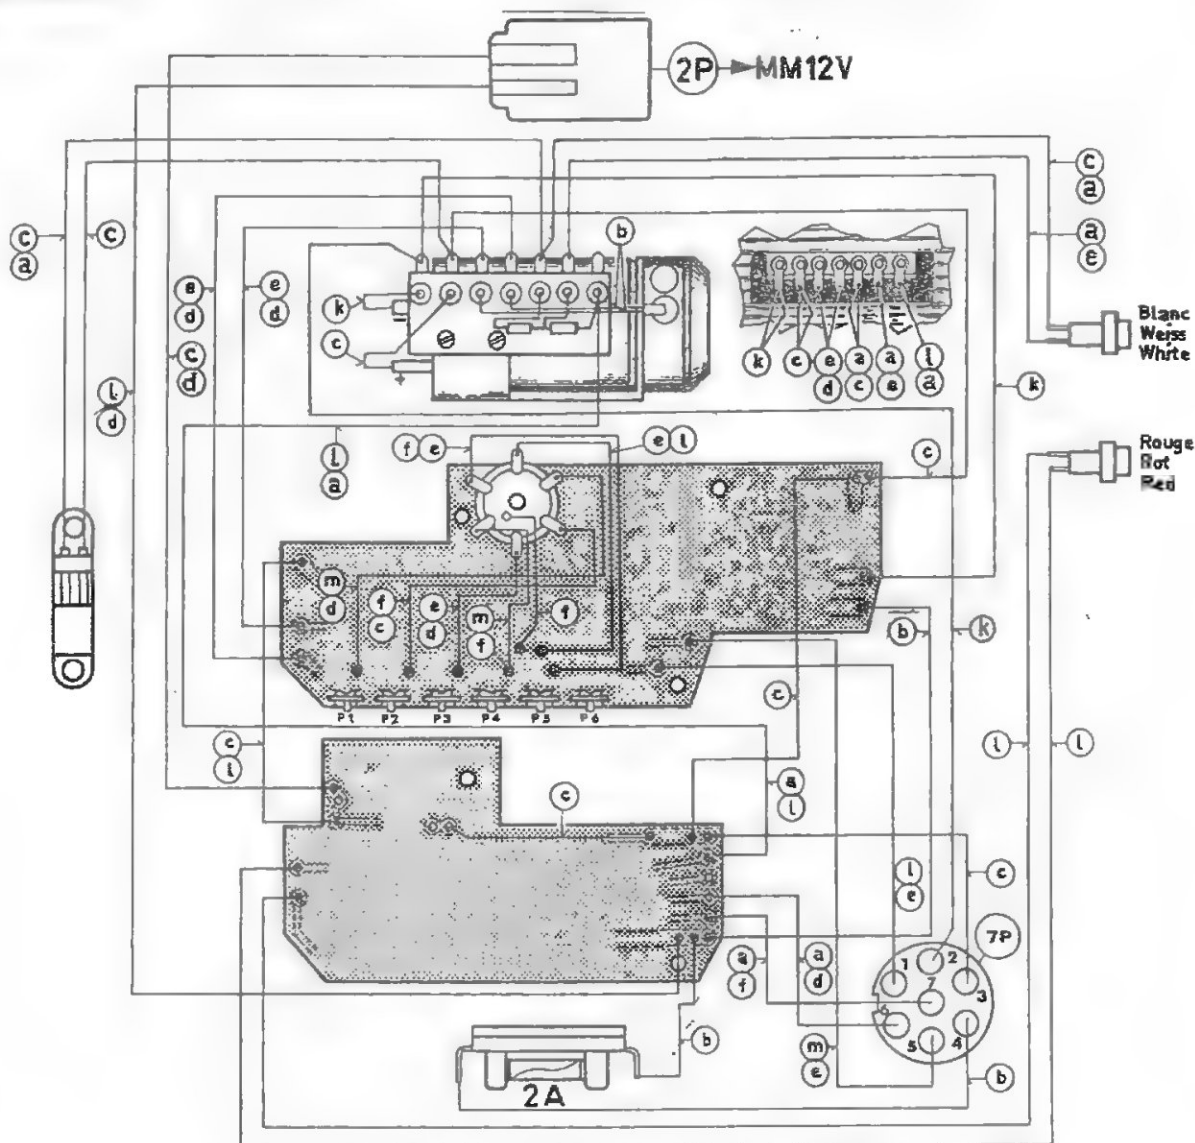BOLEX**H3**
EBM

06.72

*

7P

P: Vue côté soudures
A: Ansicht Lötstellen
V: View from soldering points


L**1.1**

PD



Accessoires
Zubehör
Accessories

H16EBM**BOLEX**

300 401 →

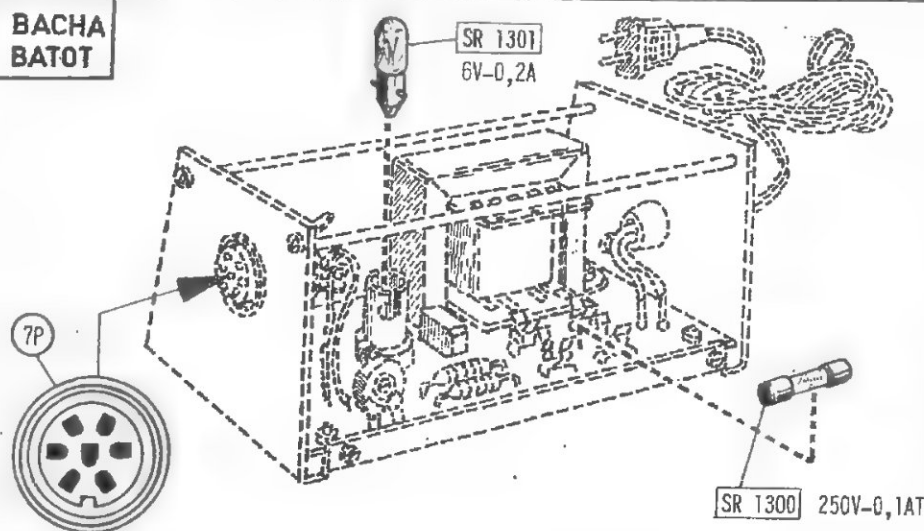**BACHA
BATOT****SOLOT
SOLTO**

- (F) Connexion libre
sans emploi
(D) Frei Verbindung
ohne Verwendung
(E) free connection
with no purpose

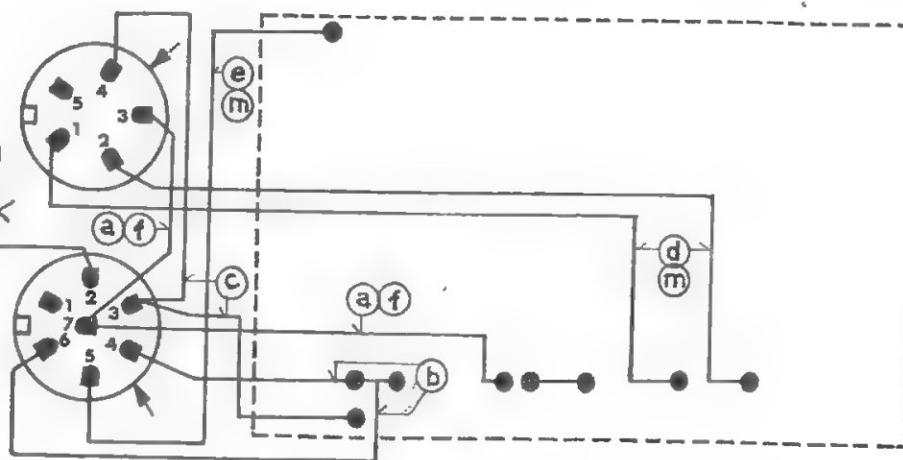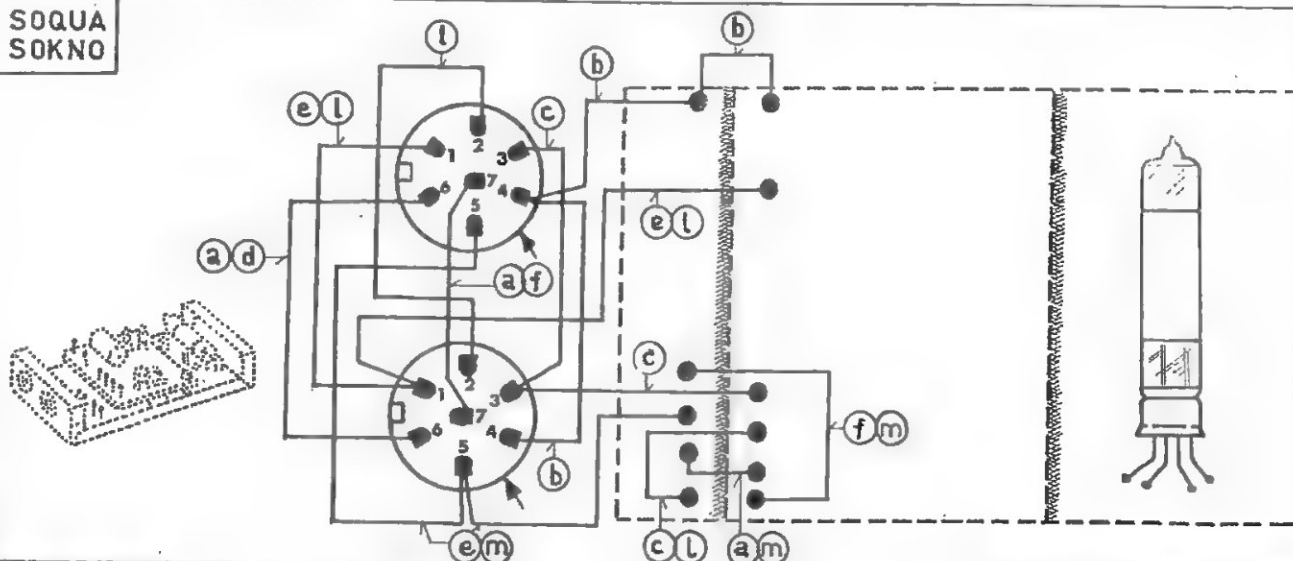**SOQUA
SOKNO**

Printed in Switzerland. All rights reserved

**H 3
EBM**

12.71

*

- (F) Vue côté soudures
(D) Ansicht löstellen
(E) View from soldering points

M**1**

FM

Accessoires:
Zubehör:
Accessories

H16 EBM

BOLEX


15 Anciennes pièces
Alte Teile
Former parts

16 Nouvelles pièces
Neue Teile
New parts

17 Observations
Bemerkungen
Remarks

18


1

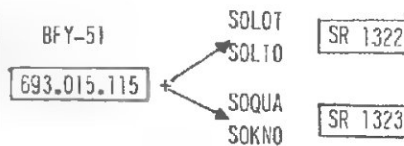

- F) Sur les équipements son pilote et synchro-quartz, l'échauffement exagéré du transistor BFY-51 peut les endommager.
Pour limiter cet échauffement, il a été introduit sur les séries récentes un radiateur à ailettes: SR 1322 pour les équipements son pilote SR 1323 " " " synchro-quartz.
Il est recommandé d'ajouter ce radiateur sur les anciens équipements son pilote et synchro-quartz.
- G) Zur Verminderung der übermässigen Erhitzung des Transistors BFY-51 wurde ein Rippenkühlkörper SR 1322 in die Pilottonausrüstungen SR 1323 in die Synchro-Quarz-Ausrüstungen der letzten Ausführung eingebaut.
Ältere Ausführungen müssen dementsprechend verbessert werden.
- E) Introduction of a ribbed cooler.
SR 1322 into sync pulse generator
SR 1323 into synchro-quartz
to reduce the excessive heating of transistor BFY-51.
Older equipments should also be improved accordingly

09.72

2

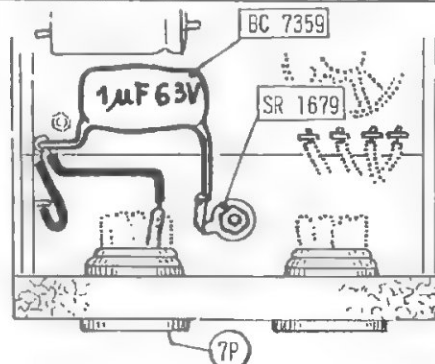

- E) Modification of the crystal control units, in order to make them less sensitive to exterior interferences when used with camera H16 EL.
Addition of a 1 µF capacitor in the 7 pin plug of the crystal control unit between point 4 and earth on a flat clamp to be fastened as per sketch.
Remove the varnish under the nut which maintains the 7 pin plug. Consult H4-FM2-PD-5
Use the shielded connection cable SOCCU.

- F) Modification des équipements synchro-quartz pour les rendre moins sensibles aux parasites extérieurs lors de leur utilisation avec la caméra EL
Adjonction d'un condensateur de 1 µF sur la prise 7P de l'équipement synchro-quartz entre le point 4 et la masse sur une cosse plate fixée au point indiqué sur le dessin.
Enlever le vernis sous l'écrou fixant la prise 7P. Consulter: H4 - FM2 - PD-5.
Utiliser un câble de liaison SOCCU blindé.
- G) Aenderung der Synchroquarz-Ausrüstungen, um sie bei der Verwendung mit der Kamera H16EL gegen die Wirkung von Aussenstörungen weniger empfindlich zu machen.
Zusatz eines Kondensators von 1 µF in der 7 poligen Buchse der Synchroquarz-Ausrüstung zwischen Punkt 4 und der Masse auf einer flächen Klemme, die laut Zeichnung befestigt wird.
Den Lack unter der Befestigungsniete der 7 poligen Buchse entfernen. Siehe: H4-FM2-PD-5.
Ergänzend wird auch das abgeschirmte Verbindungskabel SOCCU verwendet

07.76

H3
EBM

07.76



PD - M 1 - 12.71

1

FM

Accessoires
Zubehör
Accessories

H16 EBM

300 4C1 →


BOLEX

Anciennes pièces
Alte Teile
Former parts

Nouvelles pièces
Neue Teile
New parts

Observations
Bemerkungen
Remarks


3

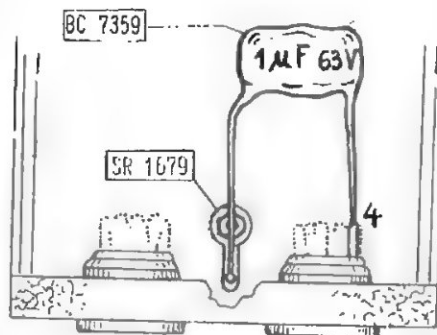

- F) Introduction du condensateur de déparasitage dans l'accessoire son pilote.
D) Einführung des Entstörkondensators im Pilotton-zubehör.
E) Introduction of the interference suppressor (capacitor) in the sync-pulse accessory.

12.12.77

4

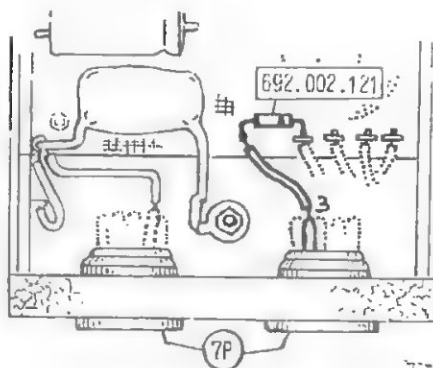


- F) Introduction d'une diode dans l'accessoire son pilote et quartz pour assurer l'arrêt immédiat de la caméra. Dans l'accessoire son pilote cette diode empêche également le retour du courant qui provoquait un "bip" parasite en fin de séquence.

- D) Einführung einer Diode in den Pilotton- und Quarzausrüstungen, die das sofortige Anhalten der Kamera gewähren soll. In der Pilotton-ausrüstung verhindert diese Diode ebenfalls den Rückstrom, der am Ende einer Filmszene ein Störsignal (beep) verursachte.

- E) Introduction of a diode in the sync-pulse and crystal equipments in order to ensure the immediate stopping of the camera. In the sync-pulse equipment, this diode prevents the return current from provoking an interfering signal (beep) at the end of a sequence.

12.77

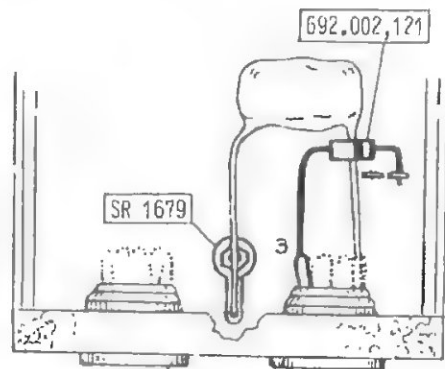**H3**
EBM

12.77

*

PD - M - 1 - 12.71

2

1. Mains charger (Fig. 1)

The warning lamp (b) must switch off when the accumulator is completely loaded, i.e. at a loading voltage of 14.5 ± 0.2 V.

If necessary, act on potentiometer (a)

Caution : The lamp (b) is special : 6V-0,2A.

2. Sync-Pulse equipment (Fig. 2)

Measure of the tension of the pilot signal 50 or 60 cycles. Connect the Sync-Pulse outfit to the camera. Effect the measure on a 40 Ω loading resistance connected directly to points 1 and 2 of plug 5P.

Minimum tension = 0.9V

On the oscilloscope, the curve of the pilot signal may present a slight distortion, as shown in Fig. 2a.

Between points 3 and 4 of plug 5P, there must be a tension of 12V during the clapstick.

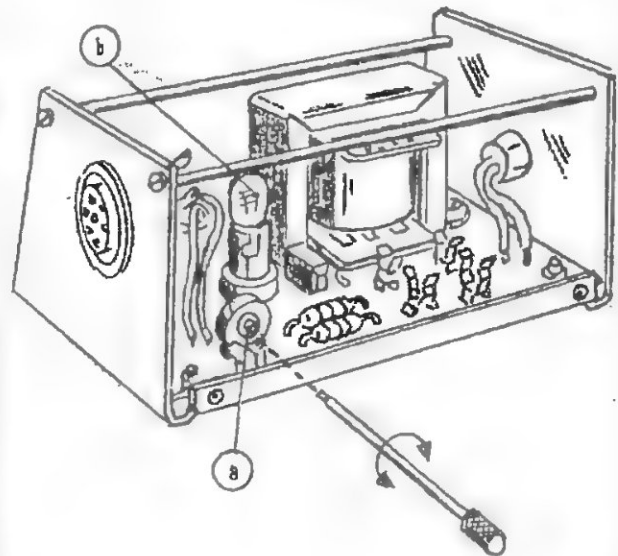


Fig. 1

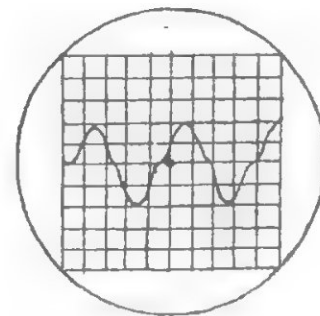
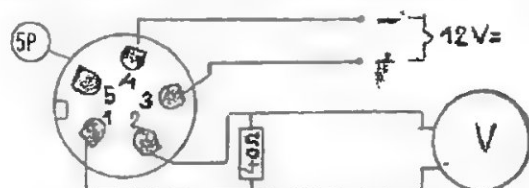


Fig. 2a

Fig. 2

FM

Accessoires

Zubehör

Accessories

H16 EBM

H16...+ES

BOLEX

Anciennes pièces

Alte Teile

Former parts

Nouvelles pièces

Neue Teile


New parts

Observations

Bemerkungen

Remarks

UHER 1200 REPORT PILOT

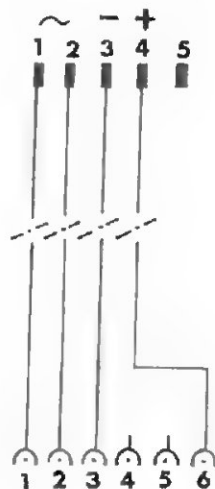

T 3401/1 Tuchel

- F) Schéma correspondant au nouvel enregistreur.
D) Schema betr. das neue Tonbandgerät.
E) Diagram corresponding to the new tape recorder.

03.75

H3
EBM

11.77

*

IT - M - I - II - 11.72

1

IT

Accessoires Zubehör Accessories

H16EBM
H16...+ESM

BOLEX

1 Rose / pink / Rosa
2 Vert pâle / pale green / Hellgrün
3 Vert / green / Grün
4 Rouge / red / Rot
5

* SOSPI

NAGRA IV

*T3360/1 TUCHEL

SR 1327

1 2 3 4 5

*

NAGRA III

1 2 3 4 5

*

MAIHAK MM K6

1 2 3 4 5

*

SRELLAVOX Sm5

1 2 3 4 5

STELLAVOX SP7

1 2 3 4 5

PERFECTONE
RECORDER

1 2 3 4 5

UHER 1000 REPORT PILOT

1 2 3 4 5

UHER 1000 REPORT PILOT

1 2 3 4 5

T3300/1 Tuche1

T3401/1 Tuche1

T3260/1 Tuche1

Zg.Nr.8-5973 Preh

Clapper Deep
Hirschmann
5PNr.99-6215
Argonne Electronics

T3401/1 Tuche1

T3401/1 Tuche1

Liaisons Son-pilote → Magnétophones
Verbindungen Pilotton → Tonbandgeräte
Connections sync pulse → tape recorders

H3
EBM

11.72

*

M
I

II


PD

Accessoires Zubehör Accessories

H16EBM
H16...+ESM

SOLEX

Equipment son pilote	25 i/s	50 Hz	SOLOT	Schéma électrique
Pilottonausrüstung	25 B/s	50 Hz	SOLOT	Elektrisches Schema
Sync-pulse equipment	25 f/s	50 Hz	SOLOT	Electric diagram

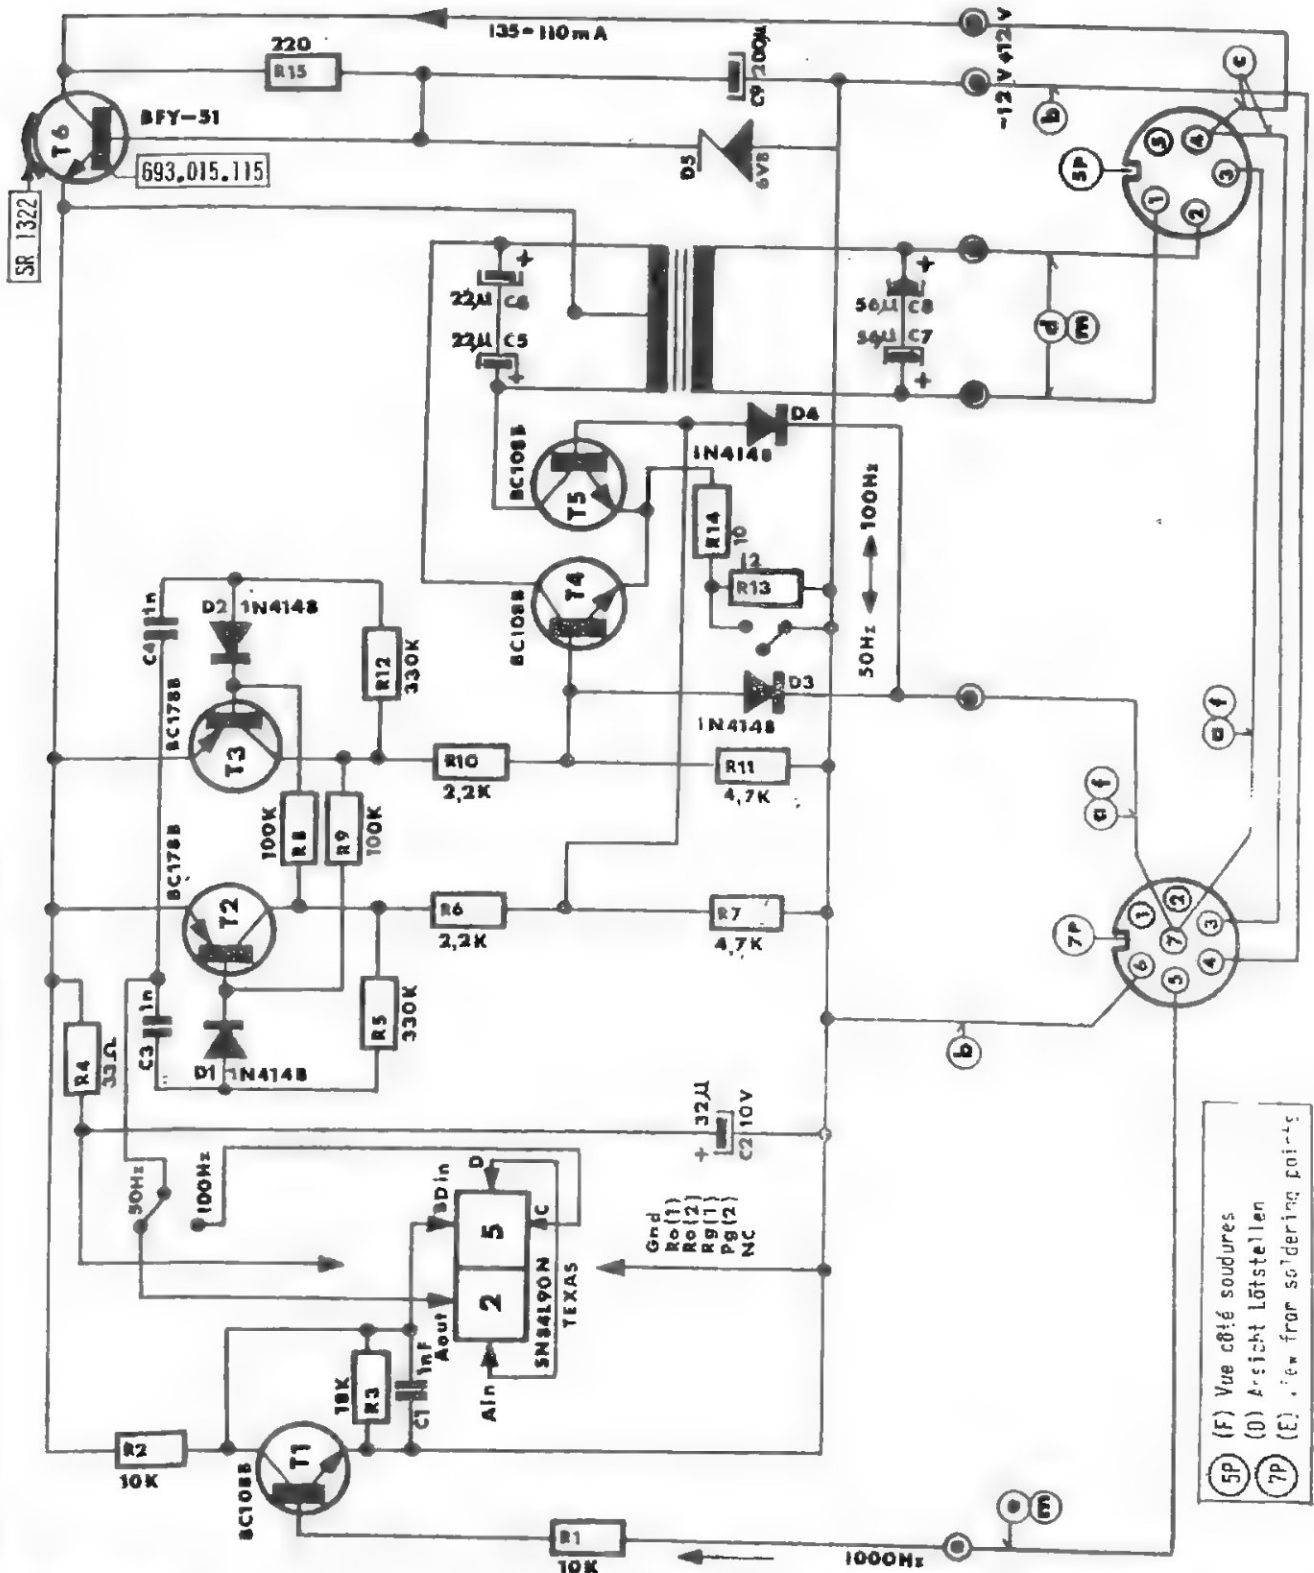

(F) Vue côté soudures
(D) Ansicht Lötstellen
(E) view from soldering points

H3
EBM


11.72

*

M

2

Equipement son pilote	24 i/s	60 Hz	SOLTO	Schéma électrique
Pilottonausrüstung	24 B/s	60 Hz	SOLTO	Elektrisches Schema
Sync-pulse equipment	24 f/s	60 Hz	SOLTO	Electric diagram

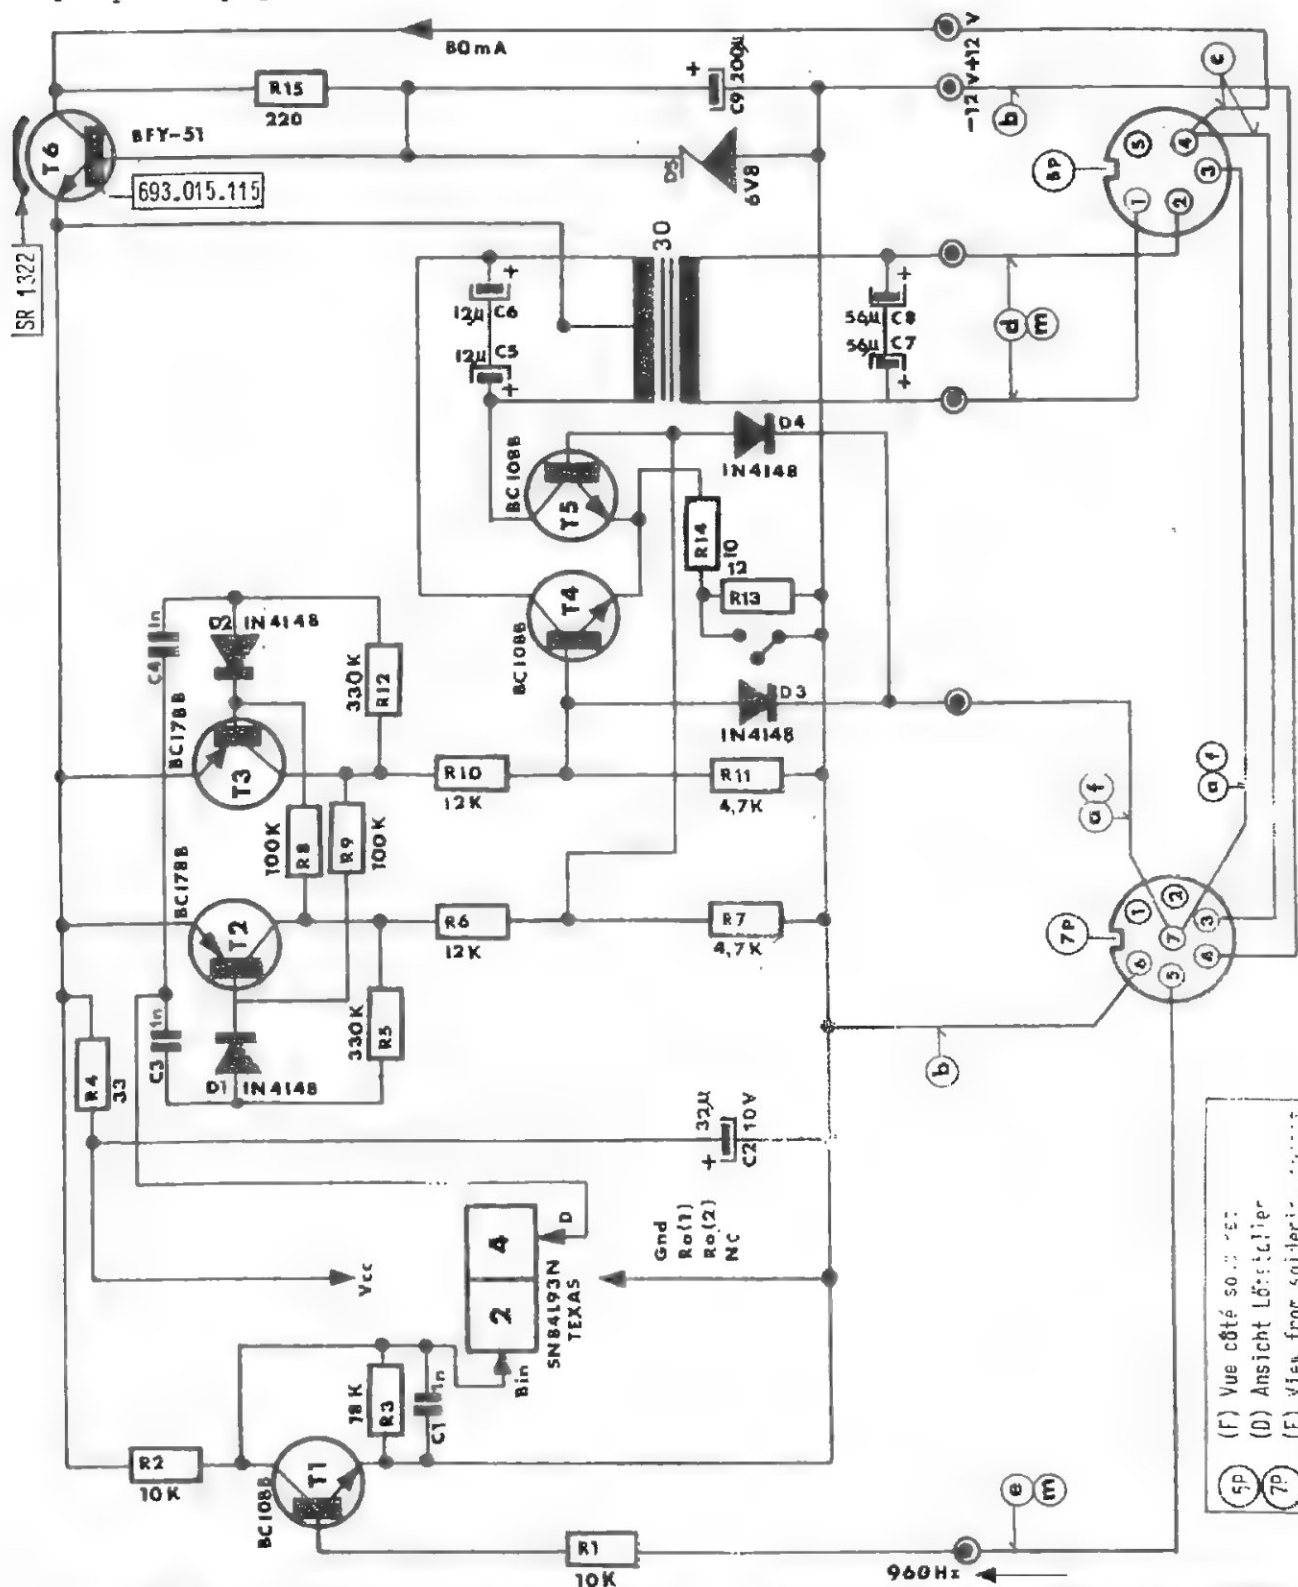


(F) Vue côté sud-est
(D) Ansicht Löcher
(E) View from soldering

PD

Accessoires
Zubehör
Accessories

H16EBM
H16... +ESM

BOLEX

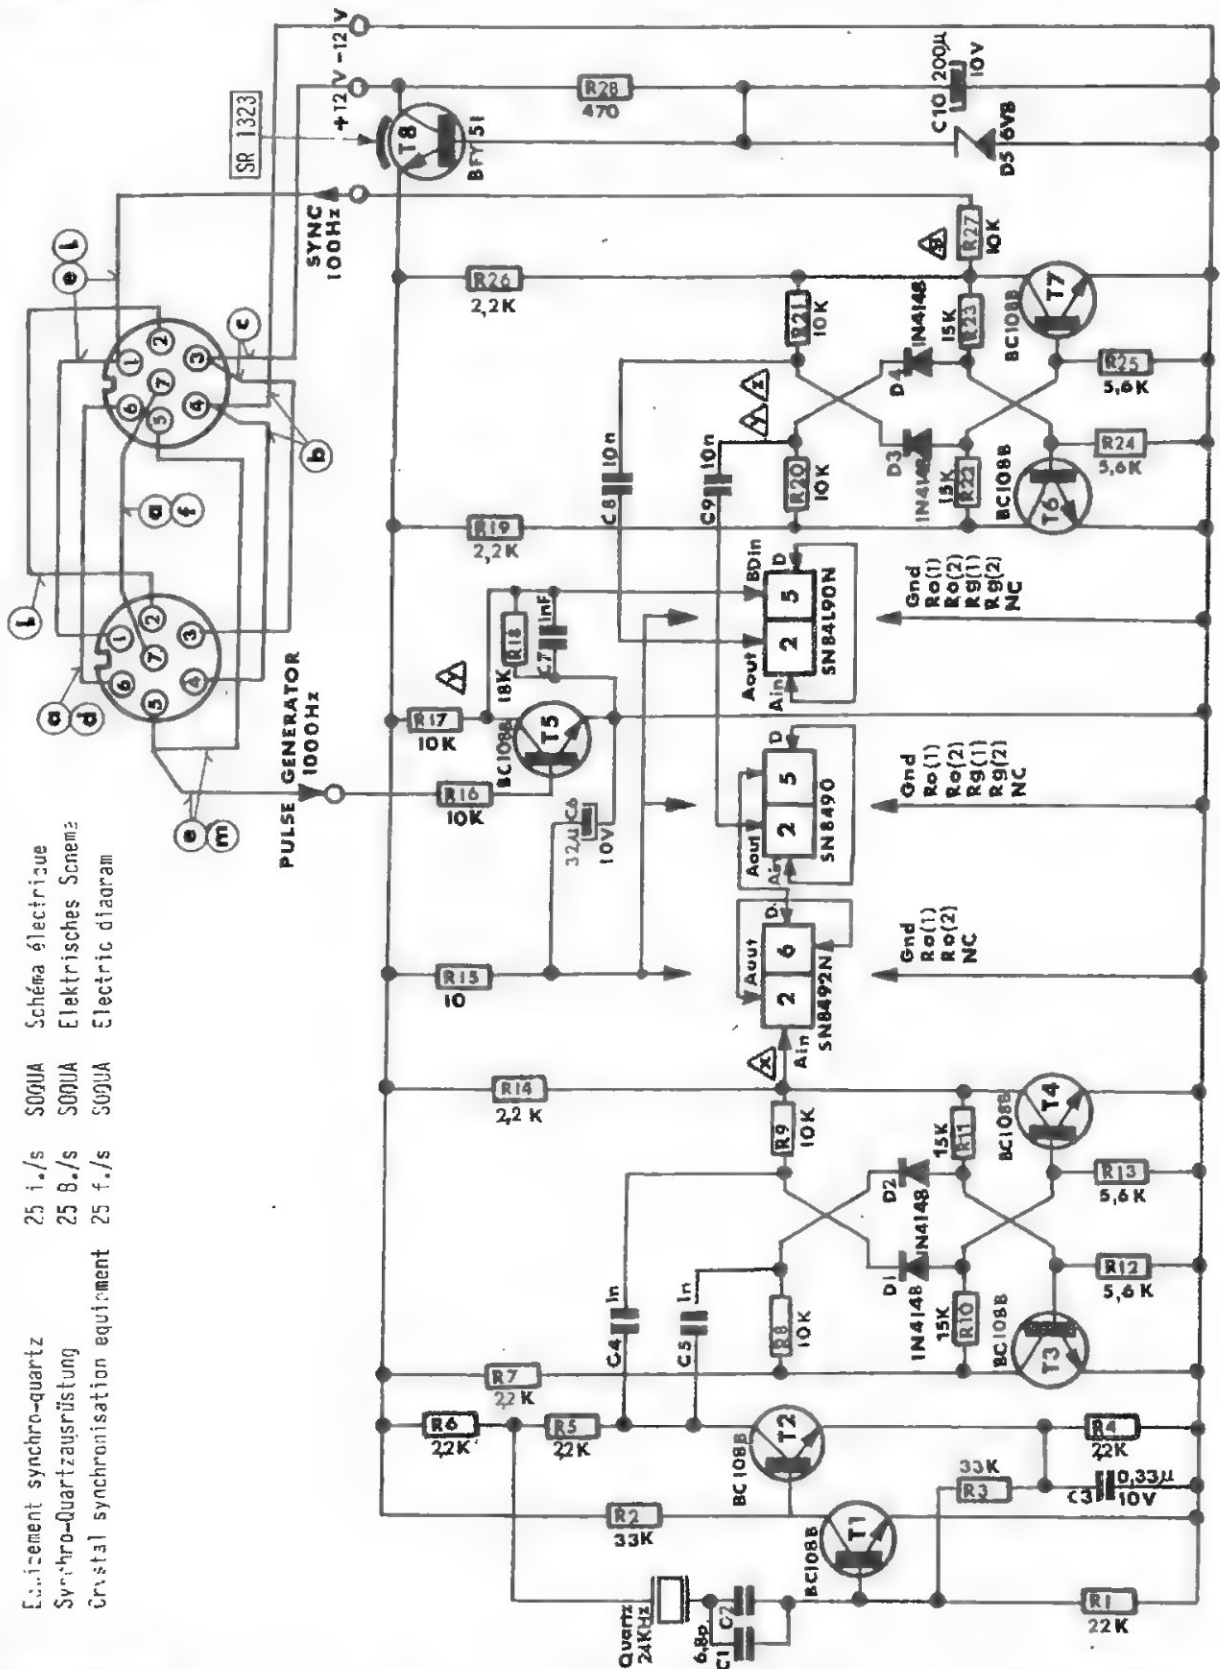

Printed in Switzerland. All rights reserved.

H3
EBM

11. 72

*

M


4

PD

Accessoires
Zubehör
Accessories

H16EBM
H16...+ESM

BOLEX

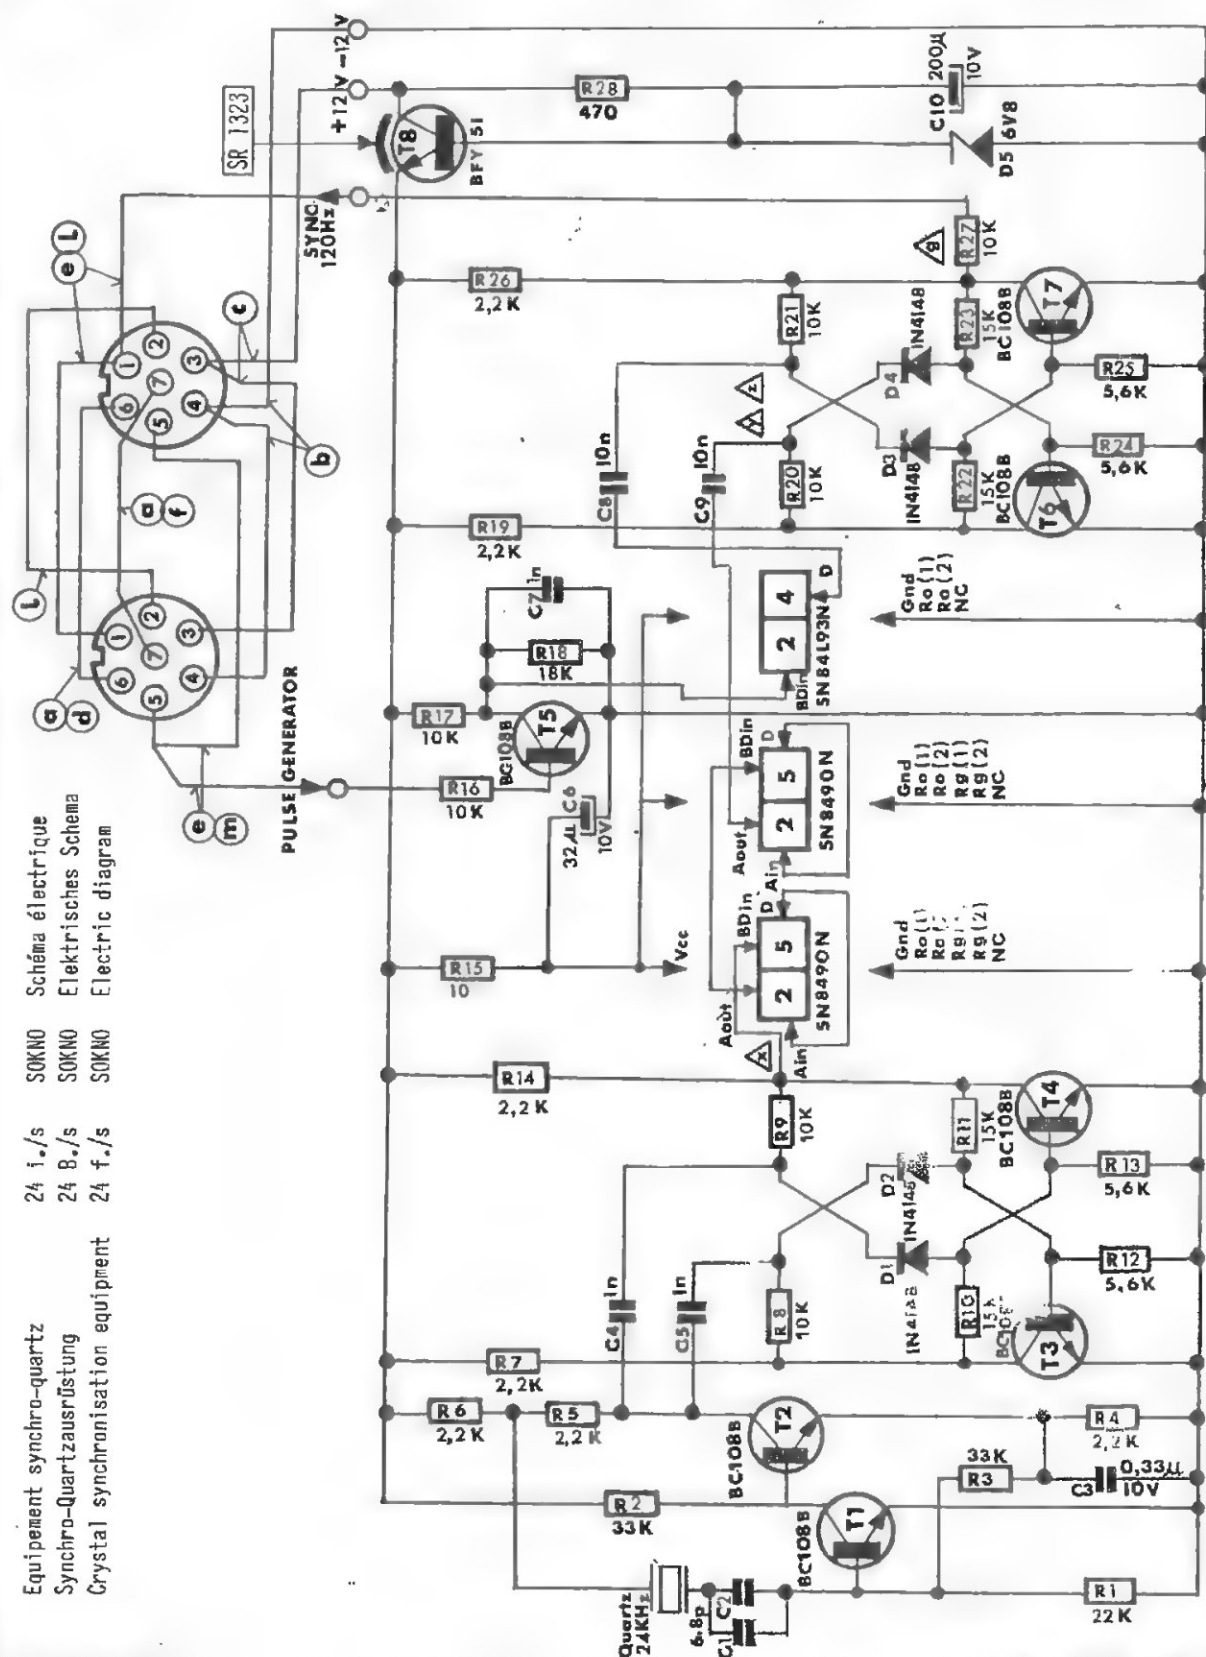

Equipement synchro-quartz
Synchro-Quartzausr stung
Crystal synchronisation equipment

24 i./s
24 B./s
24 f./s

SOKNO
SOKNO
SOKNO

S ma  lectrique
Elektrisches Schema
Electric diagram

H3
EBM

11.72

*

M

5

FM

Accessoires
Zubehör
Accessories

H16SB/SRM
H16EBM

BOLEX




15 Anciennes pièces
Alte Teile
Former parts

16 Nouvelles pièces
Neue Teile
New parts

17 Observations
Bemerkungen
Remarks

18


BATOT

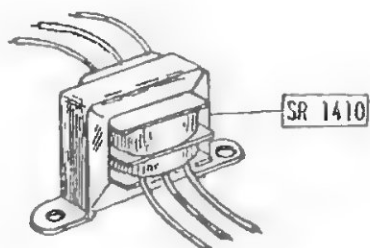

F) Introduction de composants pour le chargeur d'accumulateur BATOT.
D) Einführung von Komponenten des Akkuladegeräts BATOT.
E) Introduction of components of the mains charger BATOT.

10.74

[

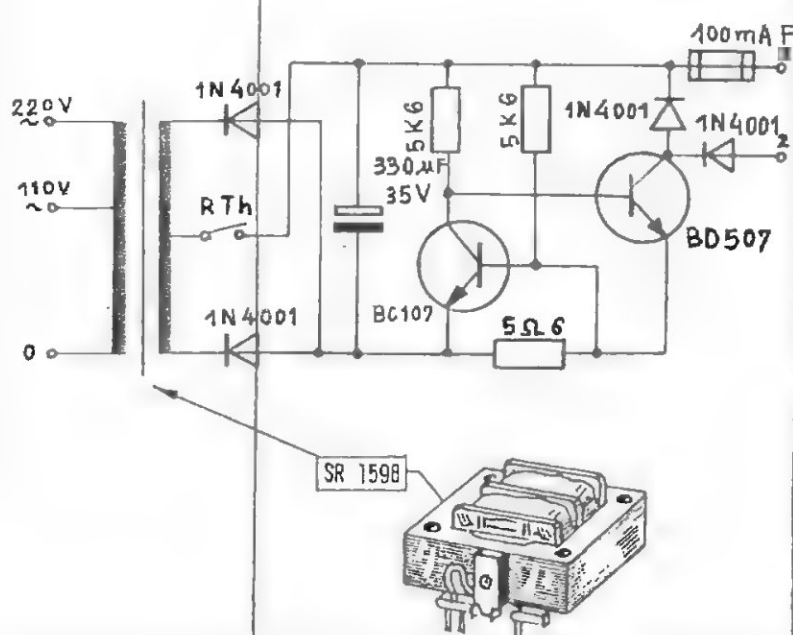

F) introduction de composants pour le chargeur d'accumulateur CHAAV.
D) Einführung von Komponenten des Akkuladegeräts CHAAV.
E) Introduction of components of the mains charger CHAAV.

12.75

[


H3
EBM


12.75

*



PD - M 6 - 11.75

1

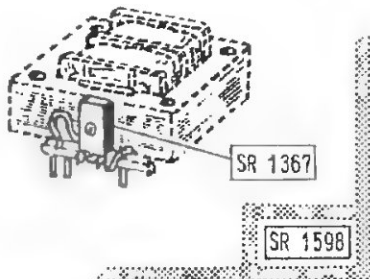15	Anciennes pièces Alte Teile Former parts	16	Nouvelles pièces Neue Teile New parts	17	Observations Bemerkungen Remarks	18
3	SOCCU (0,5 m)	SOCCU (0,5 m) F) Câble blindé(*repère gaine noire). D) Abgeschirmtes Kabel(*Kennzeichen: schwarze Hülle). E) Shielded cable(*reference mark: black sheath).		F) Nouveau câble de liaison SOCCU avec câble blindé. Il complète l'amélioration apportée sur la caméra H16 EL dès le No 210 878.(Voir H4-FM2-PD-5). D) Neues Verbindungskabel SOCCU mit abgeschirmtem Kabel. Ergänzt die Verbesserung an der Kamera H16 EL ab Nr. 210 878 (siehe H4-FM2-PD-5). E) New connection cable SOCCU with shielded cable. This is in addition to the improvement on camera H16 EL as from serial No. 210 878 (see H4-FM2-PD-5).	07.76	
4			F) Introduction du fusible thermique comme pièce livrable pour le transformateur du chargeur CHAAV. D) Einführung der thermischen Sicherung des Transformators des Akkuladegeräts CHAAV als separates Ersatzteil. E) Introduction of the thermal fuse of transformer of battery charger CHAAV as a spare part.	09.76		

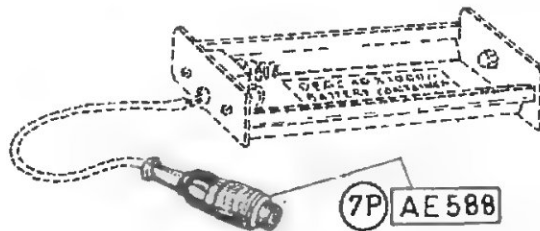PD**Accessoires
Zubehör
Accessories****H16 EBM
H16 SB/SBM****BOLEX****CABAC****COTAC**






2X 7P AE 575

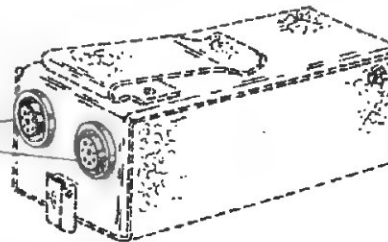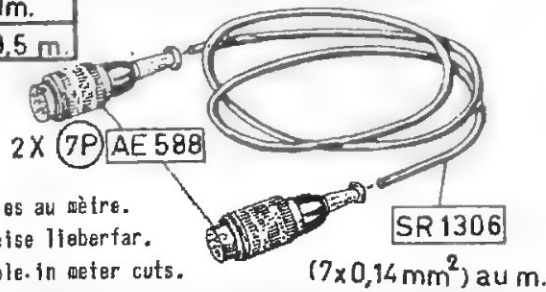**SOCUN 1m.****SOCCU 0,5 m.**

F) Livrables au mètre.

D) Meterweise lieferbar.

E) Available in meter cuts.

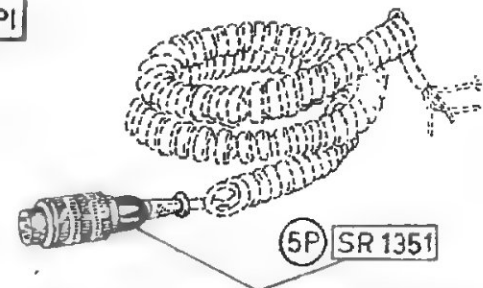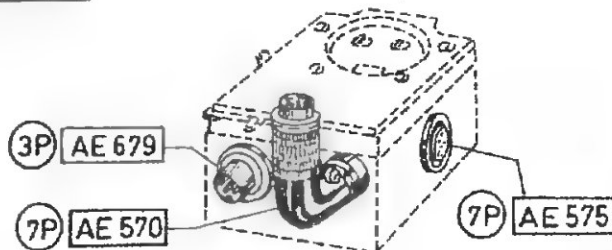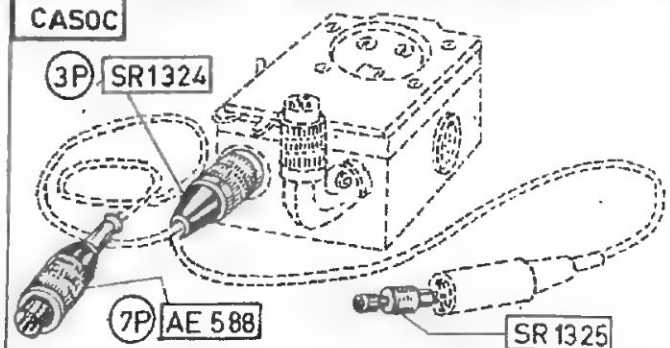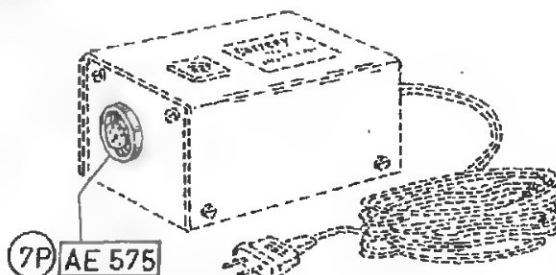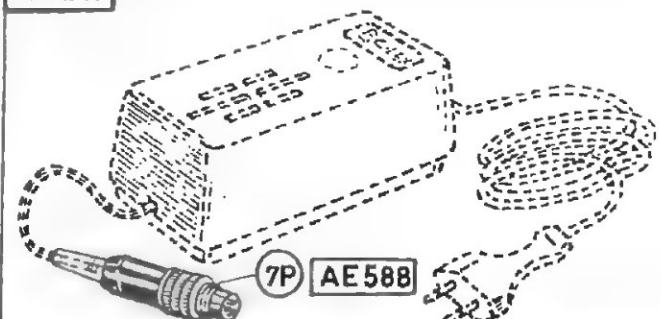SOSPI**EBSOC****CASOC****BATOT****CHAAV****H3**
EBM

11.75

*

M**6**

PD


Cotes
Masse
Dimensions

H16EBM

BOLEX

300 401 →

26,46**

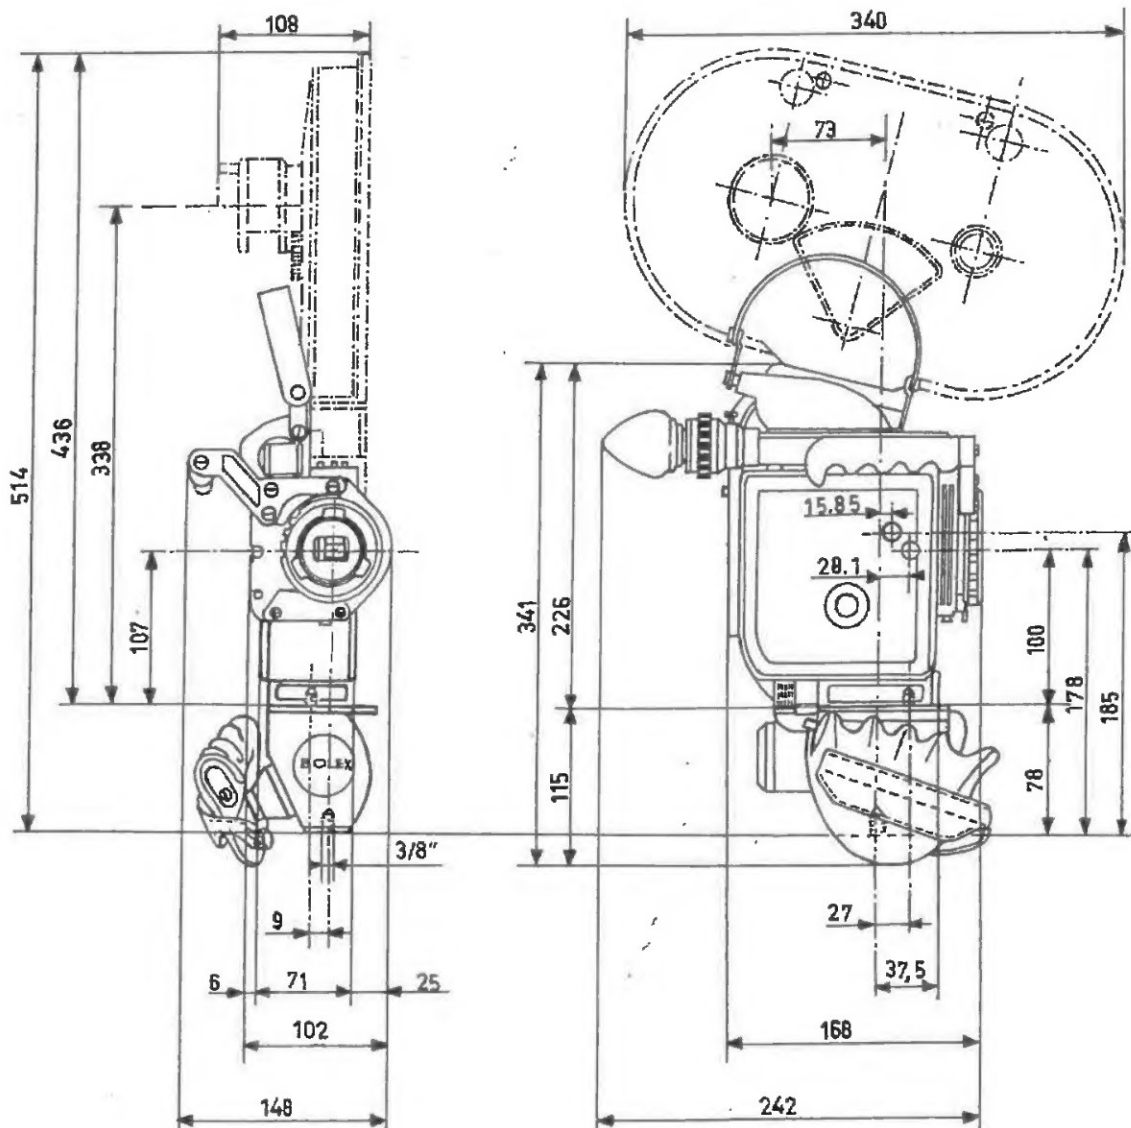

Printed in Switzerland. All rights reserved

H3
EBM


12.71


*

** Tirage
Auflagemass
Flange focal distance

N

1

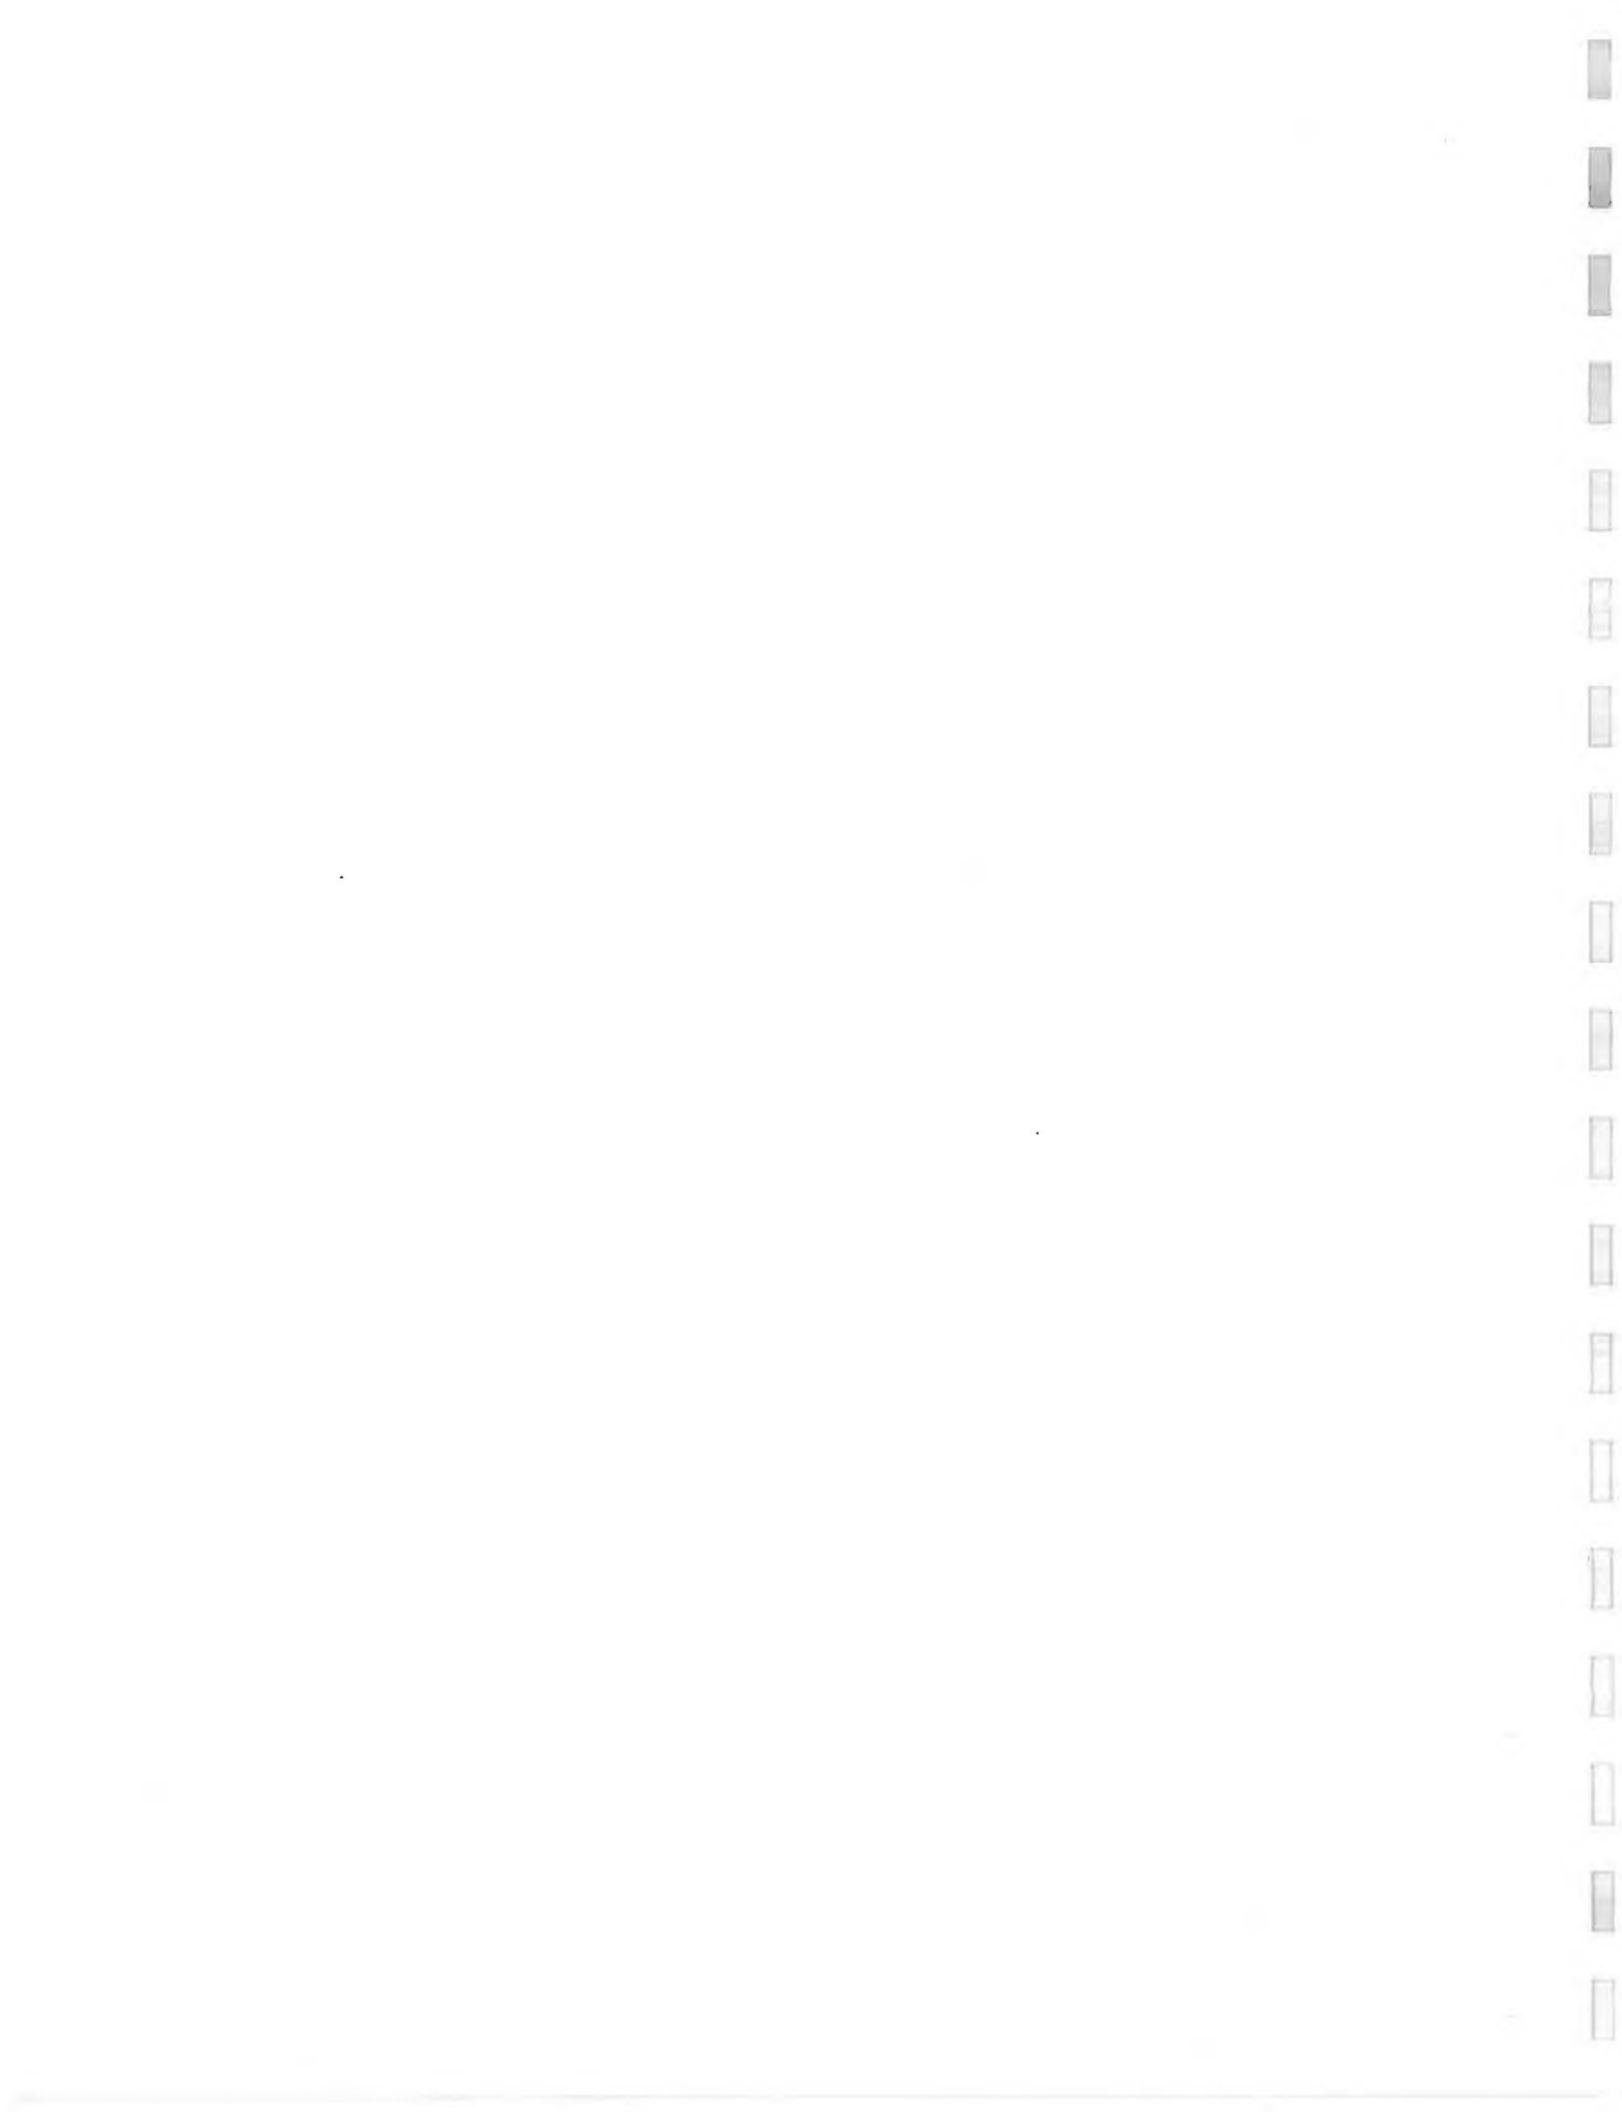

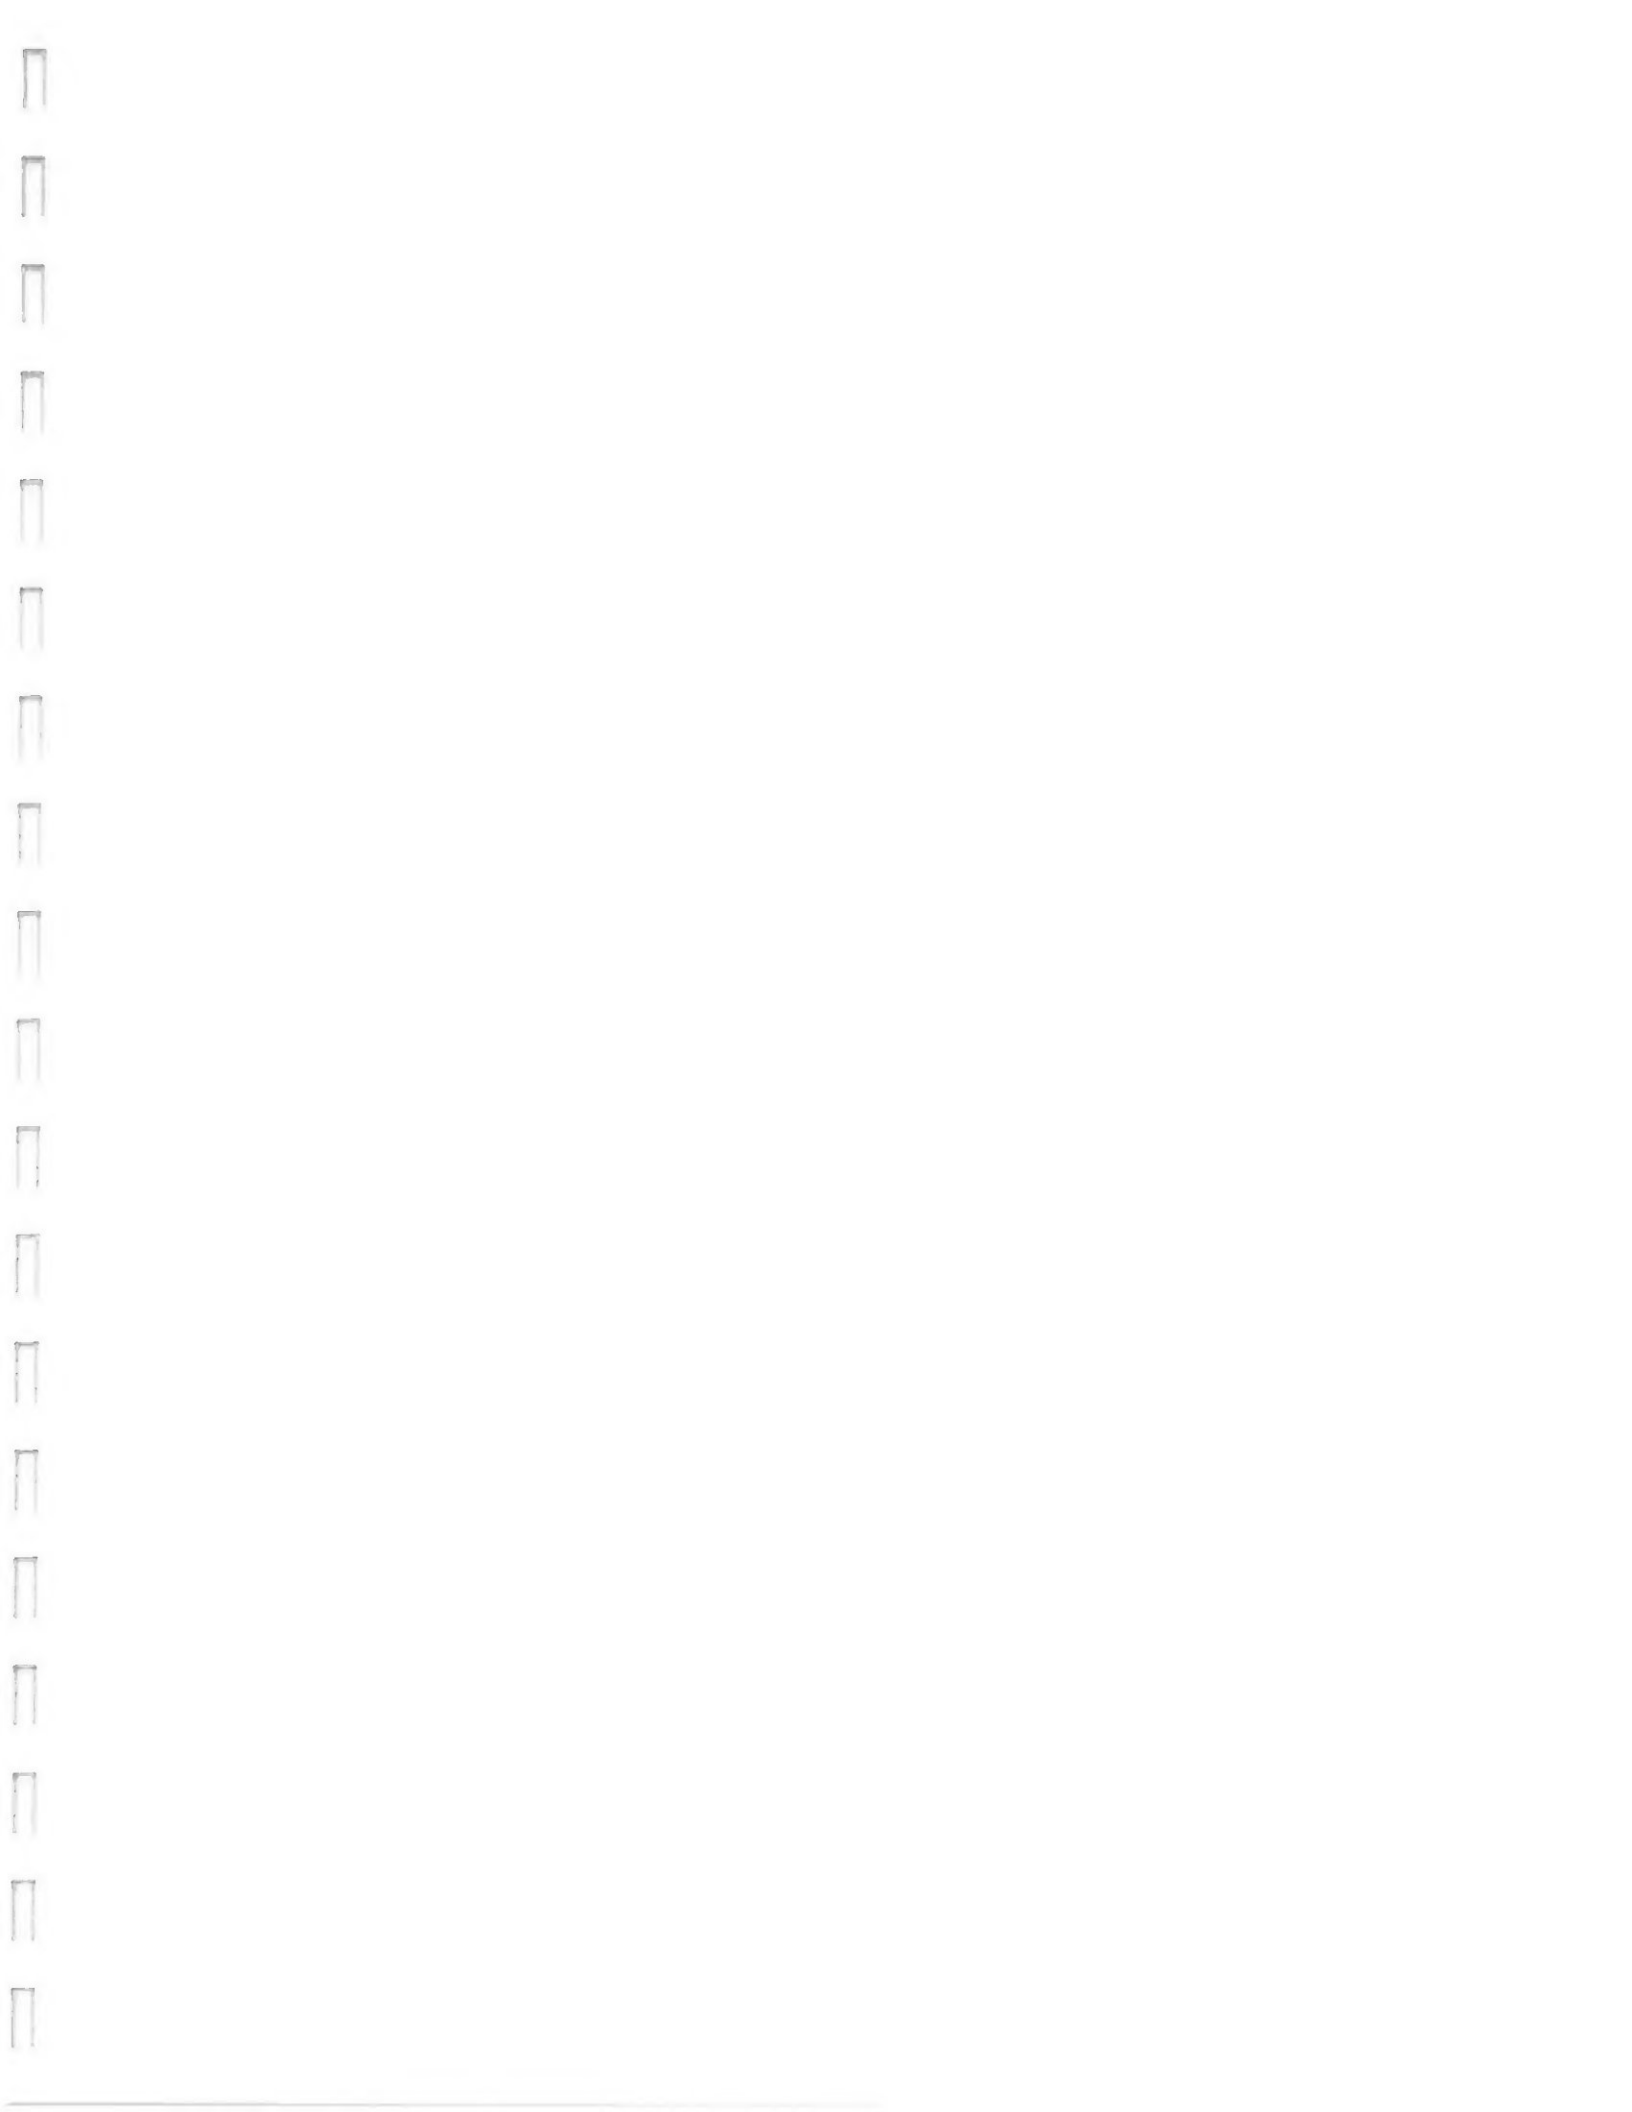

BOLEX INTERNATIONAL S.A. SAINTE-CROIX (Switzerland)